ANTENNA FEEDER NO.2 INSPECTION

id092000812500


5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (3) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (4) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (5) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
3. Peel back the trunk side trim and remove the C-pillar trim. (See C-PILLAR TRIM REMOVAL/INSTALLATION.)

Note


- To facilitate the procedure, leave the C-pillar trim in the cabin without pulling the rear seat belt.

4. Disconnect the connector.

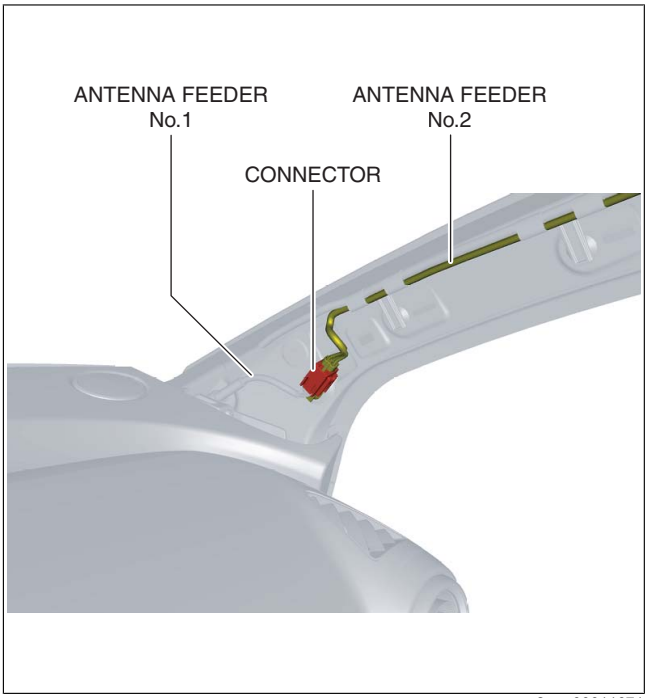

am2zzw00011671

5. Disconnect the connector.

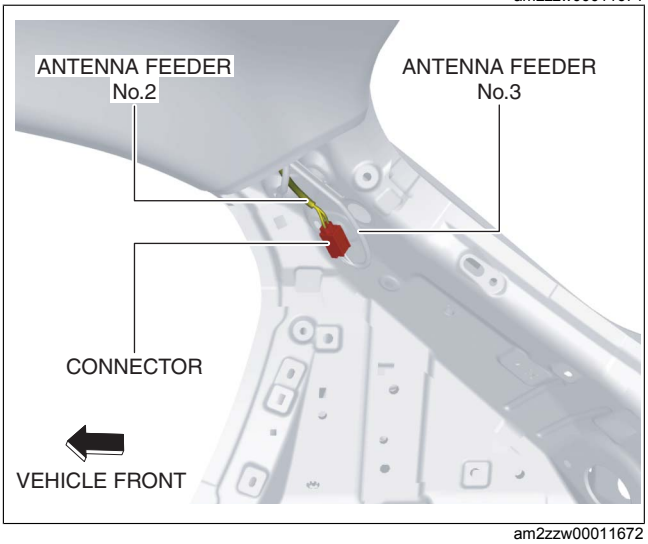

am2zzw00011672

6. Verify that the continuity between antenna feeder No.2 terminals is as indicated in the table.


: Continuity

Test condition	Terminal									
	ANTENNA FEEDER No.1 SIDE CONNECTOR					ANTENNA FEEDER No.3 SIDE CONNECTOR				
	A	A'	B	C	C'	A	A'	B	C	C'
Under any condition	○					○				
		○					○			
			○					○		
				○					○	
					○					○

: WITH DAB ANTENNA AMPLIFIER

am2zzw00011673


- If not as indicated in the table, replace antenna feeder No.2. (See ANTENNA FEEDER NO.2 REMOVAL.) (See ANTENNA FEEDER NO.2 INSTALLATION.)

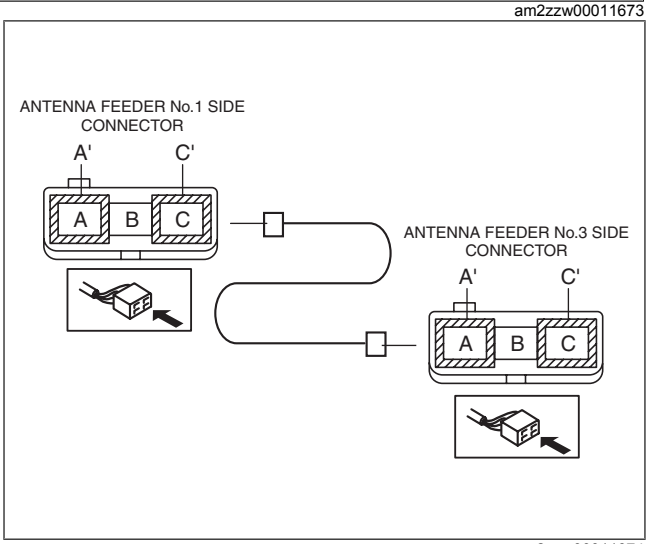

am2zzw00011674


4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the A-pillar trim (RH). (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Remove the C-pillar trim (RH). (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
4. Disconnect the connector.

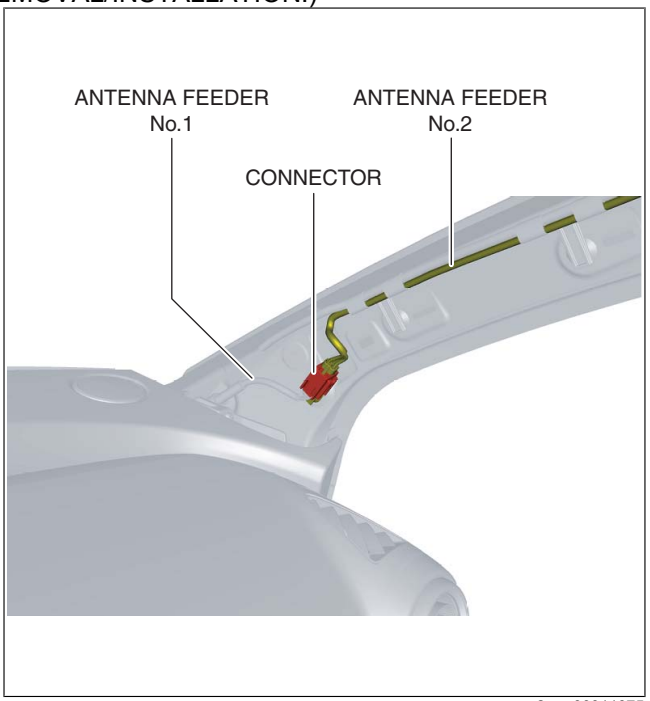

am2zzw00011675

5. Disconnect the connector.

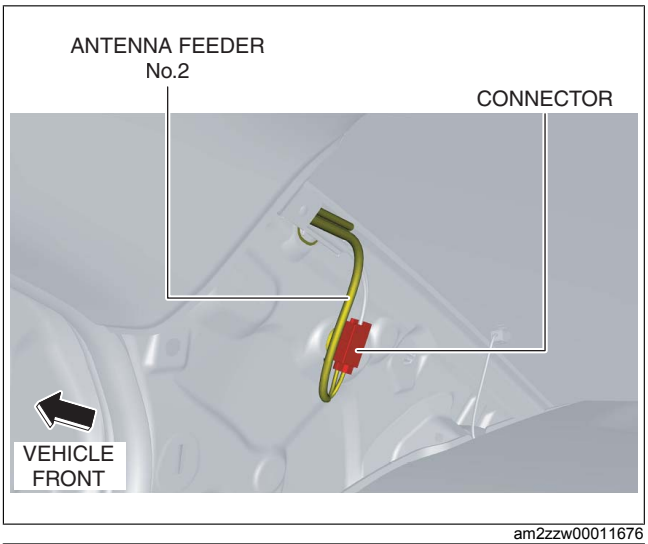

am2zzw00011676


6. Verify that the continuity between antenna feeder No.2 terminals is as indicated in the table.

: Continuity

Test condition	Terminal							
	ANTENNA FEEDER No.1 SIDE CONNECTOR				AM/FM ANTENNA AMPLIFIER SIDE CONNECTOR			
	A	B	C	C'	A	B	C	C'
Under any condition		○				○		
			○				○	
				○				○

aaxjjw00013801

- If not as indicated in the table, replace antenna feeder No.2. (See ANTENNA FEEDER NO.2 REMOVAL.) (See ANTENNA FEEDER NO.2 INSTALLATION.)

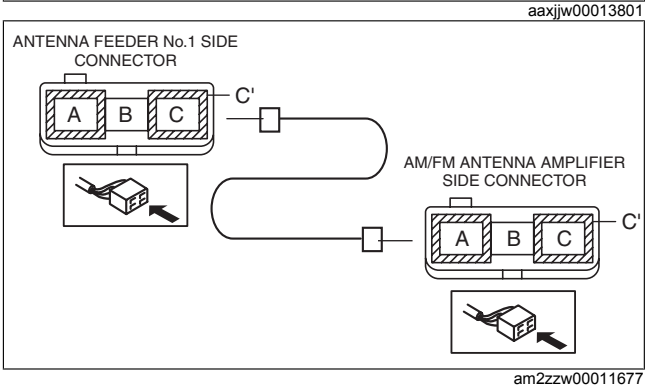

am2zzw00011677