ANTENNA FEEDER NO.3 REMOVAL/INSTALLATION

id092000812900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (4) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (5) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (6) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (7) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (8) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (9) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (10) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (11) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (12) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
3. Peel back the trunk side trim and remove the C-pillar trim. (See C-PILLAR TRIM REMOVAL/INSTALLATION.)


Note

- To facilitate the procedure, leave the C-pillar trim in the cabin without pulling the rear seat belt.

4. Remove the fasteners.
5. Peel back the seaming welt of the rear door and the liftgate.
6. Partially peel back the headliner.


Caution

- **If the headliner is peeled back excessively, the headliner could become creased. Be careful not to peel back the headliner excessively.**

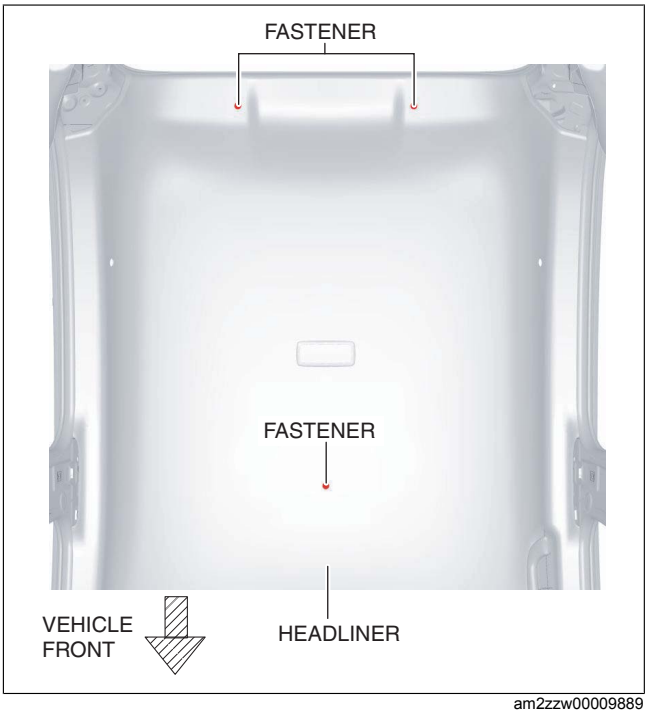


am2zzw00009889

7. Partially peel back the liftgate grommet.

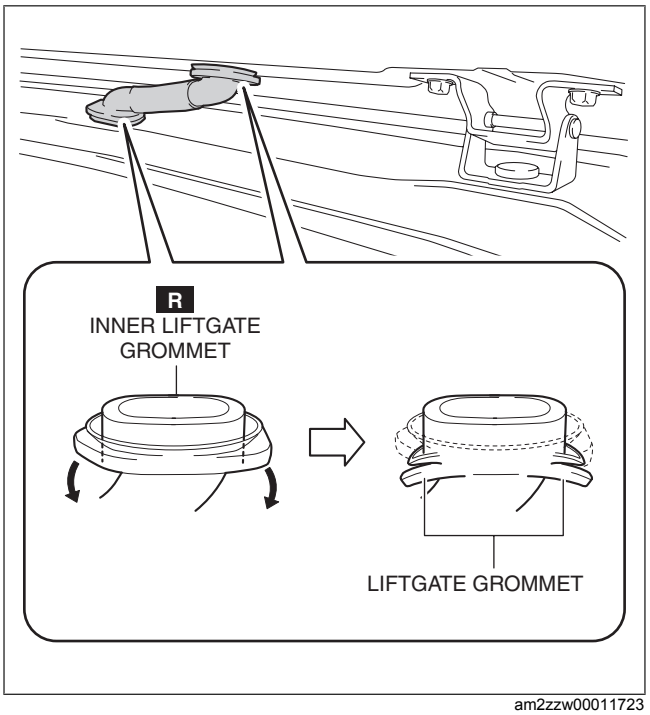


am2zzw00011723

8. While pressing the tabs of the inner liftgate grommet in the direction of arrow (1) shown in the figure, pull the inner liftgate grommet in the direction of arrow (2) and detach the tabs of the inner liftgate grommet from the liftgate.

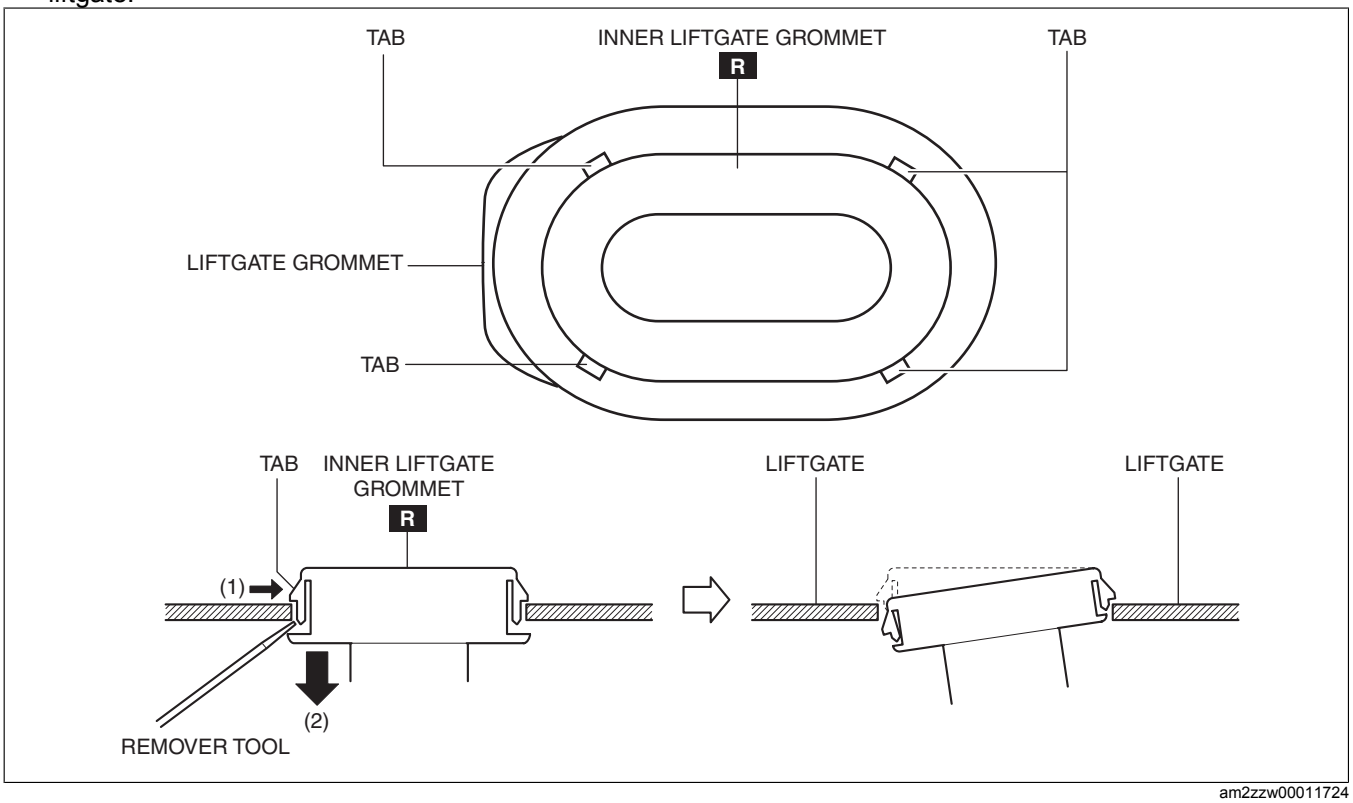


am2zzw00011724

9. Detach all the tabs of the inner liftgate grommet from the liftgate and remove the inner liftgate grommet.
10. Disconnect the connector. (with DAB antenna)

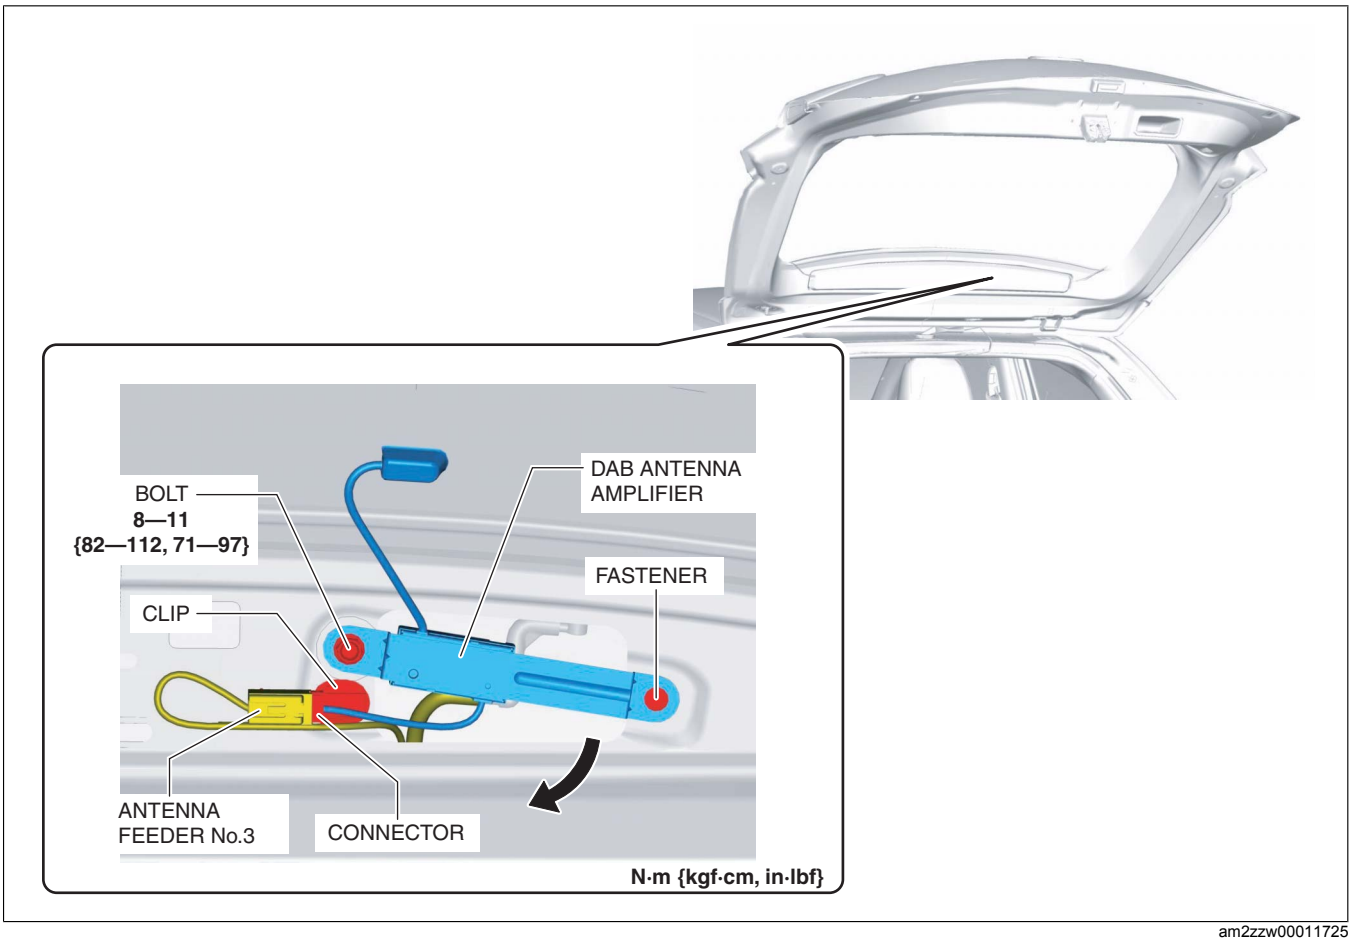


am2zzw00011725

11. Pull out the clip. (with DAB antenna)
12. Remove the bolt. (with DAB antenna)
13. Remove the fastener. (with DAB antenna)
14. Set the DAB antenna amplifier aside in the direction of the arrow shown in the figure. (with DAB antenna)
15. Disconnect rear washer hose D from joint pipe E.

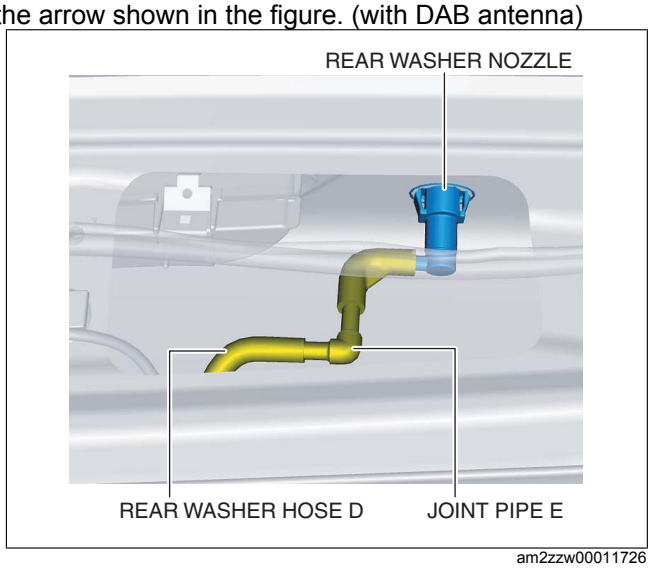

am2zzw00011726

16. Disconnect the connector.

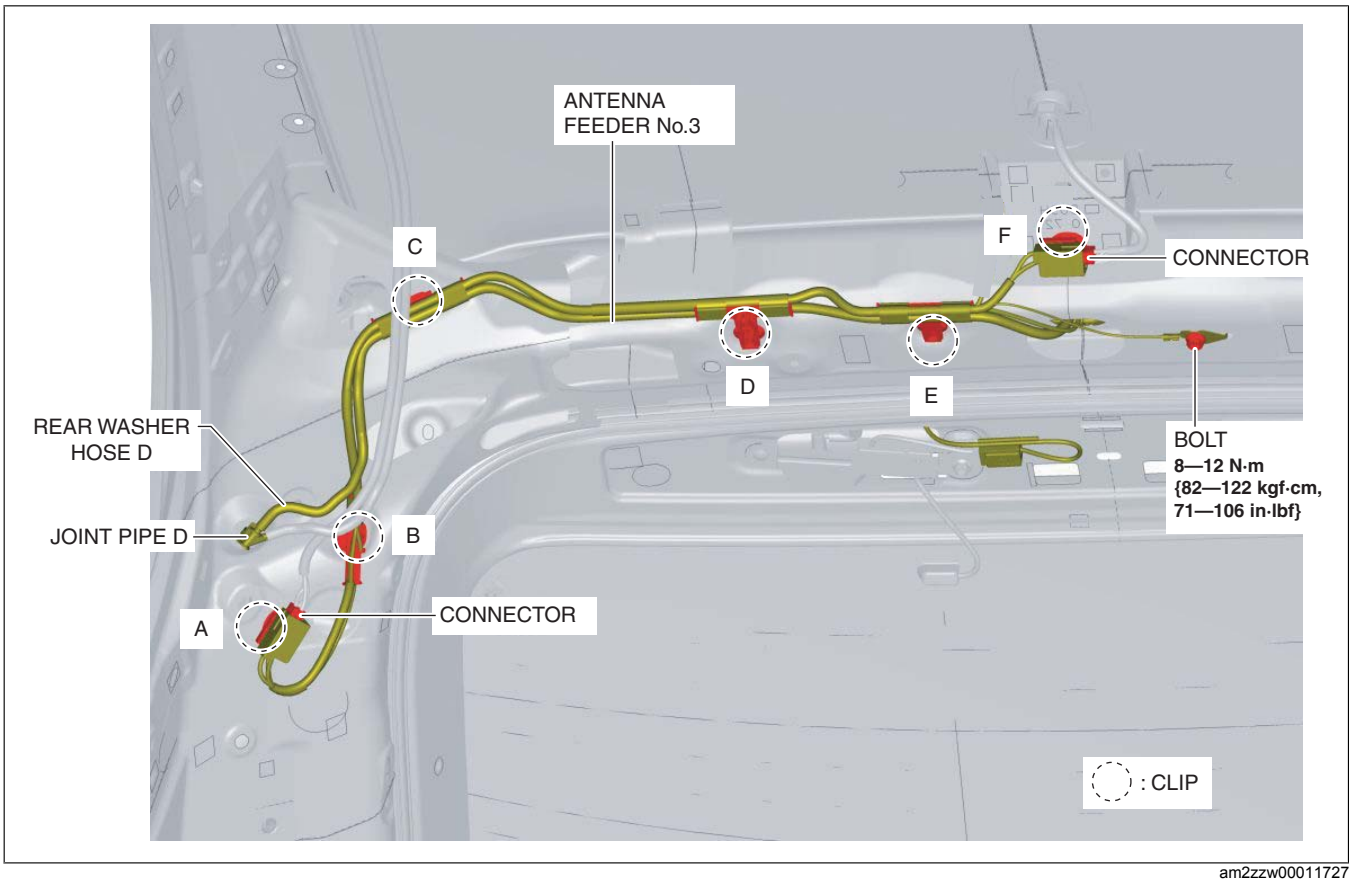

am2zzw00011727

17. Disconnect rear washer hose D from joint pipe D.
18. Remove the bolt. (with DAB antenna)
19. Remove clips A, B, C, D, E, and F in the position shown in the figure.
20. Remove antenna feeder No.3.
21. Install in the reverse order of removal.