DVD/CD PLAYER [WITH CENTER DISPLAY]

id0920zz114100

Purpose

- The DVD/CD player sends the inserted CD file information (CD)/DVD image information (DVD) to the connectivity master unit (CMU), and an audio signal to the tuner and amplifier unit (TAU).

Function

DVD Playback Function

- Playback of images and audio is possible by inserting a commercially-available DVD into the DVD/CD player.

Note


- If any one of the following conditions is met, the DVD images are not displayed and only audio is played.
  - — Parking brake OFF signal is received (parking brake is released)
  - — Vehicle speed exceeds **9 km/h {6 mph}**
- When all of the following conditions are met, the DVD images are displayed again.
  - — Parking brake ON signal is received (parking brake is applied)
  - — Vehicle speed is **7 km/h {4 mph} or less**

Specification

Type	Playback function file
Music/MP3/WMA/AAC CD player	• Music data (CD-DA) • MP3/WMA (Windows Media Audio)/AAC (Advanced Audio Coding) files
DVD VIDEO/DVD-VR PLAYER	• DVD VIDEO/DVD-VR FILE


Construction

- The DVD/CD player is located in the front console.

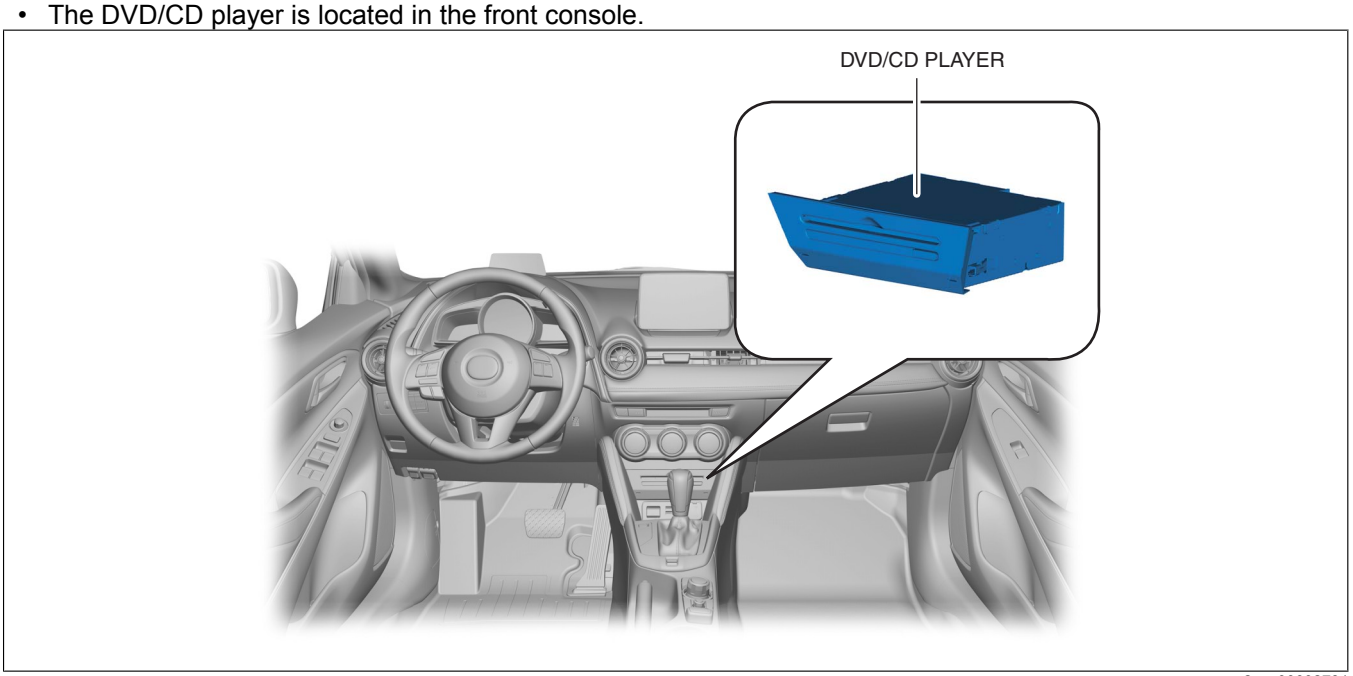

am2zzn00002781

Input/output signal table

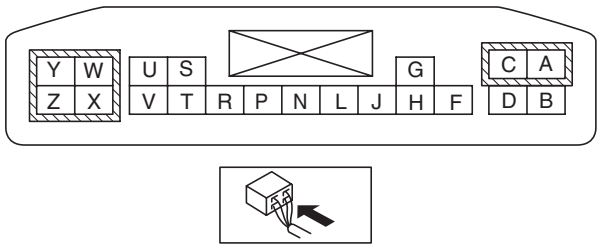Terminal		Signal
	A	Ground
	B	Video signal input ground
	C	—
	D	Illumination power supply (-)
	F	Video signal input
	G	Local HS-CAN (+)
	H	Local HS-CAN (-)
	J	—
	L	DVD/CD audio output LH (+)
	N	DVD/CD audio output LH (-)
	P	DVD/CD audio output RH (+)
	R	DVD/CD audio output RH (-)
	S	—
	T	—
	U	Video signal output
	V	Video signal output ground
	W	TNS signal input
	X	—
	Y	ACC
	Z	B+

Operation

- For the DVD/CD player operation, refer to the ENTERTAINMENT SYSTEM. (See ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY].)

Fail-safe

- Not applicable