INSTRUMENT CLUSTER REMOVAL/INSTALLATION

id092200010300

Caution

- **If configuration is not performed when the instrument cluster is replaced with a new one, the vehicle specification information is not stored in the instrument cluster and the system will not operate normally.**
- **When performing configuration, it is necessary to read the vehicle specification information from the instrument cluster before replacing it. Connect the M-MDS to the vehicle and perform vehicle identification before removing the instrument cluster. The vehicle specification information is temporarily stored in the M-MDS.**

Note


- The instrument cluster prior to replacement stores the vehicle specification information.
- A new instrument cluster does not store any vehicle specification information.
- If the vehicle specification information from the instrument cluster prior to replacement cannot be read, perform the configuration using As-Built data.

Without Active Driving Display

1. When replacing the instrument cluster, perform the configuration. (See INSTRUMENT CLUSTER CONFIGURATION (USING READ/WRITE FUNCTION).)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the upper column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
4. Remove the meter hood. (See METER HOOD REMOVAL/INSTALLATION.)
5. Remove the screws.

Caution


- **When removing the instrument cluster, the instrument cluster may contact the light switch, wiper switch, or the start stop unit and the instrument cluster may be scratched. When removing the instrument cluster, cover the light switch, wiper switch, and start stop unit using a rag.**

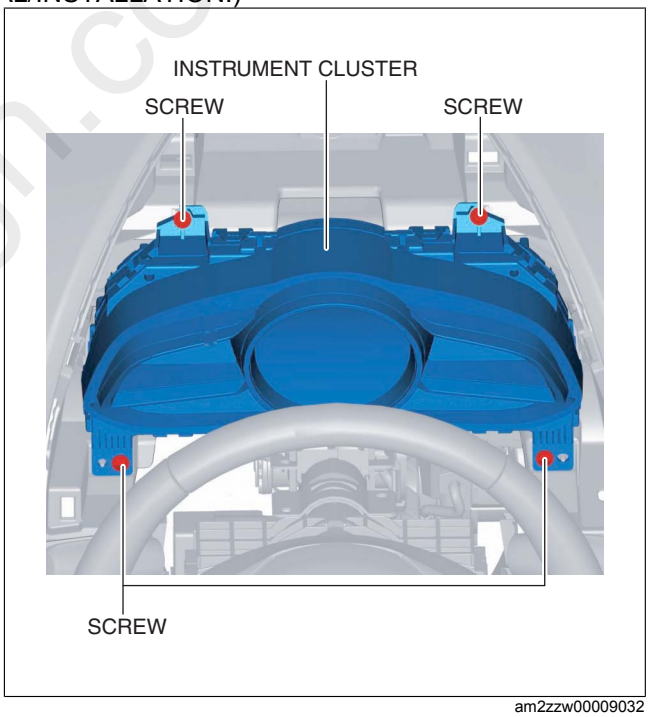

am2zzw00009032


cardiagn.com

6. Cover the light switch, wiper switch, and start stop unit using a rag to prevent scratches.

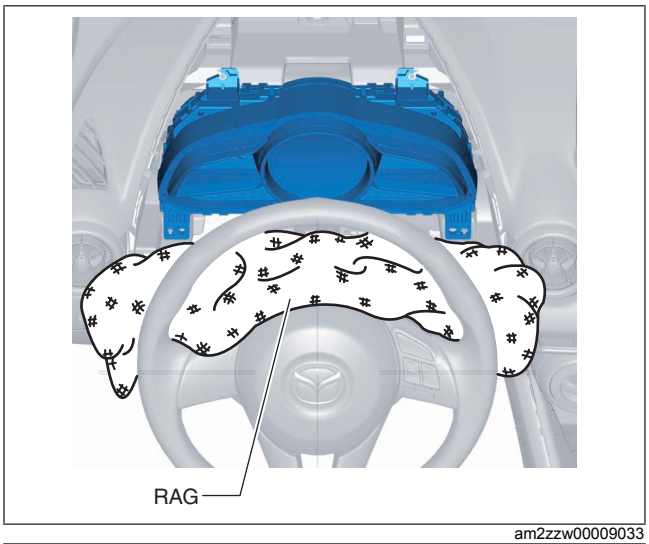

am2zzw00009033


7. Pull the instrument cluster outward to detach it from the dashboard pins.

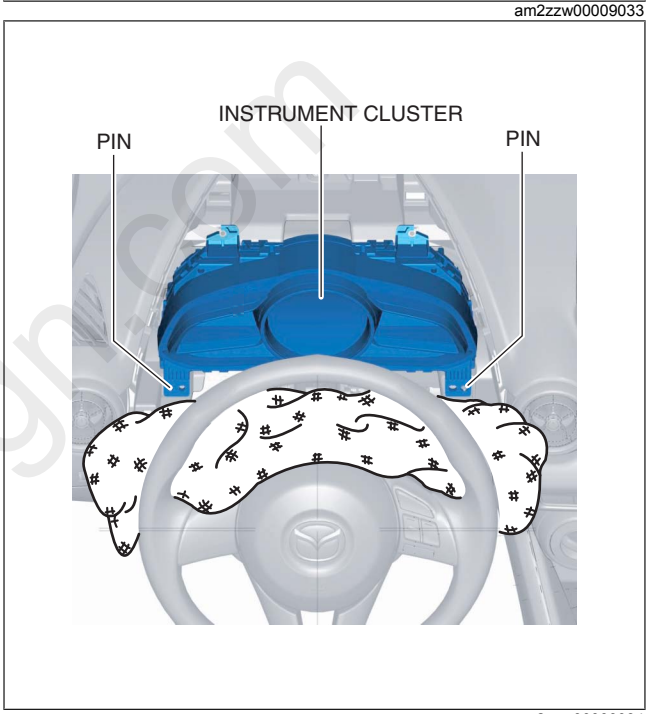

am2zzw00009034


cardiagn.com

8. Rotate the instrument cluster in the direction of the arrow shown in the figure.

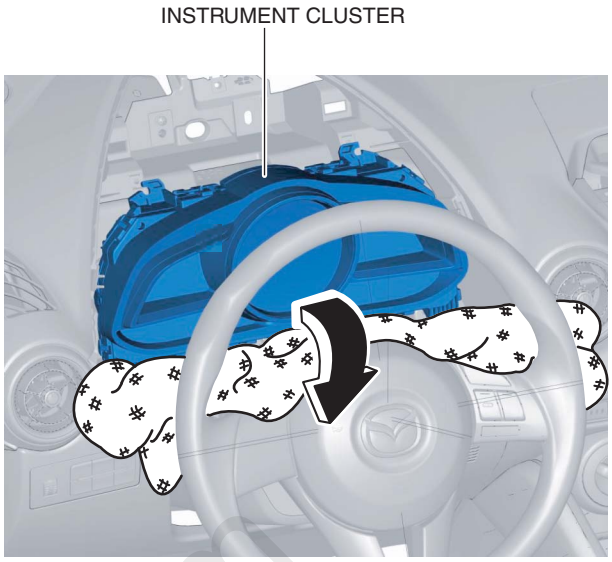

am2zzw00009035

9. Disconnect the connector.

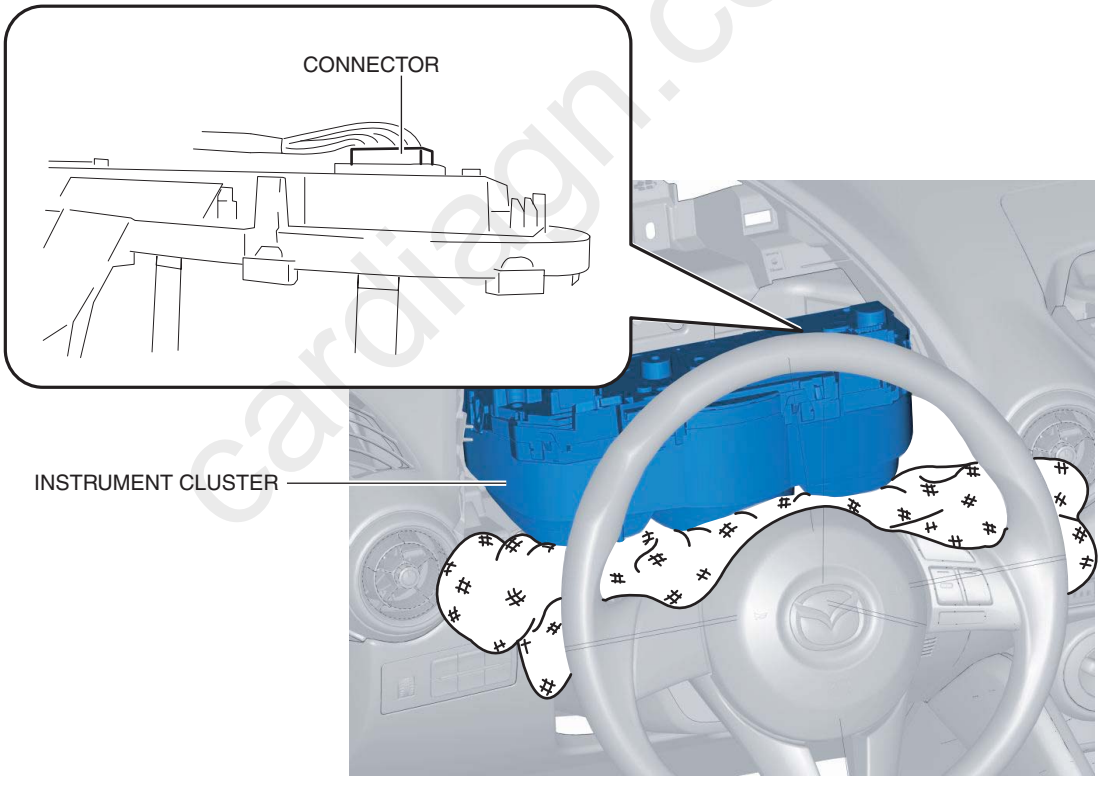

am2zzw00009036

cardiagn.com

10. Remove the instrument cluster by sliding it between the dashboard and the steering.
11. Install in the reverse order of removal.


Caution

- **If the instrument cluster is left for a long time with its screen facing down, grease applied to the needles may spill and the needles may not operate smoothly. When storing the instrument cluster, store it with its screen facing upward.**


Note

- If configuration cannot be performed by reading/writing of the vehicle specification information, perform the configuration using As-Built information after replacing the instrument cluster. (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).)

12. After performing the configuration (writing), switch the ignition ON (engine off or on) and verify that the instrument cluster operates normally.
    - If [Fctry] or [Factory] is indicated on the traveled distance display, perform the following procedure to clear the indication.
        1. Remove the ROOM fuse.
        2. Switch the ignition ON (engine off) while touching the center of the push button start with the upper part of the remote transmitter.
        3. Switch the ignition OFF.
        4. Install the ROOM fuse.
        5. Switch the ignition ON (engine off) and verify that indication is cleared.

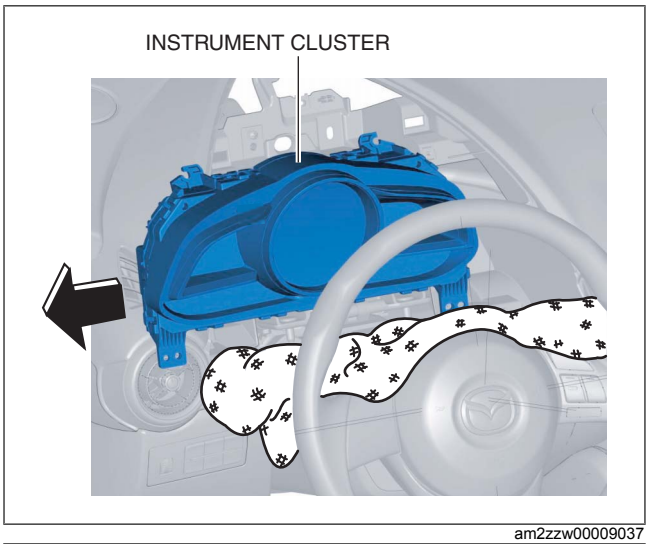

am2zzw00009037

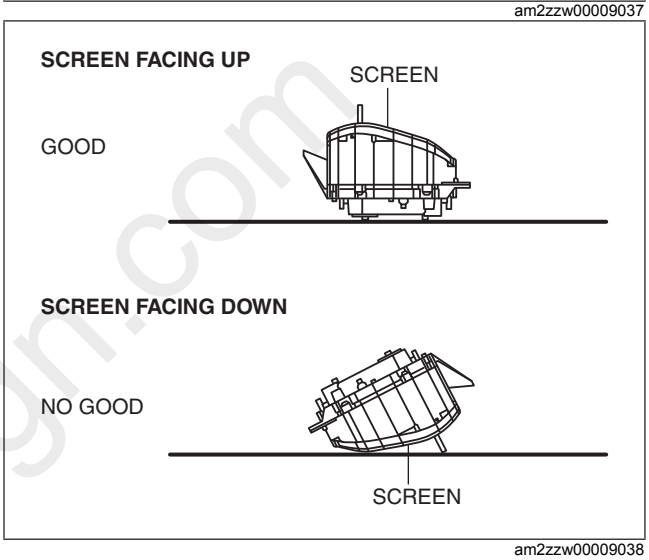

am2zzw00009038

With Active Driving Display


1. When replacing the instrument cluster, perform the configuration. (See INSTRUMENT CLUSTER CONFIGURATION (USING READ/WRITE FUNCTION).)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the upper column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
4. Remove the meter hood. (See METER HOOD REMOVAL/INSTALLATION.)

cardiagn.com

5. Remove the screws.


Caution

- **When removing the instrument cluster, the instrument cluster may contact the light switch, wiper switch, or the start stop unit and the instrument cluster may be scratched. When removing the instrument cluster, cover the light switch, wiper switch, and start stop unit using a rag.**

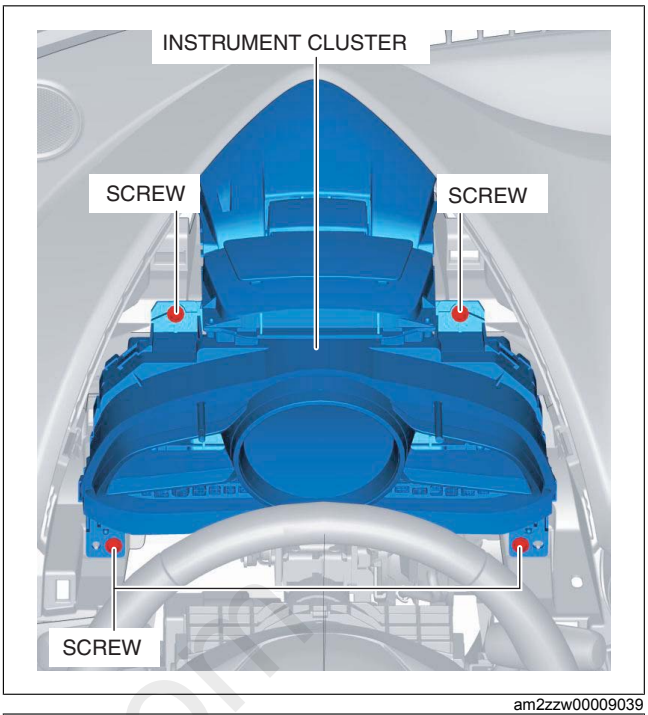

am2zzw00009039


6. Cover the light switch, wiper switch, and start stop unit using a rag to prevent scratches.

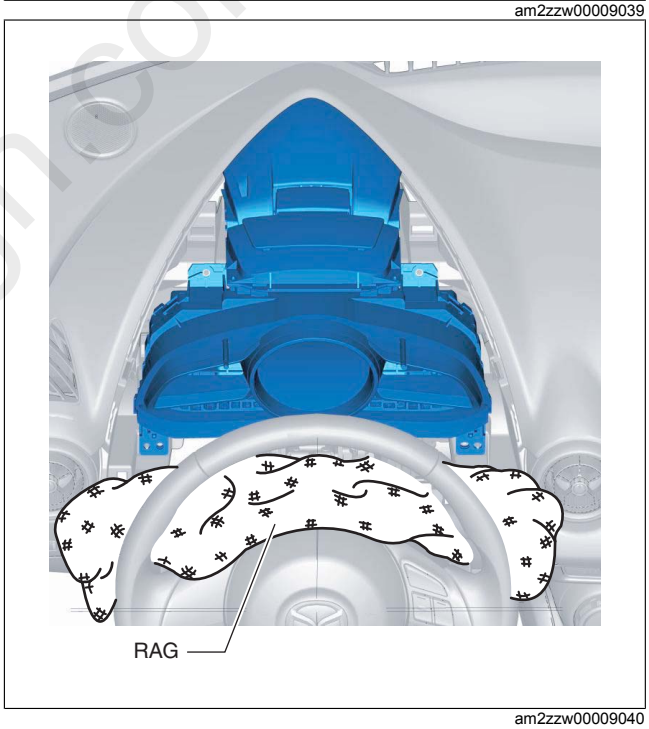


am2zzw00009040

7. Pull the instrument cluster in the direction of arrow (1) shown in the figure and detach the instrument cluster clip from the dashboard.


cardiagn.com

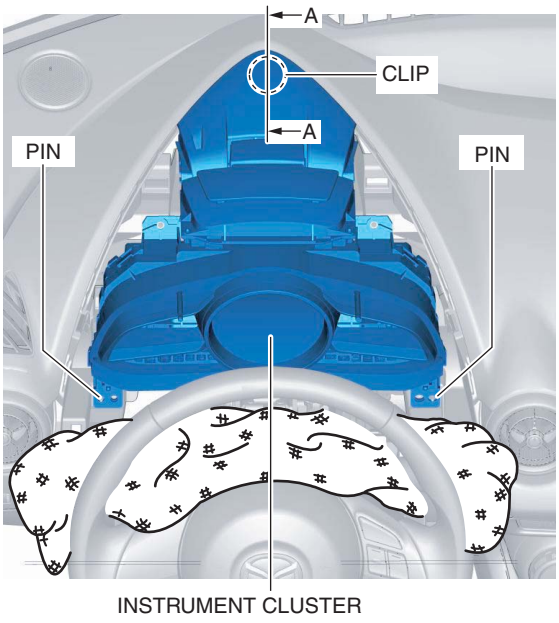

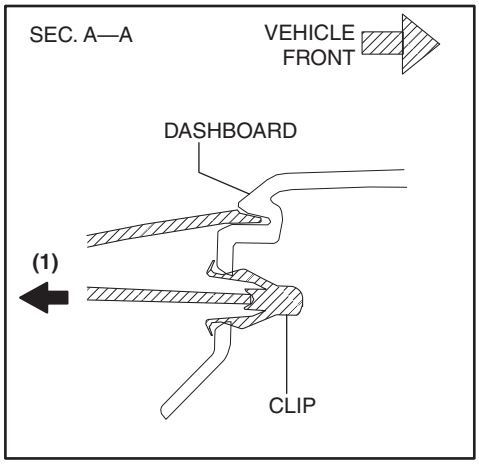

am2zzw00009041


8. Pull the instrument cluster outward to detach it from the dashboard pins.
9. Rotate the instrument cluster in the direction of the arrow shown in the figure.

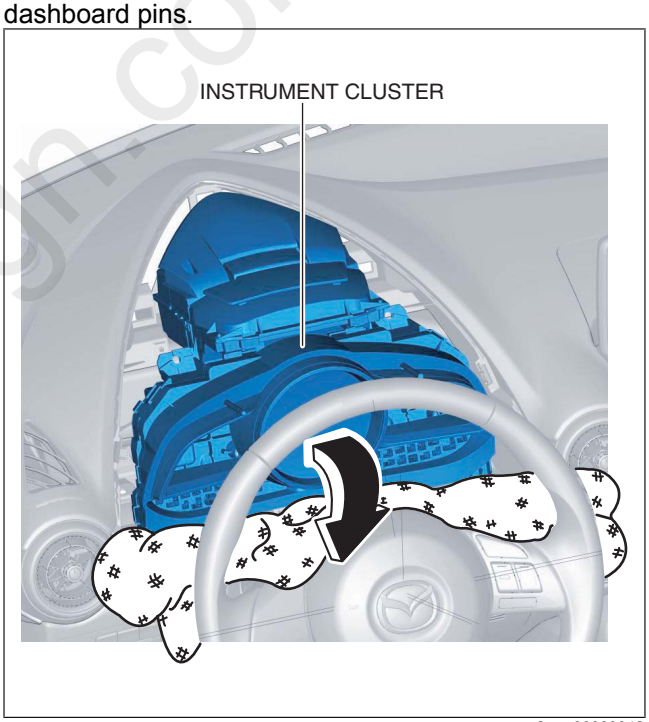

am2zzw00009042

10. Disconnect the connector.

cardiagn.com

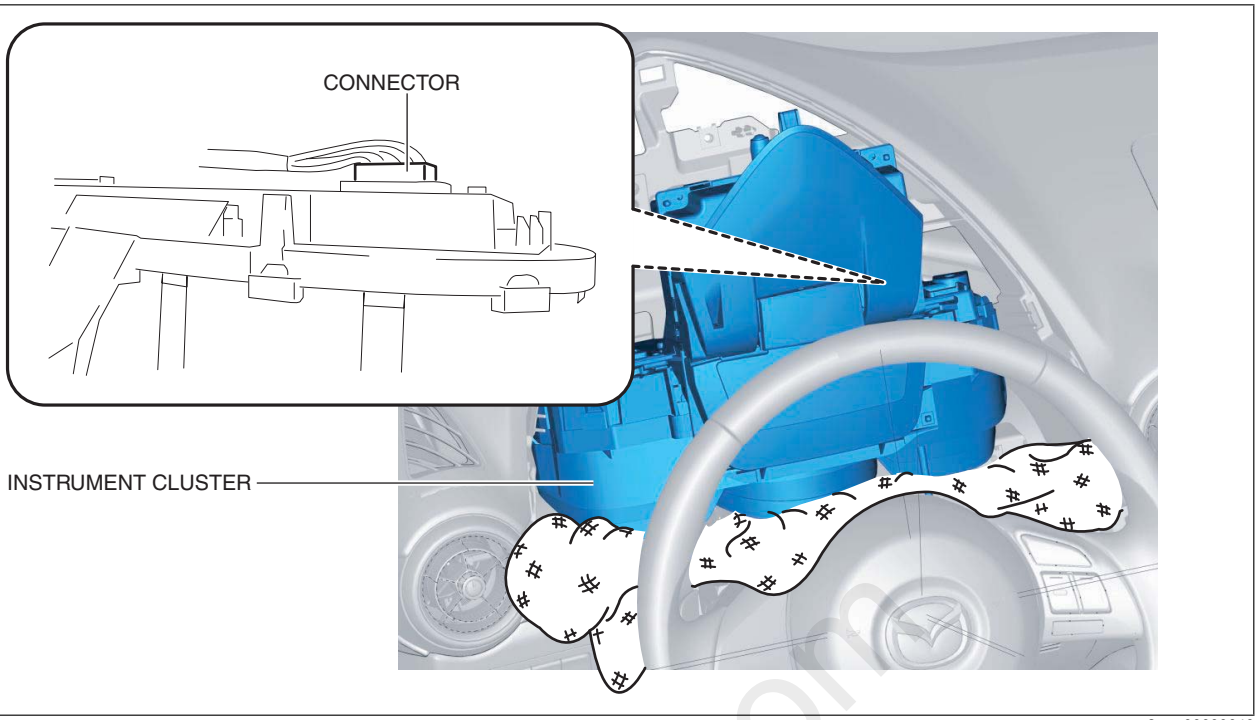

am2zzw00009043

11. Remove the instrument cluster by sliding it between the dashboard and the steering.
12. When the instrument cluster is replaced, remove the active driving display. (See ACTIVE DRIVING DISPLAY REMOVAL/INSTALLATION.)
13. Install in the reverse order of removal.


Caution

- **If the instrument cluster is left for a long time with its screen facing down, grease applied to the needles may spill and the needles may not operate smoothly. When storing the instrument cluster, store it with its screen facing upward.**


Note

- If configuration cannot be performed by reading/writing of the vehicle specification information, perform the configuration using As-Built information after replacing the instrument cluster. (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).)

14. After performing the configuration (writing), switch the ignition ON (engine off or on) and verify that the instrument cluster operates normally.
    - If [Fctry] or [Factory] is indicated on the traveled distance display, perform the following procedure to clear the indication.
        1. Remove the ROOM fuse.
        2. Switch the ignition ON (engine off) while touching the center of the push button start with the upper part of the remote transmitter.
        3. Switch the ignition OFF.
        4. Install the ROOM fuse.
        5. Switch the ignition ON (engine off) and verify that indication is cleared.

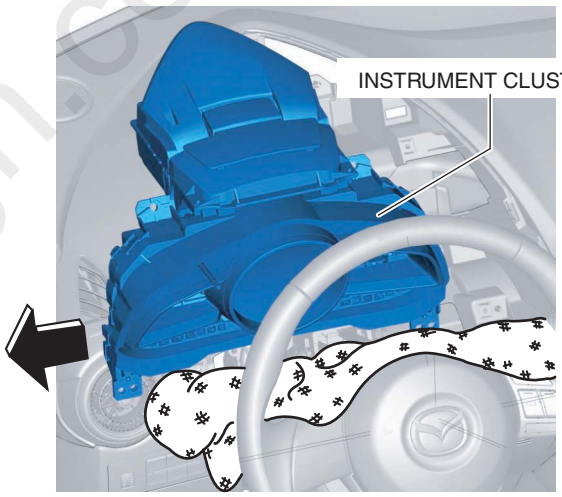

am2zzw00009044

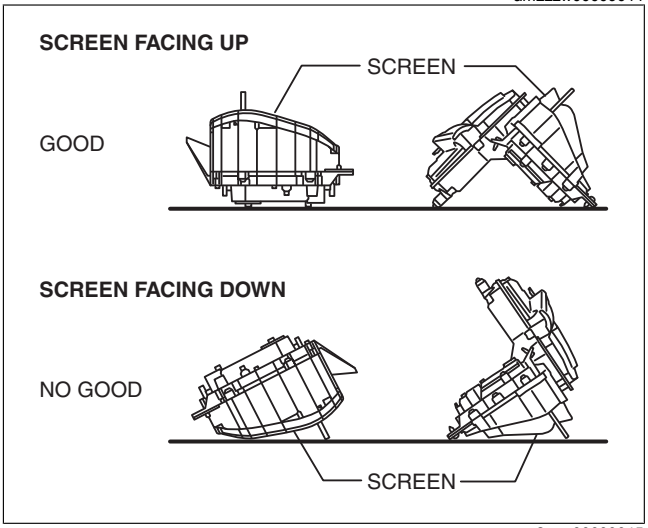

am2zzw00009045

carmagn.com