INSTRUMENTATION/DRIVER INFO.

id092200018200

Outline

- The following warning/indication systems have been adopted.
  - — Instrument cluster
  - — Blind spot monitoring (BSM) system (With blind spot monitoring (BSM) system)
  - — Parking sensor system (With parking sensor system)
  - — Lane departure warning system (LDWS) (With lane departure warning system (LDWS))
  - — Indicator unit
  - — Horn
- An instrument cluster integrated with an active driving display has been adopted which displays the driving speed, warning screen, and direction of vehicle travel (with car-navigation system). (Digital speedometer type)
- An LCD has been adopted to the instrument cluster which displays vehicle information such as the speedometer, fuel gauge, odometer/tripmeter, ambient temperature, trip computer, shift position indicator (ATX)/gear position indicator (MTX).
- A blind spot monitoring (BSM) system has been adopted which alerts the driver to vehicles approaching from the rear. The blind spot monitoring (BSM) system also sounds an alert if the driver tries to change lanes to the side of an approaching vehicle or if a vehicle is approaching while reversing the vehicle. (With blind spot monitoring (BSM) system)
- A parking sensor system has been adopted which detects obstructions in the blind spot (vehicle rear/corners) to a wide extent using ultrasonic sensors and notifies the driver of the obstructions. (With parking sensor system)
- A lane departure warning system (LDWS) has been adopted which recognizes vehicle lane lines on the road using the forward sensing camera (FSC) installed to the windshield and warns the driver if the vehicle may depart from its lane unbeknownst to the driver. (With lane departure warning system (LDWS))
- An indicator unit has been adopted which displays the passenger and rear seat belt warning light and PAD indicator light.

Specification

Digital speedometer type

Item				Specification
Instrument cluster	Warning lights	Brightness level	(cd/m^2)	200—300
		Light source		LED
	Indicator lights	Brightness level	(cd/m^2)	18—300
		Light source		LED
	Warning beep	Oscillation frequency	(Hz)	800—2,000
		Output sound pressure	(dB)	65—80
	Speedometer	System		Digital type
		Display		Digital
		Input signal communication system		CAN system
	Tachometer	System		Stepping motor type
		Display		Analog needle
		Input signal communication system		CAN system
	Low engine coolant temperature indicator light/High engine coolant temperature warning light	Operation		(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)
		Input signal communication system		CAN system


Item			Specification													
Instrument cluster	Fuel gauge	System	LCD													
		Input signal source	Fuel gauge sender unit													
		Segment indication number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		Remaining fuel quantity (L {US gal, Imp gal}) in fuel tank	6—8 {1.6—2.1, 1.4—1.7}	8—9 {2.18—2.3, 1.8—1.9}	9—11 {3.0—2.9, 2.0—2.4}	11—12 {3.0—3.1, 2.5—2.6}	12—14 {3.2—3.6, 2.7—3.0}	14—15 {3.7—3.9, 3.1—3.2}	15—18 {4.0—4.7, 3.3—3.9}	18—21 {4.8—5.5, 4.0—4.6}	21—23 {5.6—6.0, 4.7—5.0}	23—26 {6.1—6.8, 5.1—5.7}	26—29 {6.9—7.6, 5.8—6.3}	29—32 {7.7—8.4, 6.4—7.0}	32—35 {8.5—9.2, 7.1—7.6}	35—38 {9.3—10.0, 7.7—8.3}	38—44 {10.1—11.6, 8.4—9.6}
		Remaining fuel level (L {US gal, Imp gal}) when fuel tank level warning light turns on	Approx. 9 {2, 2}														
		Invalid remaining fuel level (L {US gal, Imp gal})	Approx. 0.5 {0.1, 0.1}														
	Odometer	System	LCD														
		Display area	0—999999														
		Minimum display unit (km {mile})	1 {0.6}														
		Input signal communication system	CAN system														
	Tripmeter	System	LCD														
		Display area	Returns to 0.0 from 99999.9, calculation continues														
		Minimum display unit (km {mile})	0.1 {0.06}														
		Input signal communication system	CAN system														
Horn		Oscillation frequency (Hz)	390—440														
		Waveform	Spiral														

Analog speedometer type

Item			Specification
Instrument cluster	Warning lights	Brightness level (cd/m^2)	155—345
		Light source	LED
	Indicator lights	Brightness level (cd/m^2)	14—345
		Light source	LED
	Warning beep	Oscillation frequency (Hz)	800—2,000
		Output sound pressure (dB)	65—80
	Speedometer	System	Stepping motor type
		Display	Analog needle
		Input signal communication system	CAN system
	Tachometer (With digital tachometer)	System	Digital type
		Display	Digital
		Input signal communication system	CAN system
	Low engine coolant temperature indicator light/ High engine coolant temperature warning light	Operation	(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)
		Input signal communication system	CAN system
Instrument cluster	Fuel gauge	System	LCD
		Input signal source	Fuel gauge sender unit
		Segment indication number	1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15
		Remaining fuel quantity (L {US gal, Imp gal}) in fuel tank	6—8 {1.6—2.1, 1.4—1.7} / 8—9 {2.18—2.3, 1.8—1.9} / 9—11 {3.0—2.9, 2.0—2.4} / 11—12 {3.0—3.1, 2.5—2.6} / 12—14 {3.2—3.6, 2.7—3.0} / 14—15 {3.7—3.9, 3.1—3.2} / 15—18 {4.0—4.7, 3.3—3.9} / 18—21 {4.8—5.5, 4.0—4.6} / 21—23 {5.6—6.0, 4.7—5.0} / 23—26 {6.1—6.8, 5.1—5.7} / 26—29 {6.9—7.6, 5.8—6.3} / 29—32 {7.7—8.4, 6.4—7.0} / 32—35 {8.5—9.2, 7.1—7.6} / 35—37 {9.3—9.7, 7.7—8.1} / 37—44 {9.8—11.0, 8.2—9.6}
		Remaining fuel level (L {US gal, Imp gal}) when fuel tank level warning light turns on	Approx. 9 {2, 2}
		Invalid remaining fuel level (L {US gal, Imp gal})	Approx. 0.5 {0.1, 0.1}
	Odometer	System	LCD
		Display area	0—999999
		Minimum display unit (km {mile})	1 {0.6}
		Input signal communication system	CAN system
	Tripmeter	System	LCD
		Display area	Returns to 0.0 from 99999.9, calculation continues
		Minimum display unit (km {mile})	0.1 {0.06}
		Input signal communication system	CAN system


Item			Specification
Horn	Oscillation frequency	(Hz)	390—440
	Waveform		Spiral

Structural View
Interior

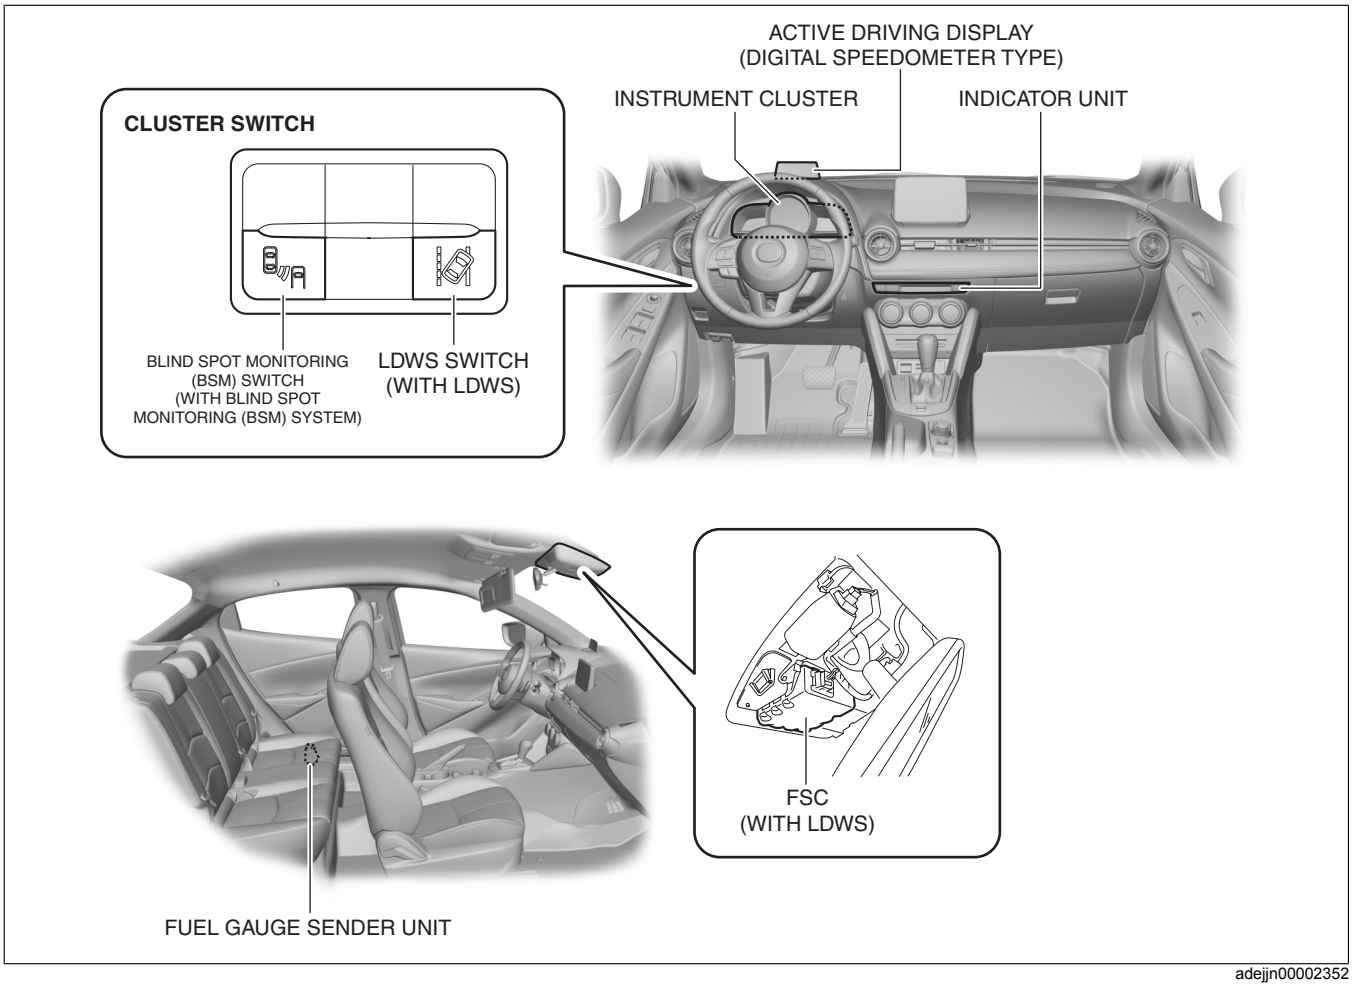

adejjn00002352

Exterior

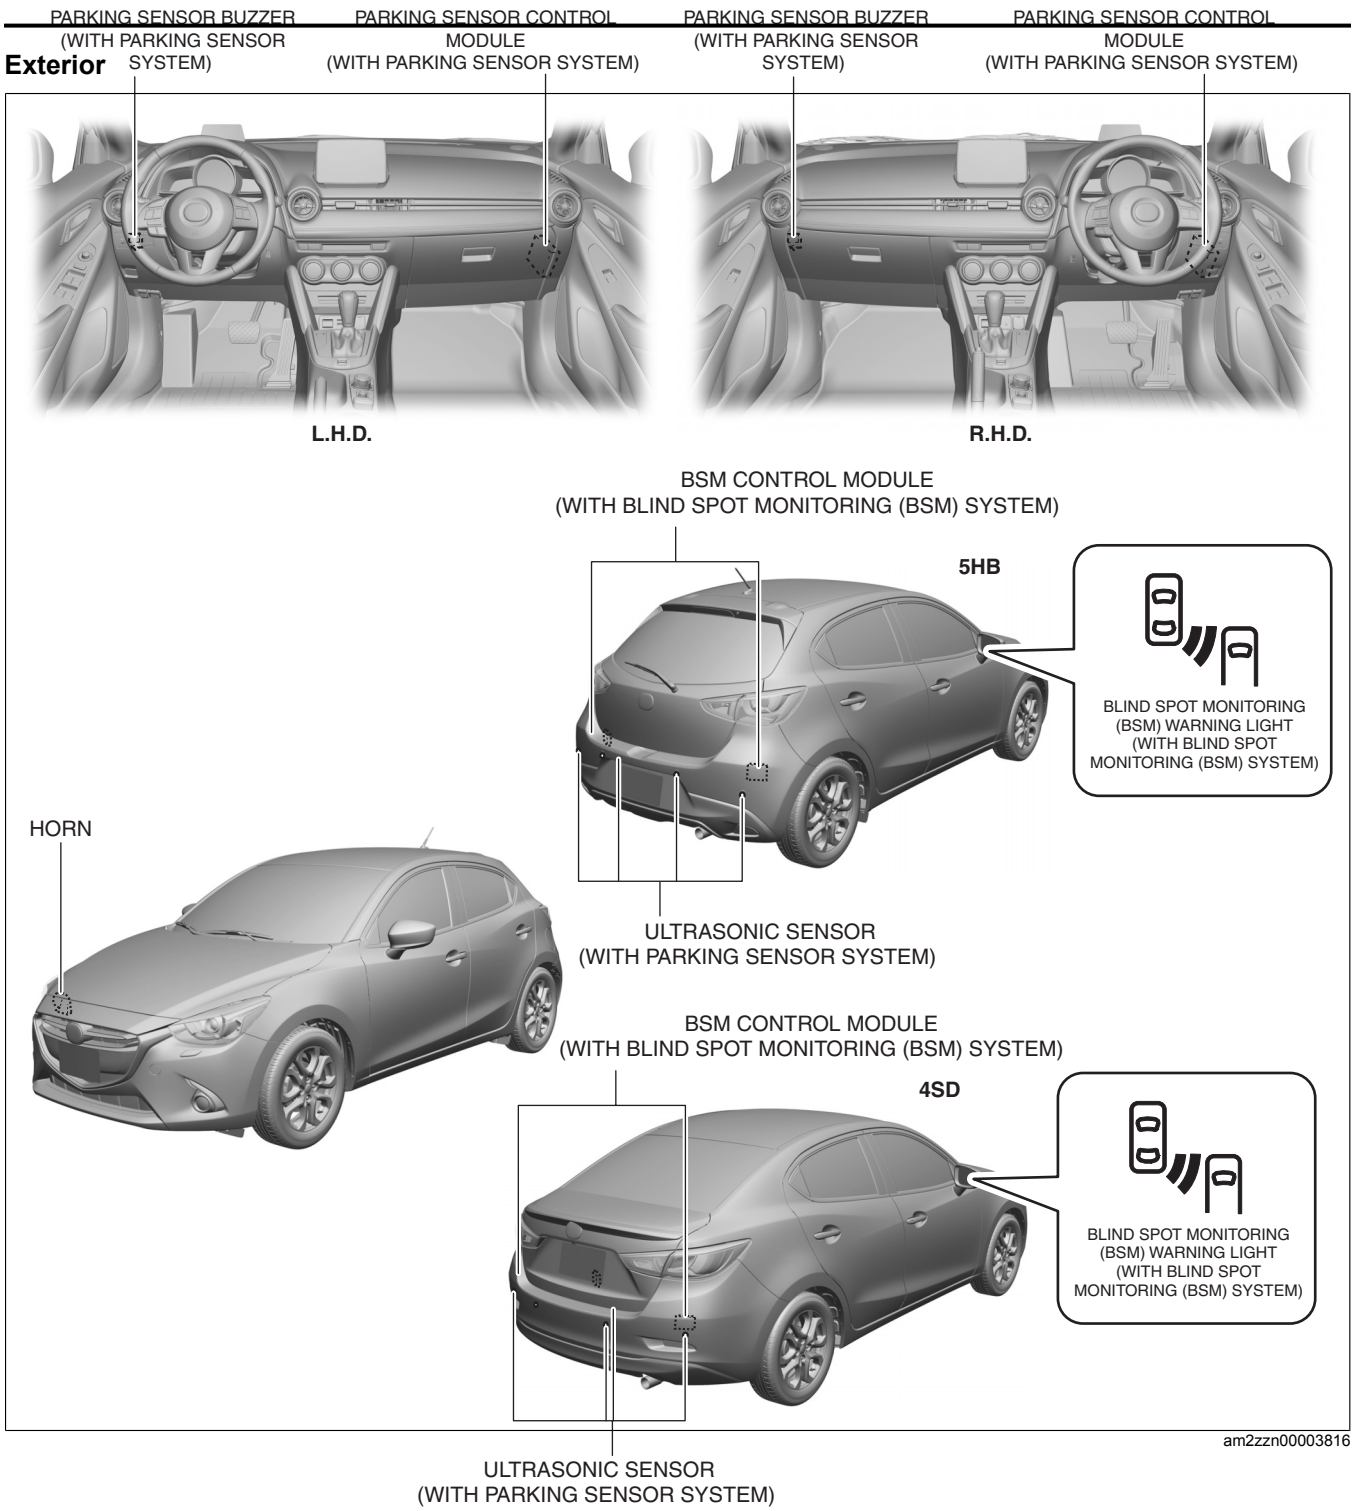

am2zzn00003816