## FRONT SIDE FRAME (PARTIAL CUTTING) INSTALLATION [PANEL REPLACEMENT]

id098008742200

### Symbol Marks

| SYMBOL MARK | MEANING |
|---|---|
|  | PLUG WELDING (ARC WELDING) |
|  | ROUGH CUT LOCATION |
|  | CONTINUOUS ARC WELDING (CUT-AND-JOIN LOCATION) |

am2zzb00000471


### Installation Procedure

**Caution**

- **The cut and joint area indicates the maximum size range of the installation position.**


**LH**

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. To cut and join the new and existing parts, rough cut the new part at the specified location indicated by (A) shown in the figure, and chamfer the joint surfaces of the new and existing parts.

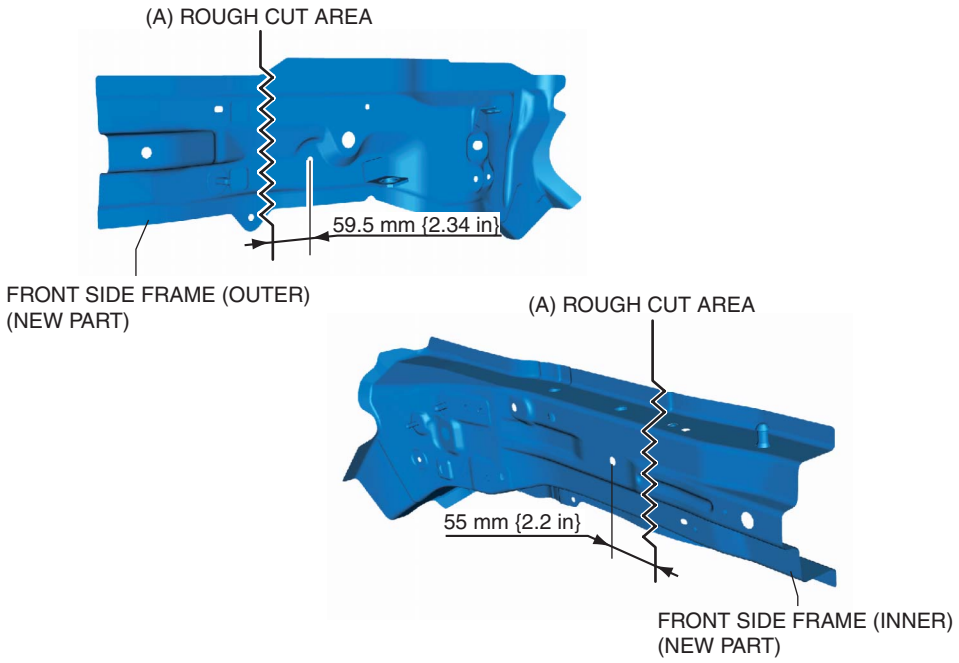



am2zzb00000472

5. Make a 2 reinforcement panels using the material from the front side frame (outer).

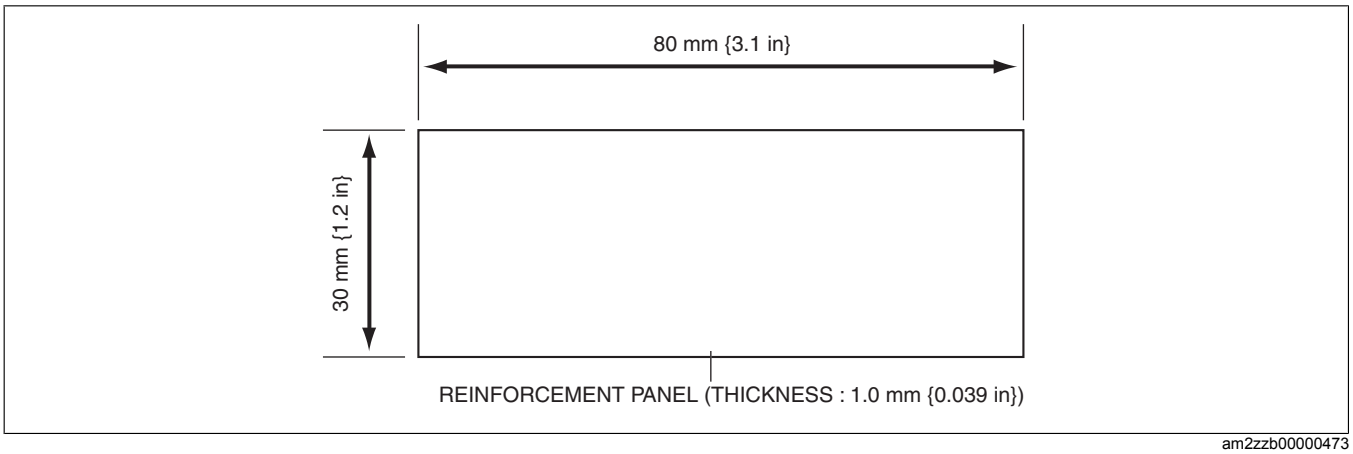



am2zzb00000473

6. Continuous arc weld the location indicated by (B) shown in the figure, then install the reinforcement panels.

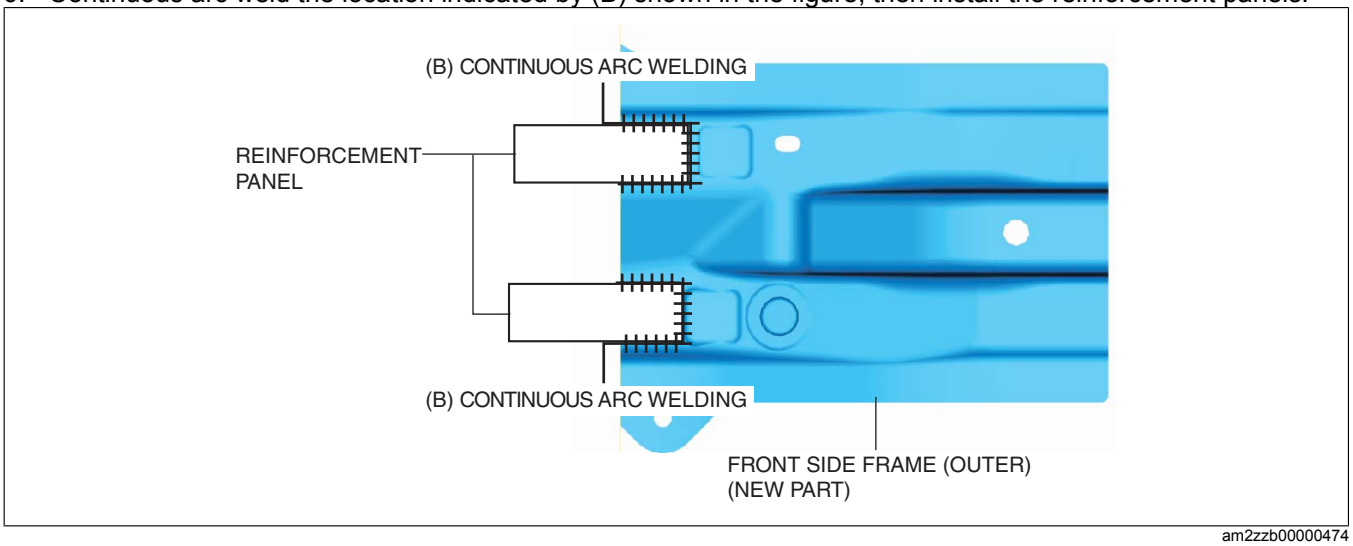


am2zzb00000474


7. Cut and join the location indicated by (C) shown in the figure.
8. Plug weld the 6 locations indicated by (D) shown in the figure, then install the new part of front side frame (outer).

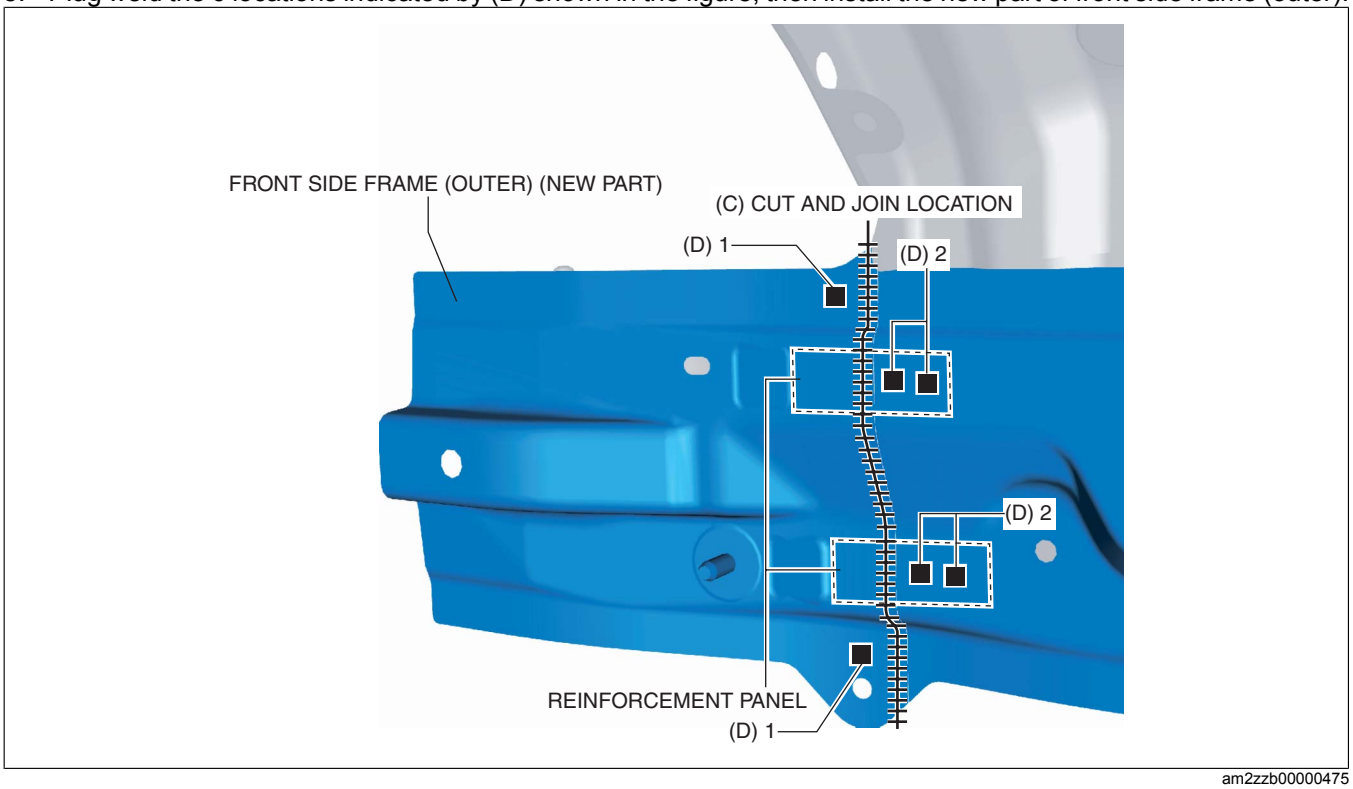


am2zzb00000475

9. Make a 2 reinforcement panels using the material from the front side frame (inner).

10. Plug weld the 4 locations indicated by (E) shown in the figure, then install the reinforcement panels to the new part of front side frame (inner).

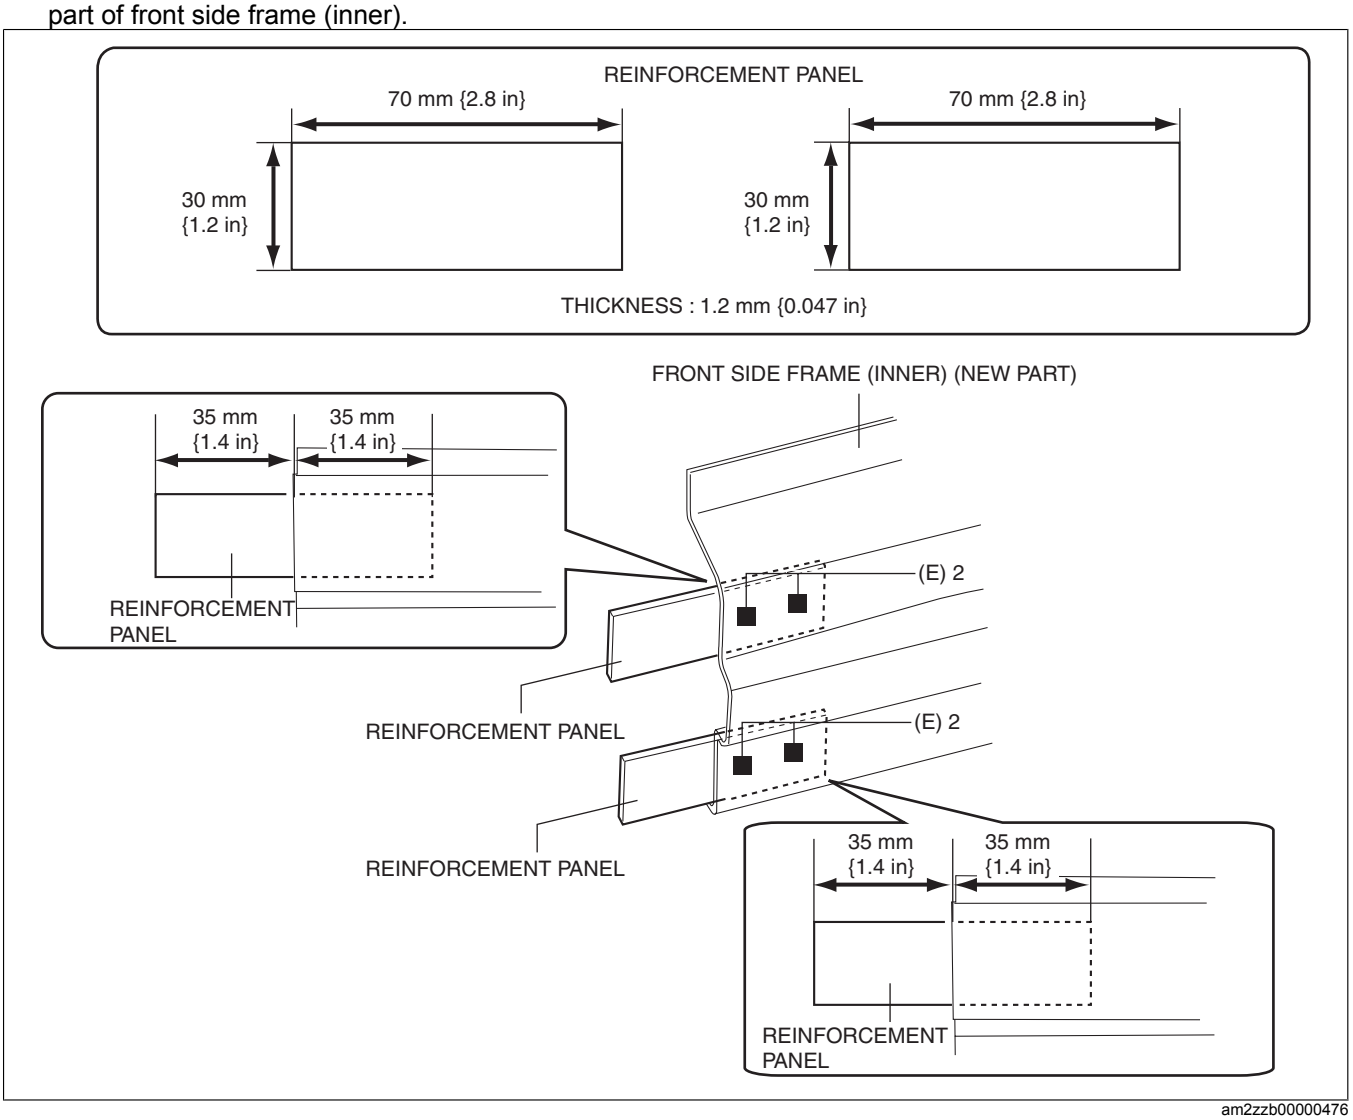



am2zzb00000476

11. Plug weld the 4 locations indicated by (F) shown in the figure.
12. Cut and join the location indicated by (G) shown in the figure.

**Note**
- Press fit the reinforcement panel and the body side material, and then weld them.

13. Plug weld the 6 locations indicated by (H) shown in the figure, then install the new part of front side frame (inner).

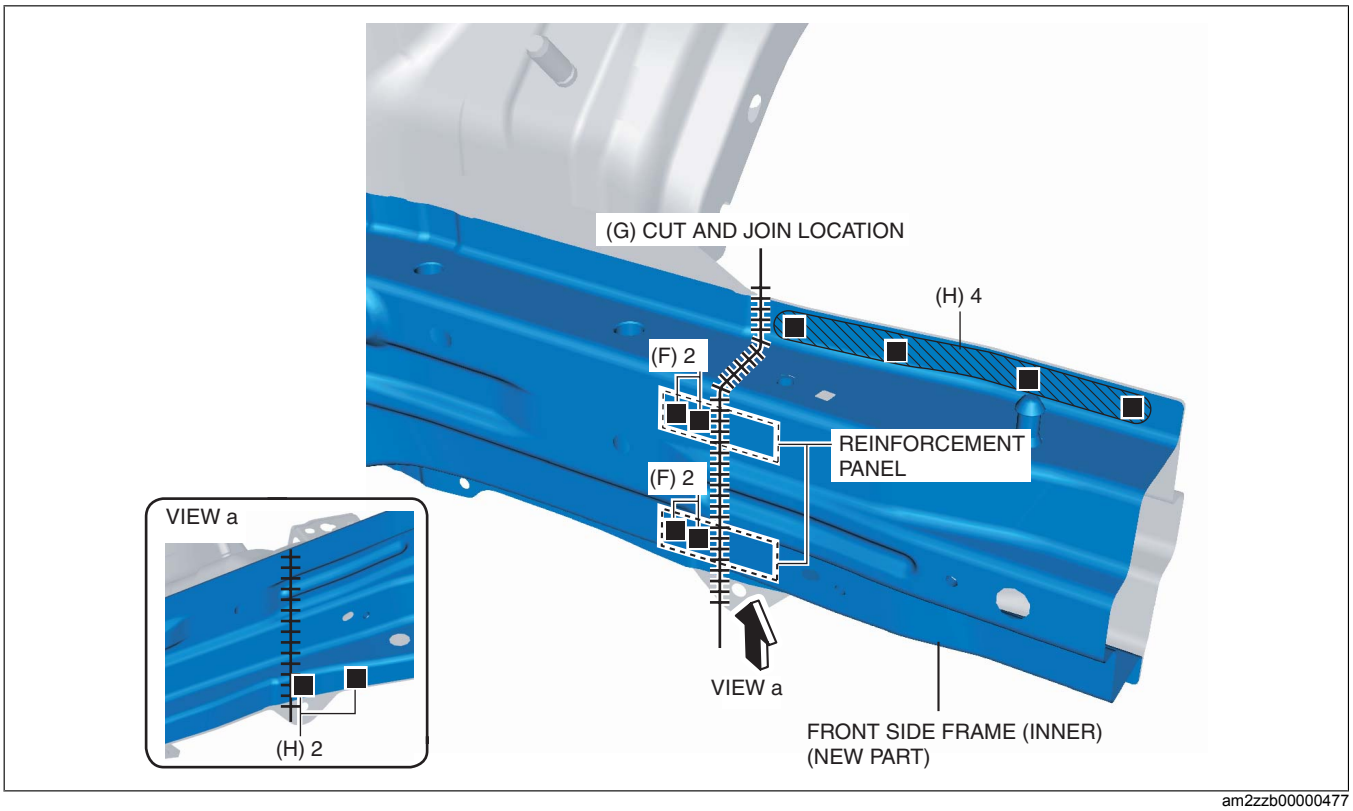



am2zzb00000477

14. Install the light bracket. (See LIGHT BRACKET INSTALLATION [PANEL REPLACEMENT].)
15. Install the bumper bracket. (See BUMPER BRACKET INSTALLATION [PANEL REPLACEMENT].)


**RH**

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. To cut and join the new and existing parts, rough cut the new part at the specified location indicated by (A) shown in the figure, and chamfer the joint surfaces of the new and existing parts.

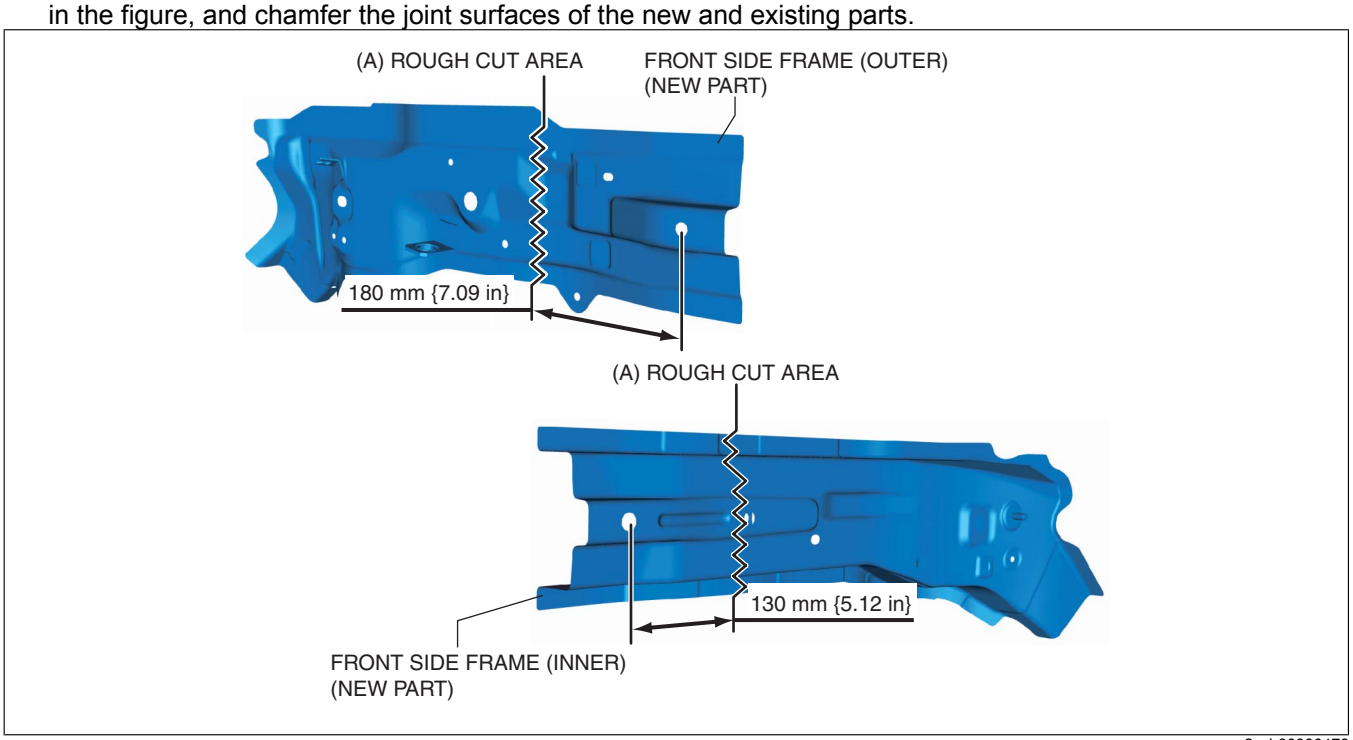



am2zzb00000478

5. Make a reinforcement panel using the material from the front side frame (outer).

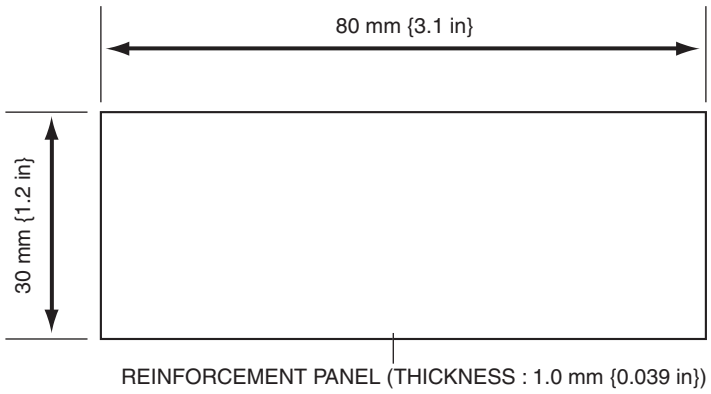



am2zzb00000473

6. Continuous arc weld the location indicated by (B) shown in the figure, then install the reinforcement panels.

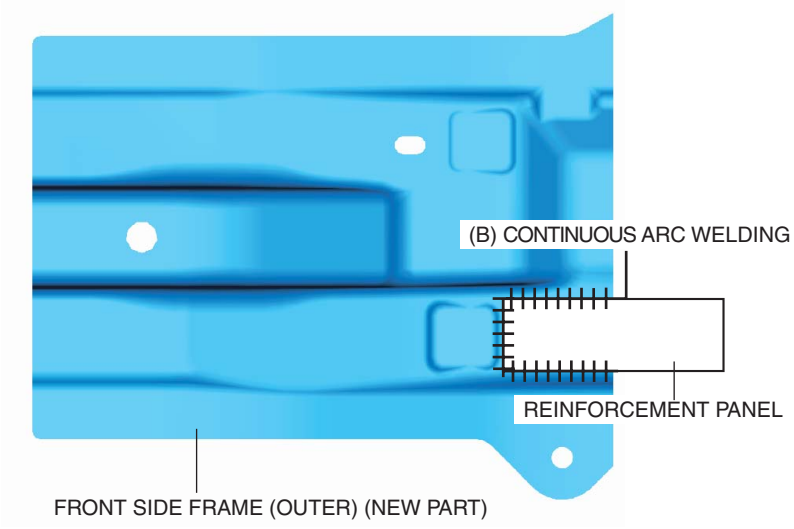



am2zzb00000479

7. Cut and join the location indicated by (C) shown in the figure.
8. Plug weld the 6 locations indicated by (D) shown in the figure, then install the new part of front side frame (outer).

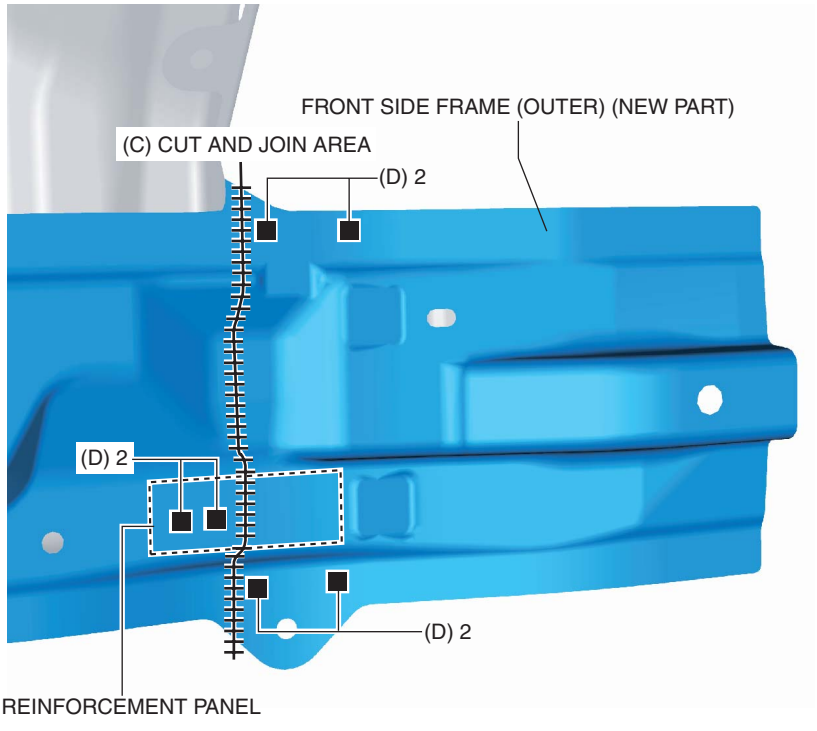


am2zzb00000480

9. Make a 2 reinforcement panels using the material from the front side frame (inner).
10. Plug weld the 4 locations indicated by (E) shown in the figure, then install the reinforcement panels to the new part of front side frame (inner).

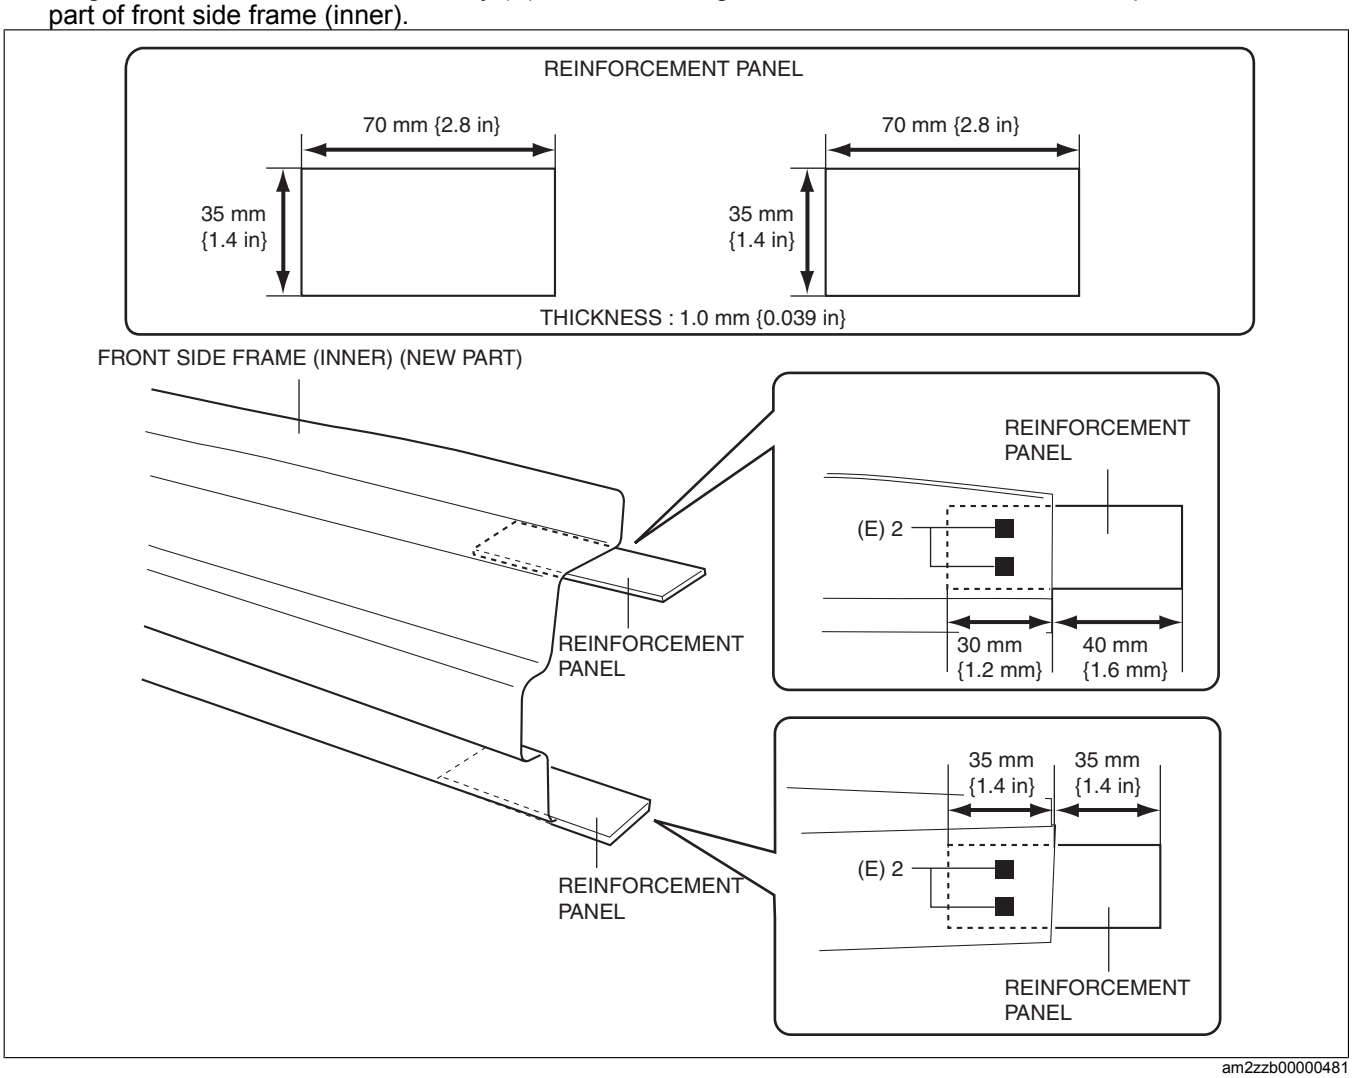



am2zzb00000481

11. Plug weld the 4 locations indicated by (F) shown in the figure.
12. Cut and join the location indicated by (G) shown in the figure.

**Note**
- Press fit the reinforcement panel and the body side material, and then weld them.

13. plug weld the 6 locations indicated by (H) shown in the figure, then install the new part of front side frame (inner).

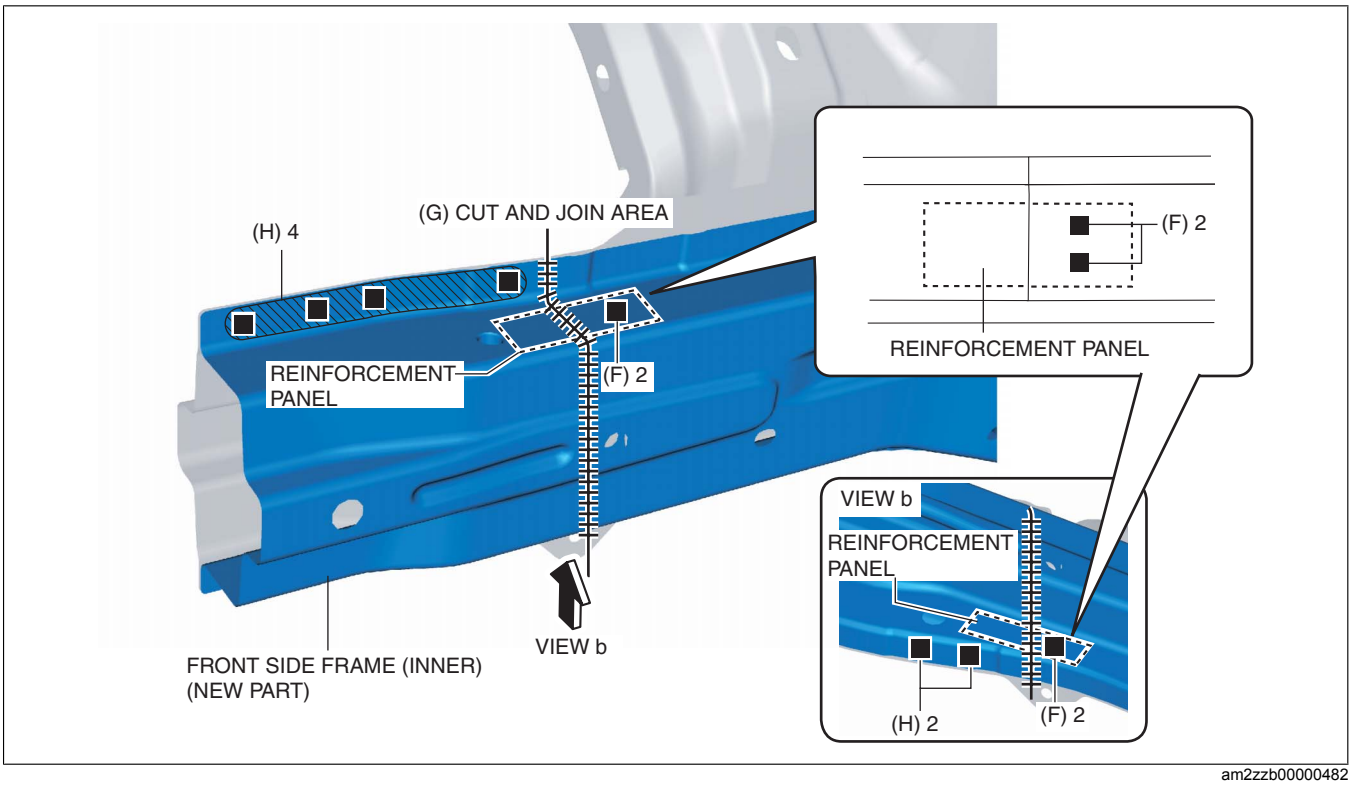


am2zzb00000482

14. Install the light bracket. (See LIGHT BRACKET INSTALLATION [PANEL REPLACEMENT].)
15. Install the bumper bracket. (See BUMPER BRACKET INSTALLATION [PANEL REPLACEMENT].)