REAR FLOOR PAN REMOVAL [PANEL REPLACEMENT]

id098008742700

Symbol Marks

SYMBOL MARK	MEANING
●	SPOT WELDING
⏦	ROUGH CUT LOCATION

am2zzb00000570


Removal Procedure

4SD


1. Rough cut the 1 location indicated by (A) shown in the figure.
2. Drill the 119 locations indicated by (B) shown in the figure.

Note

- When drilling the 119 locations indicated by (B) shown in the figure, do not drill a hole all the way through or there could be a problem when installing the new part.

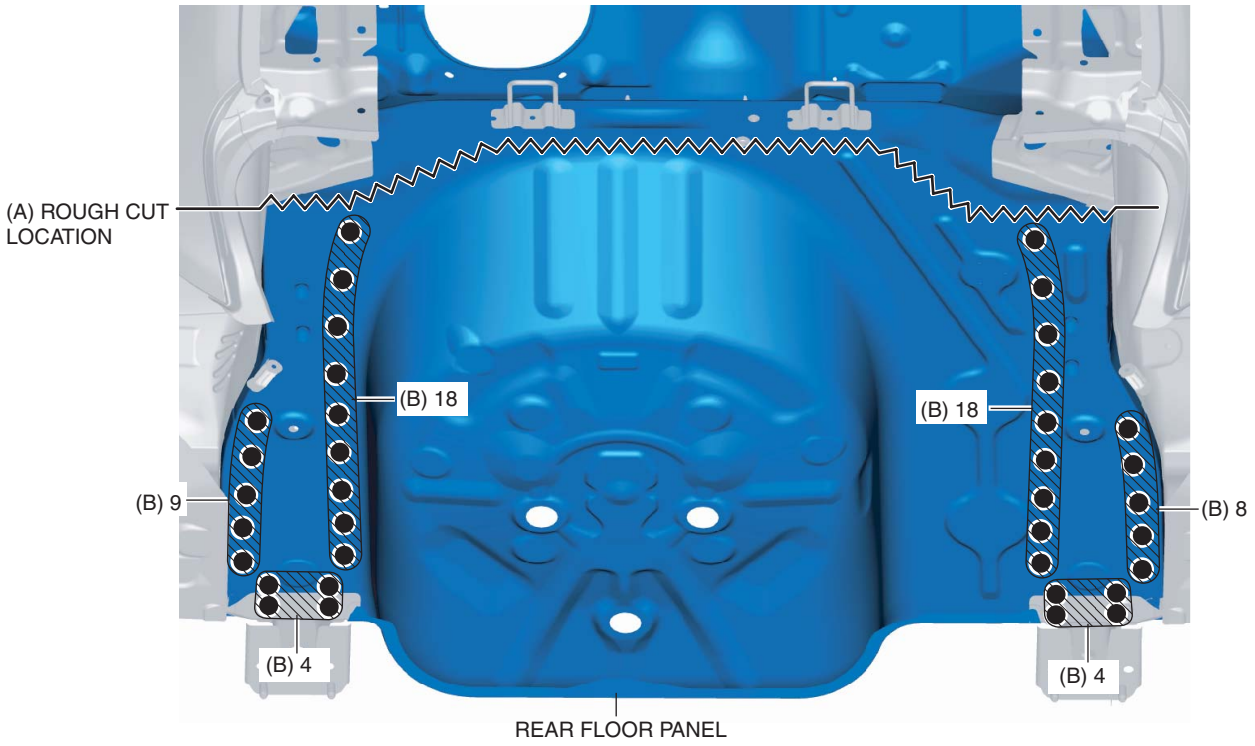

am2zzb00000604

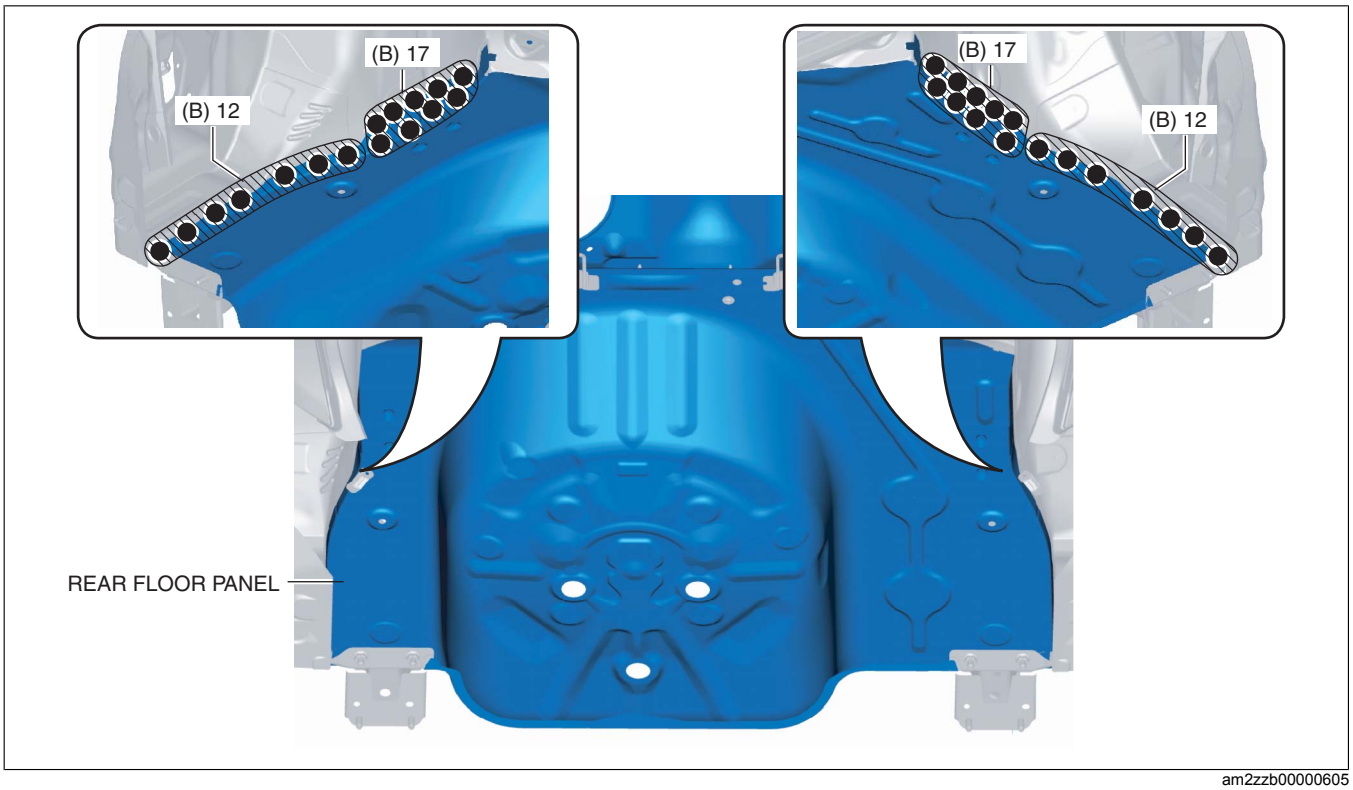

am2zzb00000605

3. Remove the rear floor panel.

5HB

1. Rough cut the 1 location indicated by (A) shown in the figure.


Caution

- **When rough cutting area (A), cut 5 mm {0.2 in} away from the flange edge of crossmember No.4.**

2. Drill the 86 locations indicated by (B) shown in the figure.

Note

- When drilling the 86 locations indicated by (B) shown in the figure, do not drill a hole all the way through or there could be a problem when installing the new part.

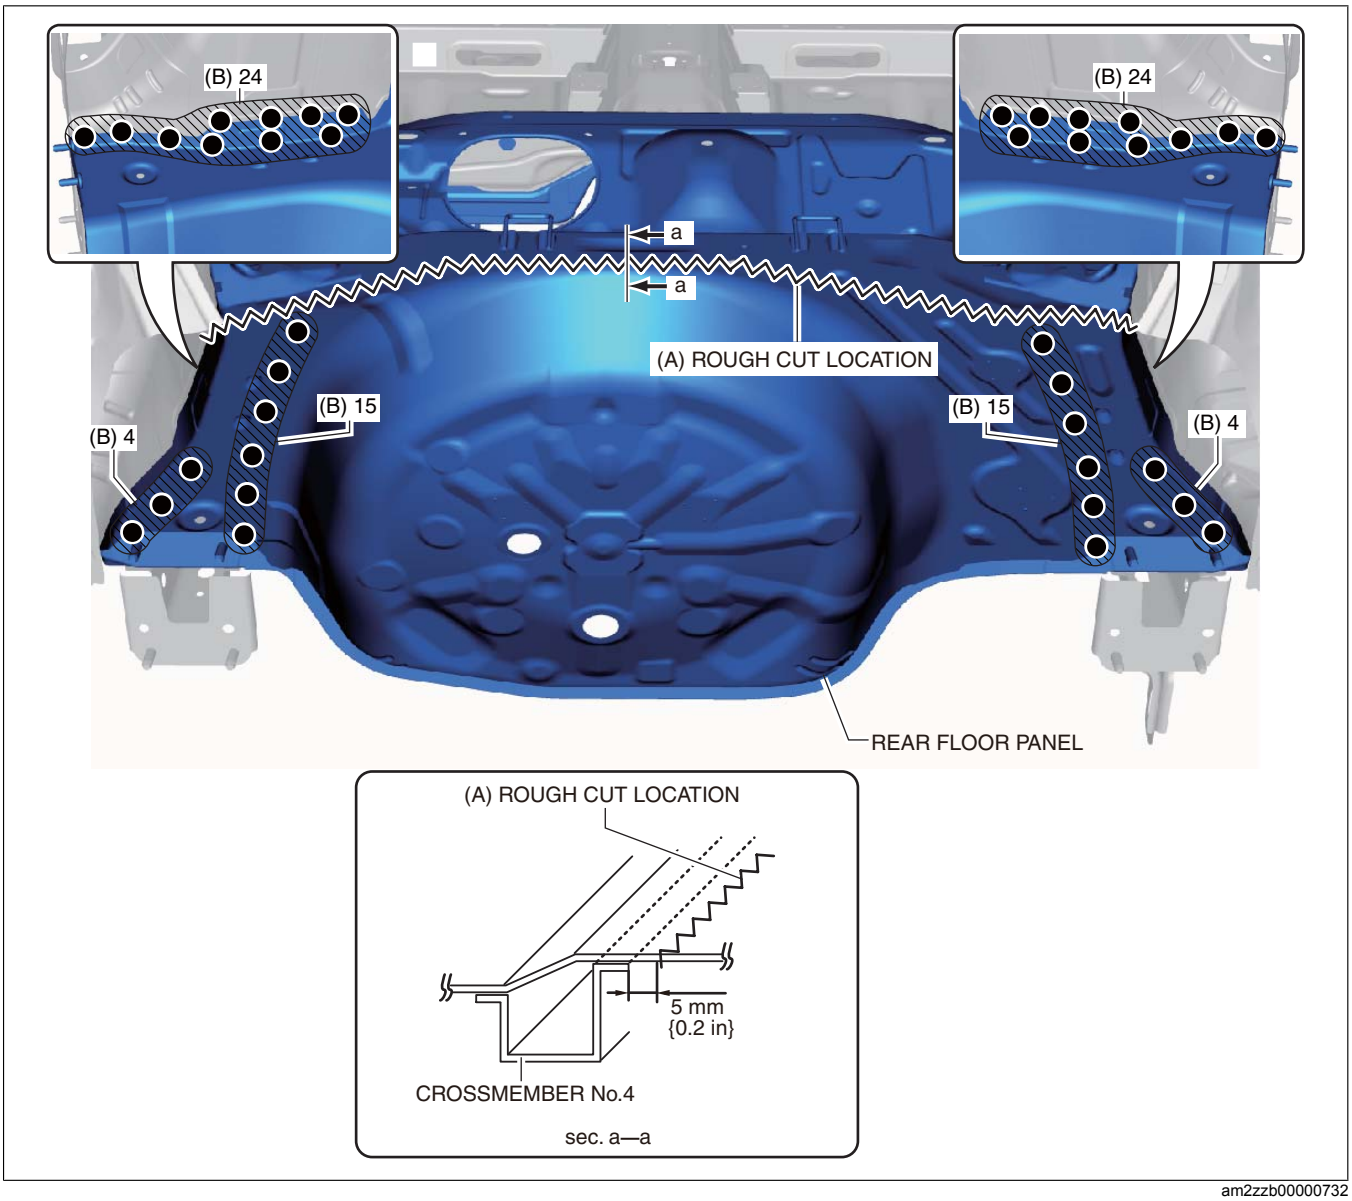

am2zzb00000732

3. Remove the rear floor panel.