CENTER PILLAR REMOVAL [PANEL REPLACEMENT]

id098008743900

Symbol Marks


SYMBOL MARK	MEANING
●	SPOT WELDING
⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯⎯	ROUGH CUT LOCATION

am2zzb00000496

Removal Procedure

Caution


- **Remove the curtain air bag module to prevent damage before servicing.**

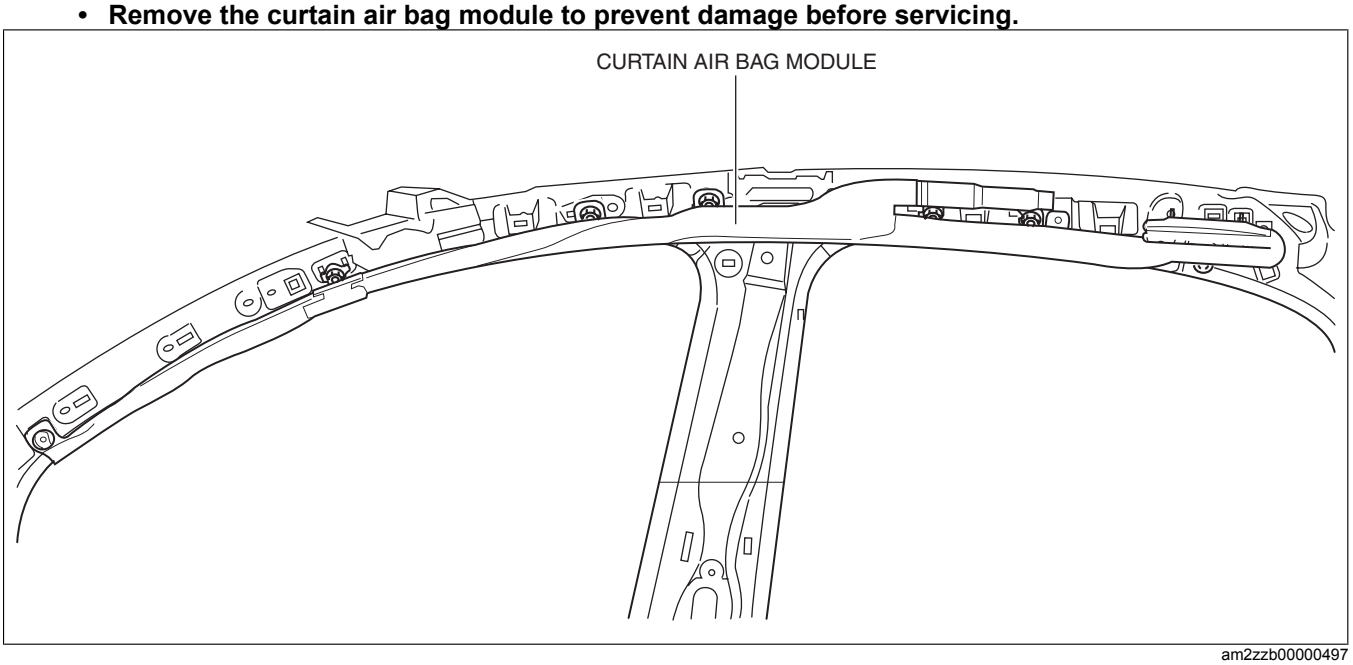

am2zzb00000497


Caution

- **Avoid cutting with a blowtorch or similar tools as the insulator is flammable shown in the figure.**

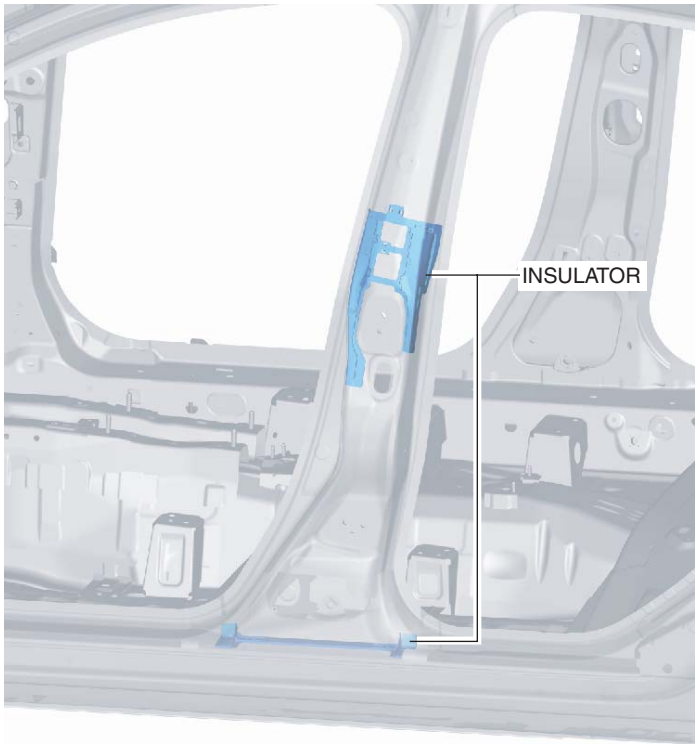


am2zzb00000498

1. Rough cut the 3 locations indicated by (A) shown in the figure.
2. Drill the 74 locations indicated by (B) shown in the figure, then remove the side frame (outer) (center pillar (outer))

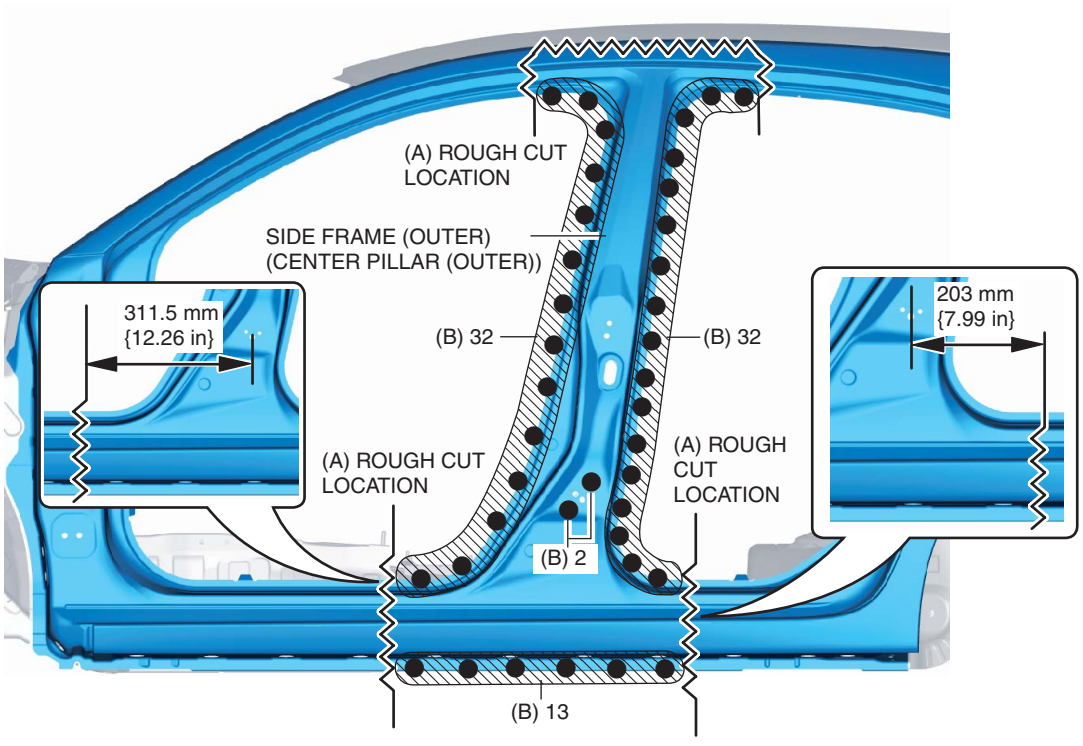


am2zzb00000691

3. Drill the 25 locations indicated by (C) shown in the figure, then remove the centert pillar reinforcement.

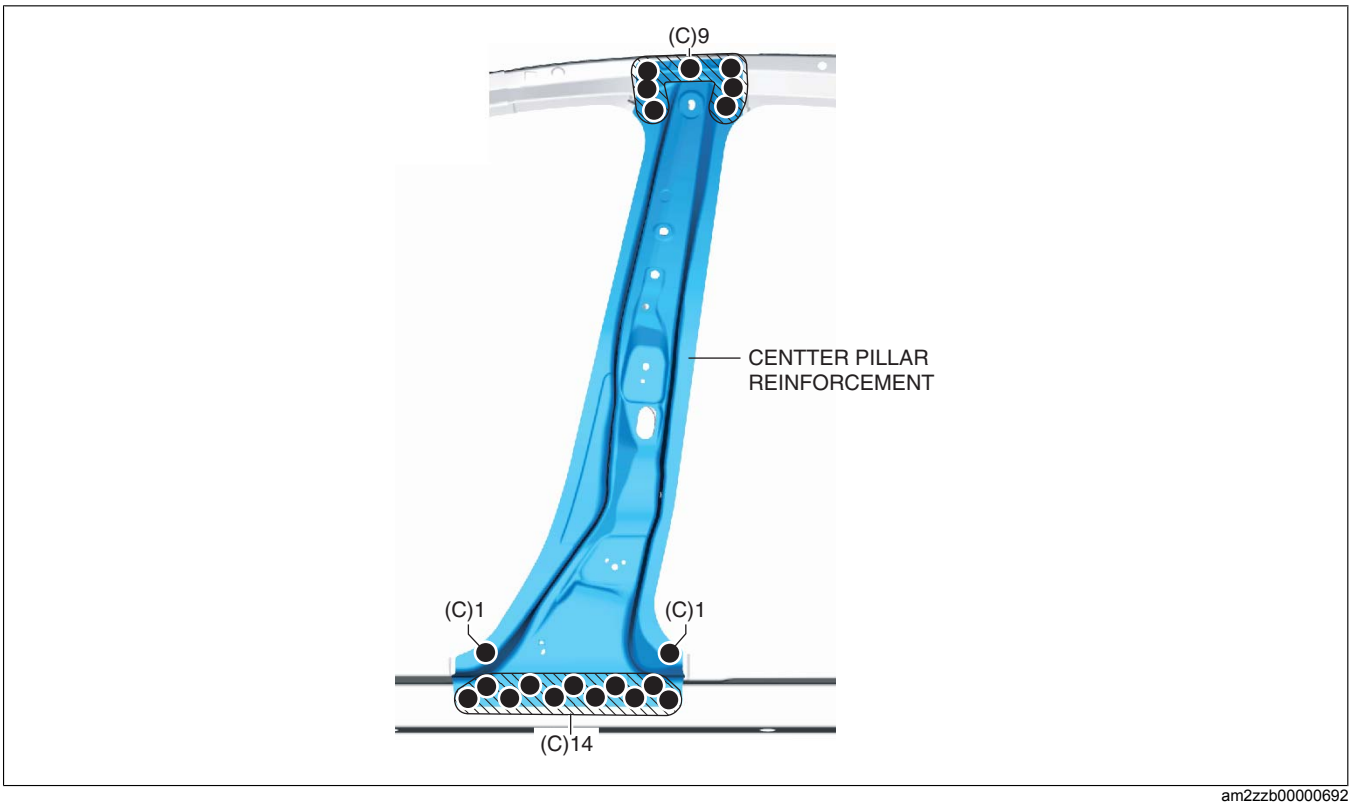

am2zzb00000692

4. Drill the 9 locations indicated by (D) from the room side shown in the figure.
5. Pull the center pillar (inner) in the direction of arrow shown in the figure, then remove it from between the side sill (inner) and side sill reinforcement.

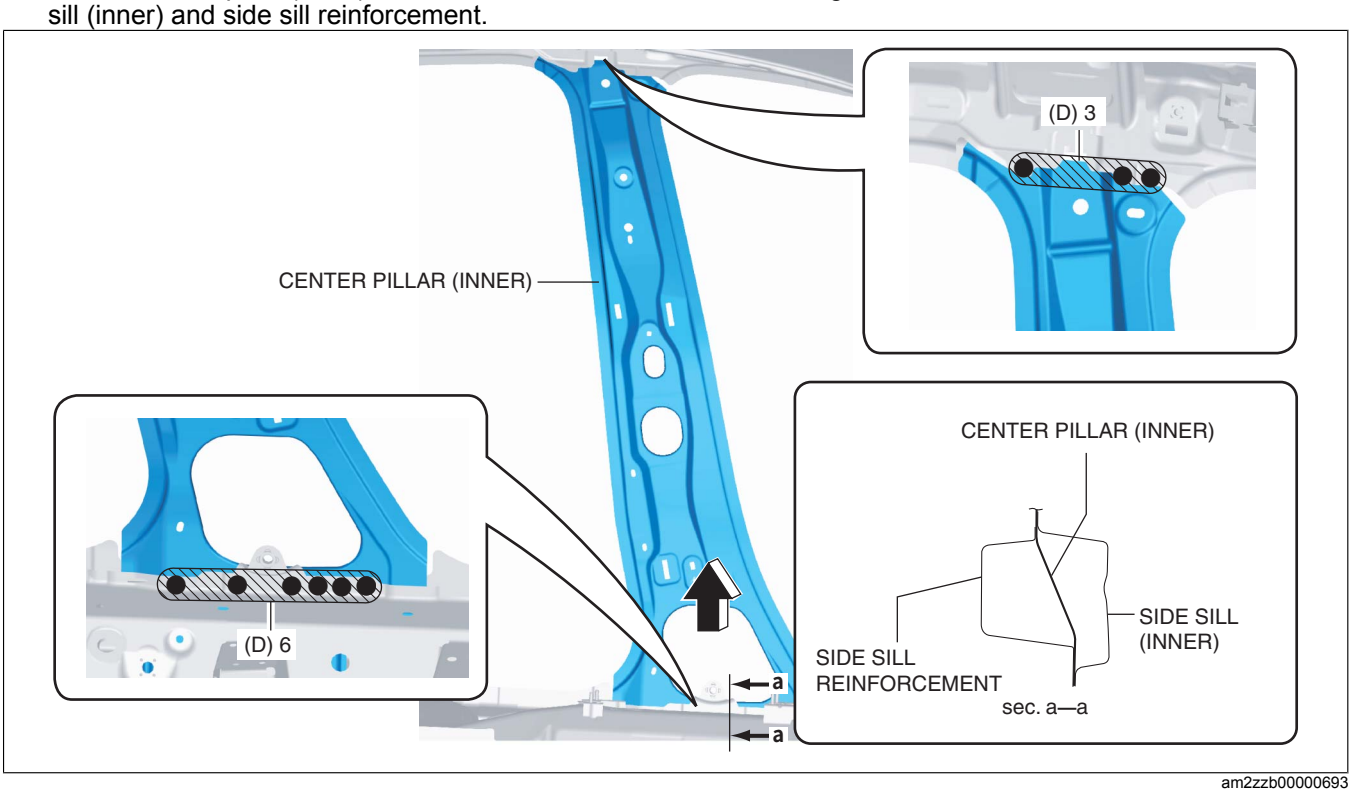

am2zzb00000693