CENTER PILLAR INSTALLATION [PANEL REPLACEMENT]

id098008744000

Symbol Marks

SYMBOL MARK	MEANING
■	PLUG WELDING (ARC WELDING)
┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼	CONTINUOUS ARC WELDING (CUT-AND-JOIN LOCATION)

am2zzb00000504

Installation Procedure

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. Insert the end of the center pillar (inner) shown in the figure, between the side sill (inner) and side sill reinforcement.
5. Plug weld the 9 locations indicated by (A) from the room side shown in the figure, then install the center pillar (inner).

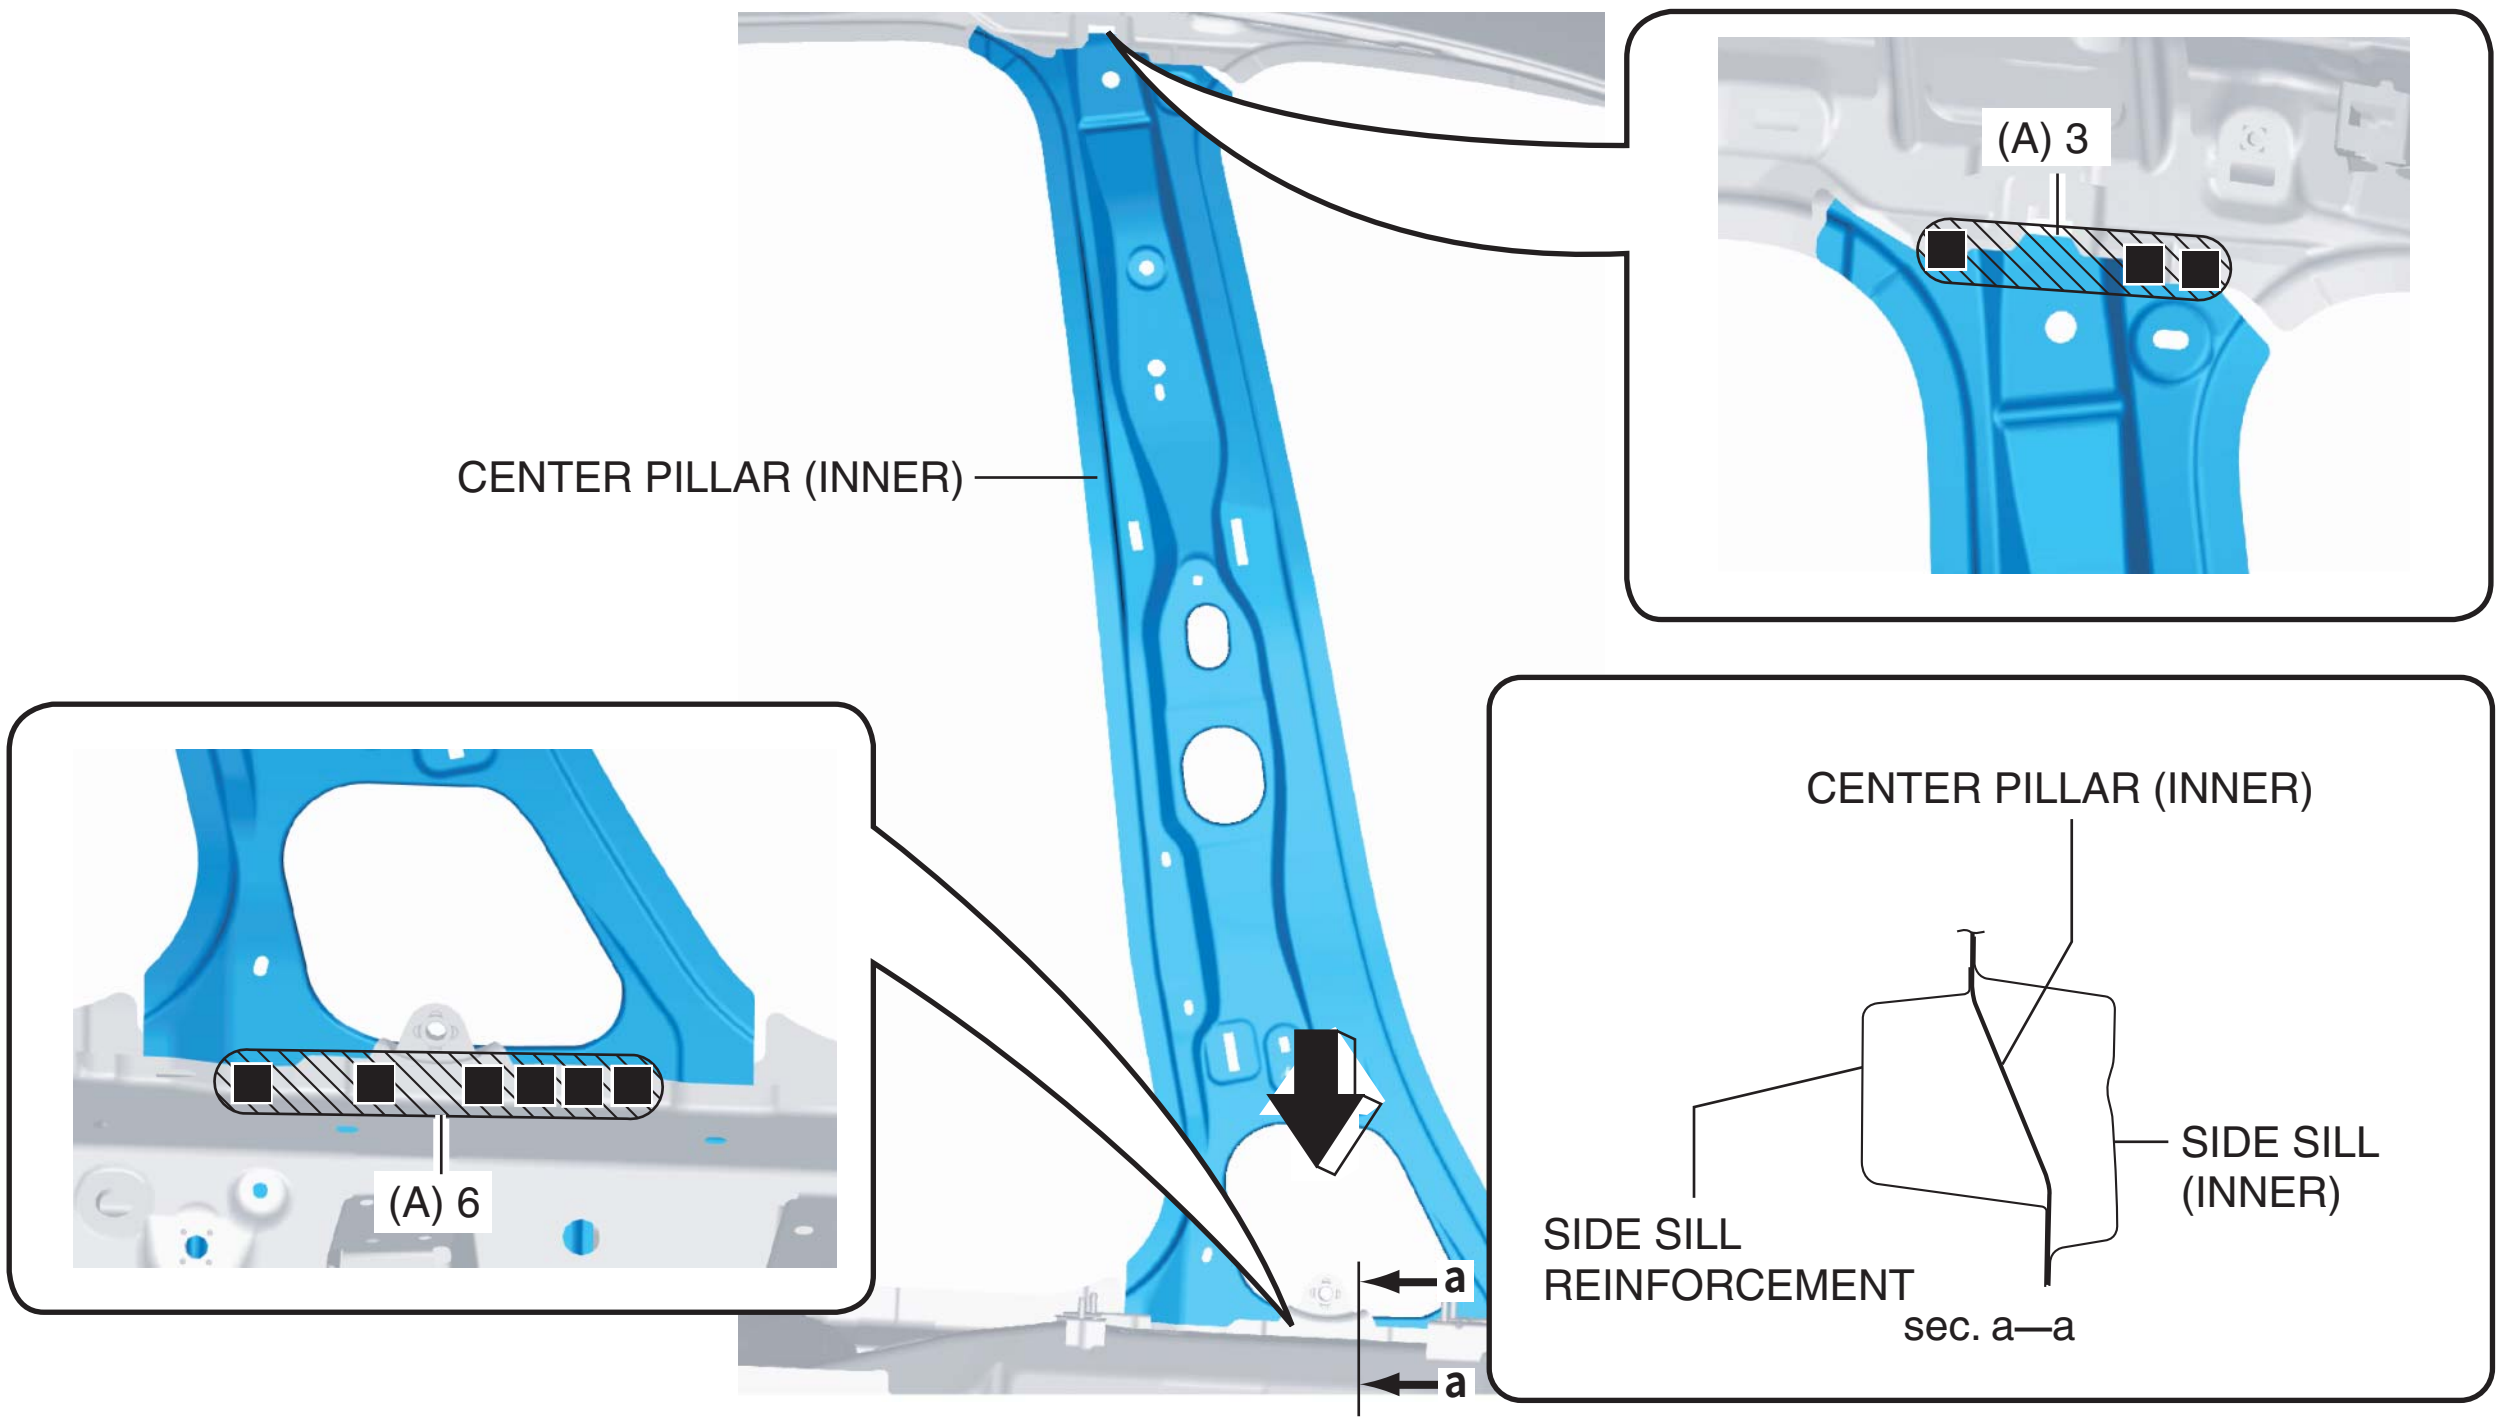

am2zzb00000694

6. Plug weld the 25 locations indicated by (B) shown in the figure, then install the center pillar reinforcement.

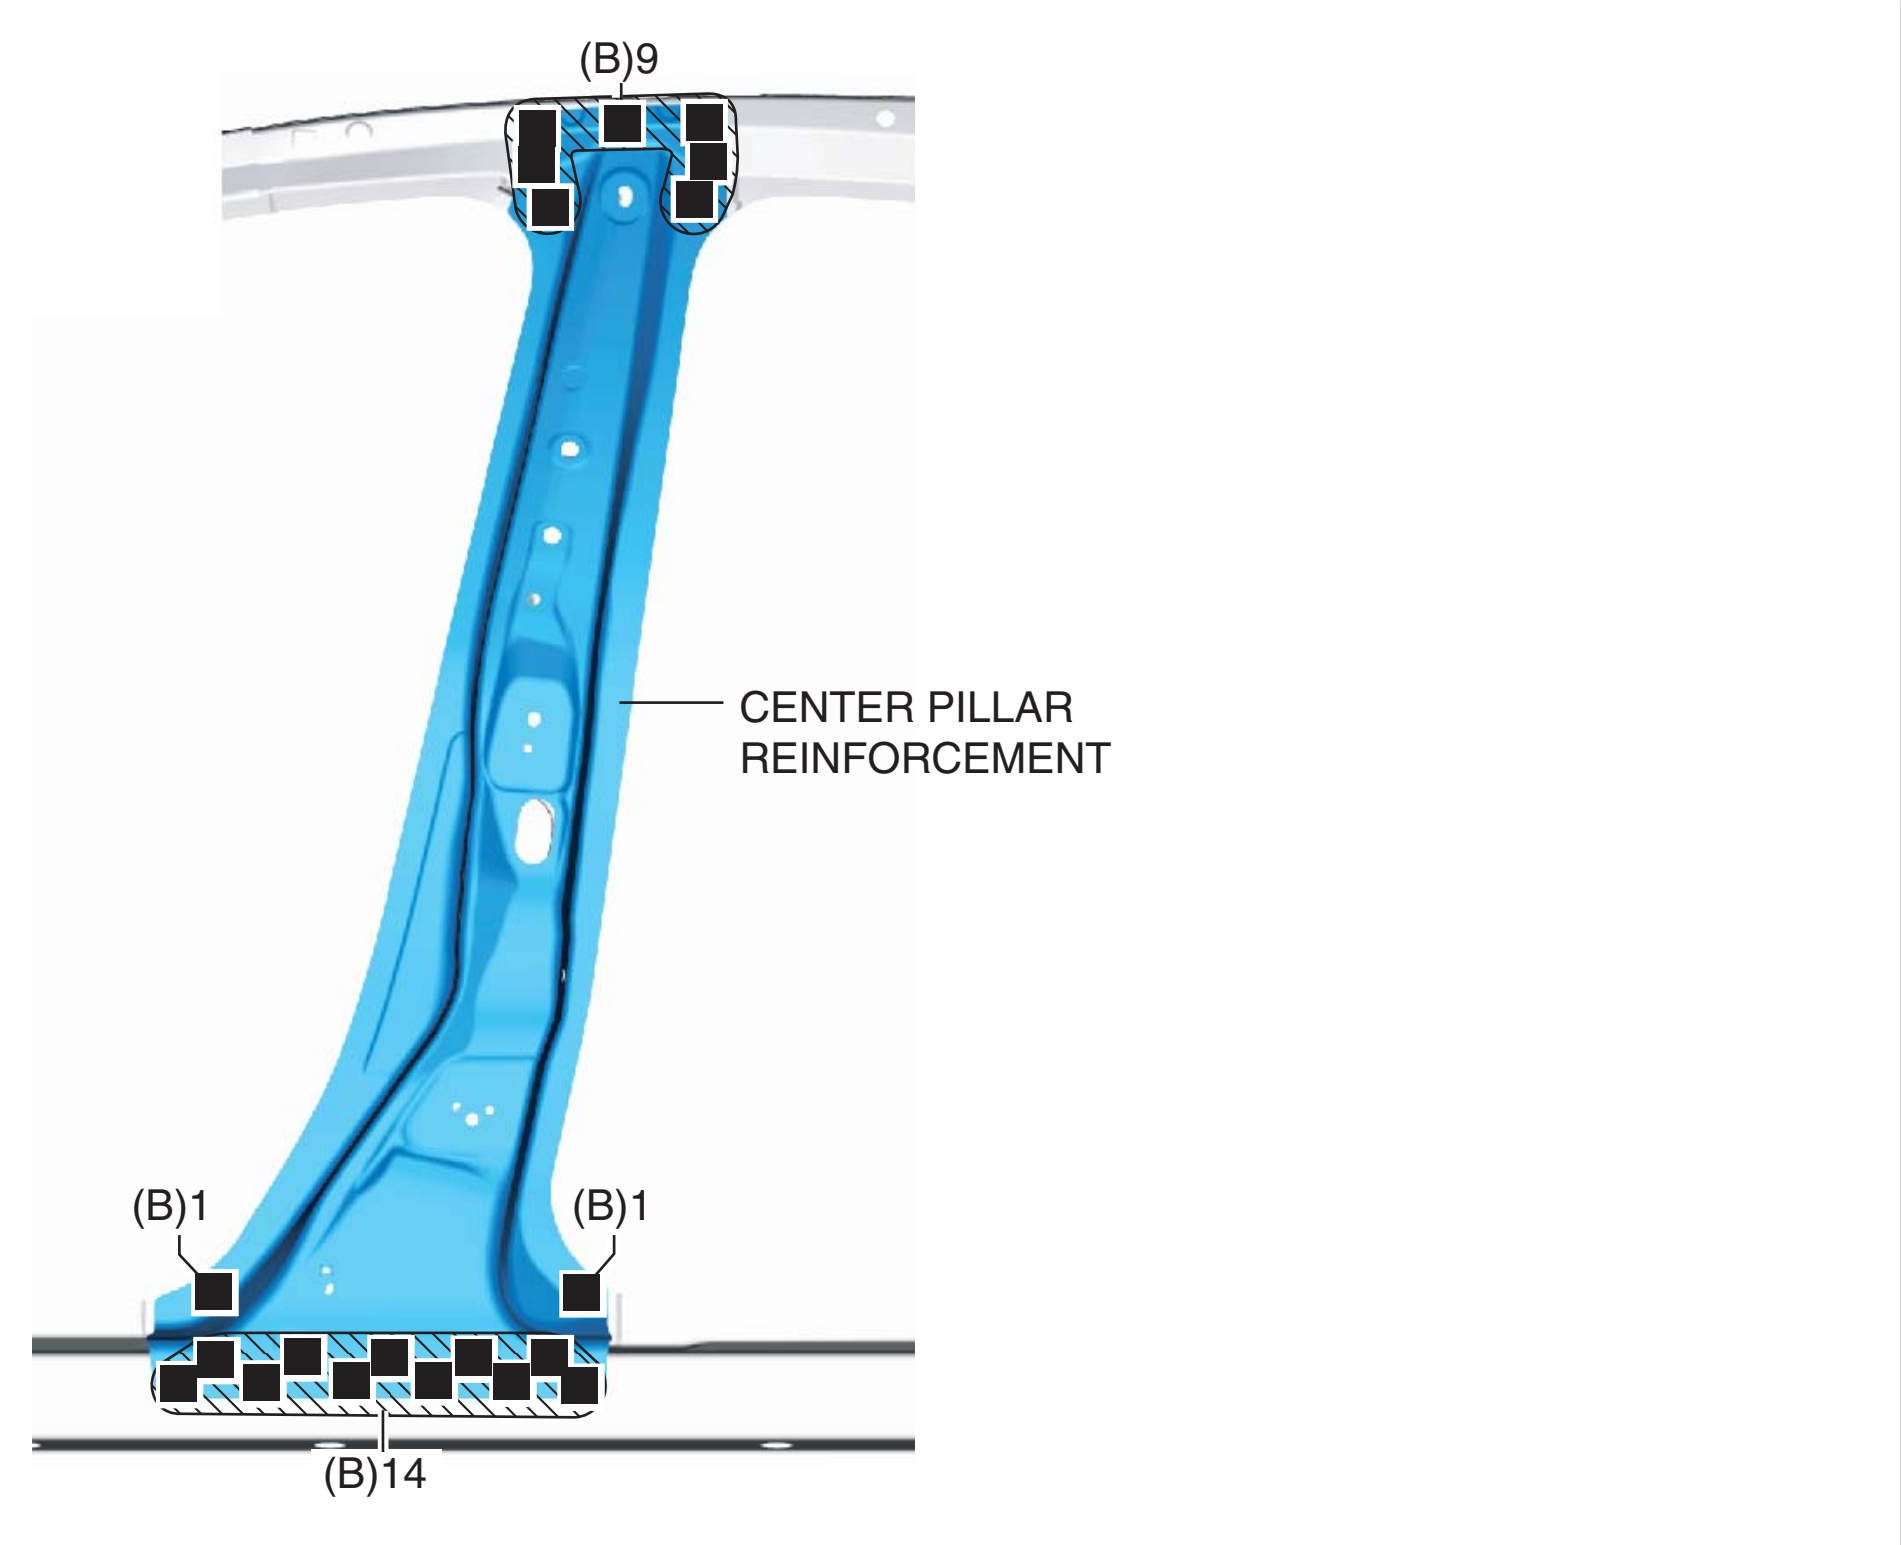

am2zzb00000695

7. Cut and join the 3 locations indicated by (C) shown in the figure.
8. Plug weld the 82 locations indicated by (D) shown in the figure, then install the side frame (outer) (center pillar (outer)).

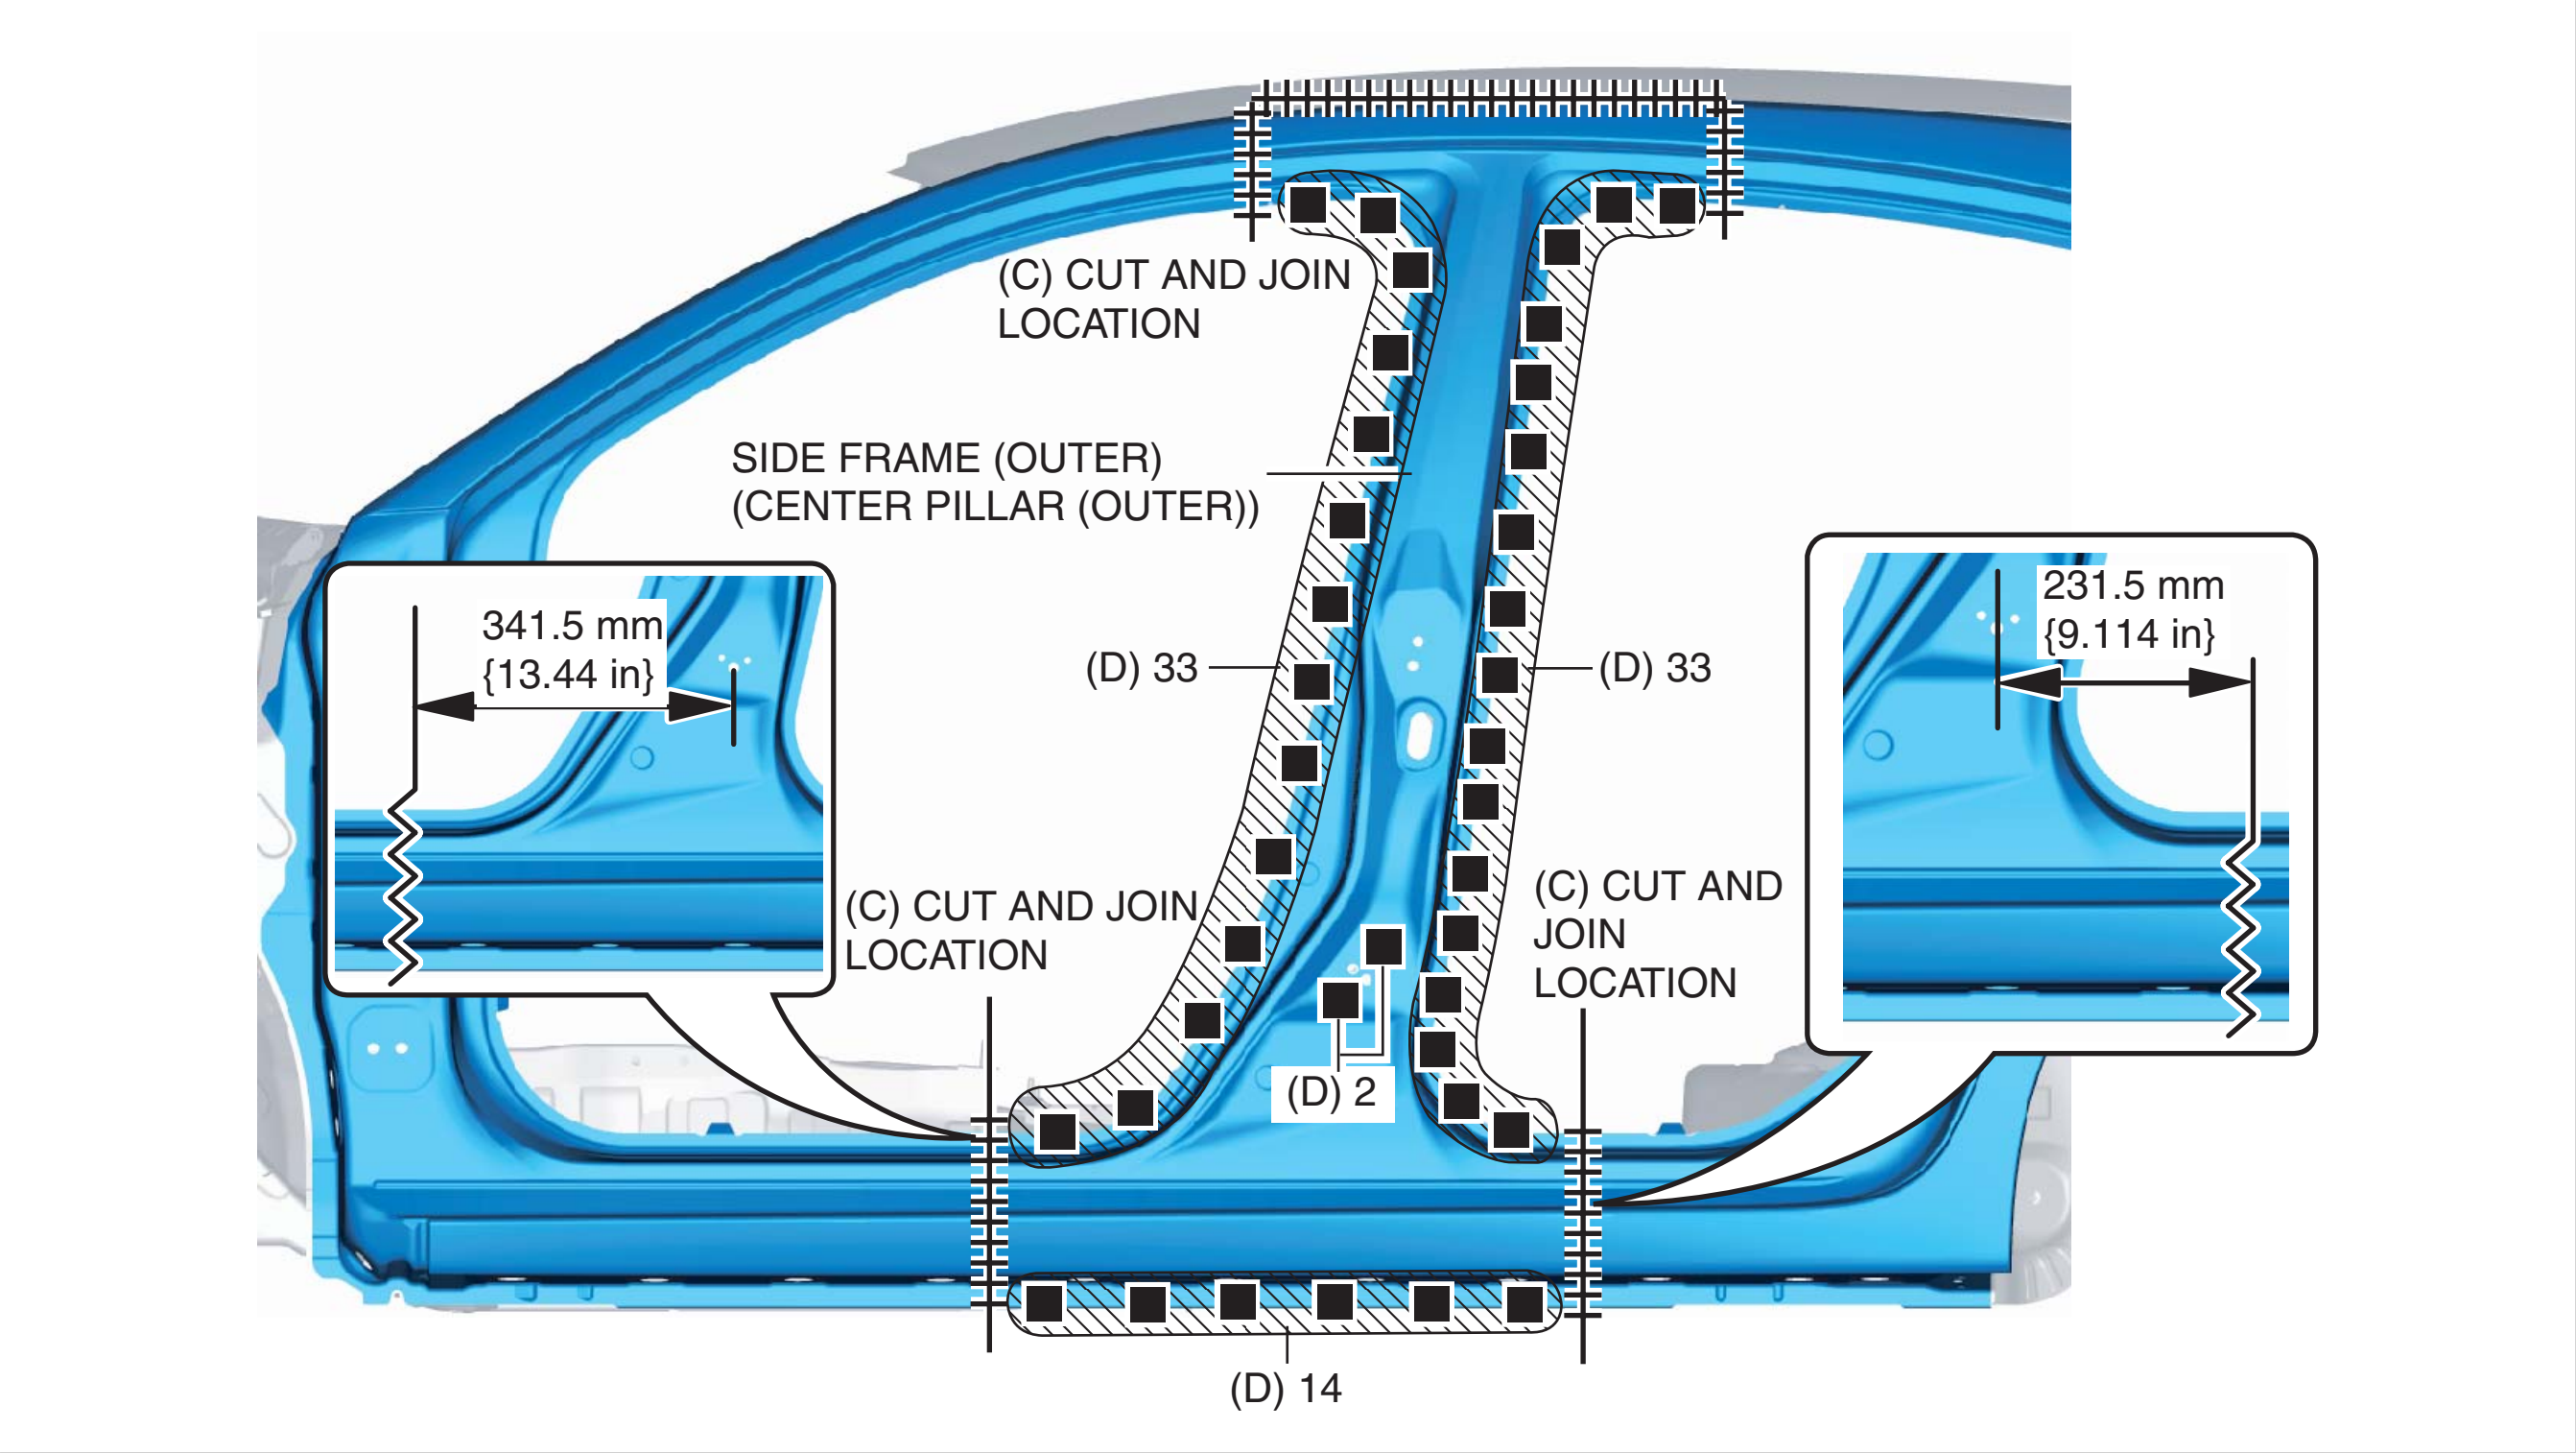

am2zzb00000696