REAR SIDE FRAME REMOVAL [PANEL REPLACEMENT]

id098008801200

Symbol Marks

SYMBOL MARK	MEANING
●	SPOT WELDING
⎓	ROUGH CUT LOCATION


am2zzb00000574

Removal Procedure

1. Rough cut the 1 location indicated by (A) shown in the figure.
2. Drill the 28 locations indicated by (B) shown in the figure, then remove the part of rear floor panel.


Note

- When drilling the 28 locations indicated by (B) shown in the figure, do not drill a hole all the way through or there could be a problem when installing the new part.

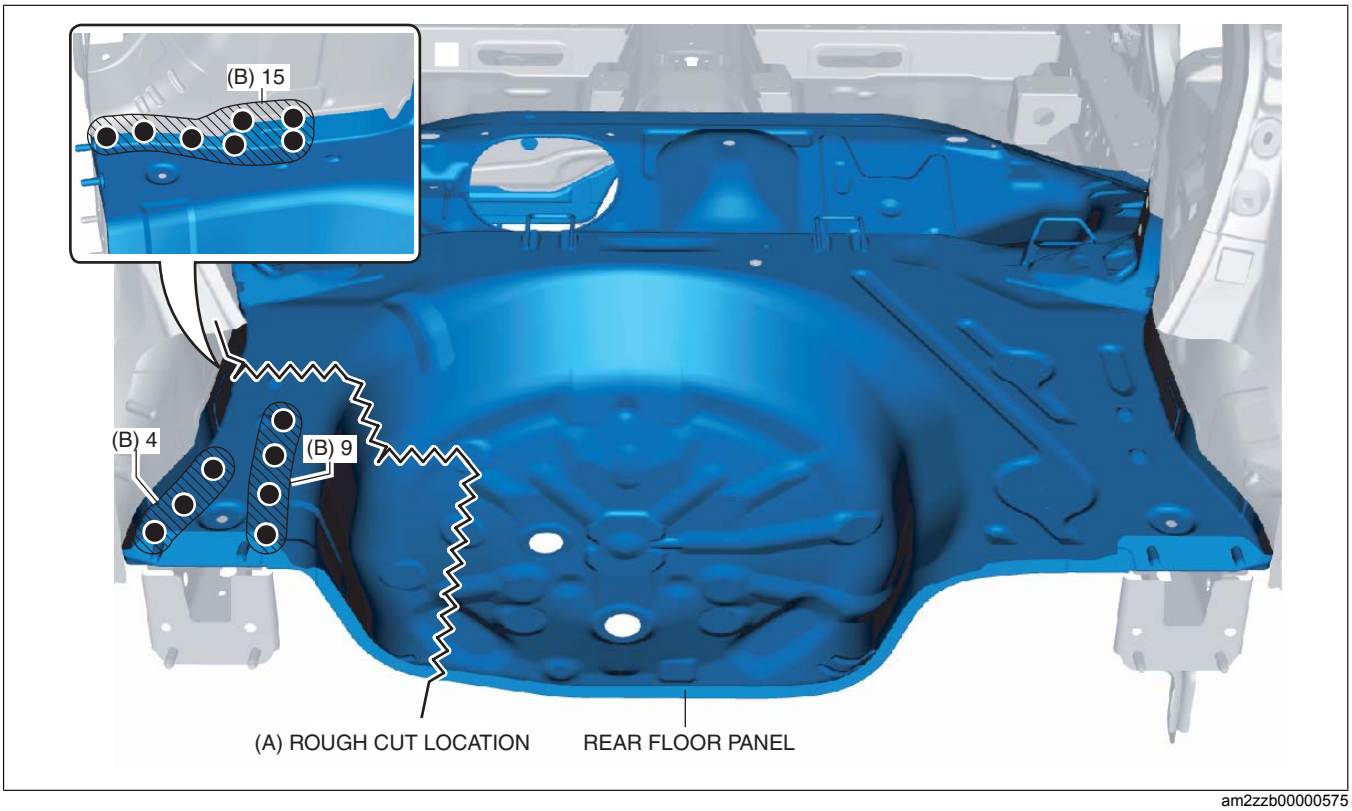

am2zzb00000575

3. Drill the 11 locations indicated by (C) shown in the figure.

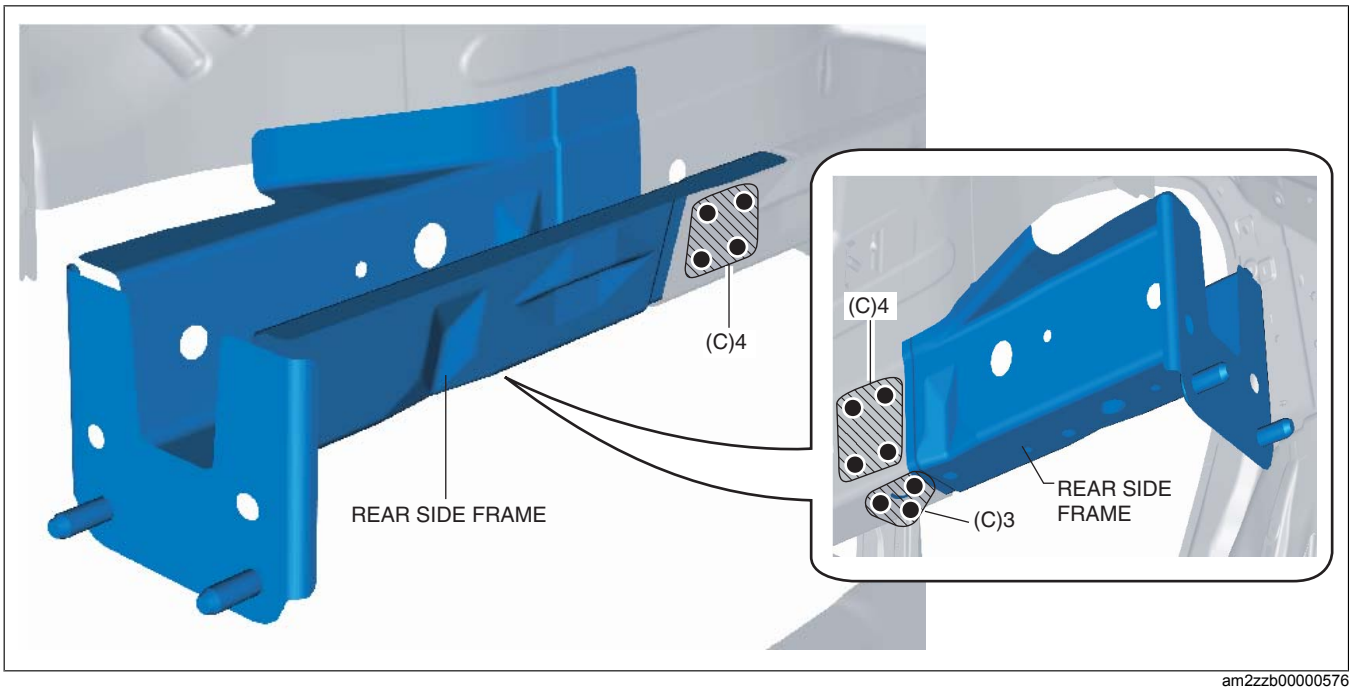

am2zzb00000576

4. Remove the rear side frame.