REAR SIDE FRAME INSTALLATION [PANEL REPLACEMENT]

id098008801300

Symbol Marks

SYMBOL MARK	MEANING
■	PLUG WELDING (ARC WELDING)
—┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼—	CONTINUOUS ARC WELDING (CUT-AND-JOIN LOCATION)

am2zzb00000577

Installation Procedure

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. Plug weld the 11 locations indicated by (A) shown in the figure, then install the rear side frame.

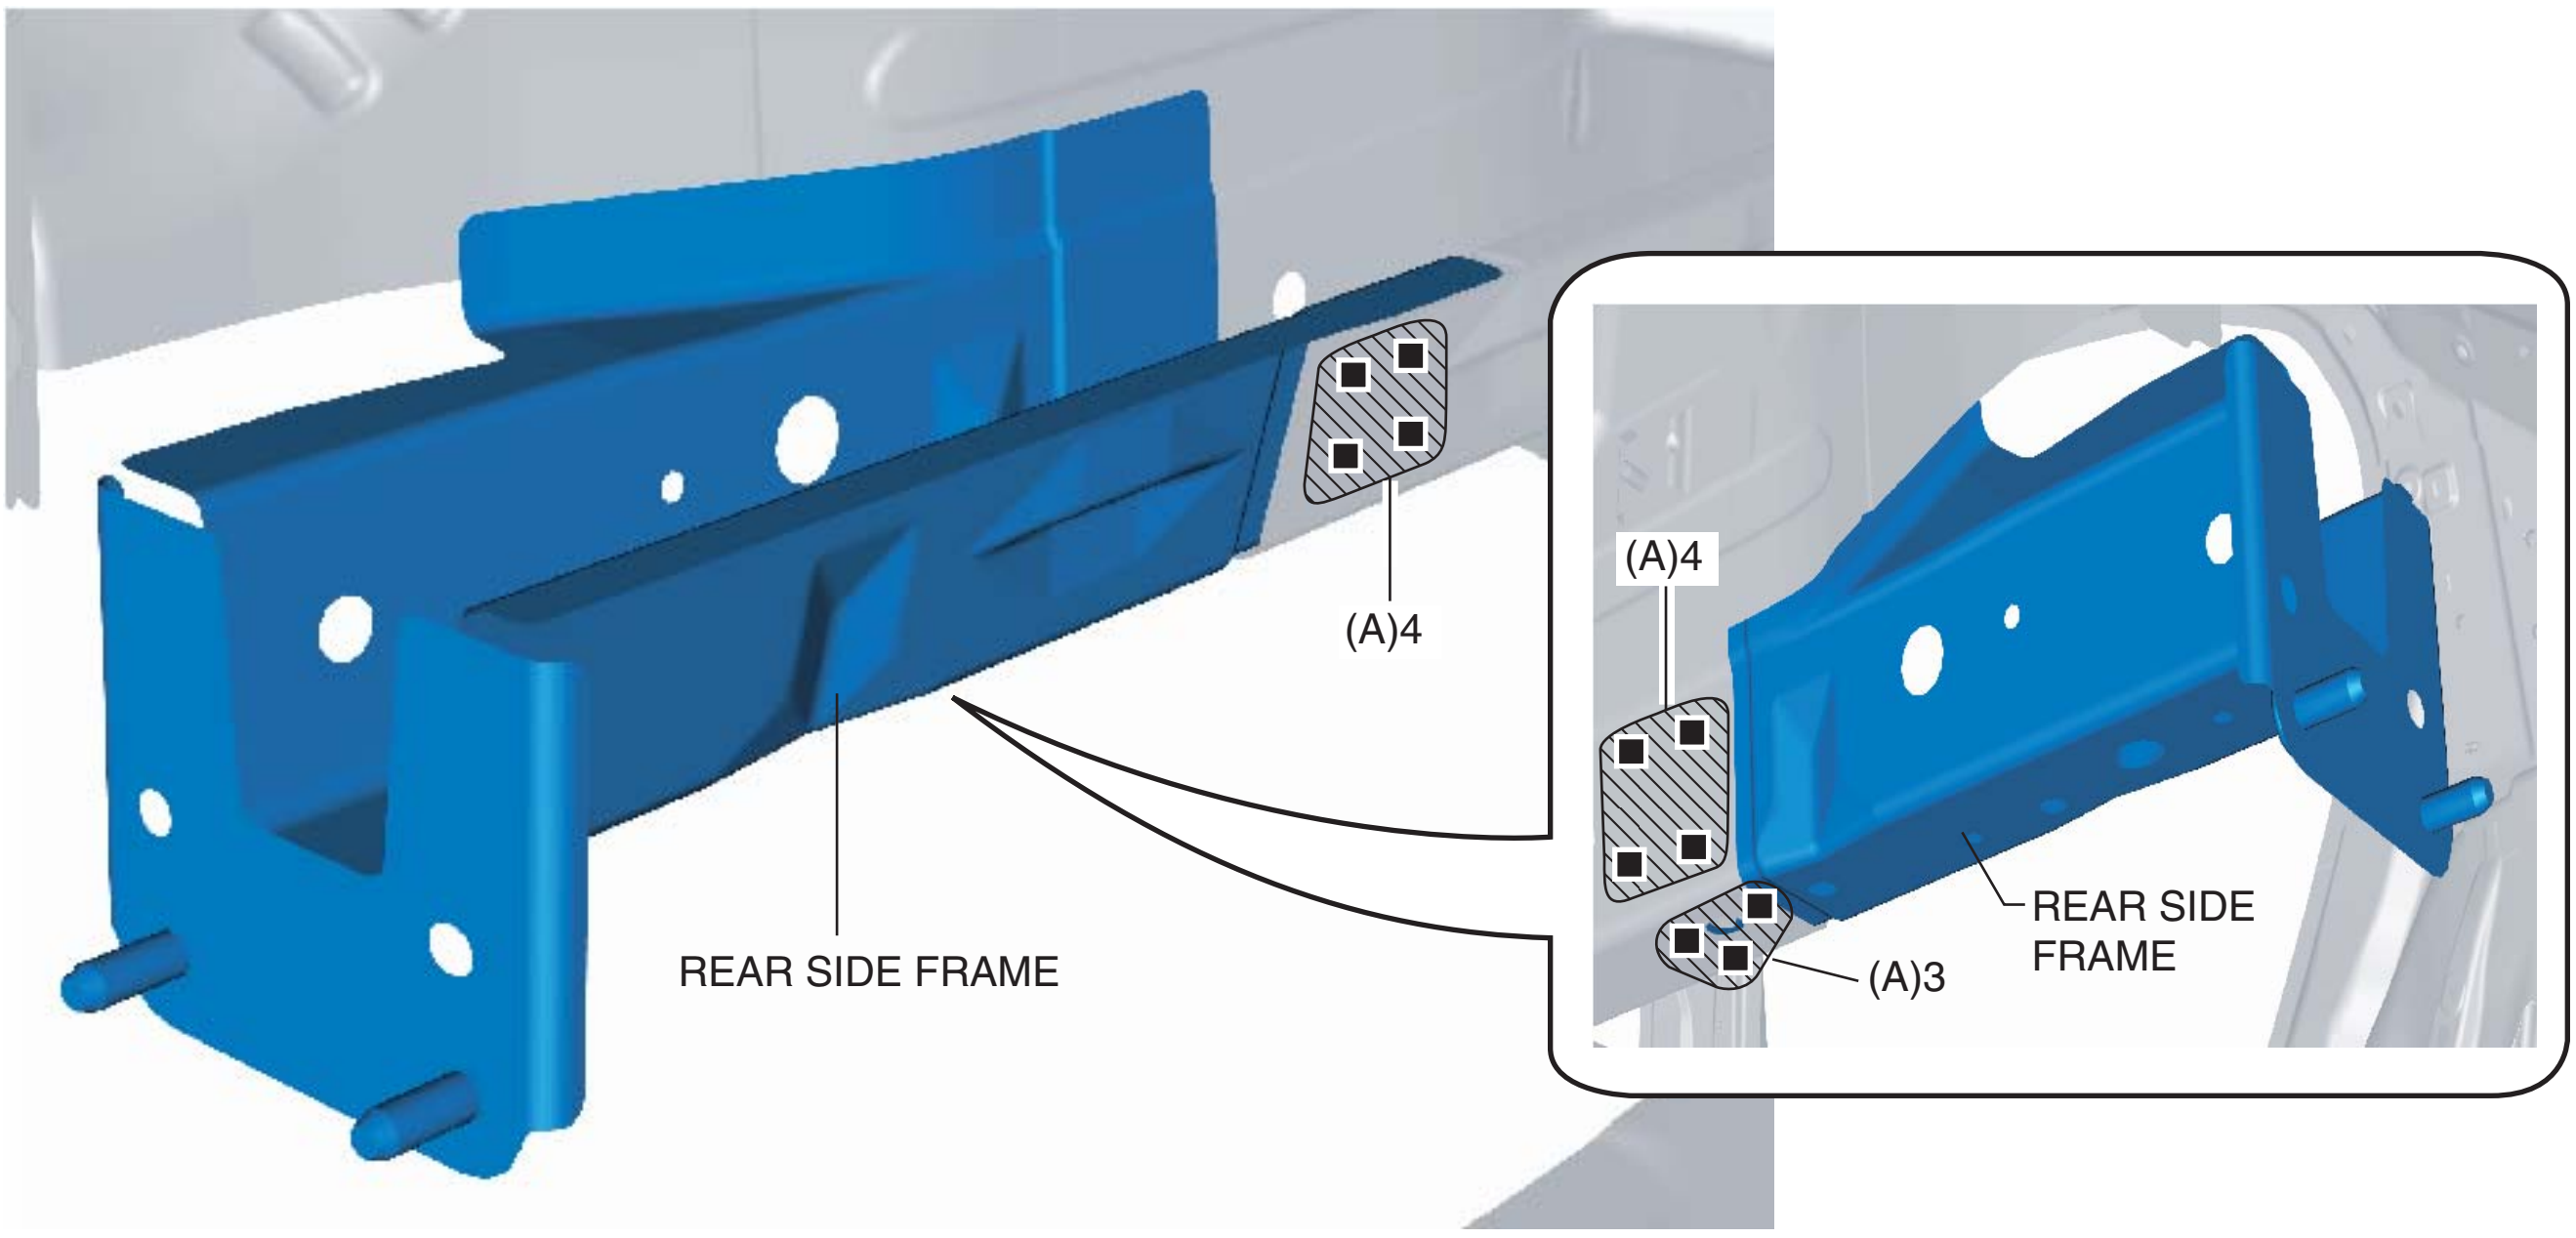

am2zzb00000578

5. Cut and join 1 location indicated by (B) shown in the figure.
6. Plug weld the 28 locations indicated by (C) shown in the figure, then install the part of rear floor panel.

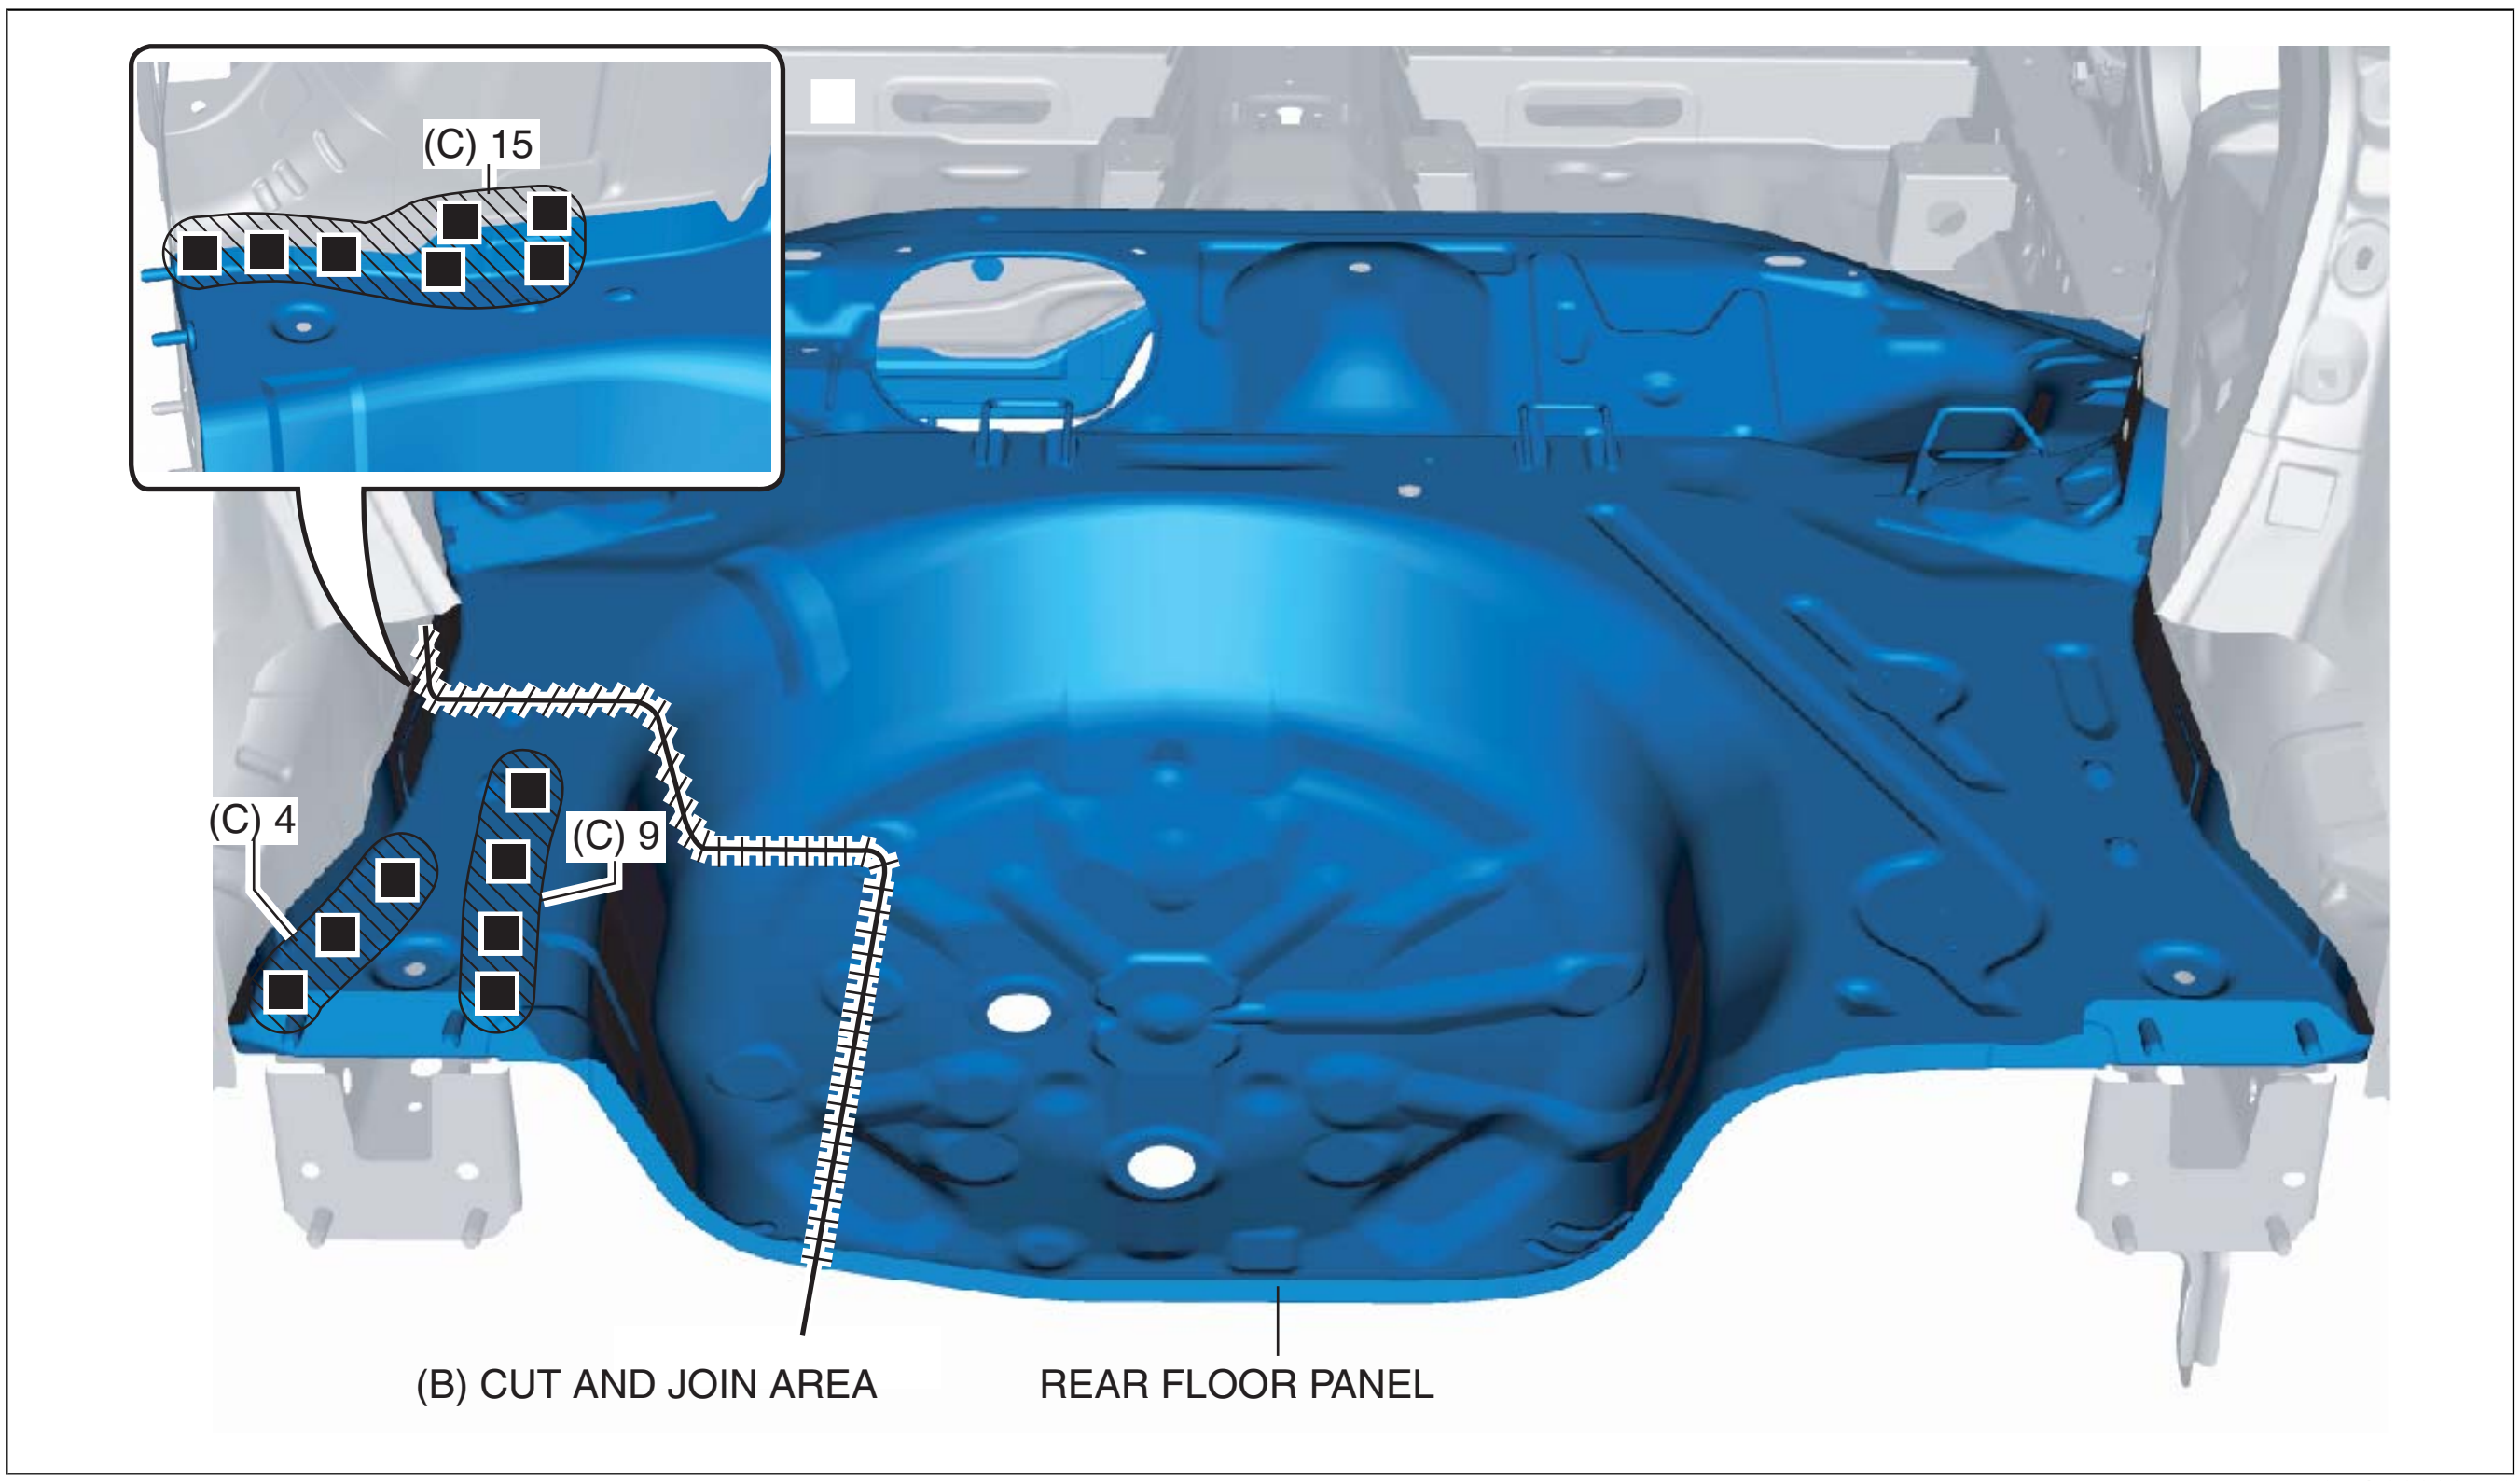

am2zzb00000579