PACKAGE TRAY INSTALLATION [PANEL REPLACEMENT]

id098008819800


Symbol Mark

SYMBOL MARK	MEANING
■	PLUG WELDING (CO_2 ARC WELDING)

am3zzb00000127


Installation Procedure

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. Plug weld the 40 locations indicated by (A) shown in the figure.

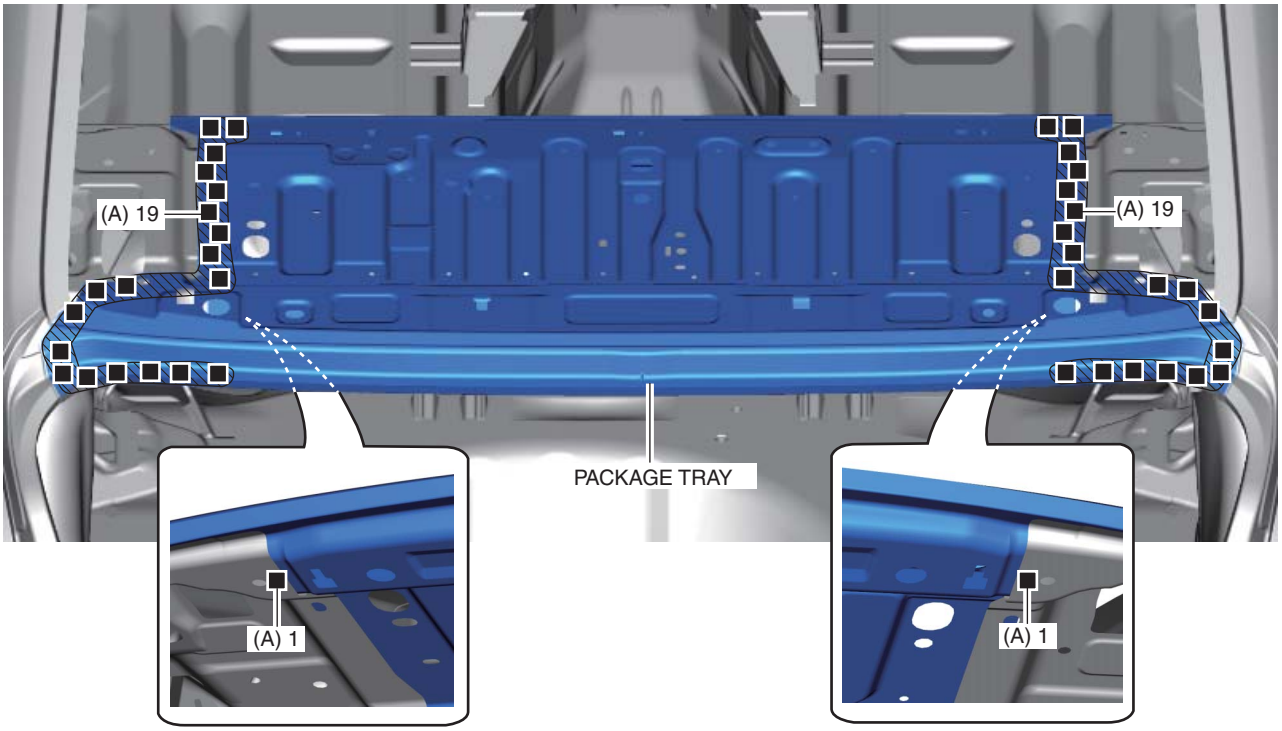

am2zzb00000724

5. Plug weld the 28 locations indicated by (B) shown in the figure, then install the package tray.

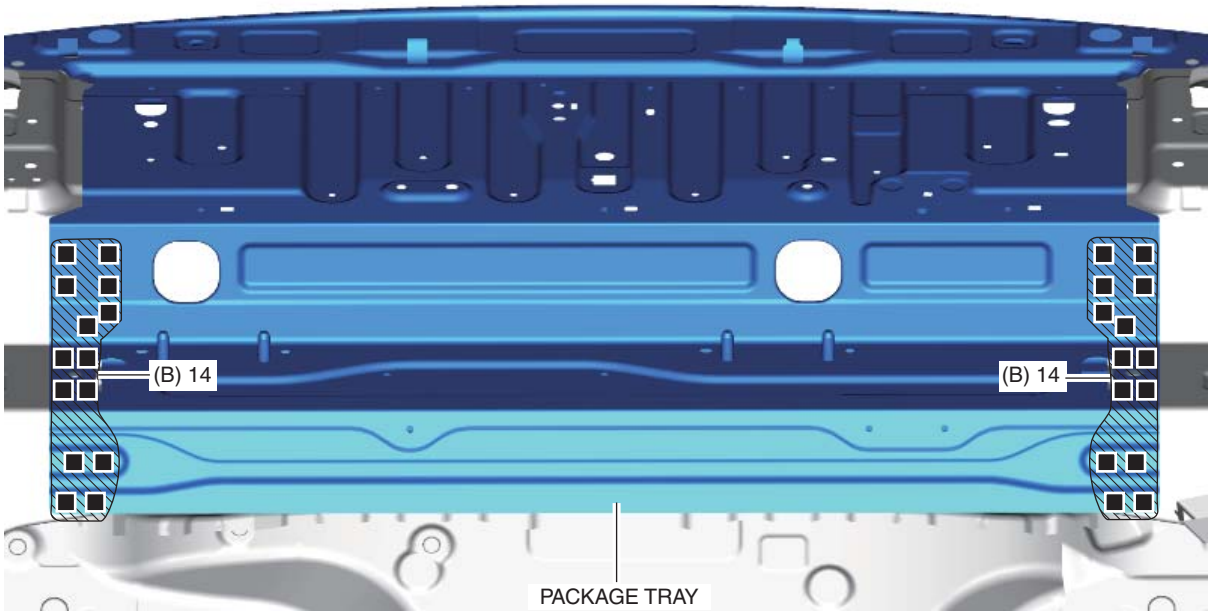

am2zzb00000725