


## Lineman's Splice:

If done correctly, it shouldn't pull apart even before soldering.

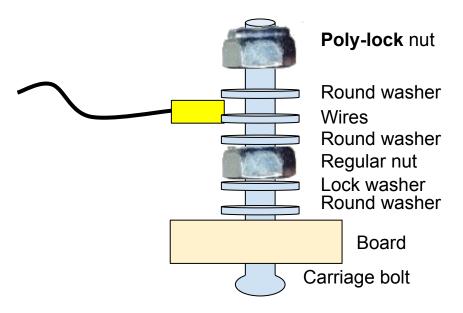

**Ground Bolt Order**