



バルサ及びベニヤの抜型材を図面の番号と照合したの ち組み立てて下さい。

START ASSEMBLING AFTER REFERING THE DIE CUT BALSA AND PLYWOOD PARTS TO THE NUMBER ON THE PLANS.


2.5mm PLYWOOD

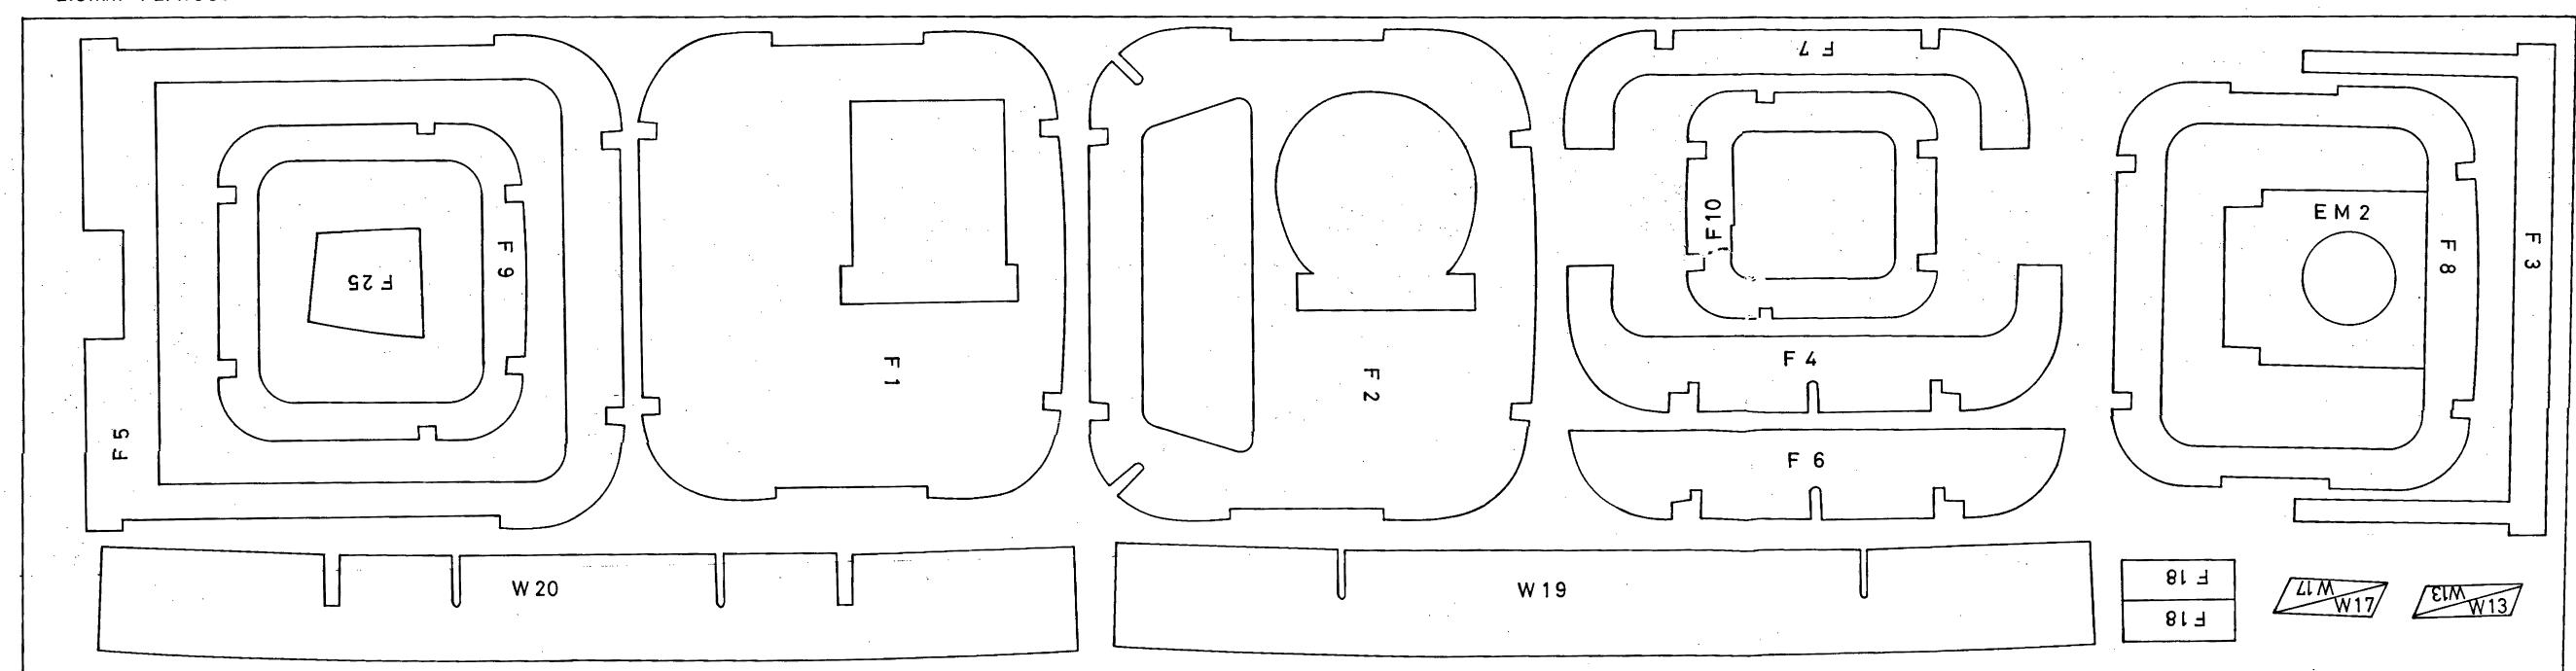


2.5mm PLYWOOD

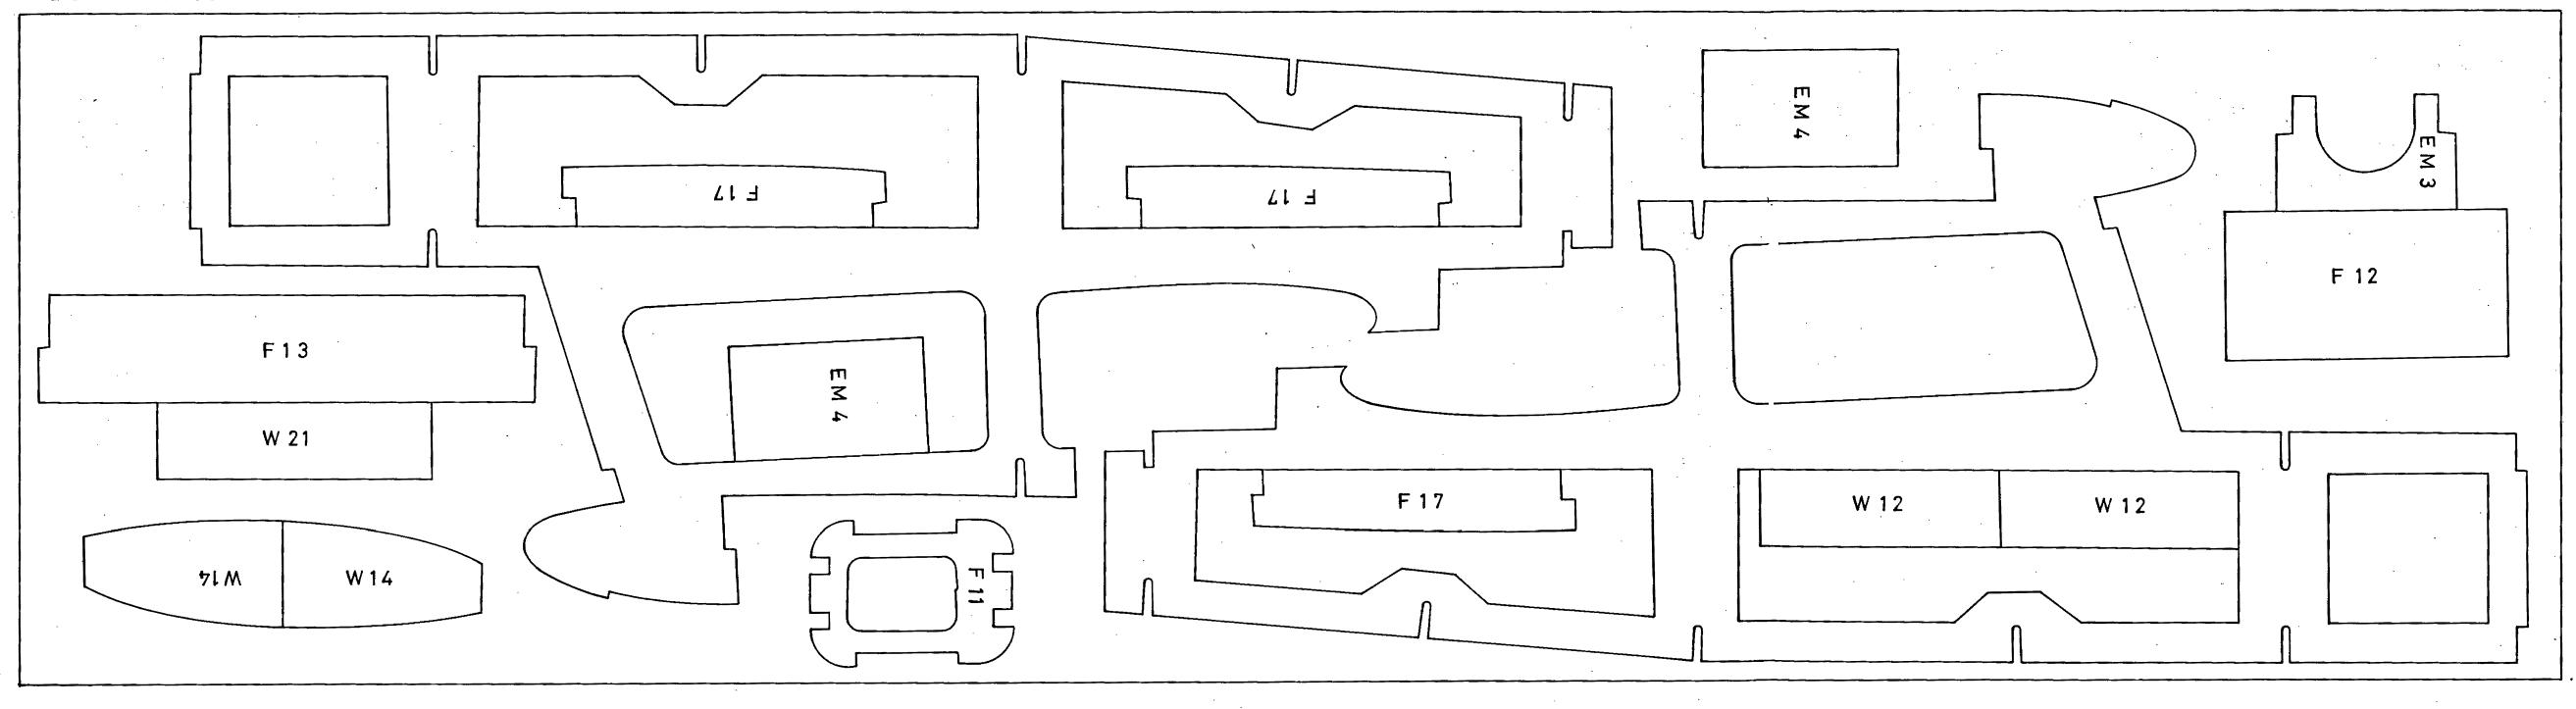


2mm BALSA

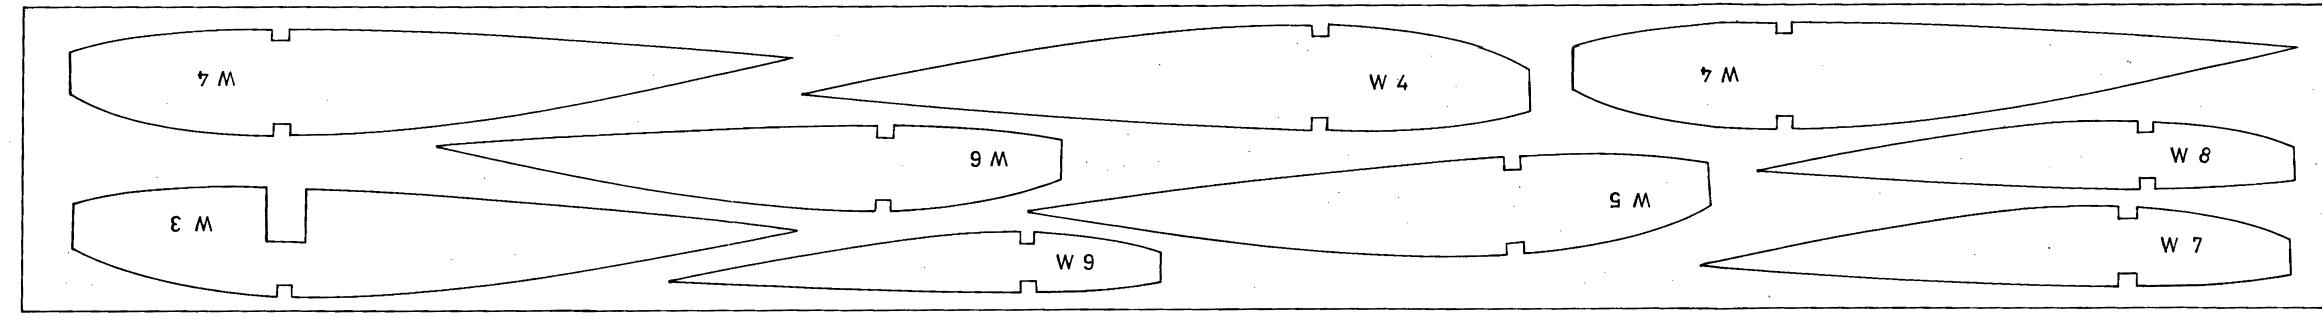

3mm BALSA

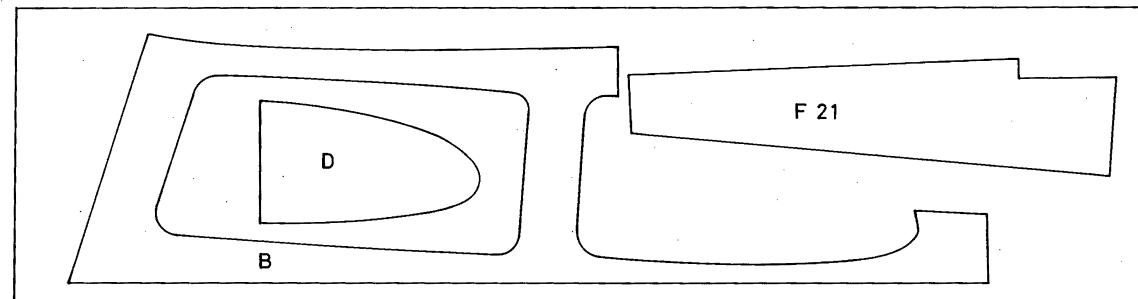

2mm BALSA

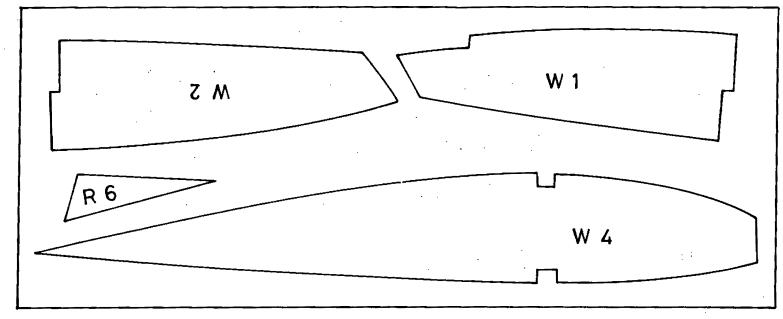

セスナ172 組立説明書

諸元 スケール……1:8 重 量………2~2.2kg 全 長………1025mm エンジン……19~25 全 幅………1376mm 無線機………3~4CH 主翼面積……25d m

製作 まえに

よりよい仕上りと一層の機能を発揮させるために、説明や図をよく読み、よく見て、順序よくていねいに正しく組み立てて下さい。 各部品は傷つけないようにカッターや小刀で切りはなし、組み合せ部分の切り込みやミゾなどは正確に切り取って無理なく組み合うよ うに整形します。接合部には接着剤をつけ、釘・虫ピン・クリップ(洗たくバサミ)・糸・ゴムバンド・細い針金で仮り止めし、接着剤 が完全に硬化したら、これらはすべて取り除きます。木部の加工や整形はカンナや小刀・ヤスリなどを使いますが、木片にサンドペー パーを巻くとヤスリと同じに使うことができます。

胴 体 ①側板A,B,C,D、内張ベニヤF21と3×5mmバルサで側面材を作る。(図No.1)

②それに胴枠F1~F8、そしてF9~F11、最後尾の5×5mmバルサの順で組立てます。5×5mmバルサは縦通材に必要な長さのものをおよ そ先に切揃えて置き、その余りを使う。(図 No.2) ③縦通材の5×5㎜バルサを入れる。尚下側はF5, F6のところで前後に分ける。(図 No.2)

④キャビン上のF13, F14, F25、主脚取付台のF17, F12と進みますが、F13には主翼止の竹棒の穴を先にあけておくとよい。又その 上のF15プランクは、F13の穴と主翼のW19にあける穴を合わせてからプランクするとよい。(図 Na.2)

⑤3 mmバルサのプランクをします。縦通材の間は1枚の板で、下側はF5とF6のところで前後に分けて行います。又、下側の胴枠が丸 くなっている部分のプランクは、バルサを細く切ってタル張りをするか、1枚ものでプランクをする場合は、表面を水で湿めらして よく曲げぐせをつけてします。上部の胴枠の丸くなっている部分も1枚板で制じくよく曲げぐせをつけてからプランクします。

⑥F19, F20を接着します。整形は主翼と合せてします。(図 No.4)

②F18にパイプを布で巻きつけて固定し、F2に取付ける。(図No.5) ⑧エンジンマウントを作ります。(図 №.3)

EM6はエンジン取付ビスを立て、から接着すること。又、F26はカウリングの下へ接着します。カウリング止の堅木は上と両側の3 ヶ所にカウリングの厚さだけ差引いた所へ接着して置きます。ノーズギヤー取付台のF24も接着して置きます。 ⑨垂直尾翼を作ります。(図 No.7)

R1, R2, R3を貼合せて置き整形します。又、R4, R5, R6も同じ様に。

⑩F22はあらかじめ繋形して置き、水平尾翼が出来たら、その上に接着して垂直尾翼を套込みます。F23を接着・繋形します。 ラダーをヒンジで取付ける前に、最後尾の5×5mmバルサの上のすき間をスクラップバルサで埋めて下さい。 ①胴体は出来上り、あとはキャノピーを取付けて下さい。リヤーキャノピーの中心にペイントで線を入れます。

⑫スパッツはノーズ、メイン共にエポキシ接着剤で左右を貼合せます。そしてノーズスパッツは、細いピアノ線で図のように固定し、 メインスパッツは断面図に示す様に取付けます。いづれもタイヤを同時に着装することになります。

企スピンナーは市販の45mmのものを使う。

水平尾翼 ①上・下面のプランク材を作ります。

(図 No.8)に示す通り、1.5×80×450mmのバルサを先に前へ継ぎ足す分を切取り、貼合せてから両端を切取ります。 ②出来上がったプランク材の上で(図 Na.8)の通り組立てます。

③エレベーターもE1,E2を接着・整形してエレベーターホーンでつなぎヒンジで取付けます。 ④水平尾翼の中央の前縁部分は胴体に取付ける時に切取って下さい。(斜線部分)

主 翼 ①W4からW9のリブと3×5mmバルサスパー、W11後縁と前縁とで外翼を組立てます。リブの位置は図面より各々に印すこと。 ②エルロンを作ります。

W11にW152枚分の中で切離しラインを印し、リブと共に切離します。(図No.9の斜線部分) エルロン側にはW13にホーンつけ接着、W17も接着、そして主翼・エルロン共にW15を接着・整形します。(断面図FーFを参照)

③エルロンベルクランクをW12に取付けて、胴体で余っている5×5mmスクラップバルサで補強して接着します。又、W14に(図No.11)に 示す通り、パイプを取付けて接着します。W4の間3ヶ所のスパー前面に1.5mmのスクラップバルサで補強を入れる。

W1~W3とW18~W22とで組立てる。(図No.9参照)W3はスパーの幅だけ切取って前後に分けて使う。

⑤中央翼と外翼をつなぎ、エルロンのプッシュロッドを接続して全面プランクをします。 ⑥プランク材は(図 No.10)に示す通り、3 枚を貼合せて点線で現すように切離すと 2 面分出来ます。少しずつ削って合せてプランクをし - ます。中央は必要な長さに切って行って下さい。中央下面のみサーボが入れられるように切取ります。

⑦製端W10は断面図で示すように、垂れ下った整形になります。 ⑧後は竹棒の穴とネシロックの穴を胴体に合せてあけます。そして竹棒は主製側に接着します。

⑨支柱のW23は流線型に整形し、両端は(図 No.6)に示す通り、2 mmのピアノ線でバイプに套込める様に作ります。

⑩主翼中央の二つのトラック形をした線は天窓ですが、これは塗料で書いて下さい。

CESSNA 172

BEFORE STARTING BUILDING

④中央異を作る。

For better finish and flight performance, take time in reading building instruction and refering to the plans, and assemble in good order and correctly and carefully.

Cut off each part with cutter or razor blade avoiding damage, particularly on the jointing cut out and slot. If necessary trim the parts for easier fitting. When cemementing use thread, rubber band, pins, clothe clips etc. Until cement sets for forming and working, cutter, balsa plane and/or file are to be used. Wood tip wrapped with sand paper can also be used as a file.

1. Fabricate side plate material with side plate, lining plywood A, B, C & D. and F21 as well as 3×5 balsa. (Ref. Illustration 1.) 2. Install F1-F8 and then F9-F11 and the rear most 5×5 balsa; use the remainder of the longitudinal girder. (Ref. Illustration 2.) 3. Mount 5×5 longitudinal girder; split it into front and rear at F5 and F6. (Ref. Illustration 2.)

4. Then proceed to F13, F14 and F25 over the cabin and F17, F12 main wing mount; pre-drill holes on F13 for insertion of bamboo bars for wing binding. Plank F15 after aligning the holes on F13 to the holes to be drilled on W19. (Ref. Illustration 2.)

5. Plank with 3mm balsa. Between the longitudinal girder by one piece sheet and the bottom side split into two at F5 and F6.

As to the planking of the bottom where there is curve, use strip balsa or wet the surface with water for easier bending when one piece balsa is used. Do the same on the top where the bulkhead curves. (Ref. Illustration 2.) 6. Cement F19 and F20. Forming is to be done in accordance with the main wing. (Ref. Illustration 4.)

7. Mount pipe on F18 binding with tape and mount to F2. (Ref. Illustration 5.)

8. Fabricate engine mount referring to illustration 3. Cement EM6 after installing engine mounting bolts and cement F26 to the bottom of cowling. Cement cowling mounting hardwood putting back by the thickness of the cowing. Cement nose gear mount F24.

9. Fabricate vertical tail plane refering to illustration 7. Cement R1, R2 & R3 together and form. Do the same on R4, R5 & R6.

10. Pre-form R22 and after horizontal tail plane is ready, cement on it, and then insert the vertical plane.

Cement F23 and form. Before rudder is mounted by hinges, fill the gap at the rear most of the 5×5mm balsa. 11. After completion of Fuselage, mount canopy. Draw a line with paint at the center of the rear canopy.

12. Join together both main and nose left & right side spats with epoxy glue. Fix nose spat with a thin music wire as illustrated and install main spats as shown in the cross section drawing. Install wheels when the spat parts are joined together.

Remarks: Use a commercially available 45mm Spinner.

1. Fabricate top and bottom planking material using the 1.5×80×450mm and referring to illustration 8. 2. Assemble other parts on the completed planking material refering to illustration 8.

3. Cement El & E2 together and after forming them, join them with elevator horn and mount with hinges.

4. Before mounting to the fuselage, cut off the leading edge of the center of the tail plane (oblique lined portion).

Main Wing

1. Assemble outer wing with W4-W9 ribs, 3×5 mm balsa spar, W11 Trailing edge and leading edge. Transfer the locations of ribs from the plan.

2. Make aileron.

Cut off W11 with a duplicate width of W15 together with ribs. (oblique lined portion in illustration 9) At the side of aileron, cement horn to W13 and W17 and then cement W15 both to wing and aileron and form.

Refer to cross section F-F. And mount with hinges.

3. Mount aileron bellcrank to W12 and reinforce the 35×5mm scrap balsa remaing at the fuselage. Mount pipe to W14 as shown in illustration 11 and cement. Reinforce 3 positions of spar front between W4 with 1.5mm scrap balsa.

9. Form Strut W23 to be steamline and make both edges so that the 2mm music wires can be inserted into the pipe as illustra-

4. Assemble center portion of wing.

Assemble with W1-W3 and W18-W22 (Ref. Illustration 9.) Cut off W3 by the width of spar and use for front and rear.

5. Join the outer wing and center portion of wing together and connect aileron push rod, then plank fully.

6. Two sheets of planking material will be ready when three sheets are joined together and cut off at the dotted line. (Ref. Illustration 10.) Plank the center portion by cutting the material to appropriate length.

Cut off the bottom surface depending on the size of servo.

7. Wing tip W10 should be formed as illustrated in the cross section. 8. Drill holes for bamboo bars and screw locks aligning to the fuselage. The bamboo bars should be cemented to the fuselage side.

10. Two oblong circles shown at the center of the wing are astrodome and are to be paint lined.