



SAPIENZA
UNIVERSITÀ DI ROMA

“SAPIENZA” UNIVERSITY OF ROME

FACULTY OF INFORMATION ENGINEERING,
COMPUTER SCIENCE AND STATISTICS

DEPARTMENT OF COMPUTER, CONTROL
AND MANAGEMENT ENGINEERING

MASTER’S DEGREE IN ARTIFICIAL INTELLIGENCE AND ROBOTICS

Autonomous And Mobile Robotics

Lecture notes


Author

Marco Casu

<https://github.com/CasuFrost>

October 8, 2026

This document summarizes and presents the topics for the Autonomous And Mobile Robotics course for the Master's degree in Artificial Intelligence and Robotics at Sapienza University of Rome. The document is free for any use. If the reader notices any typos, they are kindly requested to report them to the author.

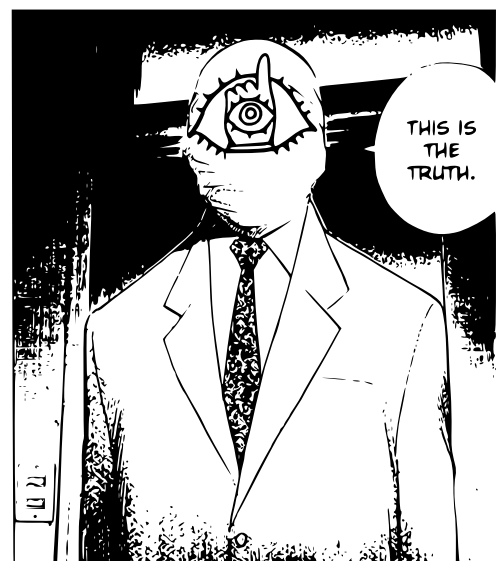

CONTENTS

1	Wheeled Mobile Robots	3
1.1	Configuration Space	3
1.1.1	Topology of a Space	4
1.1.2	Distance in the Configuration Space	6
1.2	Mechanics of Mobile Robots	8
1.2.1	Main Kinematic Structures	9
1.3	Constraints and Mobility	9
1.3.1	Geometric Constraints	10
1.3.2	Kinematic Constraints	11
1.3.3	Non-Holonomic Constraints	12
1.4	Kinematic Models	14
1.4.1	The Unicycle Model	16
1.4.2	The Bicycle Model	17
1.5	Nonlinear Controllability	17
1.5.1	The Unicycle Case	20
1.5.2	The Bicycle Case	21

CHAPTER

1

WHEELED MOBILE ROBOTS

1.1 Configuration Space

We can define a robot as a collection of n_b bodies moving in an operative space, denoted W and called the **workspace**. W can be $\mathbb{R}^2$ (if the robot moves on a plane, like a planar 2R) as well as $\mathbb{R}^3$, if the robot moves in the space. For example, an elbow-type spatial manipulator is a system of $n_b = 3$ rigid bodies moving in $W = \mathbb{R}^3$. A quadrotor is a single body ($n_b = 1$) moving in the same workspace $W = \mathbb{R}^3$.

To describe the complete pose of a planar 2R manipulator, we might use the position vector and roll-pitch-yaw angles for the two bodies, which requires a total of 12 parameters for the whole system, despite that, we know that 2 variables are enough to describe the whole configuration of the system.

Definition 1.1.1 : Configuration

The configuration of a robot is a **minimum** set of parameters that allows one to specify the posture^a of the robot in the workspace.

^awith posture, we indicate the position of all the points of the robot.

The configuration of a robot can be defined in several ways, and a choice of a set of parameters is not unique, however, each robot always has a *minimum number* of parameters. We usually denote $\mathbf{q}$ the configuration vector:

$$\mathbf{q} = \begin{pmatrix} q_1 \\ \vdots \\ q_n \end{pmatrix} \quad (1.1)$$

in our context, it usually describes the Cartesian coordinates of a single body robot, or the angular coordinates of the body parts. The Cartesian coordinates have values in a Euclidean space, as $\mathbb{R}^2$ or $\mathbb{R}^3$, while the angular coordinates take values in a non-Euclidean space, such as the special orthogonal group $SO(3)$, the group of all the orthogonal 3×3 matrices with determinant $+1$, this group describes the orientation of a body in a 3D Euclidean space.

Definition 1.1.2 : Configuration Space

The configuration space, usually denoted $\mathcal{C}$, is the set of all possible values of the configuration of a robot. The *dimension* of $\mathcal{C}$ is the number n of parameters (generalized coordinates) in $\mathbf{q}$.

Let's see an example: consider a disk robot that moves on a plane, that can also rotate about its vertical axis to point towards a desired direction, shown in Figure 1.1.

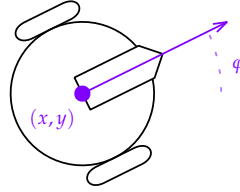


Figure 1.1: Disc robot with a tick in $\mathbb{R}^2$.

Its configuration is given by two Cartesian coordinates (x, y) and a value $\varphi \in SO(2)$ representing the angle between the tick and the horizontal axis. Hence, its configuration space is:

$$\mathcal{C} = \mathbb{R}^2 \times SO(2) = SE(2) \quad (1.2)$$

and it's not Euclidean, despite being called *special Euclidean group*. A polyhedral robot that can freely move in space is described by three Cartesian coordinates (x, y, z) and three roll-pitch-yaw angles (α, β, γ) describing its orientation, hence the configuration space is $SE(3)$:

$$\mathcal{C} = \mathbb{R}^3 \times SO(3) = SE(3). \quad (1.3)$$

We have seen in previous courses of robotics that the number of generalized coordinates of an n -link serial manipulator is exactly n .


1.1.1 Topology of a Space

We are interested in describing the configuration space of a given manipulator, since it's not Euclidean (in most cases), we would like to have an idea of how to navigate this space. Before defining formally what a *topology* is, we give some examples.

A 2R planar manipulator can be described by two angles, hence two values in $SO(2)$, so its configuration space is

$$\mathcal{C} = SO(2) \times SO(2) = SO(2)^2 \quad (1.4)$$

Let's try to represent graphically $\mathcal{C}$. We might represent a configuration as a point in the Cartesian plane:

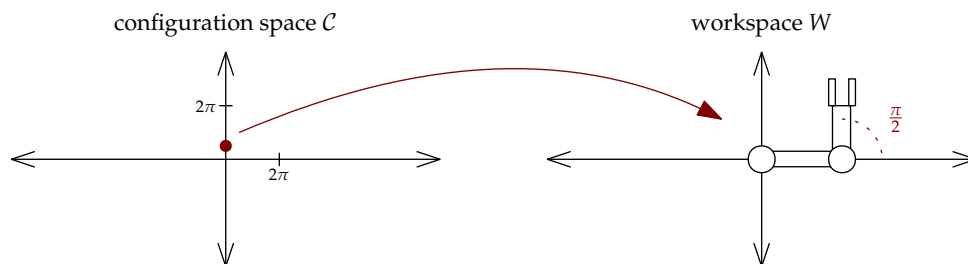

The problem of this representation is that different configurations $\mathbf{q} \in \mathcal{C}$ map to the same posture of the robot in W , as shown in Figure 1.2.



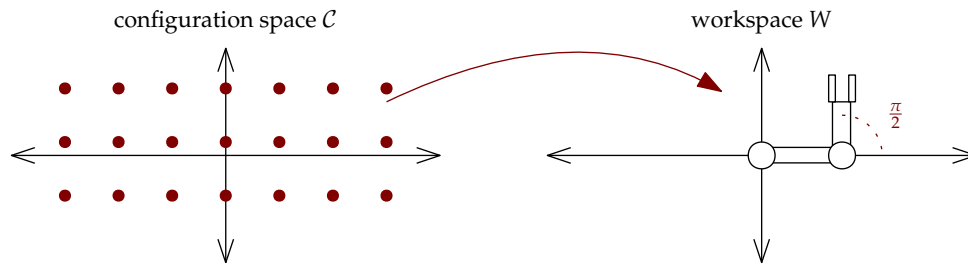


Figure 1.2: Different configurations map to the same posture.

To overcome this problem, we might try to represent the configuration space as a square in the plane $[0, 2\pi) \times [0, 2\pi)$:

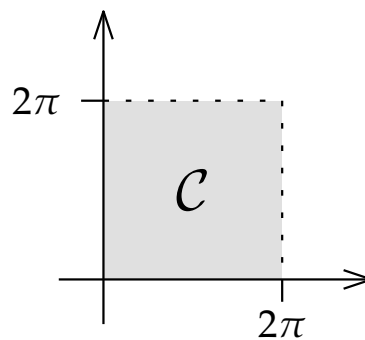

This representation also presents a problem: The distance between two configurations in $\mathcal{C}$ does not represent the true distance between two postures in the workspace: Two very distant configurations $\mathbf{q}_a$ and $\mathbf{q}_b$ in $\mathcal{C}$ can be mapped to two very close postures in W :

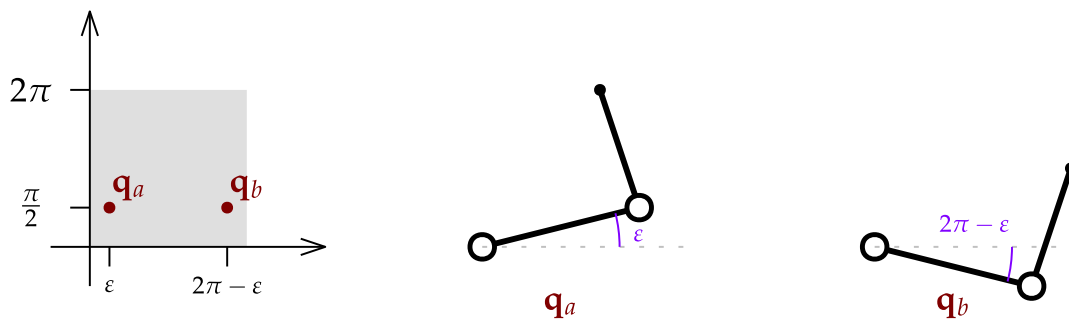

This representation is said to be **not topologically correct**. To give a correct representation of $\mathcal{C}$ we need to introduce the concept of **manifold**. We will not give a formal and complete definition (as given in topology or differential geometry courses).

Definition 1.1.3 : Manifold (loose definition)

A **manifold** is a topological space that is locally homeomorphic to $\mathbb{R}^n$.

As we should know from previous robotics courses, the configuration space of a 2R is a torus, a manifold that is locally homeomorphic to $\mathbb{R}^2$, and can be visualized in the 3D space through an embedding as shown in Figure 1.3.

$$\mathcal{C} = SO(2) \times SO(2)$$

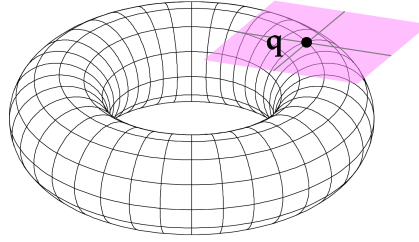


Figure 1.3: 3D representation of a torus.

1.1.2 Distance in the Configuration Space

Definition 1.1.4 : Distance in the Configuration Space

Given a configuration space $\mathcal{C}$, the **distance** is a function $d : \mathcal{C} \times \mathcal{C} \rightarrow \mathbb{R}$ such that, for each $\mathbf{q}_a, \mathbf{q}_b, \mathbf{q}_c$ in $\mathcal{C}$ we have:

$$d(\mathbf{q}_a, \mathbf{q}_b) \geq 0 \quad (1.5)$$

$$d(\mathbf{q}_a, \mathbf{q}_b) = 0 \iff \mathbf{q}_a = \mathbf{q}_b \quad (1.6)$$

$$d(\mathbf{q}_a, \mathbf{q}_b) = d(\mathbf{q}_b, \mathbf{q}_a) \quad (1.7)$$

$$d(\mathbf{q}_a, \mathbf{q}_b) \leq d(\mathbf{q}_a, \mathbf{q}_c) + d(\mathbf{q}_c, \mathbf{q}_b). \quad (1.8)$$

We know how the distance between two vectors $\mathbf{u}, \mathbf{v}$ in $\mathbb{R}^n$ is given by $\|\mathbf{u} - \mathbf{v}\|$. The distance between two points is the *shortest path* between them, for a general manifold, this path is not always a straight line as for the Euclidean space.

Definition 1.1.5 : Geodesic

For a general manifold, the shortest path between two points is called **geodesic**, and the distance between the points is the length of their geodesic.

For example, consider the shortest path between two points on the surface of a sphere (a 2-manifold): the geodesic lies on the great circle (the circle with the biggest radius that passes through the two points), as shown in Figure 1.4. In general, for an arbitrary manifold, it is hard to determine the geodesic between two points.

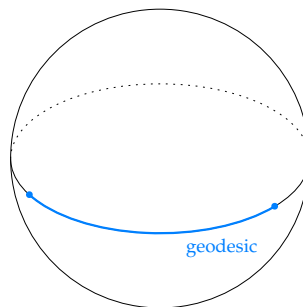


Figure 1.4: Geodesic on a sphere.

In the robotics context, we want to define the distance between two postures of a robot, this distance is defined in the workspace W , and to define that we don't need to specify directly the distance between their respective configurations in $\mathcal{C}$ (it would be harder to find the geodesic on $\mathcal{C}$).

Given a robot and its current configuration $\mathbf{q}$, we can define two functions:


- $B(\mathbf{q})$ is a function that assigns to $\mathbf{q}$ the volume (exact region) of the workspace that the robot occupies when it is in the configuration $\mathbf{q}$, so it assigns to each configuration $\mathbf{q} \in \mathcal{C}$ a set of points in $\mathbb{R}^3$.
- $\mathbf{p}(\mathbf{q})$ is a function that assigns to $\mathbf{q}$ the exact position of a certain point of the robot when it's in the configuration $\mathbf{q}$.

For example, we might let $\mathbf{p}$ be the center of mass of the manipulator, and observe how it changes by varying $\mathbf{q} \in \mathcal{C}$. One simple way to define a distance metric is to consider the maximum Euclidean distance between two points of the manipulator in two different configurations:

$$d(\mathbf{q}_a, \mathbf{q}_b) = \max_{\mathbf{p} \in \text{robot}} \|\mathbf{p}(\mathbf{q}_a) - \mathbf{p}(\mathbf{q}_b)\| \quad (1.9)$$

This distance is called **displacement metric**. Notice how in the definition we are writing $\mathbf{p} \in \text{robot}$, by letting robot be the set of all the points in the structure of the manipulator, which clearly depend on the current configuration. This kind of metric works under the assumption that, if the region occupied by the robot is similar in two different postures, then the distance between their respective configurations is small:

$$B(\mathbf{q}_a) \simeq B(\mathbf{q}_b) \implies d(\mathbf{q}_a, \mathbf{q}_b) \simeq 0. \quad (1.10)$$

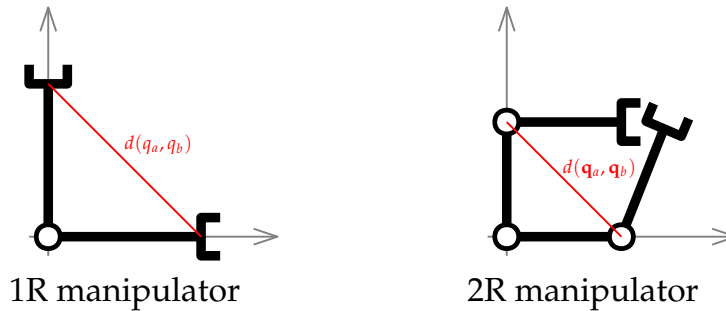

To compute the distance in Equation (1.9), we should check each point of the robot, and in general this is an uncountably infinite set. If the links are polygonal shapes, the problem becomes finite, since it is possible to find the maximum distance between any pair of polytopes in the three dimensional space.

A more computationally feasible approach is to check only for a finite set of points in the robot structure, called **control points**. Let

$$P = \{\mathbf{p}_1, \mathbf{p}_2, \dots, \mathbf{p}_c\} \quad (1.11)$$

be a set of c points of the robot (in general, they all depend on the configuration $\mathbf{q}$). We compute the distance between two postures in the following way:

$$d(\mathbf{q}_a, \mathbf{q}_b) = \max_{1 \leq i \leq c} \|\mathbf{p}_i(\mathbf{q}_a) - \mathbf{p}_i(\mathbf{q}_b)\|. \quad (1.12)$$

Not all the points of a robot are feasible control points, for example, the base of a manipulator usually doesn't change with the configuration. P is a set of *proper control points* if the function d as defined in Equation (1.12) satisfies the properties of a distance given in Definition 1.1.4.

Observation 1.1.1 : Approximation for Local Motion

Since a manifold is locally homeomorphic to $\mathbb{R}^n$, for sufficiently close configurations we can approximate the distance on the manifold (assuming it is smooth) with the Euclidean distance.

Observation 1.1.2 : Prismatic Joints


The configuration space of a robot with *only* prismatic joints is Euclidean.

1.2 Mechanics of Mobile Robots

The main sources of movement for a mobile robot are:

- **Wheels:** wheeled robots usually consist of one single rigid body, with the wheels in contact with ground.
- **Feet:** legged robots, several rigid bodies articulated through joints.

The wheels are in contact with the ground, and this introduces some constraints. Each wheel defines a point of contact with the ground, we call the **support polygon** the convex hull of all the contact points. A wheeled robot is in **static balance** if the projection on the ground of its center of mass, falls inside the support polygon. Of course a robot must be balanced in order to not fall to the ground.

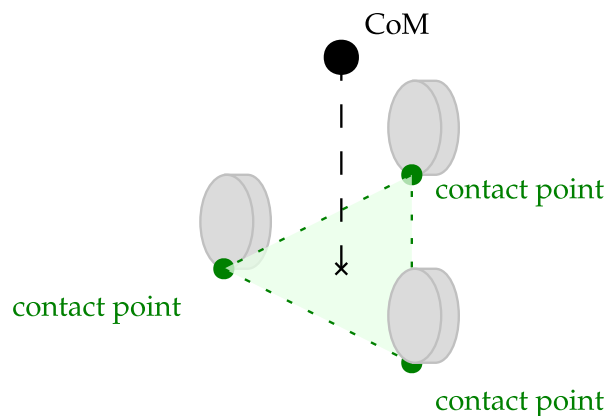

The convex hull of two points is a line segment, hence a robot with only two wheels can't be easily balanced in a static fashion.

There are three main types of wheels:

- **Fixed Wheels:** They have a fixed orientation: Can roll but can't steer on their z-axis (see Figure 1.5). They are usually actuated, if passive, are used for balance and offer a contact point.
- **Steerable Wheels:** They can steer and are used for orientation, hence they are typically active (e.g. the front wheels of a car).
- **Caster Wheels:** They have a variable orientation but they are typically not actuated. Their axis of orientation are not aligned, this property makes the wheels align automatically with the direction of motion, hence they are "invisible" kinematically, but offer a contact point.


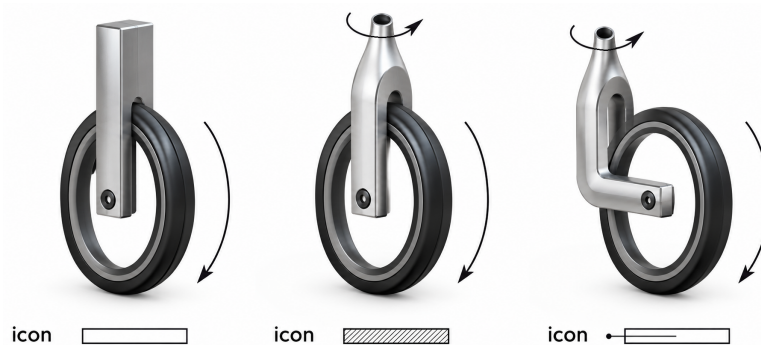


Figure 1.5: Fixed, steerable and caster wheels.


1.2.1 Main Kinematic Structures

The simplest wheeled robot that we can have is the **differential drive** robot: it uses two aligned fixed wheels that are independently actuated, and one caster wheel added for balance. The **synchro-drive** mobile robots have three steerable wheels and two actuators: one controls simultaneously the orientation of all the wheels, and the other rolls them together. The base over the wheels hence will never change orientation. This type of configuration is preferable when the body to move is particularly heavy.

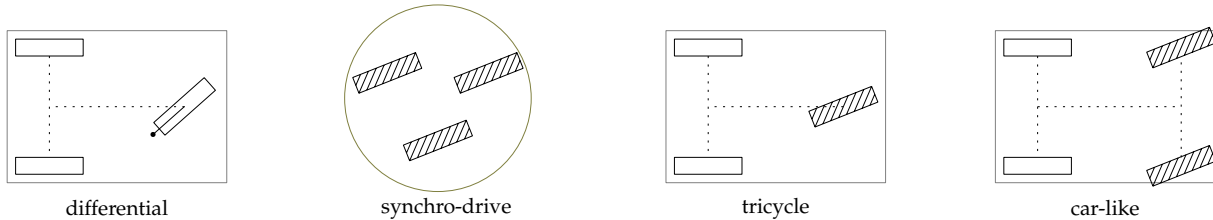

The tricycle has two fixed wheels in the back and one actuated steerable wheel in the front, the car-like is similar, but with two steerable wheels.

Consider the following path taken by a car-like robot:

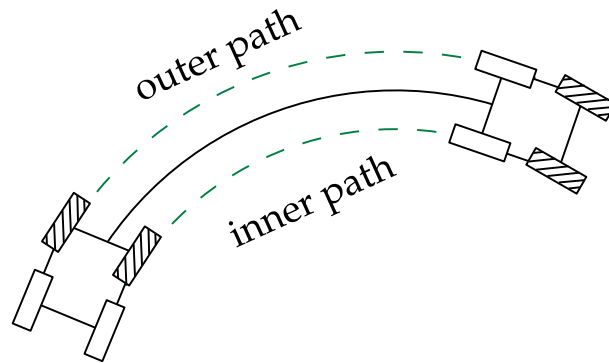

In the same time interval, the wheels on the outer path travel a longer distance with respect to the wheels on the inner path, hence their rotation speed must be higher. In order to avoid using two distinct actuators for the front wheels we use a device called **differential**.

Definition 1.2.1 : Differential

A mechanical differential is a gear assembly (usually using bevel or planetary gears) connected to a single drive motor. It splits power to two wheels on the same axle while allowing them to rotate at different speeds. When a robot with a single motor turns, the outside wheel must travel a larger arc than the inside wheel. The differential lets the wheels spin at their own natural speeds, preventing tire slip, scrubbing, and mechanical strain on the drivetrain.

1.3 Constraints and Mobility

The presence of the wheels in contact with the ground introduces a series of *geometric* and *kinematic* constraints. We will also see the relationship between these two types of constraints and the implications in mobility.

1.3.1 Geometric Constraints

We have seen how the configuration $\mathbf{q}$ is in general a point of a manifold $\mathcal{C}$, that is locally homeomorphic to $\mathbb{R}^n$, with n being the dimensionality of the configuration space $\mathcal{C}$. We will focus on equality time-invariant constraints. All the geometric constraints are expressed in the following form:

$$h(\mathbf{q}) = 0 \quad (1.13)$$

and they depend only on the configuration. Usually we have $k < n$ geometric constraints, and they are reflected in the degrees of freedom of a robot:

$$h_1(\mathbf{q}) = 0 \quad (1.14)$$

$$\vdots \quad (1.15)$$

$$h_k(\mathbf{q}) = 0. \quad (1.16)$$

If the configuration space is a 2-manifold, one single geometric constraint will reduce the degrees of freedom of the robot, constraining it to move on a 1-dimensional manifold (a curve).

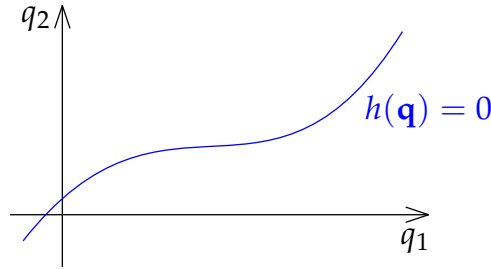


Figure 1.6: If the configuration space is $\mathbb{R}^2$, one constraint will let the configurations lie on a curve in the plane.

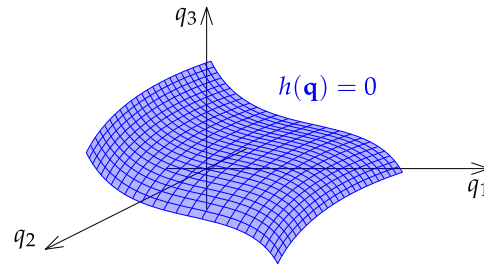


Figure 1.7: If the configuration space is $\mathbb{R}^3$, one constraint will let the configurations lie on a surface in the space.

In general, a robot with a configuration space that is an n -manifold with k independent geometric constraints, will move on an $(n - k)$ -manifold. Instead of using the vector $\mathbf{q}$, we can reduce the number of coordinates in many ways, like for one constraint:

$$h(\mathbf{q}) = 0 \quad (1.17)$$

we can solve the equation for a coordinate q_i :

$$q_i = \tilde{h}(q_1, \dots, q_{i-1}, q_{i+1}, \dots, q_n). \quad (1.18)$$

For example, consider a 2 degrees of freedom robot with the following constraint:

$$q_1^2 + q_2^2 = 1 \quad (1.19)$$

the configuration space is limited to the unit circle in $\mathbb{R}^2$ (1-manifold), we solve the constraint for q_2 :

$$q_2 = \pm \sqrt{1 - q_1^2}. \quad (1.20)$$

Actually this is not a good way to choose a coordinate, since the $\pm$ term prevents us from assigning a single value of q_2 to each value of q_1 , requiring a local resolution. For this example of the circle it is better to use the arc length $s \in [0, 2\pi)$ as the single coordinate.

Observation 1.3.1 : Sub-Manifold

If the configuration space $\mathcal{C}$ is an n -manifold, the k constraints define a $(n - k)$ -manifold embedded in $\mathcal{C}$, that we also call sub-manifold.

1.3.2 Kinematic Constraints

A kinematic constraint is local, it prevents the configuration from moving towards some directions. A general constraint of this kind is in the form:

$$a(\mathbf{q}, \dot{\mathbf{q}}) = 0 \quad (1.21)$$

it depends on the state of the robot. In every given configuration $\mathbf{q}^*$, we can immediately infer from $a(\mathbf{q}^*, \dot{\mathbf{q}}) = 0$ which velocities are allowed. All the relevant kinematic constraints in the robotic domain are in **Pfaffian form**:

$$\mathbf{a}^T(\mathbf{q})\dot{\mathbf{q}} = 0 \quad (1.22)$$

with $\mathbf{a}$ being an n dimensional vector that depends on the configuration. The Pfaffian form expresses a condition of orthogonality: in a given configuration the velocity must be orthogonal to the vector $\mathbf{a}$. More kinematic constraints can be arranged in matrix form:

$$\begin{pmatrix} \mathbf{a}_1^T(\mathbf{q}) \\ \mathbf{a}_2^T(\mathbf{q}) \\ \vdots \\ \mathbf{a}_k^T(\mathbf{q}) \end{pmatrix} \dot{\mathbf{q}} = \mathbf{0} \implies A(\mathbf{q})\dot{\mathbf{q}} = \mathbf{0} \implies \dot{\mathbf{q}} \in \mathcal{N}(A). \quad (1.23)$$

The admissible velocities are the ones that lie in the null space of A^1 , hence they lie in a linear space.

Observation 1.3.2 : Relationship Between Geometric and Kinematic Constraints

Any geometric constraint implies a kinematic constraint.

Consider a geometric constraint

$$h(\mathbf{q}) = 0 \quad (1.24)$$

this constraint must be satisfied as the time goes on, hence its derivative should also satisfy the following relation:

$$\dot{h}(\mathbf{q}) = 0 \quad (1.25)$$

by applying the chain rule:

$$\dot{h}(\mathbf{q}) = \frac{\partial h}{\partial \mathbf{q}} \dot{\mathbf{q}} = 0 \quad (1.26)$$

$\frac{\partial h}{\partial \mathbf{q}}$ is a row vector, the transpose of the gradient of h :

$$(\nabla_{\mathbf{q}} h)^T \dot{\mathbf{q}} = 0 \quad (1.27)$$

this is exactly a kinematic constraint in Pfaffian form. The gradient of h evaluated on a point is the vector orthogonal to the manifold on which the configuration is constrained to move, hence the resulting kinematic constraint is preventing the robot from going out of the sub-manifold defined by the geometric constraints.

¹Sometimes, we let the dependencies of a term implicit.

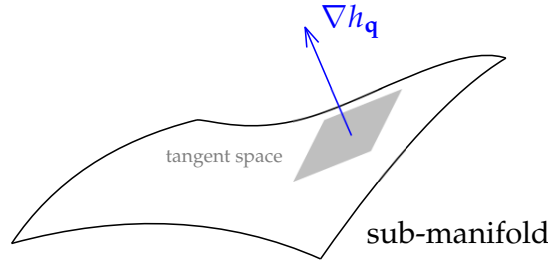


Figure 1.8: The admissible velocities are the ones that lie on the tangent space of the sub-manifold in the given configuration.

We have seen how a geometric constraint always implies a kinematic one. The opposite is not generally true, consider a generic kinematic constraint:

$$\mathbf{a}^T(\mathbf{q})\dot{\mathbf{q}} = 0 \quad (1.28)$$

this implies a geometric constraint if there exists a function $h(\mathbf{q})$ such that

$$\nabla_{\mathbf{q}}h = \mathbf{a} \quad (1.29)$$

hence the constraint defined by $\mathbf{a}(\mathbf{q})$ should be *integrable*.

Definition 1.3.1 : Holonomic Constraint

An integrable kinematic constraint is called **holonomic**, and it defines a geometric constraint.

What conditions determine if a constraint is integrable or not? In general, the conditions are stated in the *Frobenius Theorem*, we will not discuss this result, which belongs to the domain of differential geometry. We will determine if a given constraint is holonomic or not by a different way.

Consider the following kinematic constraint for a 2-dimensional robot:

$$q_1\dot{q}_1 + q_2\dot{q}_2 = 0 \quad (1.30)$$

is this integrable? The answer is yes. The resulting geometric constraint is

$$q_1^2 + q_2^2 = c, \quad c > 0. \quad (1.31)$$


In general, in Equation (1.29) we can add a scalar integrating factor that depend on the configuration:

$$\frac{\partial h}{\partial \mathbf{q}} = \gamma(\mathbf{q})\mathbf{a}^T(\mathbf{q}) \quad (1.32)$$

since the right-hand side is zero, γ can be dropped.

1.3.3 Non-Holonomic Constraints

A non-holonomic constraint defines a local limitation, it stops the robot from moving towards a certain direction when it is in that specific configuration, it does not prevent the robot from reaching a configuration by following an allowed path. The simplest example of a system with a non-holonomic constraint is a rolling disk.

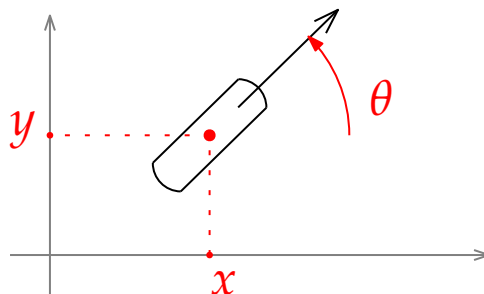


The configuration is given by the vector $(x \ y \ \theta)^T$, θ is its orientation with respect to the horizontal axis. It is clear that the disk in pure rolling (no slippage) can move *only* in the direction that is pointing (by rolling), hence can't move laterally. This constraint is expressed as follows:

$$\sin \theta \dot{x} - \cos \theta \dot{y} = 0 \quad (1.33)$$

or in vector form:

$$(\sin \theta \quad -\cos \theta \quad 0) \begin{pmatrix} \dot{x} \\ \dot{y} \\ \dot{\theta} \end{pmatrix} = 0 \quad (1.34)$$

$\mathbf{n}^T = (\sin \theta \quad -\cos \theta)$ is the vector *normal* to the direction. Any velocity that has a component on the line spanned by $\mathbf{n}$ is not allowed.

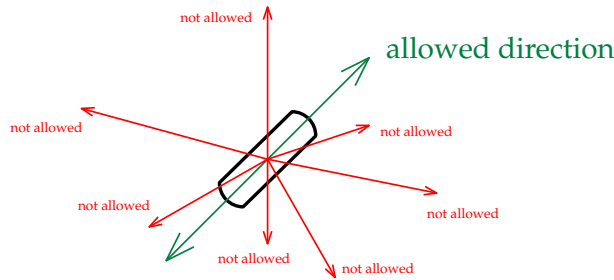

This constraint does not imply any global limitation, any configuration is still reachable, hence it is a non-holonomic constraint. To prove this, instead of using the Frobenius theorem, we give a non-formal proof by showing that, for any pair of configurations $\mathbf{q}_s, \mathbf{q}_g$, there exists a trajectory in the configuration space that connects these two configurations without violating the kinematic constraint. Let

$$\mathbf{q}_s = \begin{pmatrix} x_s \\ y_s \\ \theta_s \end{pmatrix}, \quad \mathbf{q}_g = \begin{pmatrix} x_g \\ y_g \\ \theta_g \end{pmatrix}. \quad (1.35)$$

1. $\dot{\theta}$ is not constrained, first of all we move the orientation from θ_s to θ^* , where θ^* is defined as the angle such that

$$(\sin \theta^* \quad -\cos \theta^*) \begin{pmatrix} x_g - x_s \\ y_g - y_s \end{pmatrix} = 0. \quad (1.36)$$

2. Then, we can move on the direction $(x_g - x_s \ y_g - y_s)^T$, in this way we can reach the desired position $(x_g \ y_g)^T$.
3. At the end, we move the orientation from θ^* to θ_g .

This is called **universal maneuver**.


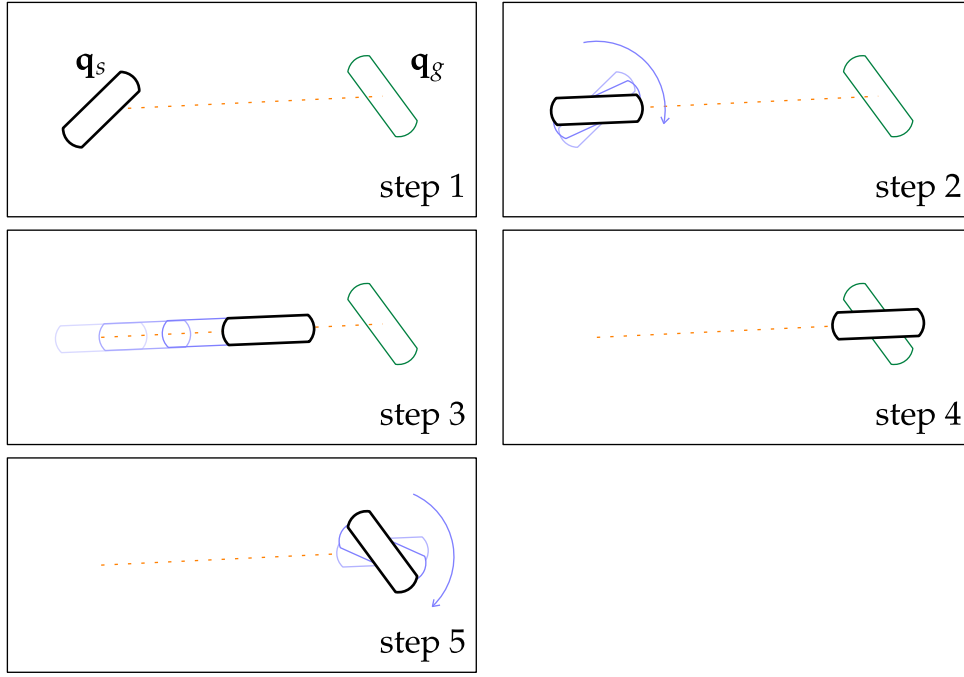


Figure 1.9: The universal maneuver in five steps.

There are no global mobility limitations. We can also observe this trajectory in the configuration space:

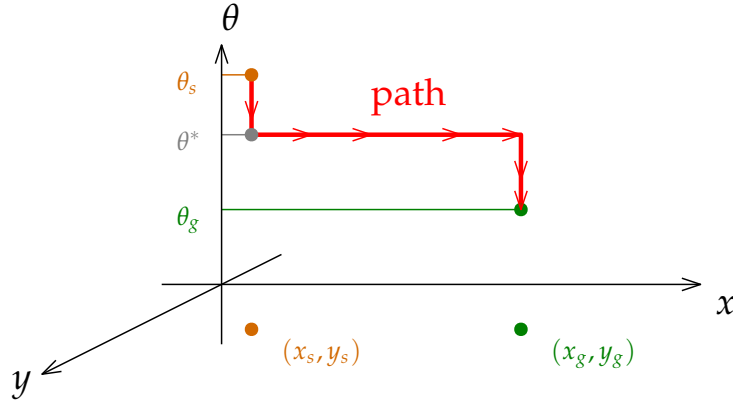

Note how for simplicity we have drawn the configuration space as Euclidean. Of course it is not Euclidean because $\theta \in SO(2)$.

1.4 Kinematic Models

We have seen how the kinematic constraints are defined in Pfaffian form as $A(\mathbf{q})\dot{\mathbf{q}} = \mathbf{0}$, with A being a $k \times n$ matrix. We are interested in finding a basis for the null space of $A(\mathbf{q})$:

$$\mathcal{N}(A(\mathbf{q})) = \text{span} \{ \mathbf{g}_1(\mathbf{q}), \mathbf{g}_2(\mathbf{q}), \dots, \mathbf{g}_m(\mathbf{q}) \} \quad (1.37)$$

$\mathcal{N}(A(\mathbf{q}))$ has dimension $m := n - k$. Each vector $\mathbf{g}_i(\mathbf{q})$ of the base is a vector field on $\mathcal{C}$ with values in $\mathbb{R}^n$, any admissible velocity is a linear combination of the vectors in the base:

$$\dot{\mathbf{q}} = \sum_{i=1}^m u_i \mathbf{g}_i(\mathbf{q}) \quad (1.38)$$

we can write any admissible velocity in compact form by using an m dimensional vector $\mathbf{u}$:

$$\dot{\mathbf{q}} = \underbrace{\begin{pmatrix} \mathbf{g}_1(\mathbf{q}) & \mathbf{g}_2(\mathbf{q}) & \cdots & \mathbf{g}_m(\mathbf{q}) \end{pmatrix}}_{G(\mathbf{q})} \underbrace{\begin{pmatrix} u_1 \\ \vdots \\ u_m \end{pmatrix}}_{\mathbf{u}} \quad (1.39)$$

the **kinematic model** is:

$$\dot{\mathbf{q}} = G(\mathbf{q})\mathbf{u} \quad (1.40)$$

with $\mathbf{u}$ being a velocity-level quantity. We can see the model as a dynamical system, with $\mathbf{q}$ being the n -dimensional state vector and $\mathbf{u}$ the m -dimensional input vector, of course it is a nonlinear system due to $G(\mathbf{q})$ that depends (in general) nonlinearly on $\mathbf{q}$. This system satisfies the **driftless property**:


$$\mathbf{u} = \mathbf{0} \implies \dot{\mathbf{q}} = \mathbf{0} \quad (1.41)$$

it does not have a free evolution. The kinematic model is not unique, since we can select a different choice for the basis vectors $\mathbf{g}_1, \dots, \mathbf{g}_m$, all the bases are equivalent for the description of the system, but the interpretation of the vector $\mathbf{u}$ depends on the choice of the basis. We can interpret $\mathbf{u}$ as the “virtual” velocities in the kinematically constrained configuration space.

Now we want to observe the differences between a kinematically constrained robot and an unconstrained robot. Consider an open-chain manipulator with revolute joints, with $\mathbf{q}$ being the DH frames. This choice of coordinates makes the manipulator free from any constraint, the configuration can “fly” in the configuration space, any joint velocity $\dot{\mathbf{q}}$ is always admissible, hence its kinematic model is

$$\dot{\mathbf{q}} = \mathbf{u}. \quad (1.42)$$

This is a simple integrator, we can impose any joint velocity. For a robot with non-holonomic constraint this does not hold. The kinematic model is not a simple integrator since it has a *filtering* component given by the matrix $G(\mathbf{q})$, the vector $\mathbf{u}$ does not represent directly the joint velocity, but is called **pseudo velocity**.

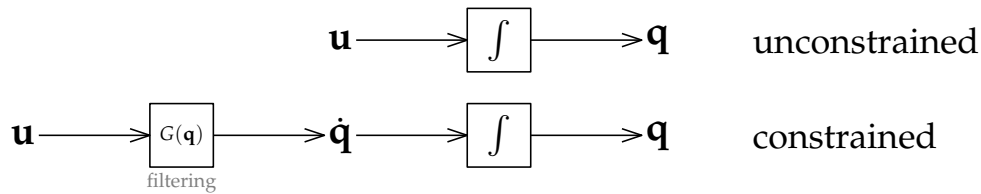

Let's discuss about controllability of the constrained model. The controllability of a system can be proved formally through nonlinear control theory, or constructively, by the definition of a universal maneuver (as we did in the previous section).

Definition 1.4.1 : Controllability

The kinematic model of a manipulator is controllable if any desired state $\mathbf{q}$ of the configuration space can be reached.

A holonomic constraint defines a geometric constraint that prevents the robot from accessing a specific region in the configuration space, hence a robot with geometric constraints is never controllable. By this reasoning, there is a 1-to-1 correspondence between controllability and the presence of holonomic constraints.

Observation 1.4.1

The kinematic model of a robot is controllable **if and only if** the set of kinematic constraints is non-holonomic.

1.4.1 The Unicycle Model


Let's define the kinematic model of a unicycle, that is equivalent to the rolling disk seen in Section 1.3.3. It has one kinematic constraint, the pure rolling condition imposes that:

$$\sin \theta \dot{x} - \cos \theta \dot{y} = 0. \quad (1.43)$$

It says that the velocity of the contact point must be aligned with the *sagittal axis* defined by θ , i.e. it can't have components on the zero-motion line. In matrix form the constraint is:

$$\underbrace{\begin{pmatrix} \sin \theta & -\cos \theta & 0 \end{pmatrix}}_{A(\mathbf{q})} \begin{pmatrix} \dot{x} \\ \dot{y} \\ \dot{\theta} \end{pmatrix} = 0. \quad (1.44)$$

The dimension of $\mathcal{N}(A)$ is 2, hence we will have a 2-dimensional vector of the pseudo velocity.

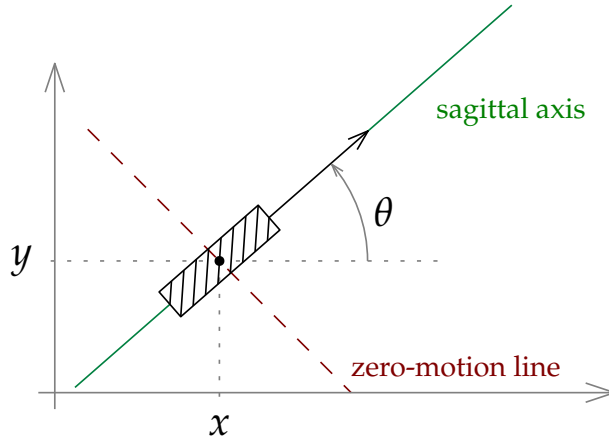

A basis for the null space of A is the following:

$$\mathbf{g}_1(\mathbf{q}) = \begin{pmatrix} \cos \theta \\ \sin \theta \\ 0 \end{pmatrix}, \quad \mathbf{g}_2(\mathbf{q}) = \begin{pmatrix} 0 \\ 0 \\ 1 \end{pmatrix} \quad (1.45)$$

the kinematic model is

$$\dot{\mathbf{q}} = G(\mathbf{q})\mathbf{u} = \begin{pmatrix} \cos \theta & 0 \\ \sin \theta & 0 \\ 0 & 1 \end{pmatrix} \begin{pmatrix} u_1 \\ u_2 \end{pmatrix} \Rightarrow \begin{cases} \dot{x} = \cos \theta u_1 \\ \dot{y} = \sin \theta u_1 \\ \dot{\theta} = u_2 \end{cases}. \quad (1.46)$$

u_1 is the scalar velocity along the sagittal axis

$$u_1 = \pm \sqrt{\dot{x}^2 + \dot{y}^2} \quad (1.47)$$

while u_2 is exactly $\dot{\theta}$. We rename these quantities:

$$v = u_1 \quad (1.48)$$

$$\omega = u_2 \quad (1.49)$$

v is related to the rolling velocity ω_{roll} and the radius of the wheel:

$$v = \omega_{\text{roll}} \cdot r. \quad (1.50)$$

We can rewrite the kinematic model by splitting the cartesian part from the angular one:

$$\dot{\mathbf{q}} = \begin{pmatrix} \cos \theta \\ \sin \theta \\ 0 \end{pmatrix} v + \begin{pmatrix} 0 \\ 0 \\ 1 \end{pmatrix} \omega. \quad (1.51)$$

Is this model controllable? Yes, we already proved for the rolling disk that a universal maneuver exists.


What are the real world robots that are kinematically and mechanically equivalent to the unicycle? First of all the differential drive, since it can rotate along its vertical axis, and move in the cartesian plane only towards its sagittal axis (it can't slide laterally). It has two actuated wheels, of radius r and rolling velocities ω_R, ω_L . Its cartesian velocity v is given by the average angular velocity of the two wheels:

$$v = r \frac{\omega_R + \omega_L}{2} \quad (1.52)$$

while its angular velocity is given by the difference:

$$\omega = (\omega_R - \omega_L) \frac{r}{d} \quad (1.53)$$

where d is the distance between the contact points of the wheels.

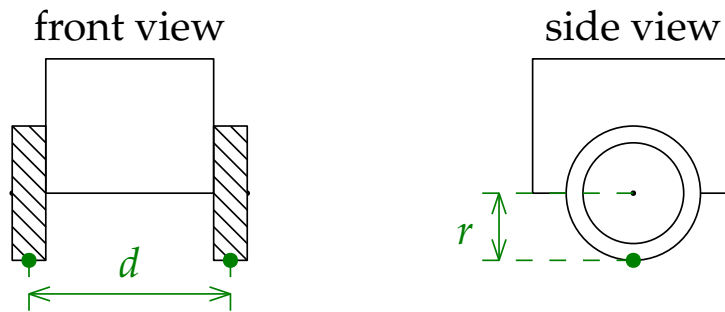

The other robot that is equivalent to the unicycle is the synchro-drive, it has two motors equipped with a pulley and belt mechanism, one controls the orientation of all the wheels, the other the rolling speed, hence these motors directly controls v and ω , where v is relative to the velocity of the geometric center of the three contact points.

1.4.2 The Bicycle Model

TODO:

1.5 Nonlinear Controllability

Let's discuss about the controllability of a nonlinear *driftless* system:

$$\dot{\mathbf{x}} = \sum_{i=1}^m \mathbf{g}_i(\mathbf{x}) u_i \quad (1.54)$$

with $\mathbf{g}_i : \mathbb{R}^n \rightarrow \mathbb{R}^n$ being a vector field and $u_1, \dots, u_m$ the inputs. In this general discussion we use the symbol $\mathbf{x}$ to denote the state of our system, although we usually use $\mathbf{q}$ (in the robotics domain).

Definition 1.5.1 : Controllability of a Nonlinear System

The system in Equation (1.54) is **controllable** if, for any pair of states $(\mathbf{x}_i, \mathbf{x}_f)$, with $\mathbf{x}(0) = \mathbf{x}_i$, there exists a profile $\tilde{\mathbf{u}}(t)$ for the inputs in $t \in [0, T]$ such that the system will reach at the end the state $\mathbf{x}(T) = \mathbf{x}_f$.

In linear systems, the controllability is guaranteed when the controllability matrix of the system have full rank, we will see how also for the nonlinear case, the controllability test will result in the derivation of the rank of a matrix.

Definition 1.5.2 : Lie Brackets

Let $\mathbf{g}_1, \mathbf{g}_2$ be two vector fields on $\mathbb{R}^n$. The **Lie Bracket** of these vector fields is the new vector field $[\mathbf{g}_1, \mathbf{g}_2]$ defined as follows:

$$[\mathbf{g}_1, \mathbf{g}_2](\mathbf{x}) = \frac{\partial \mathbf{g}_2}{\partial \mathbf{x}} \mathbf{g}_1(\mathbf{x}) - \frac{\partial \mathbf{g}_1}{\partial \mathbf{x}} \mathbf{g}_2(\mathbf{x}). \quad (1.55)$$

Let's see an example in $\mathbb{R}^3$:

$$\mathbf{g}_1 = \begin{pmatrix} \cos x_3 \\ \sin x_3 \\ 0 \end{pmatrix}, \quad \mathbf{g}_2 = \begin{pmatrix} 0 \\ 0 \\ x_1 \end{pmatrix} \quad (1.56)$$

the Jacobians are:

$$\frac{\partial \mathbf{g}_1}{\partial \mathbf{x}} = \begin{pmatrix} 0 & 0 & -\sin x_3 \\ 0 & 0 & \cos x_3 \\ 0 & 0 & 0 \end{pmatrix}, \quad \frac{\partial \mathbf{g}_2}{\partial \mathbf{x}} = \begin{pmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ 1 & 0 & 0 \end{pmatrix} \quad (1.57)$$

hence:

$$[\mathbf{g}_1, \mathbf{g}_2](\mathbf{x}) = \begin{pmatrix} x_1 \sin x_3 \\ -x_1 \cos x_3 \\ \cos x_3 \end{pmatrix} \quad (1.58)$$

notice how in this case $[\mathbf{g}_1, \mathbf{g}_2]$ is linearly independent from $\mathbf{g}_1, \mathbf{g}_2$. Now we want to give an *interpretation* of the Lie bracket. Consider the following 2-inputs system:

$$\dot{\mathbf{x}} = \mathbf{g}_1(\mathbf{x})u_1 + \mathbf{g}_2(\mathbf{x})u_2 \quad (1.59)$$


the interpretation of the Lie brackets can be defined by considering the following time profile for u_1, u_2 in $t \in [0, 4\varepsilon]$:

$$(u_1, u_2) = (1, 0) \quad t \in [0, \varepsilon] \quad (1.60)$$

$$(u_1, u_2) = (0, 1) \quad t \in [\varepsilon, 2\varepsilon] \quad (1.61)$$

$$(u_1, u_2) = (-1, 0) \quad t \in [2\varepsilon, 3\varepsilon] \quad (1.62)$$

$$(u_1, u_2) = (0, -1) \quad t \in [3\varepsilon, 4\varepsilon]. \quad (1.63)$$

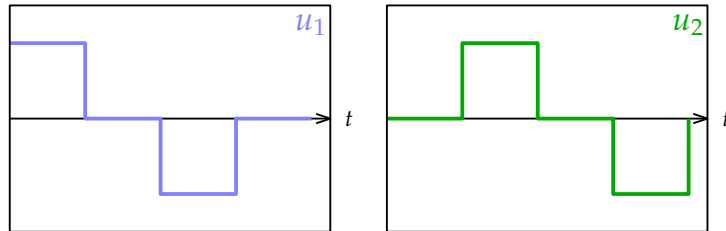


After applying this input profile the system will be in the state:

$$\mathbf{x}(4\varepsilon) = \mathbf{x}(0) + \underbrace{\varepsilon^2 [\mathbf{g}_1, \mathbf{g}_2](\mathbf{x}(0))}_{\text{displacement}} + O(\varepsilon^3). \quad (1.64)$$

This result affirms that the displacement will be in the direction of the Lie bracket, with an error given by the term $O(\varepsilon^3)$: if $\varepsilon \rightarrow 0$, the terms in $O(\varepsilon^3)$ will vanish faster, and the displacement will be defined mainly by $\varepsilon^2 [\mathbf{g}_1, \mathbf{g}_2](\mathbf{x}(0))$.

Observation 1.5.1

The Lie bracket gives the direction of the displacement of that particular input sequence.

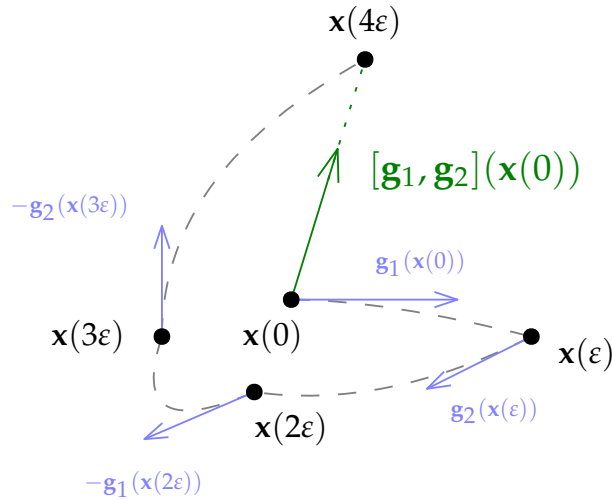

Definition 1.5.3 : Distribution

Let $\mathcal{C}$ be a smooth manifold. A *Distribution* Δ is a map that assign at each point $\mathbf{x} \in \mathcal{C}$ a subspace of the tangent space $T_{\mathbf{x}}\mathcal{C}$:

$$\Delta : \mathbf{x} \mapsto \Delta(\mathbf{x}) \subset T_{\mathbf{x}}\mathcal{C}. \quad (1.65)$$

The tangent space in each point of a n -manifold have at most dimension n , hence the dimension of the subspace $\Delta(\mathbf{x})$ can be at most n (depending on the point on where we are evaluating Δ). For a system in the form (1.54), the *input distribution* is defined as follows:

$$\Delta(\mathbf{x}) = \text{span}\{\mathbf{g}_1(\mathbf{x}), \mathbf{g}_2(\mathbf{x}), \dots, \mathbf{g}_m(\mathbf{x})\}. \quad (1.66)$$

The controllability problem for nonlinear systems is strictly correlated to a particular distribution, called the **accessibility distribution** $\Delta_{\mathcal{A}}$, defined as follows:

$$\Delta_{\mathcal{A}}(\mathbf{x}) = \text{span}\{\mathbf{g}_1(\mathbf{x}), \dots, \mathbf{g}_m(\mathbf{x}), \dots, [\mathbf{g}_i, \mathbf{g}_j](\mathbf{x}), \dots, [\mathbf{g}_i, [\mathbf{g}_j, \mathbf{g}_k]](\mathbf{x}), \dots\}. \quad (1.67)$$

Let's break it down:

- With $[\mathbf{g}_i, \mathbf{g}_j]$ we denote all Lie brackets given by all the possible pairs of vector fields for $1 \leq i, j \leq m$. These are also called first order Lie brackets.
- Each pair $\mathbf{g}_i, \mathbf{g}_j$ (with $i \neq j$) appears only one time, we don't have to add also $[\mathbf{g}_j, \mathbf{g}_i]$ since it is equal to $-[\mathbf{g}_i, \mathbf{g}_j]$ (they are linearly dependent, the span needs only one of them).
- $[\mathbf{g}_i, [\mathbf{g}_j, \mathbf{g}_k]]$ for $1 \leq i, j, k \leq m$ are the second order Lie brackets.
- This nested definition can continue, for example the third order Lie brackets are in the form $[\mathbf{g}_i, [\mathbf{g}_j, [\mathbf{g}_k, \mathbf{g}_h]]]$.
- The definition of $\Delta_{\mathcal{A}}$ consider all the possible combination of Lie brackets, for each possible order, up to infinity.

Of course $\Delta_{\mathcal{A}}(\mathbf{x})$ can have different dimension depending on $\mathbf{x}$, for a nonlinear system, to assert controllability, is *mandatory* that $\Delta_{\mathcal{A}}(\mathbf{x})$ have the same dimension on every single $\mathbf{x} \in \mathcal{C}$.

Definition 1.5.4 : Dimension of a Distribution

The distribution $\Delta_{\mathcal{A}}$ have dimension k if $\dim \Delta_{\mathcal{A}}(\mathbf{x}) = k$ for every $\mathbf{x} \in \mathcal{C}$. In that case we write $\dim \Delta_{\mathcal{A}} = k$.

The nonlinear controllability problem is fully described by the following result.

Theorem 1.5.1 : Accessibility Criterion

A nonlinear system of the form (1.54) with an n -dimensional state vector is controllable *if and only if* its accessibility distribution have dimension n :

$$\dim \Delta_{\mathcal{A}} = n. \quad (1.68)$$

So in practice, we have to build the matrix M which the columns are the vector fields $\mathbf{g}_i$ and all their Lie brackets, and check if the rank is full.

$$M(\mathbf{x}) = \left(\begin{array}{c|c|c|c|c|c} \mathbf{g}_1(\mathbf{x}) & \dots & \mathbf{g}_m(\mathbf{x}) & \dots & [\mathbf{g}_i, \mathbf{g}_j](\mathbf{x}) & \dots & [\mathbf{g}_i, [\mathbf{g}_j, \mathbf{g}_k]](\mathbf{x}) \dots \end{array} \right) \quad (1.69)$$

It's impossible to write out all the columns, we can check each iteratively for the vector fields $\mathbf{g}_1, \dots, \mathbf{g}_m$, then for the first order Lie brackets, then for the higher order, as soon as the rank of the matrix reaches size n , the criterion is satisfied ($\dim \Delta_{\mathcal{A}} = n$) and the system is controllable. All remaining infinite columns can be ignored. For systems described by analytic functions, the chain of Lie brackets stabilizes after a finite number of steps. If at a certain point the new Lie brackets no longer increase the rank and it remains lower than n , the process stops and the system is not controllable.

Proposition 1.5.1

If the system is analytical, the accessibility distribution stabilizes. The chain of Lie brackets cannot generate distributions of infinitely increasing size in a space of dimension n . Consequently, in the worst case, it is not necessary to go beyond the Lie brackets of order $n - 1$ (or in any case limited according to the size of the state).

In computational practice (for example using symbolic calculation software such as MATLAB or Python), the brackets are calculated in ascending order of degree and those that do not increase the rank are immediately discarded, blocking the algorithm as soon as the rank is equal to n .

1.5.1 The Unicycle Case

The unicycle model is:

$$\dot{\mathbf{q}} = \underbrace{\begin{pmatrix} \cos \vartheta \\ \sin \vartheta \\ 0 \end{pmatrix}}_{\mathbf{g}_1} v + \underbrace{\begin{pmatrix} 0 \\ 0 \\ 1 \end{pmatrix}}_{\mathbf{g}_2} \omega \quad (1.70)$$


we compute the first order Lie bracket:

$$\mathbf{g}_3(\mathbf{q}) := [\mathbf{g}_1, \mathbf{g}_2](\mathbf{q}) = - \begin{pmatrix} 0 & 0 & -\sin \vartheta \\ 0 & 0 & \cos \vartheta \\ 0 & 0 & 0 \end{pmatrix} \begin{pmatrix} 0 \\ 0 \\ 1 \end{pmatrix} = \begin{pmatrix} \sin \vartheta \\ -\cos \vartheta \\ 0 \end{pmatrix} \quad (1.71)$$

we denote $\mathbf{g}_3$ the Lie bracket, notice how is the unit vector orthogonal to the sagittal axis, called the **slide vector field**. Let's check the matrix given by $\mathbf{g}_1, \mathbf{g}_2, \mathbf{g}_3$:

$$\text{rank} \begin{pmatrix} \cos \vartheta & 0 & \sin \vartheta \\ \sin \vartheta & 0 & -\cos \vartheta \\ 0 & 1 & 0 \end{pmatrix} = \text{rank} \begin{pmatrix} \cos \vartheta & \sin \vartheta & 0 \\ \sin \vartheta & -\cos \vartheta & 0 \\ 0 & 0 & 1 \end{pmatrix} = 3 \quad (1.72)$$

The rank is full, we don't have to check the higher order Lie brackets, hence the system is controllable.

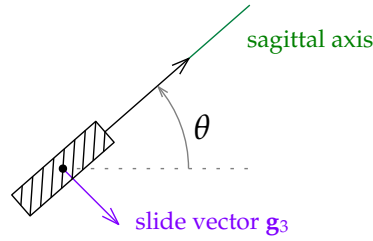

In this case the Lie bracket defines a velocity that is immediately unrealizable, but specifies a direction achievable through a sequence of motions.

1.5.2 The Bicycle Case

The model of the bicycle is:

$$\dot{\mathbf{q}} = \underbrace{\begin{pmatrix} \cos \vartheta \\ \sin \vartheta \\ \frac{1}{l} \tan \phi \\ 0 \end{pmatrix}}_{\mathbf{g}_1} u_1 + \underbrace{\begin{pmatrix} 0 \\ 0 \\ 0 \\ 1 \end{pmatrix}}_{\mathbf{g}_2} u_2 \quad (1.73)$$

the first Lie bracket (we don't show the computation) is:

$$\mathbf{g}_3(\mathbf{q}) := [\mathbf{g}_1, \mathbf{g}_2](\mathbf{q}) = \begin{pmatrix} 0 \\ 0 \\ -\frac{1}{l \cos^2 \phi} \\ 0 \end{pmatrix} \quad (1.74)$$

this vector is called **wriggle** and is clearly linearly independent from the others, hence the rank is at least 3. Let's compute the second order Lie bracket:

$$\mathbf{g}_4 := [\mathbf{g}_1, \mathbf{g}_3](\mathbf{q}) = \begin{pmatrix} -\frac{\sin \vartheta}{l \cos^2 \phi} \\ \frac{\cos \vartheta}{l \cos^2 \phi} \\ 0 \\ 0 \end{pmatrix} \quad (1.75)$$

$\mathbf{g}_4$ is parallel to the slide vector field. It can be verified that:

$$\text{rank} \begin{pmatrix} \cos \vartheta & 0 & 0 & -\frac{\sin \vartheta}{l \cos^2 \phi} \\ \sin \vartheta & 0 & 0 & \frac{\cos \vartheta}{l \cos^2 \phi} \\ \frac{1}{l} \tan \phi & 0 & -\frac{1}{l \cos^2 \phi} & 0 \\ 0 & 1 & 0 & 0 \end{pmatrix} = 4 \quad (1.76)$$

hence the model is controllable.