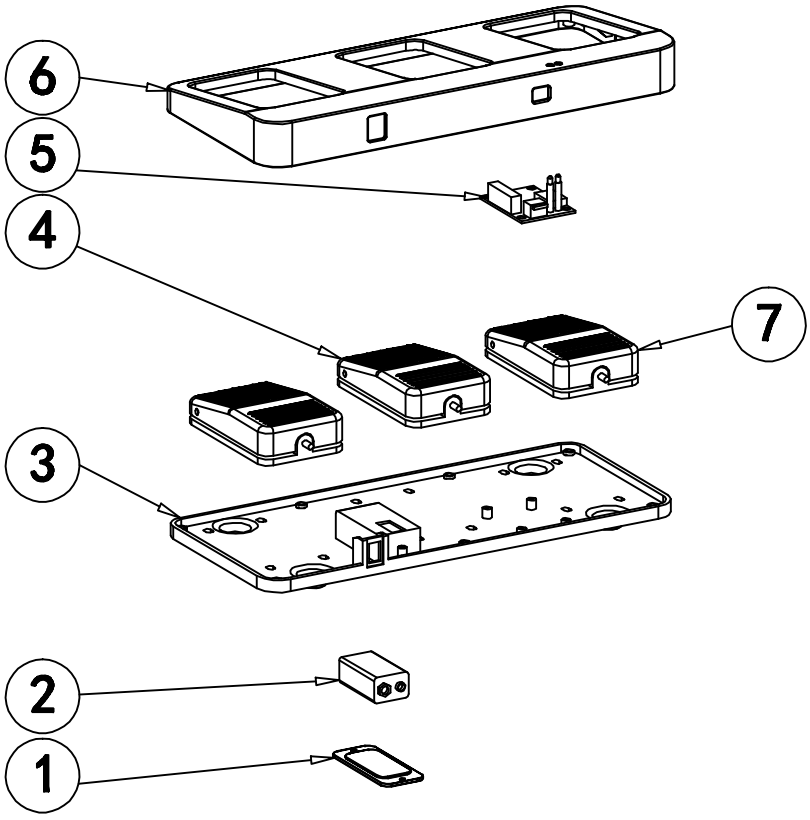
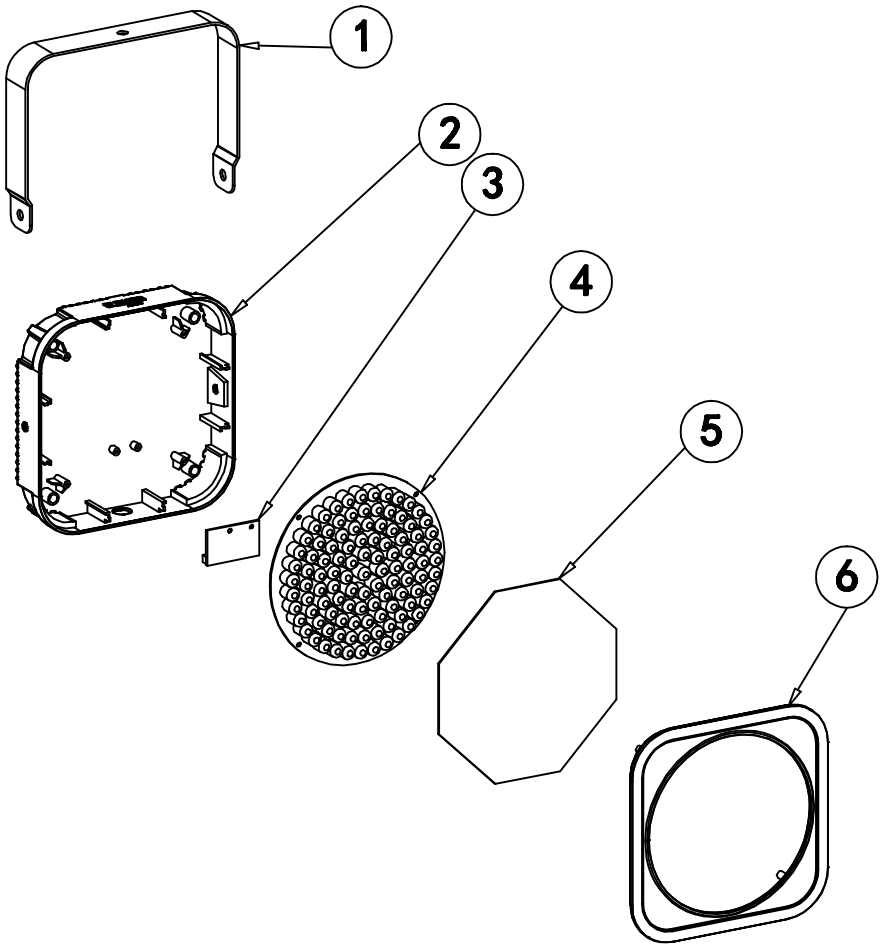
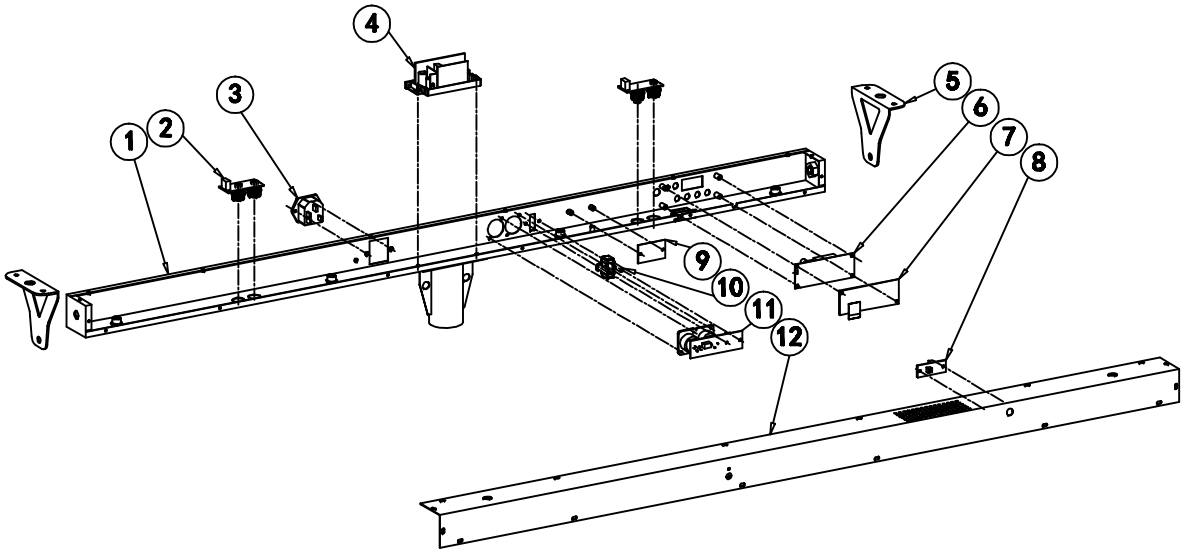
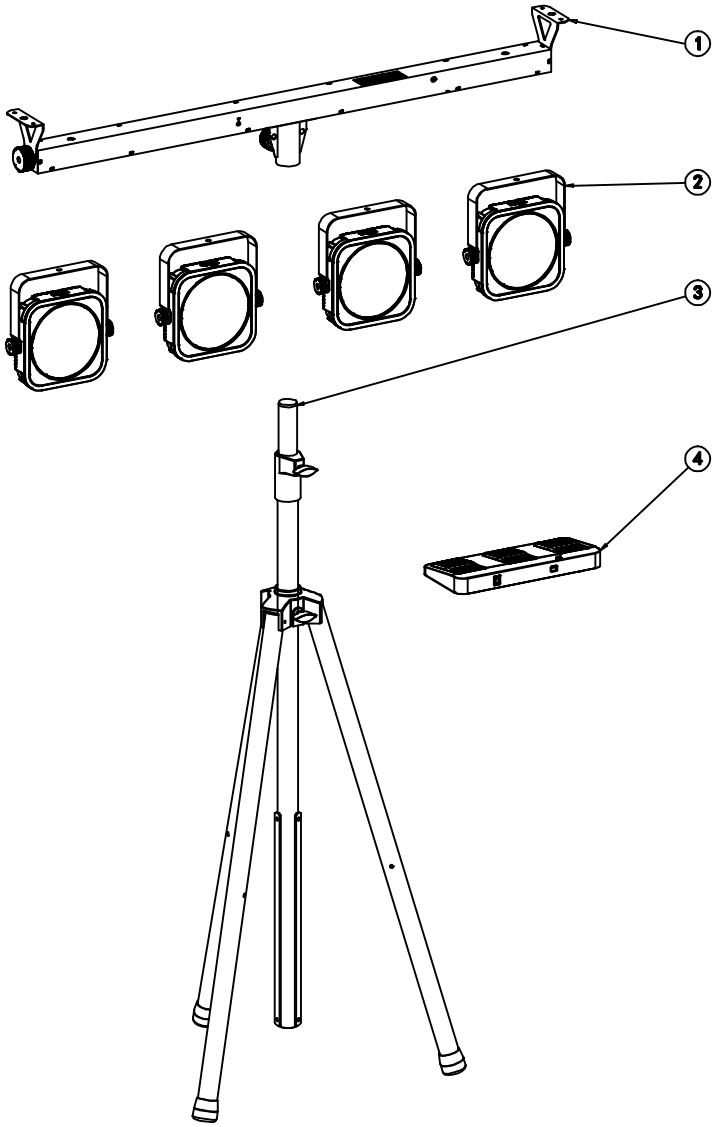

6
5
4
7
3
2
1


1
2
3
4
5
6


1
2
3
4
5
6
7
8
9
10
11
12


1
2
3
4

EXPLODED DIAGRAM REF STATIC	FIXTURE	PART NUMBER	DESCRIPTION
	4BARILS	PTK430100030543	Assembled wireless footswitch with pairing function (4 PEDAL)
	4BARILS	IRC6	IRC6 REMOTE (LOC1 ITEM ONLY - IRC6) 110X45X6.8mm 27 01
	4BARILS	PTF1491100043	Hexagon nynon nut M4 7x5mm Fe (T-Bar)
	4BARILS	PTJ3020011007	Bracket screw 30xH15 M8x12mm (T-Bar)
	4BARILS	PTJ3022011072	Power cord L1.5M 6.3 KH-9922AKH-9923 SVT 18AWG3C 105 UL Female IEC-to-Male Edison 5ft power cable
	4BARILS	PTJ3031001010	Power switch 250V 3A 125V 6A KCD1-11 1510 CE CQC (Footswitch)
	4BARILS	PTK113000004	Fuse 1AMPX20 GMA 250V T1.6AL VDE UL (T-Bar)
	4BARILS	PTK130017027	Bracket screw (39xH24 M8x22mm)
	4BARILS	PTK130017044	Bracket screw_ 39xH24_M10x16mm 39xH24 M10x16mm 01CHAUVE
	4BARILS	PTK130041023	Washer ID8xOD18xH2 PVC (T-Bar)
	4BARILS	PTK130041023	Washer ID8xOD18xH2 PVC
	4BARILS	PTK130081010	Spring 6.5 1.2mm L8.5mm 4 72A 6.58.541.2 (T-Bar)
	4BARILS	PTK130121006	TRIPOD STAND - fits 1 to 1.4 in (26 to 37) mm include the cap
	4BARILS	PTK2300030536	Back-up pressure plate for the stand (T-Bar)
	4BARILS	PTK3023007007	Tripod Carry Bag
	4BARILS	PTK4300000213071	Assembled Par - Position 1
	4BARILS	PTK4300000213072	Assembled Par - Position 2
	4BARILS	PTK4300000213073	Assembled Par - Position 3
	4BARILS	PTK4300000213074	Assembled Par - Position 4
	4BARILS	PTK510001313IV3	Main PCB V3 (T-Bar BOM#6) USB has the dual function DFI and firmware update requires the MPCB upgraded
	4BARILS	PTK6301020703	Light bag
	4BARILS	PTK430100030543	Assembled Footswitch 4Bar BT (Footswitch) Batteries are not included
Footswitch.1	4BARILS	PTK530003028	Battery cover plate 4Bar BT L70.5W30.5H3.2 ABS UL94-VO (BOM#1.Footswitch)
Footswitch.2	4BARILS	PTK199030027	9V battery 9V GN1604S (BOM#2.Footswitch)
Footswitch.3	4BARILS	PTK530003027	Bottom plate for the footswitch 4Bar BT L305.5W135.5H31 ABS UL94-VO (BOM#3.Footswitch)
Footswitch.4	4BARILS	PTK115060005	Foot pedal (with cable L=120mm) ABS L61.5xW100xH34.5 XH L120mm (BOM#4.Footswitch)
Footswitch.5	4BARILS	PTK510101020	Wireless receive module (BOM#5.Footswitch)
Footswitch.6	4BARILS	PTK530003026	Top plate for the footswitch 4Bar BT L310W140H31 ABS UL94-VO (BOM#6.Footswitch)
Footswitch.7	4BARILS	PTK115060004	Foot pedal (with cable L=220mm) ABS L61.5xW100xH34.5 XH L220mm (BOM#7.Footswitch)
Par.1	4BARILS	PTK2300021309	Hanging bracket 4Bar BT (BOM#1.Par) smaller than PTJ40104800602000
Par.2	4BARILS	PTK530003024	Bottom par can 4Bar BT L175W175H37 ABS UL94-VO (BOM#2.Par)
Par.3	4BARILS	PTK510003071	LED driver PCB POSITION 1 (BOM#3.Par)
Par.3	4BARILS	PTK510003074	LED driver PCB POSITION 4 (BOM#3.Par)
Par.3	4BARILS	PTK510003082	LED driver PCB POSITION 2 (BOM#3.Par)
Par.3	4BARILS	PTK510003083	LED driver PCB POSITION 3 (BOM#3.Par)
Par.4	4BARILS	PTK510004001	LED board PARBAR REM1 IRDIP-14321A4-00D-11-B (BOM#4.Par)
Par.5	4BARILS	PTK127070047	Lens cover 4Bar BT PC L158W158H1.5 (BOM#5.Par)
Par.6	4BARILS	PTK530003025	Top par can 4Bar BT L175W175H32 ABS UL94-VO (BOM#6.Par)
T-Bar.1	4BARILS	PTK2300021307	Bottom plate - T Bar 4Bar BT (BOM#1.T-Bar)
T-Bar.2	4BARILS	PTK510002097	Auxiliary board PCBA-CON 4BAR LT BT V1.0 (BOM#2.T-Bar)
T-Bar.3	4BARILS	PTJ3027002006	IEC socket DB-14-F1 (BOM#3.T-Bar)
T-Bar.4	4BARILS	PTK128010066	Power supply CPS-36-A12 12V3A (BOM#4.T-Bar)
T-Bar.5	4BARILS	PTK2300021308	End bracket 4Bar BT (BOM#5.T-Bar)
T-Bar.6	4BARILS	PTK510001313	Main PCB V3 (T-Bar BOM#6) USB has the dual function DFI and firmware update requires the MPCB upgraded
T-Bar.7	4BARILS	PTK510001157	Main PCB CRT MB 4Bar LT BT (BOM#7.T-Bar)
T-Bar.8	4BARILS	PTK510002096	Auxiliary board PCBA-IR 4BAR LT BT (BOM#8.T-Bar)
T-Bar.9	4BARILS	PTK510101021	Bluetooth module HS2272WL600 3V-5V 40MM25MM HED-PWC433-RX-CM (BOM#9.T-Bar)
T-Bar.10	4BARILS	PTK530000055	Backplate for the USB L26W26H24.3 ABS UL94-V0 (BOM#10.T-Bar)
T-Bar.11	4BARILS	PTK510002095	Auxiliary board PCBA WLESSDMX (BOM#11.T-Bar)
T-Bar.12	4BARILS	PTK2300021306	Top plate - T Bar 4Bar BT (BOM#12.T-Bar)