


SYSTEM WIRING DIAGRAMS

Air Conditioning Circuits


1997 BMW 328i

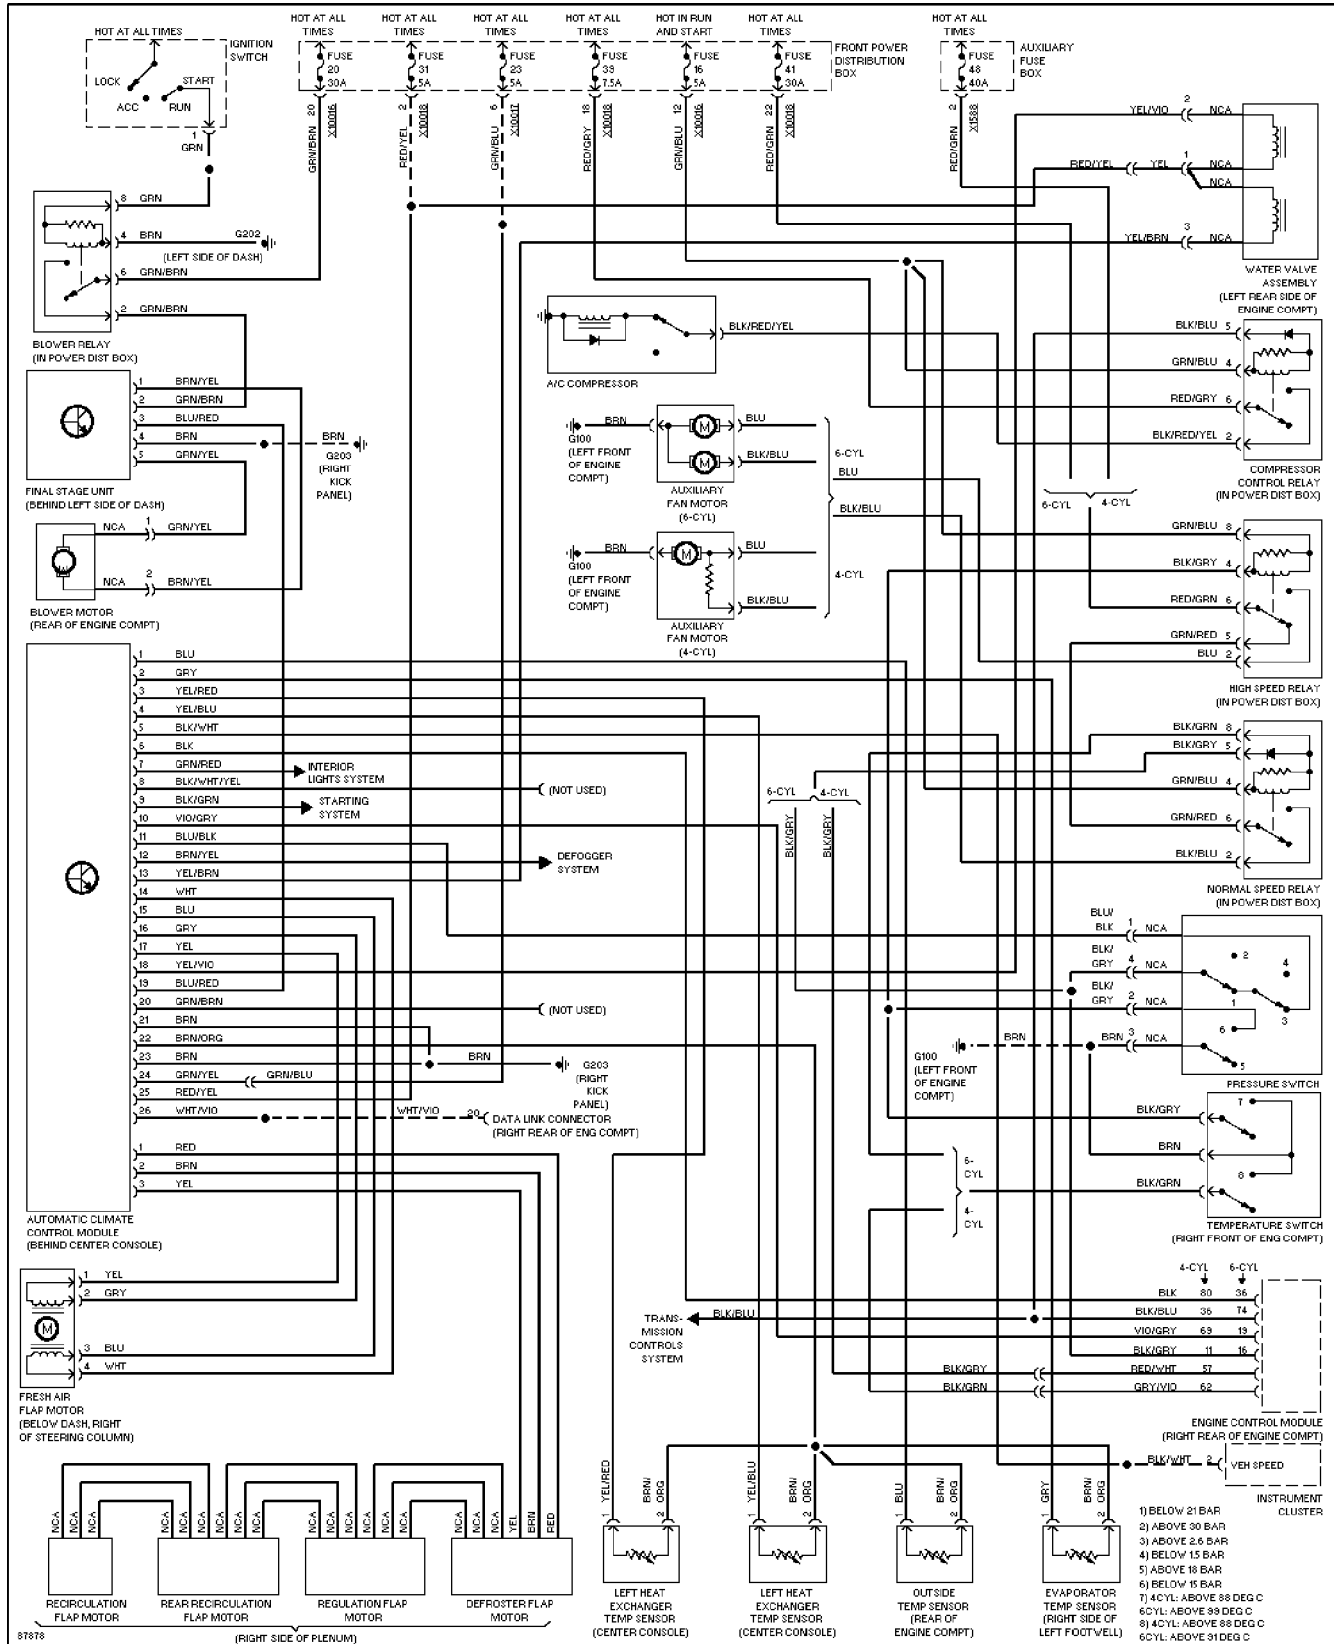

SYSTEM WIRING DIAGRAMS

Anti-lock Brake Circuits, W/ Traction Control (1 of 2)


1997 BMW 328i

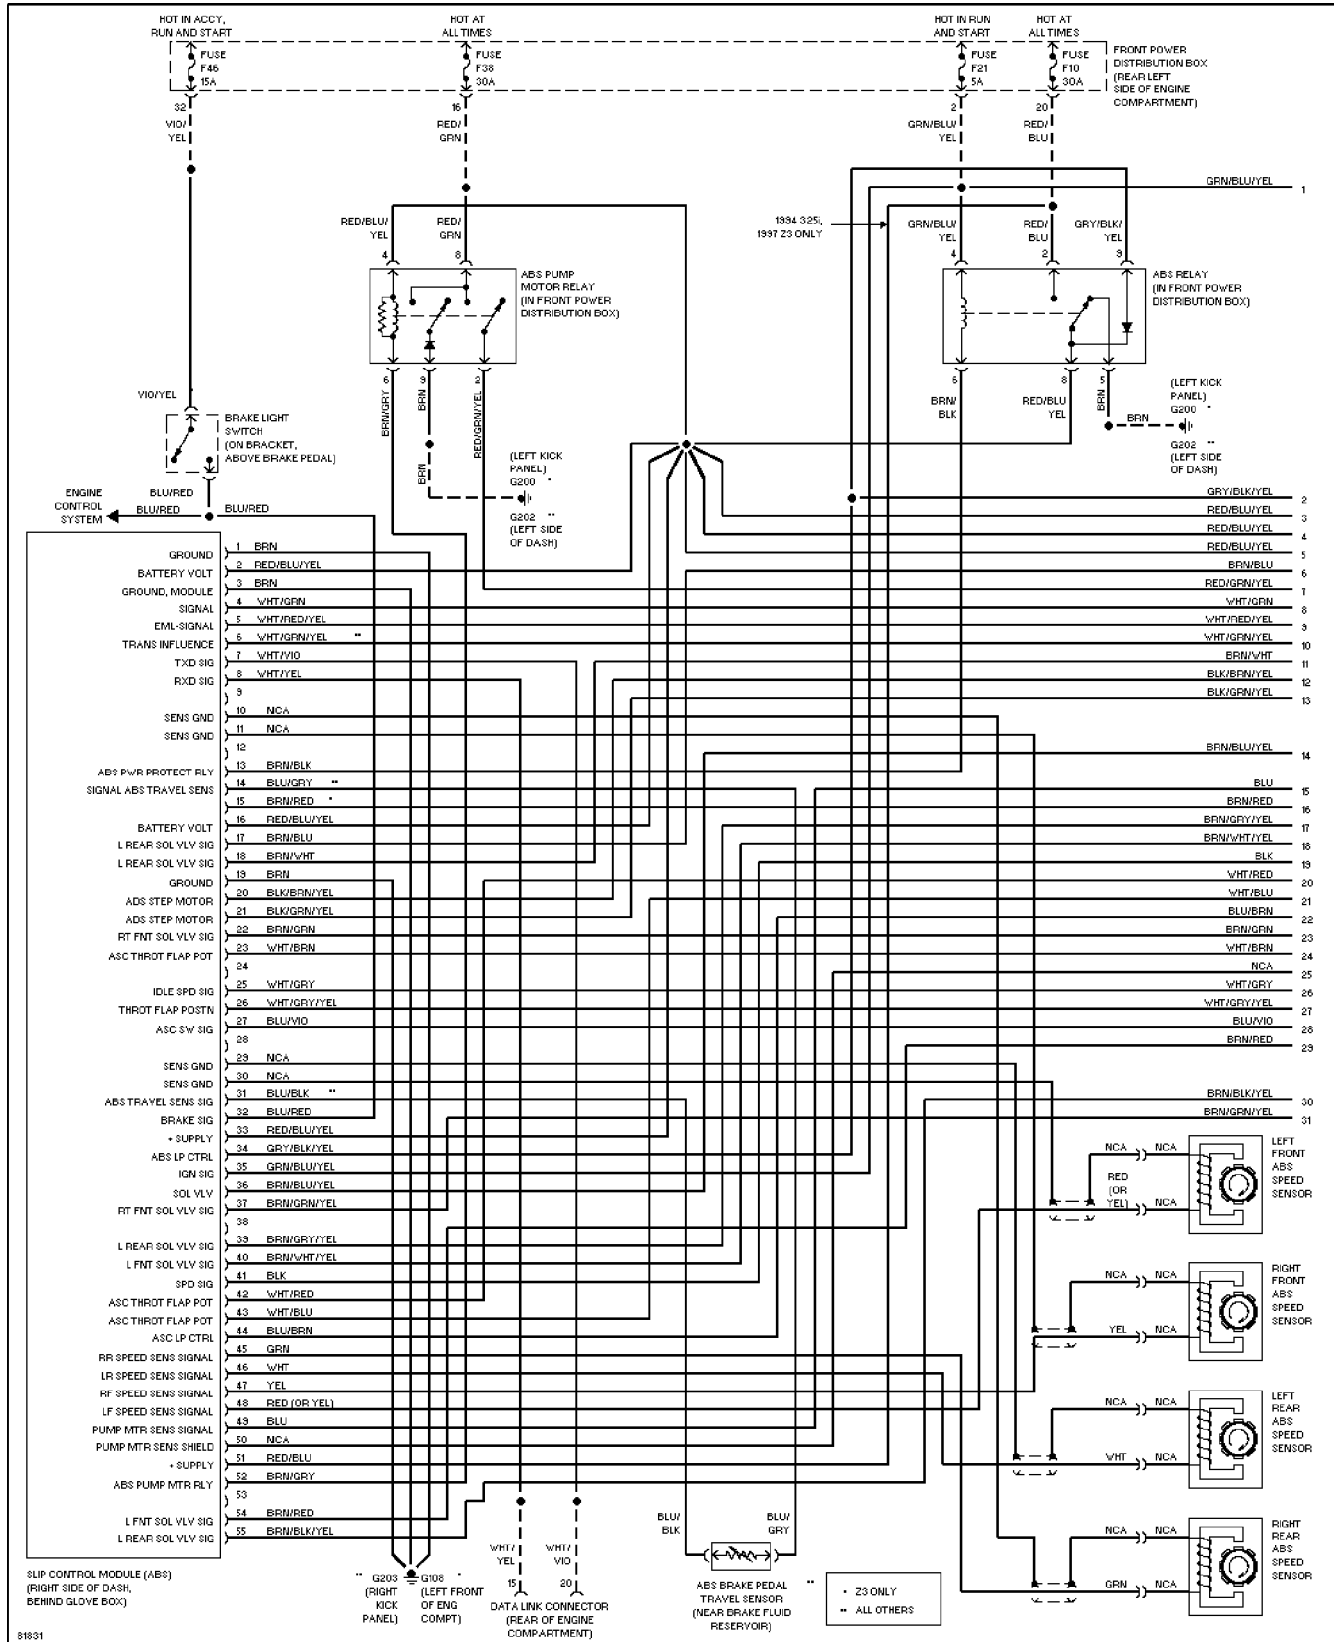

SYSTEM WIRING DIAGRAMS

Anti-lock Brake Circuits, W/ Traction Control (2 of 2)


1997 BMW 328i

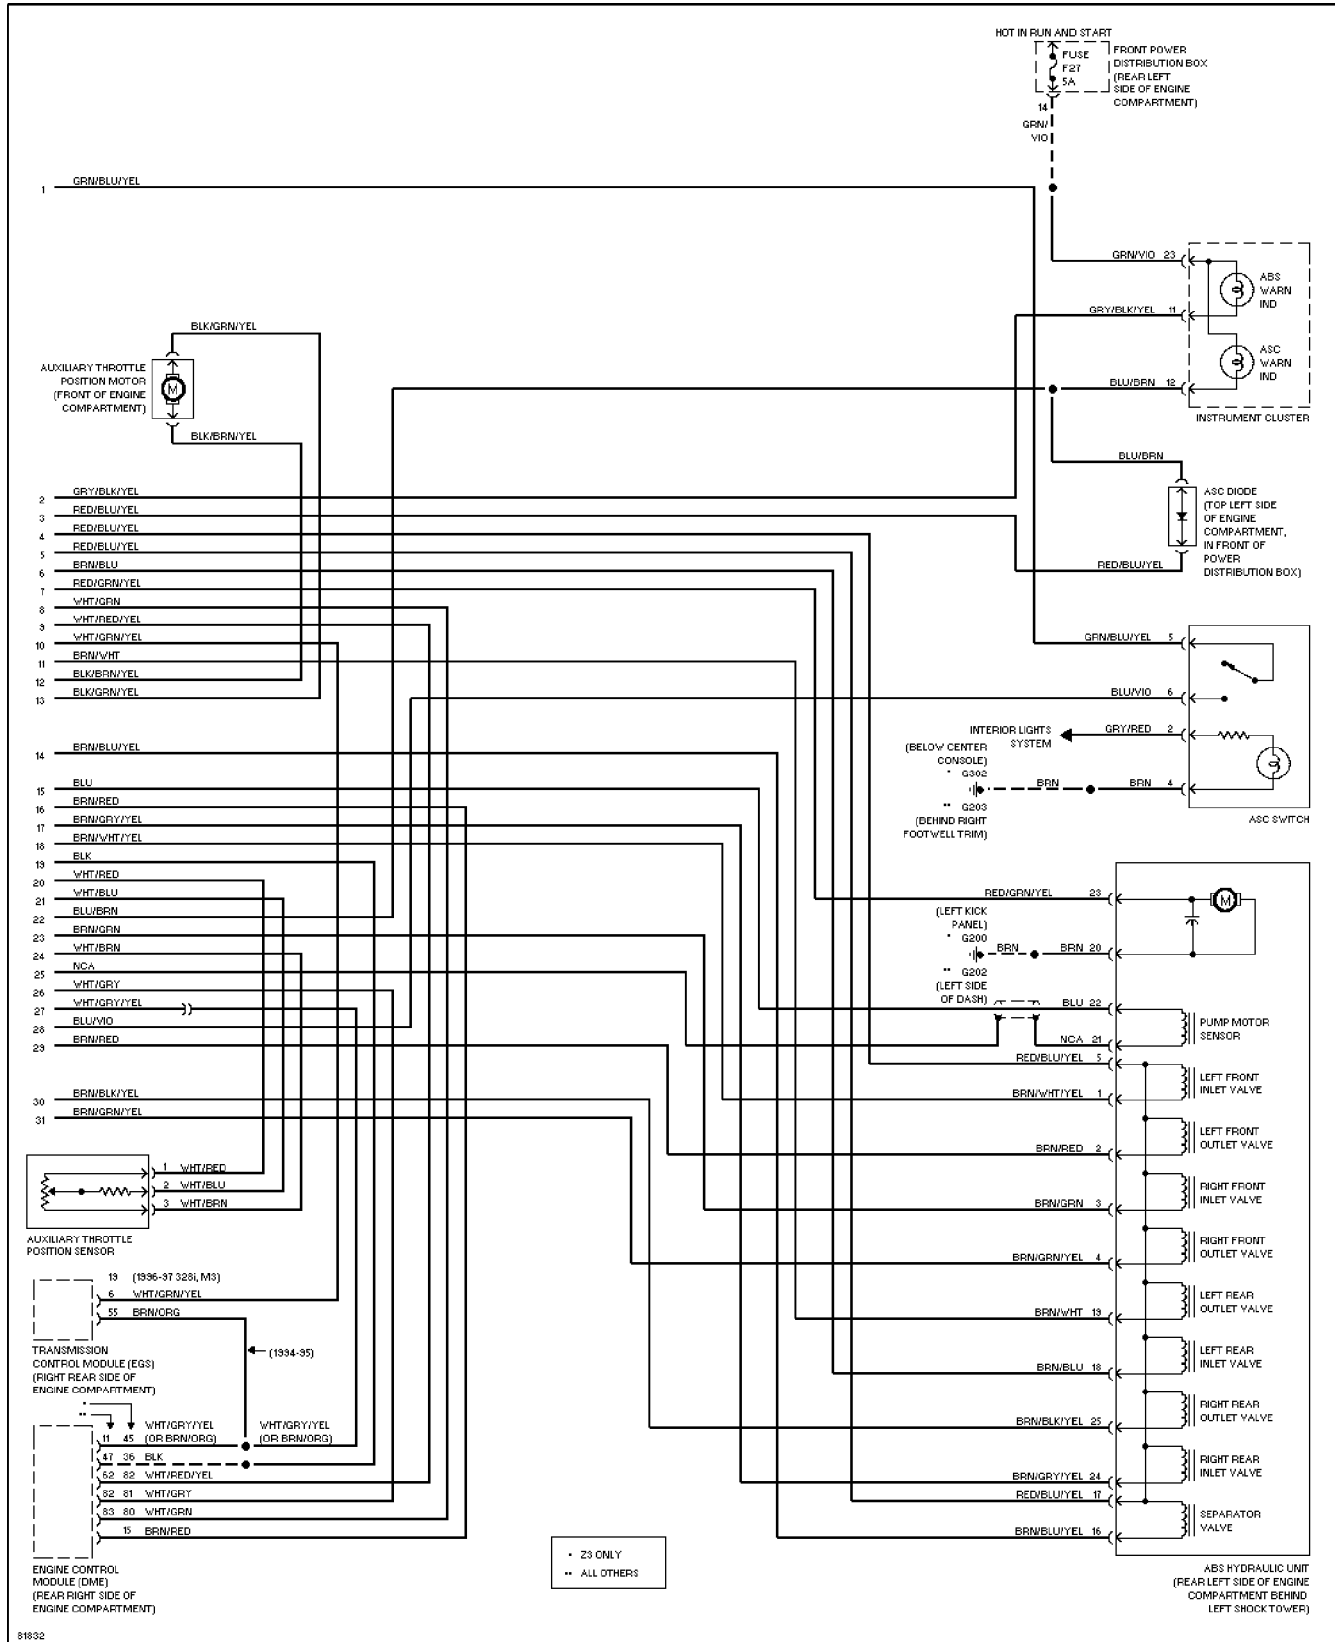

SYSTEM WIRING DIAGRAMS

Anti-lock Brake Circuits, W/O Traction Control


1997 BMW 328i

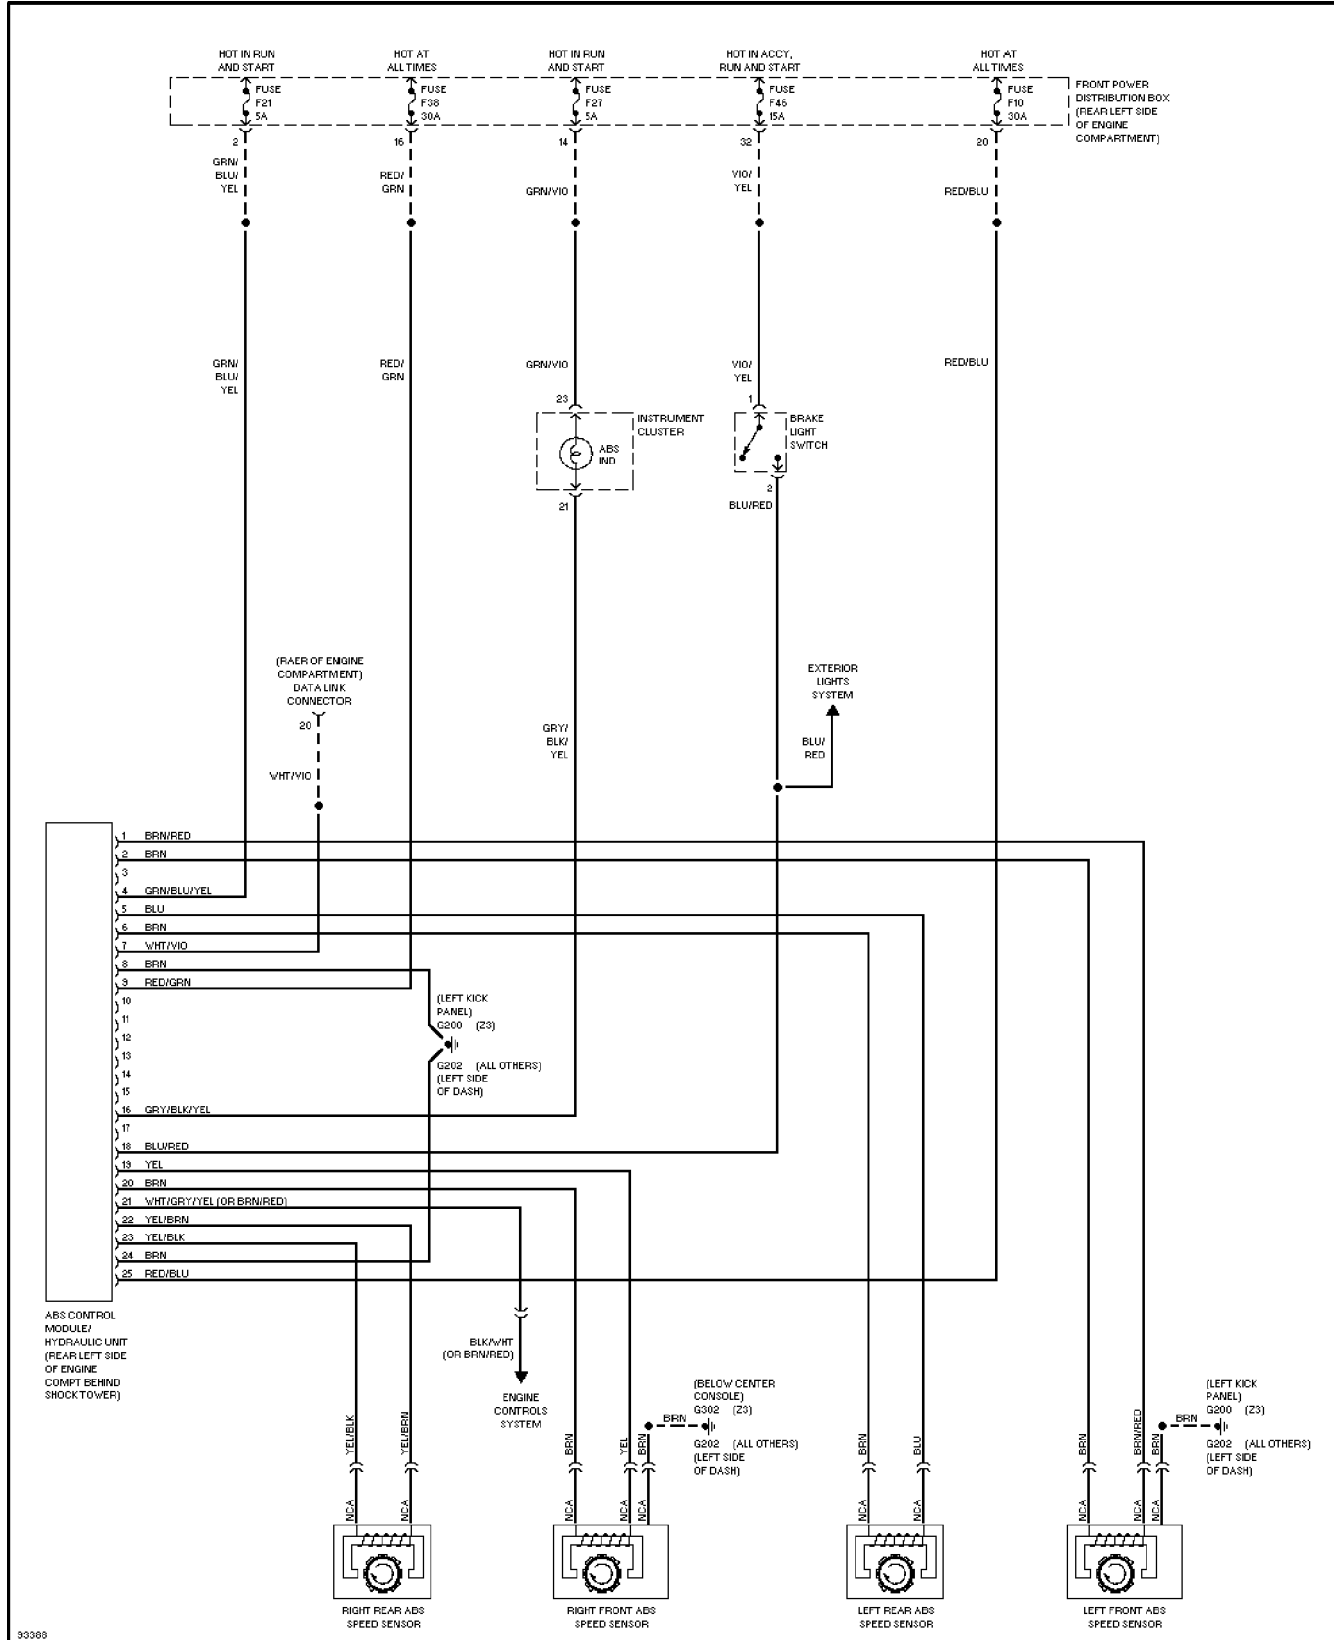

SYSTEM WIRING DIAGRAMS

Drive-Away Protection (EWS II)

1997 BMW 328i

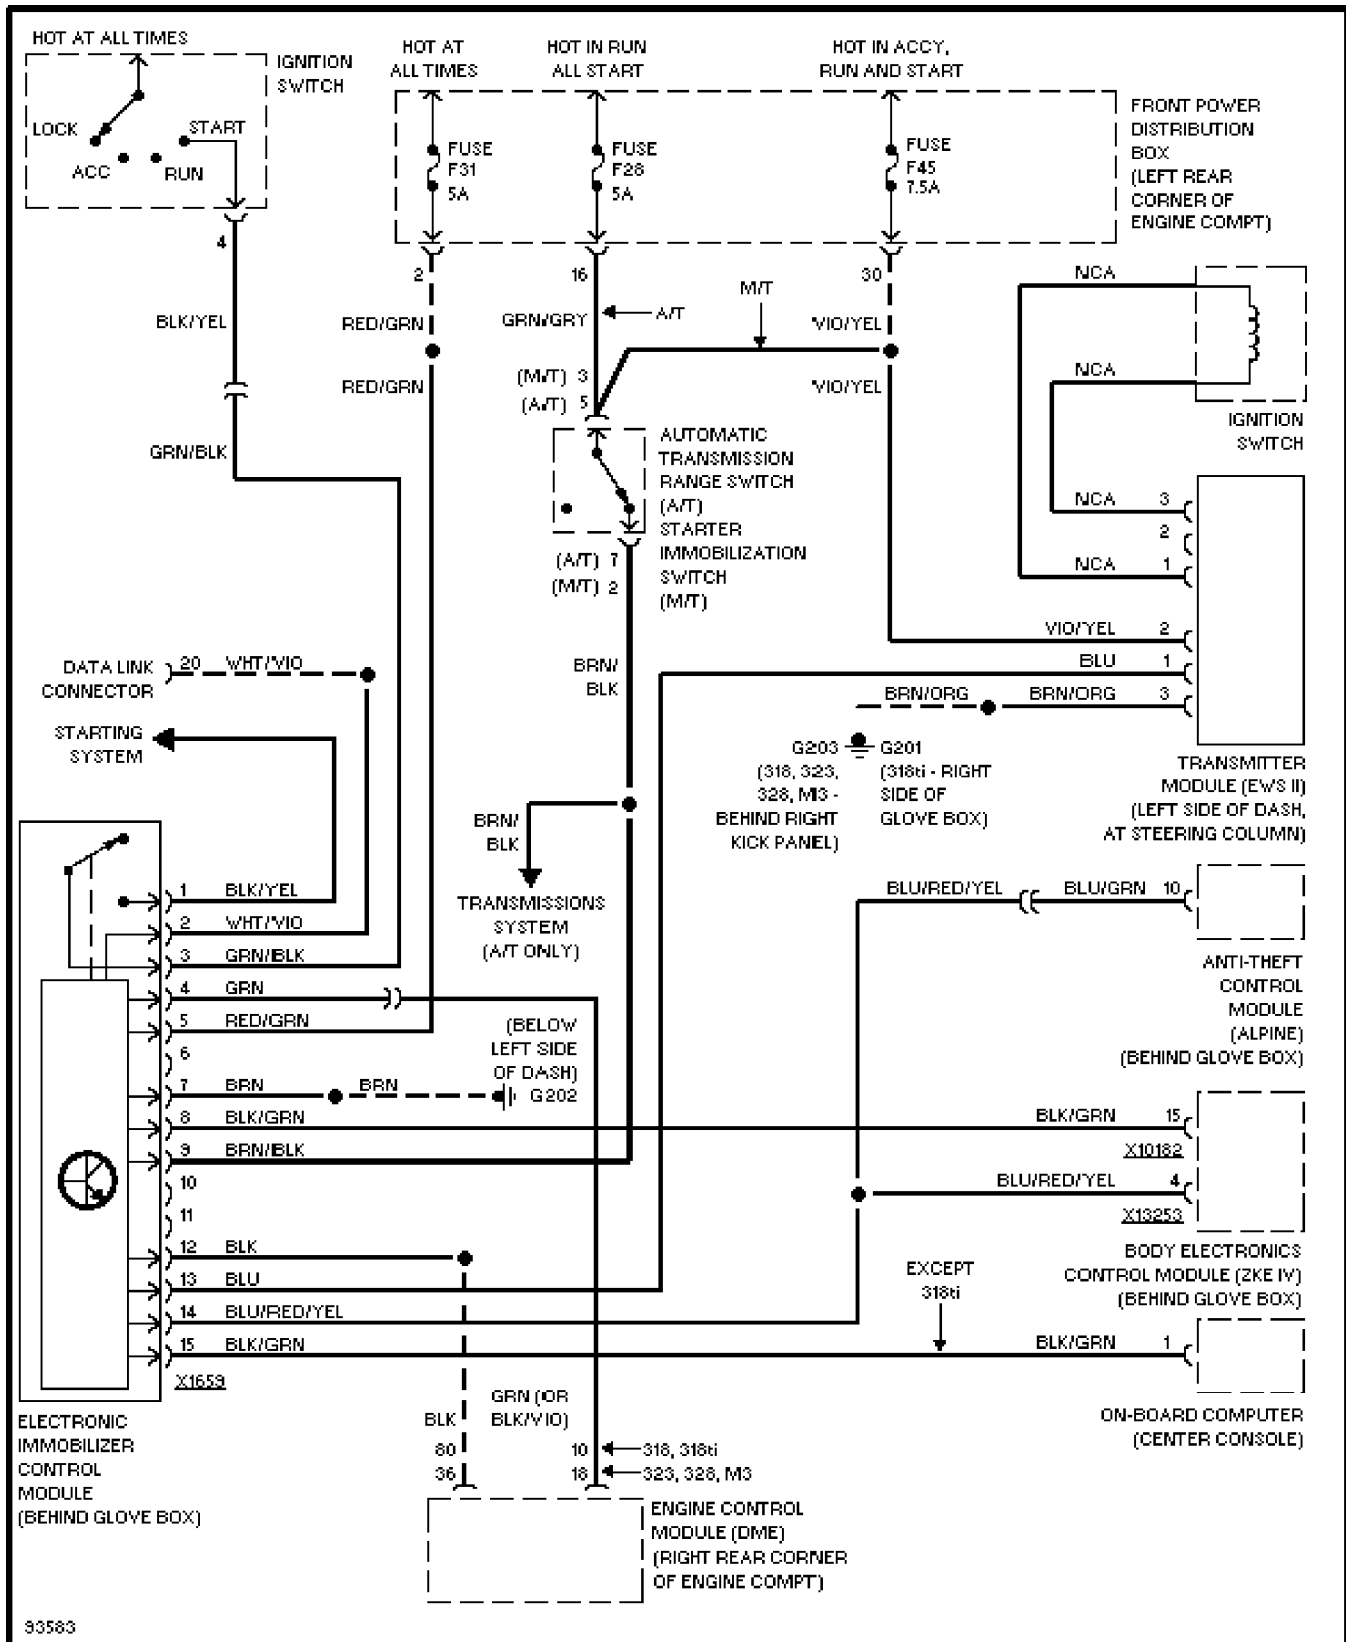


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Body Computer Module Circuit


1997 BMW 328i

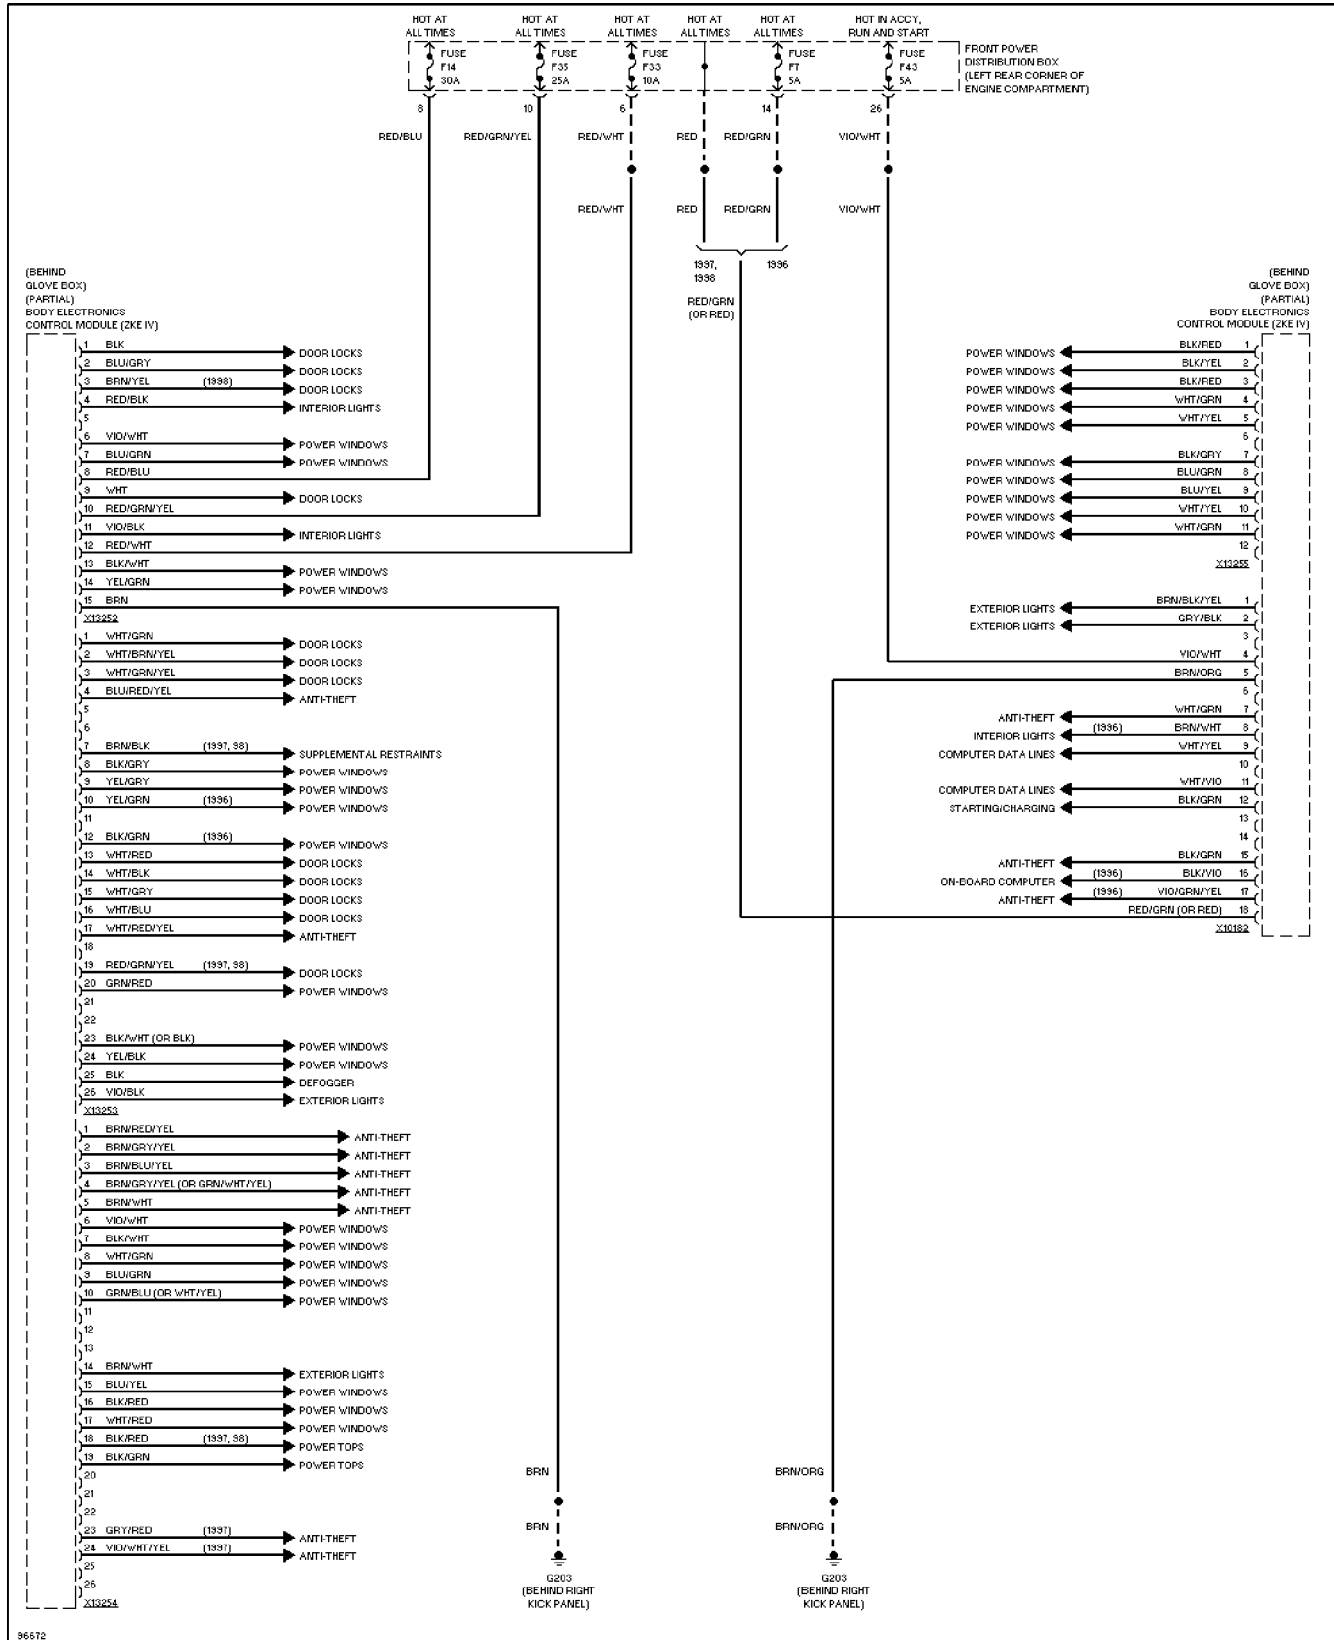

SYSTEM WIRING DIAGRAMS

On-Board Computer Circuit


1997 BMW 328i

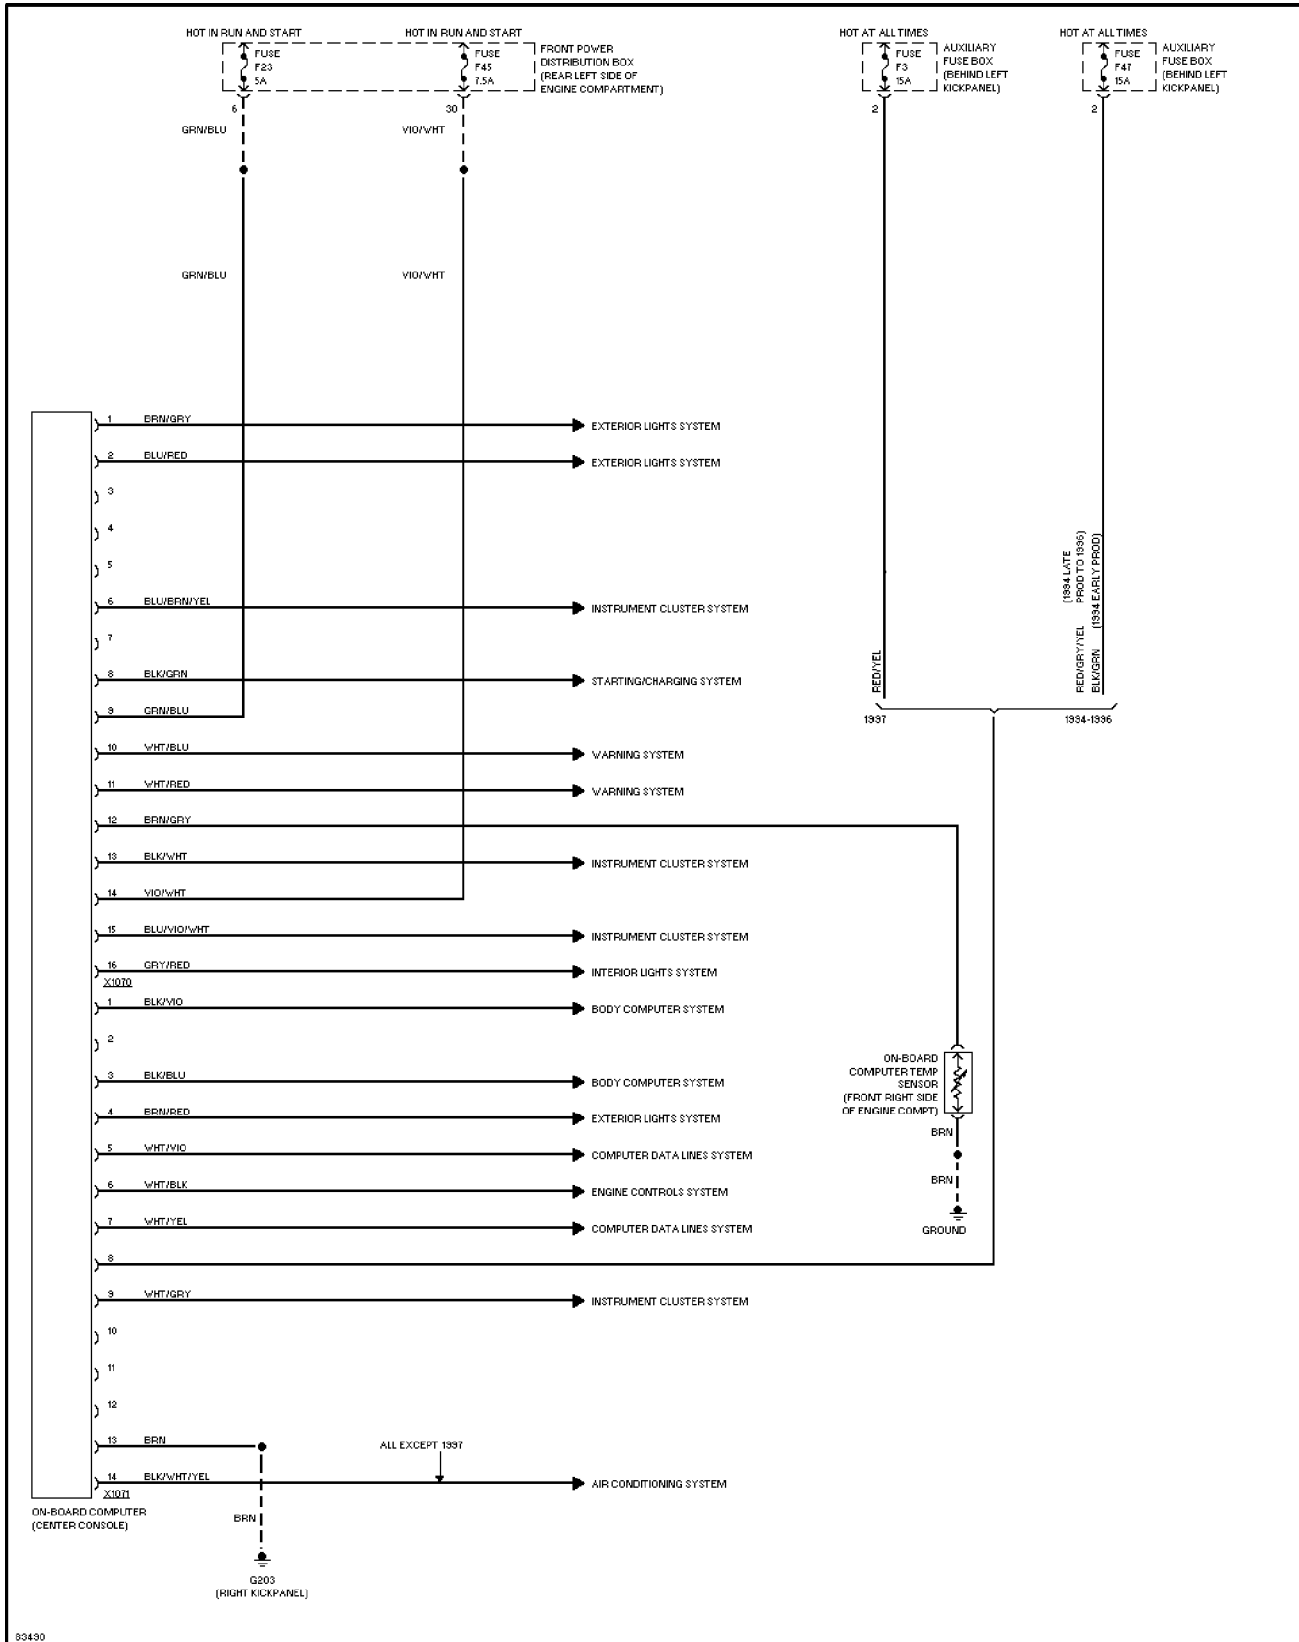

SYSTEM WIRING DIAGRAMS

Computer Data Lines


1997 BMW 328i

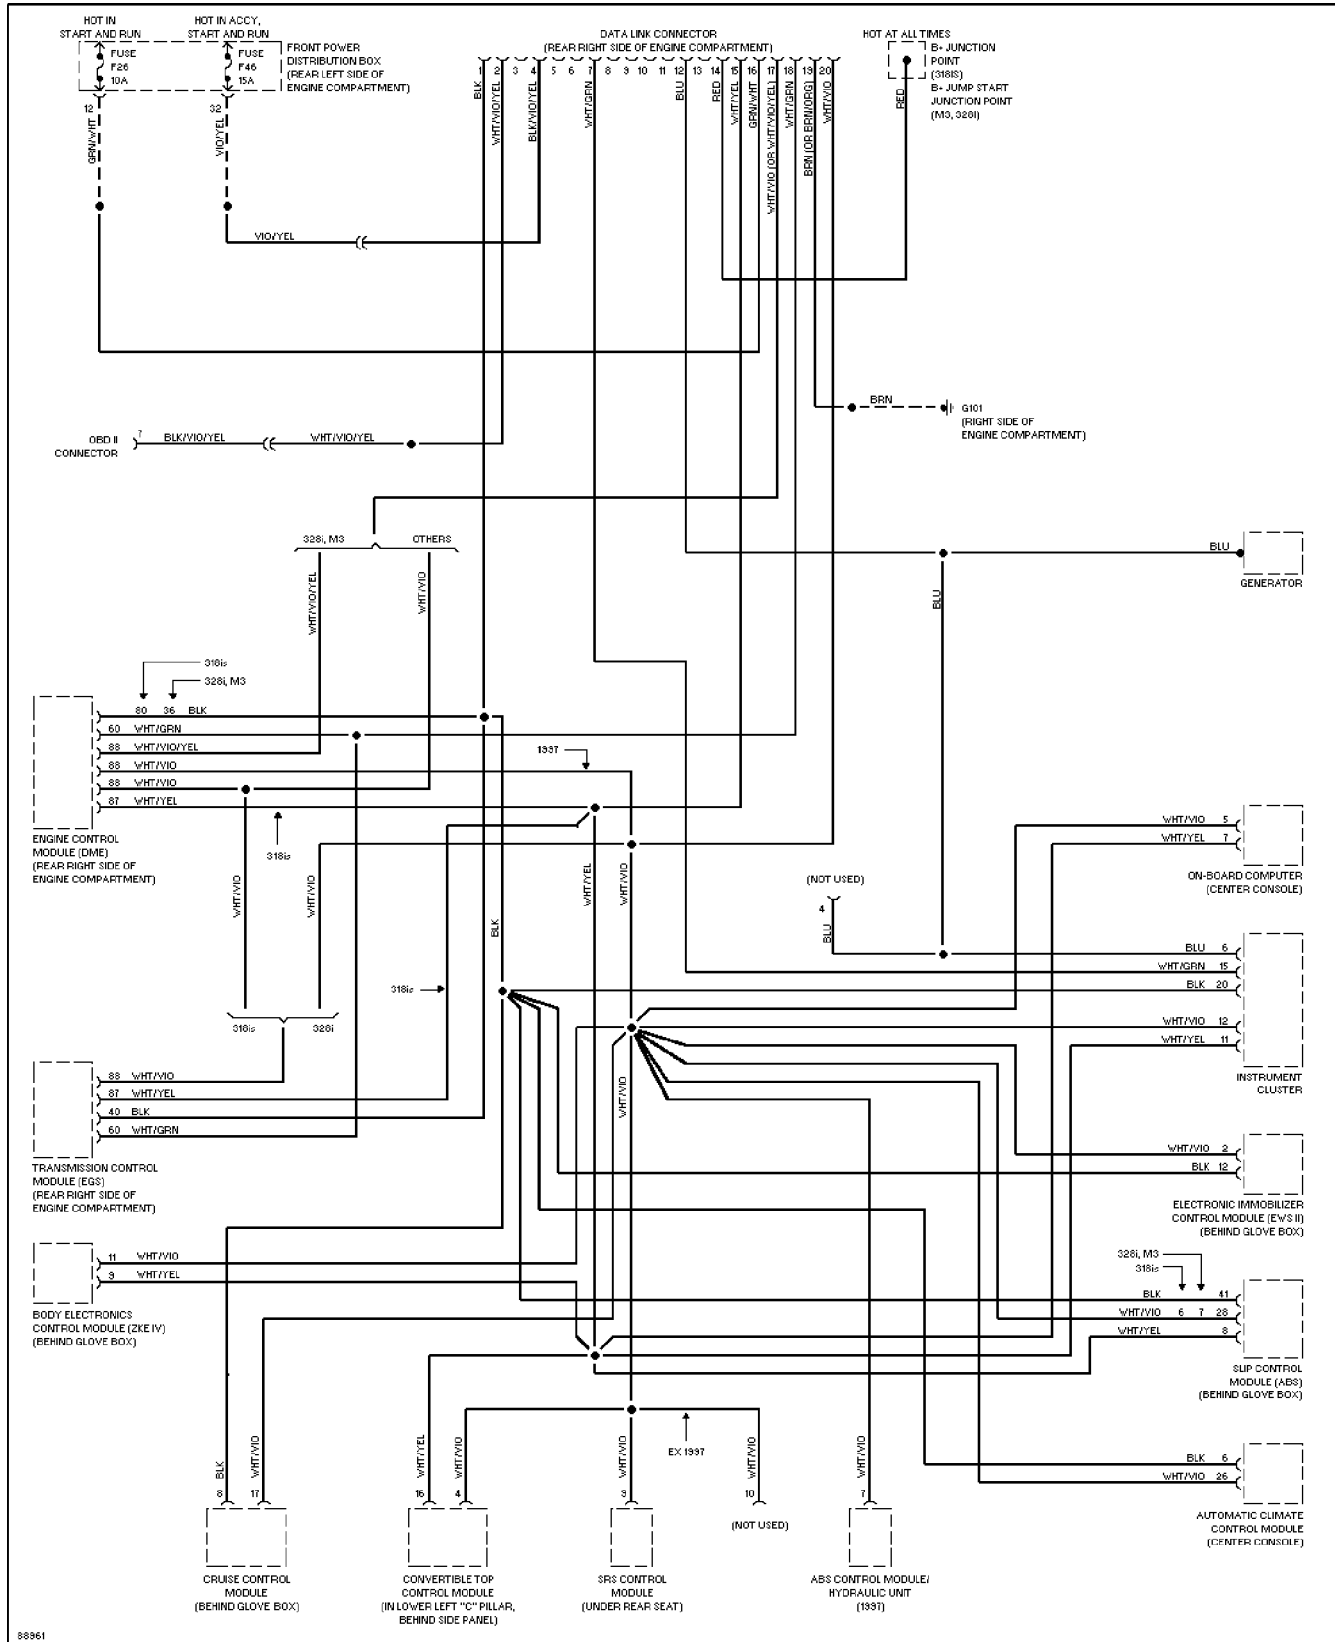

SYSTEM WIRING DIAGRAMS

Auxiliary Cooling Fan Circuit


1997 BMW 328i

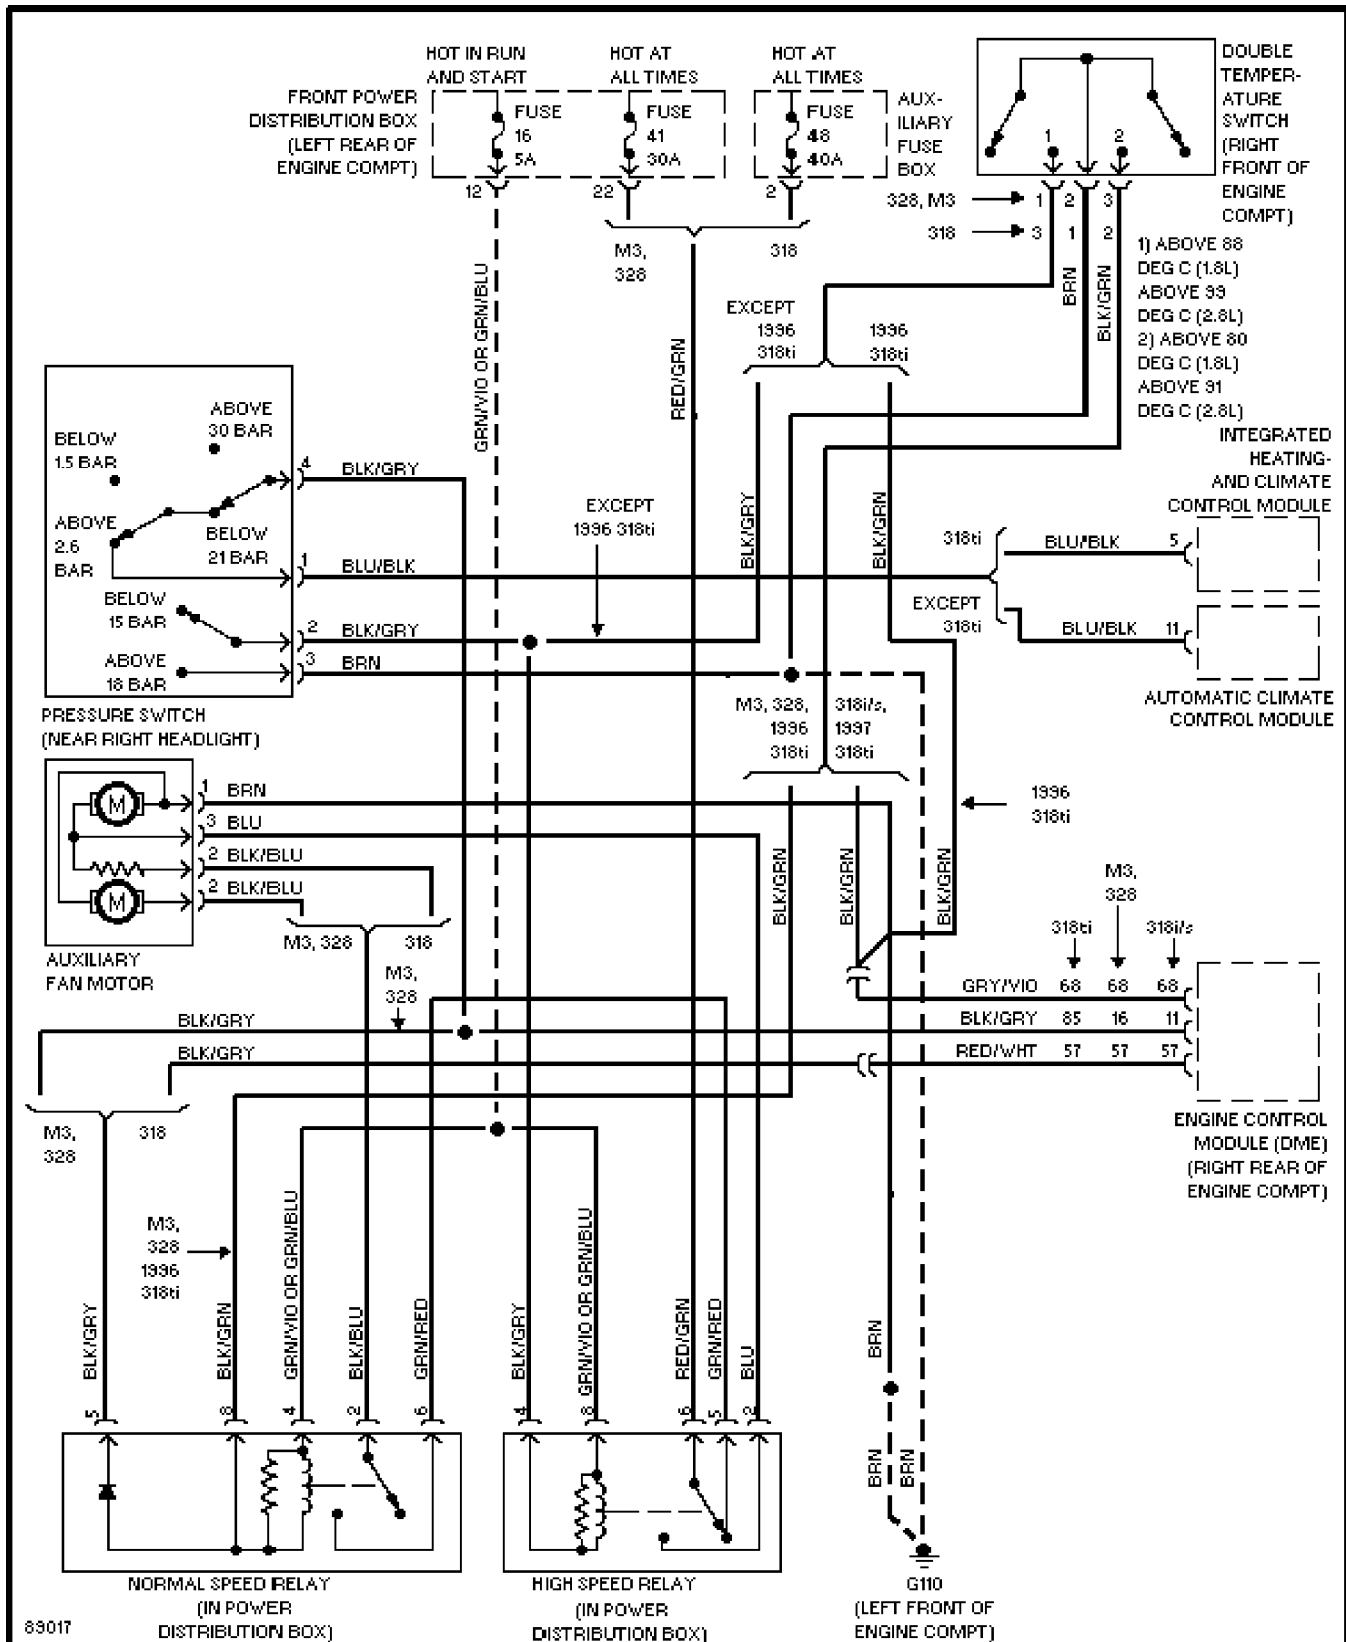

SYSTEM WIRING DIAGRAMS

Cruise Control Circuit


1997 BMW 328i

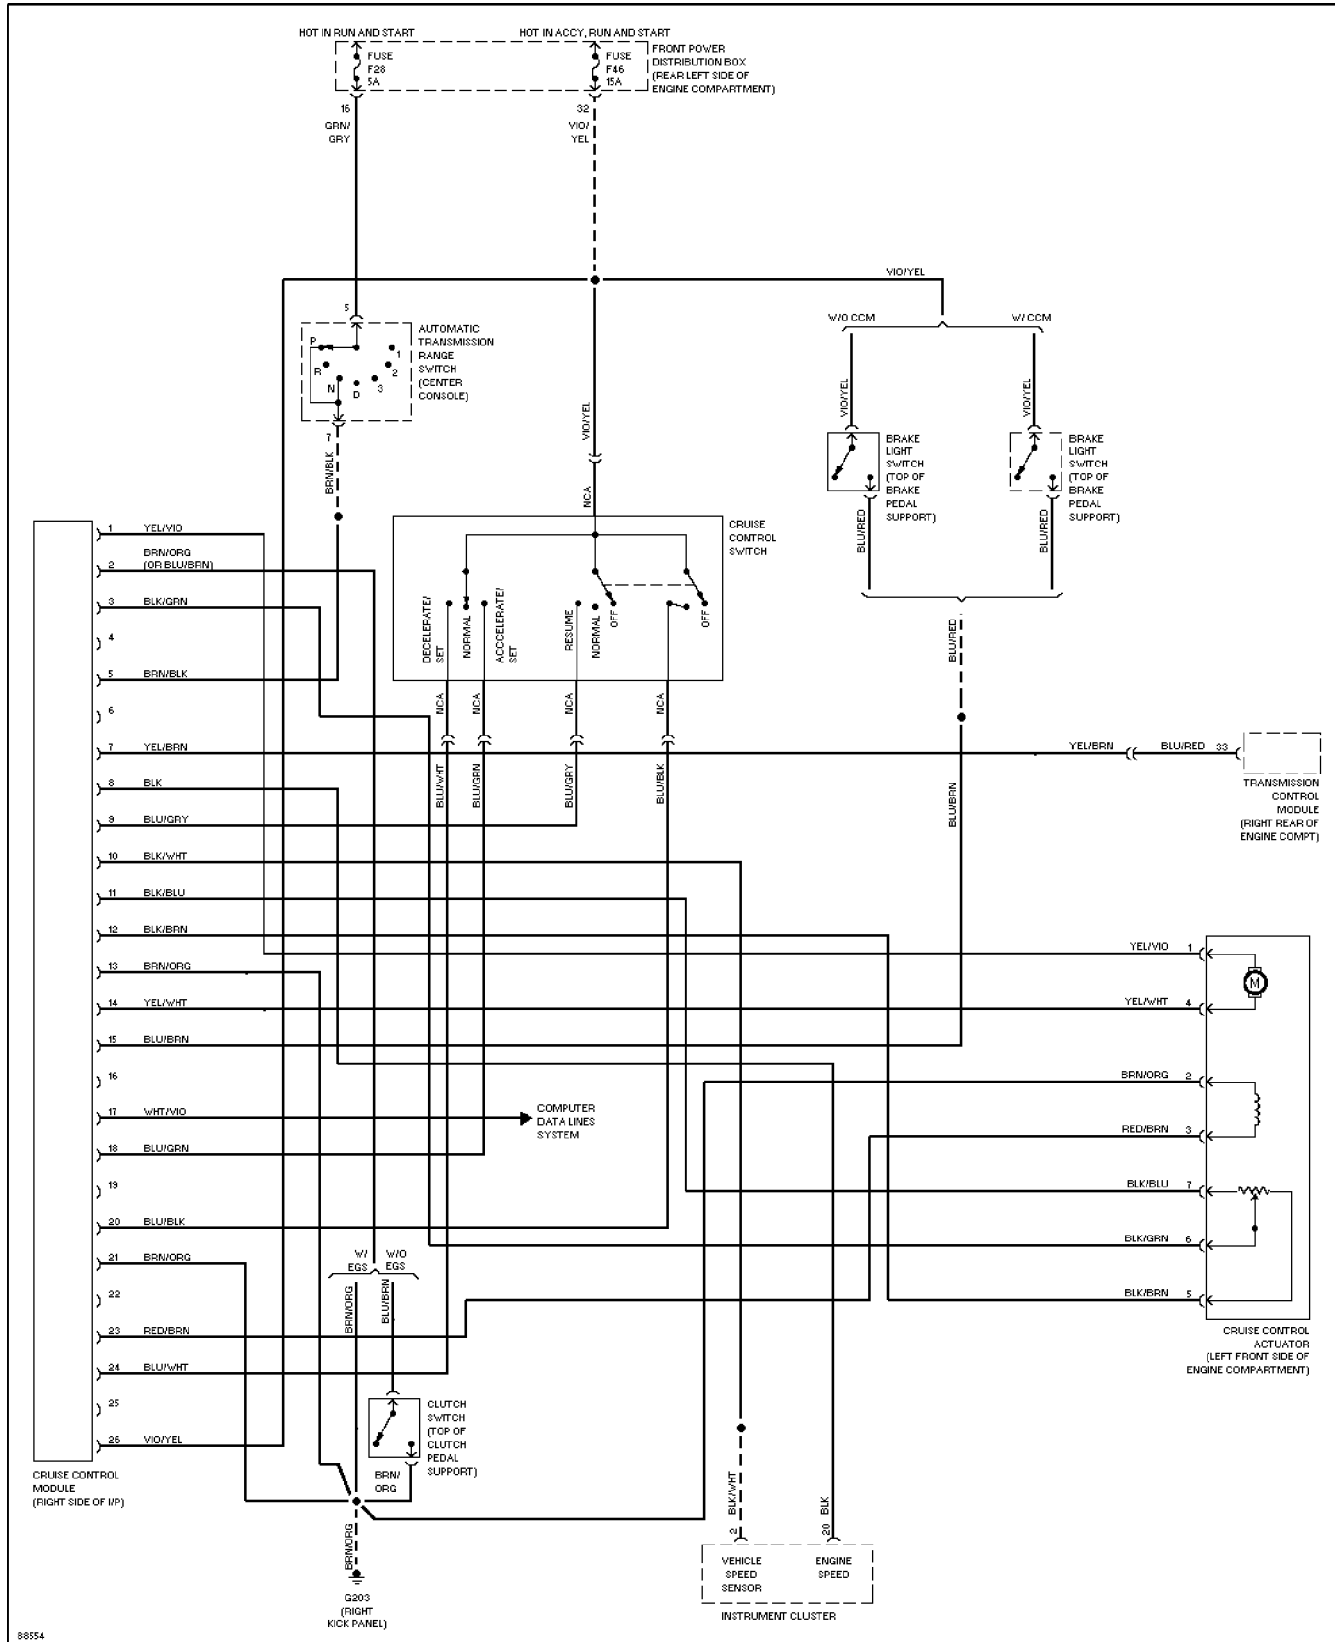

SYSTEM WIRING DIAGRAMS

Defogger Circuit


1997 BMW 328i

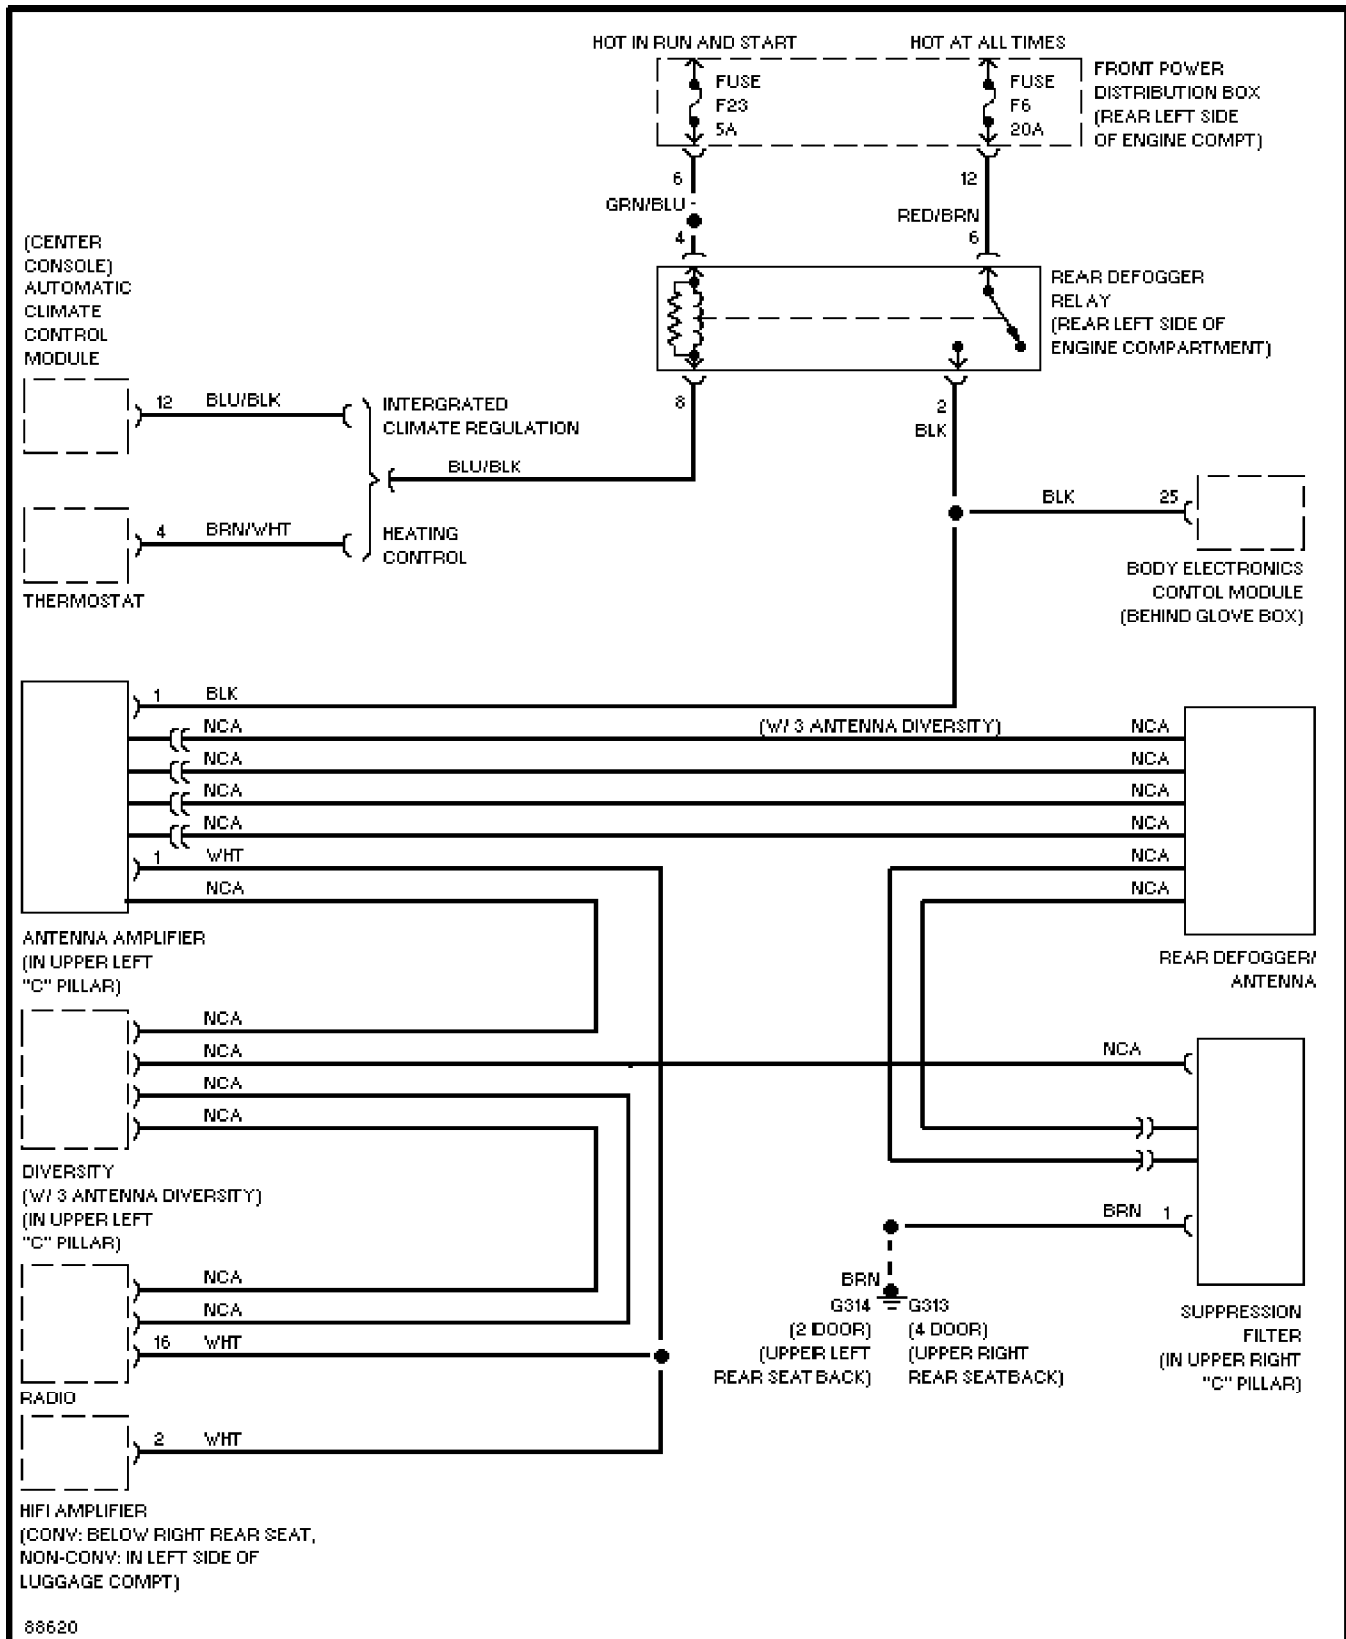

SYSTEM WIRING DIAGRAMS

2.8L, Engine Performance Circuits (1 of 2)


1997 BMW 328i

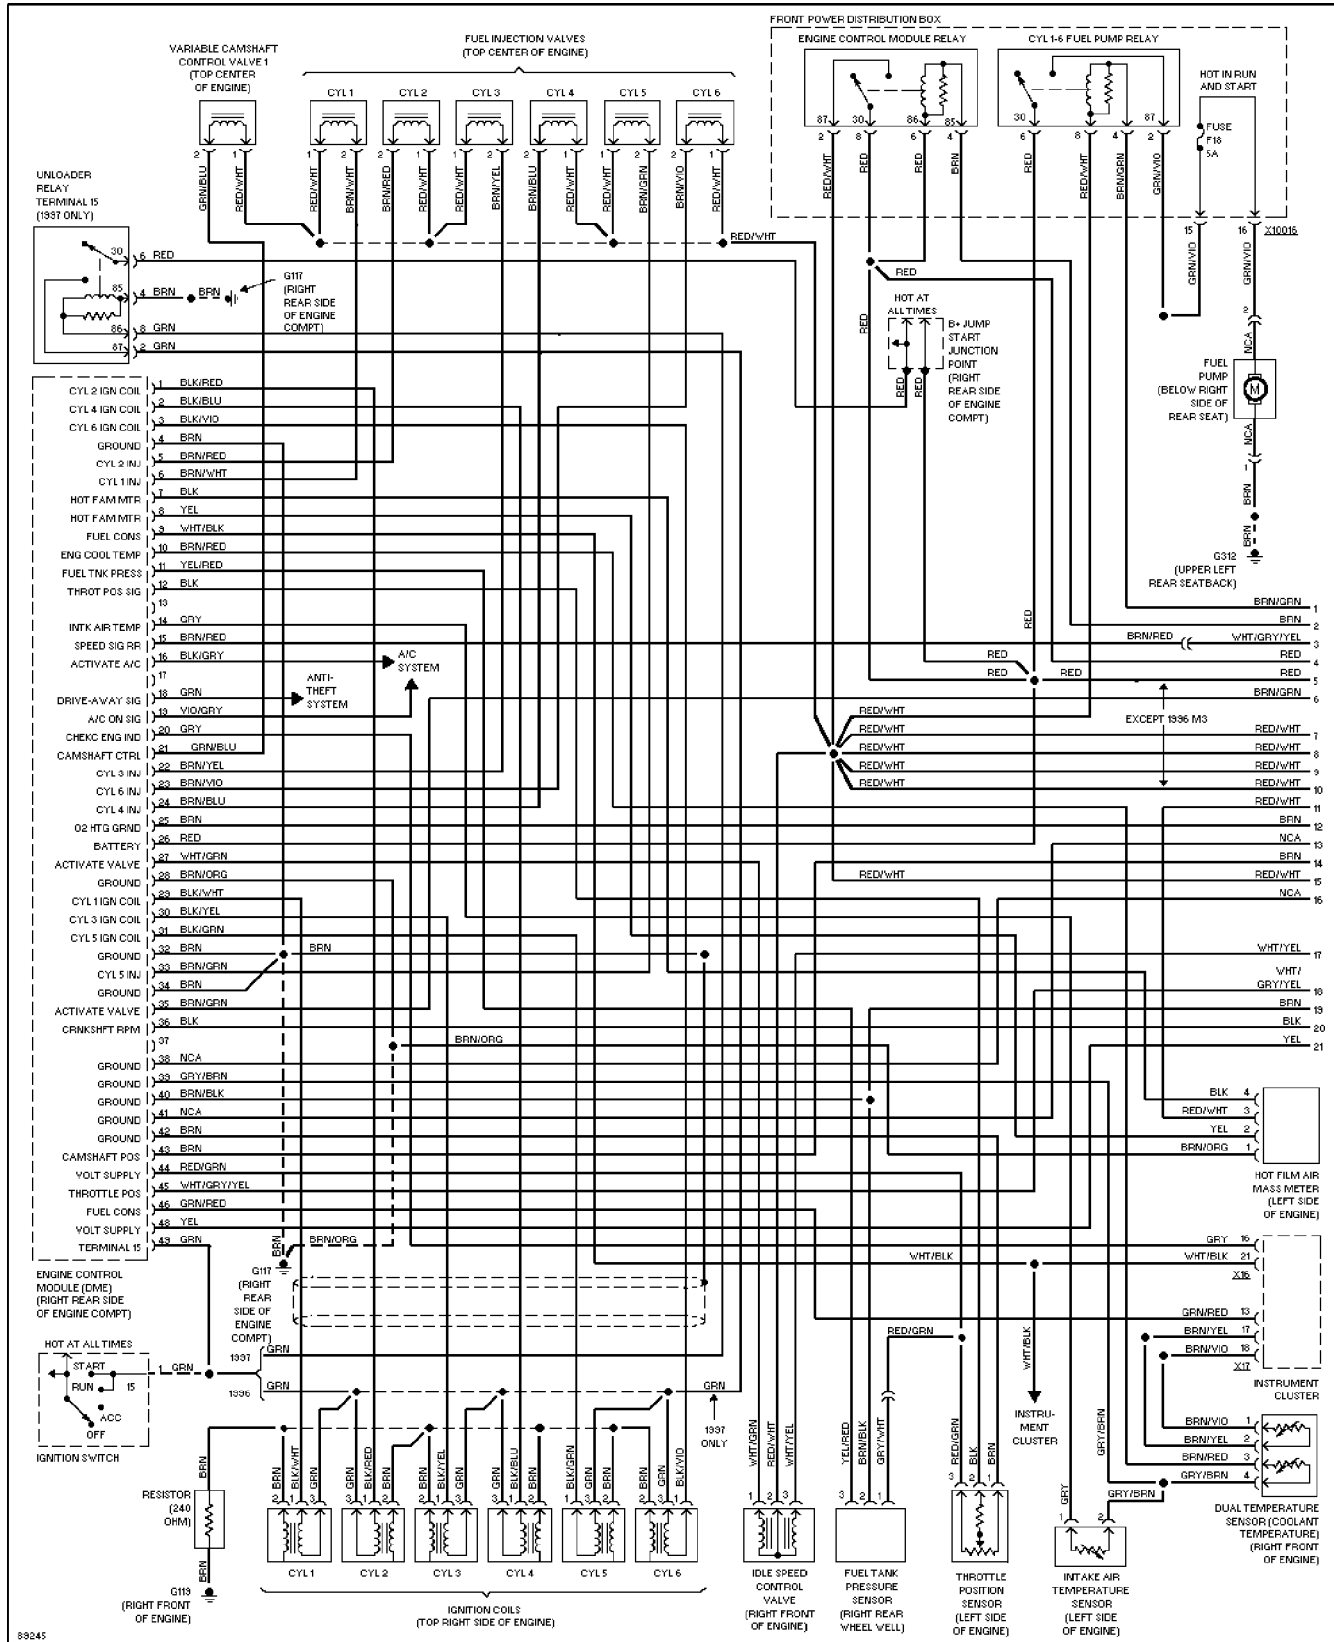

SYSTEM WIRING DIAGRAMS

2.8L, Engine Performance Circuits (2 of 2)

1997 BMW 328i

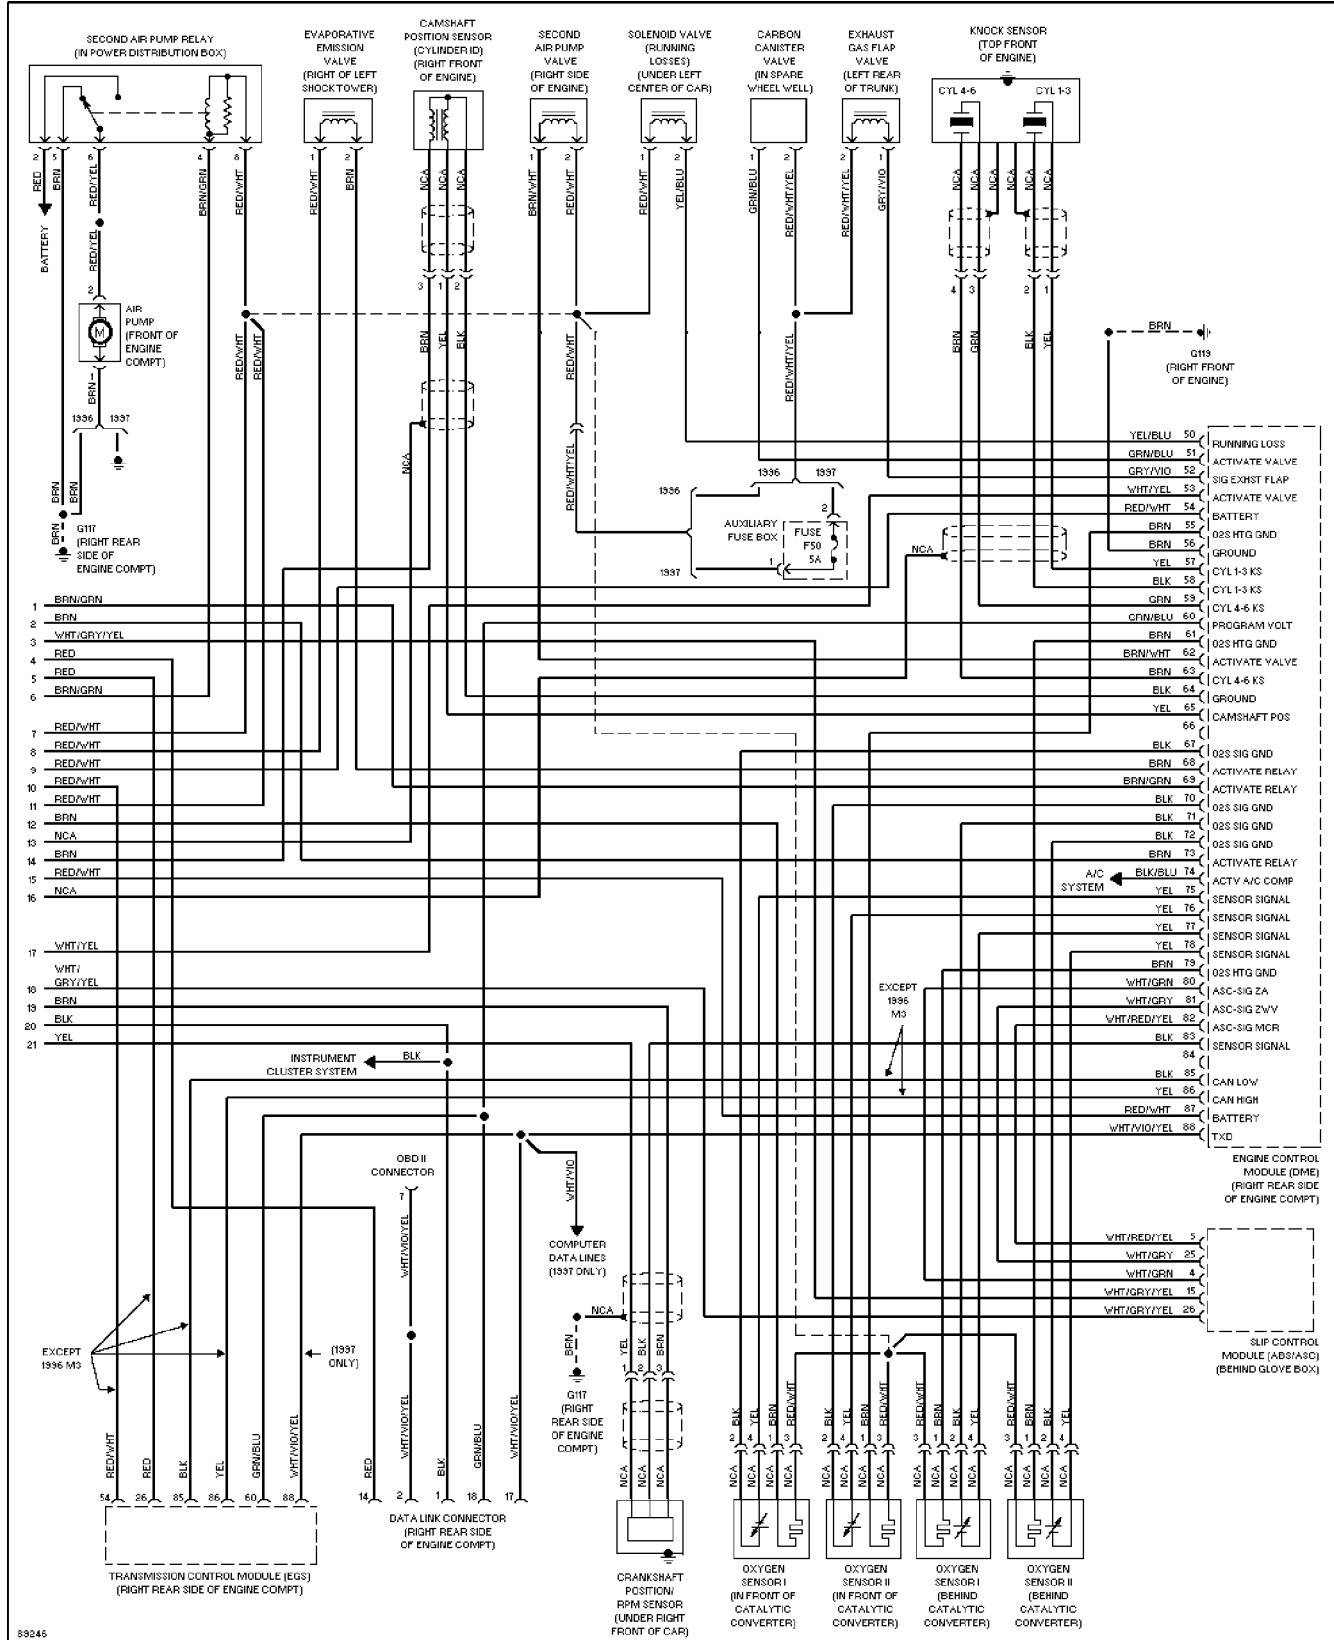

1997 BMW 328i



1997 BMW 328i




1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Exterior Light Circuit (3 of 3)


1997 BMW 328i

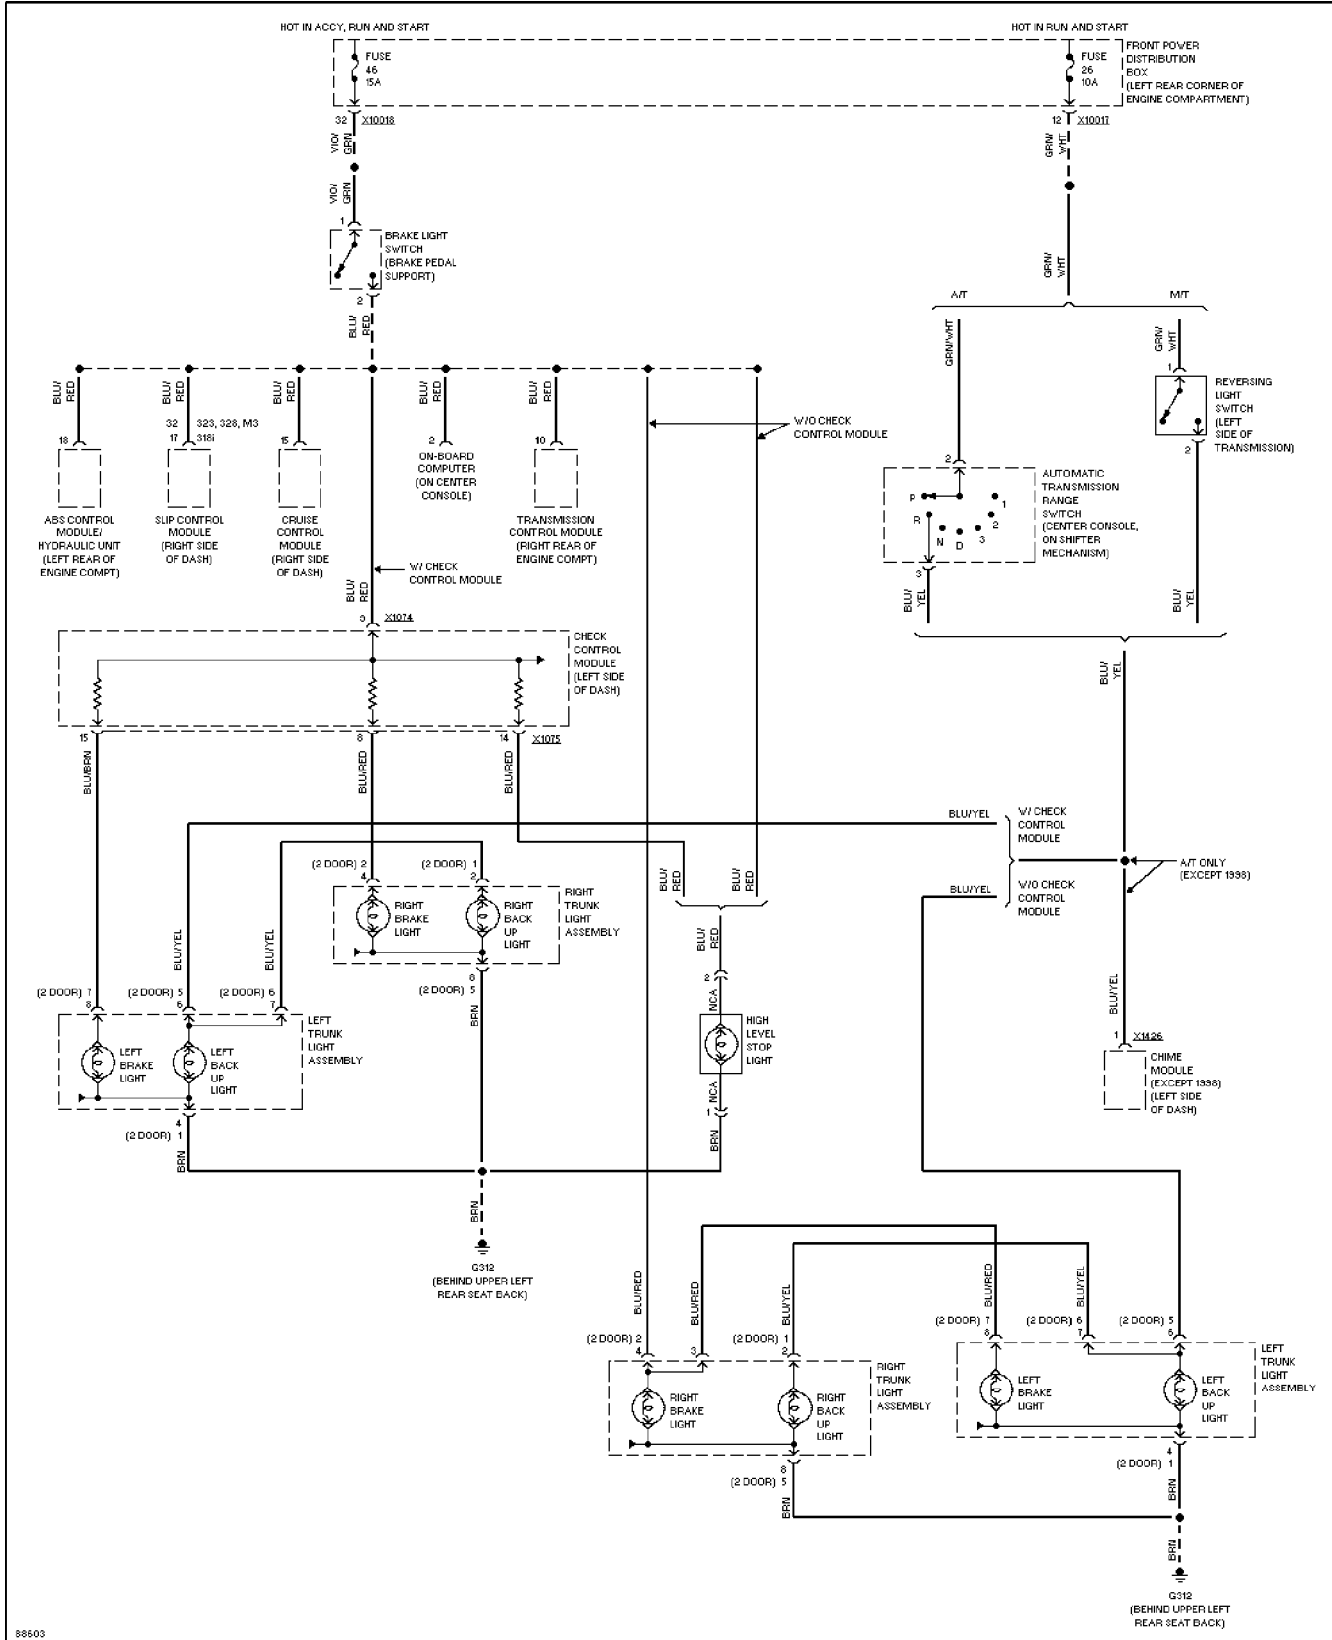

SYSTEM WIRING DIAGRAMS

Ground Distribution Circuit (1 of 5)


1997 BMW 328i

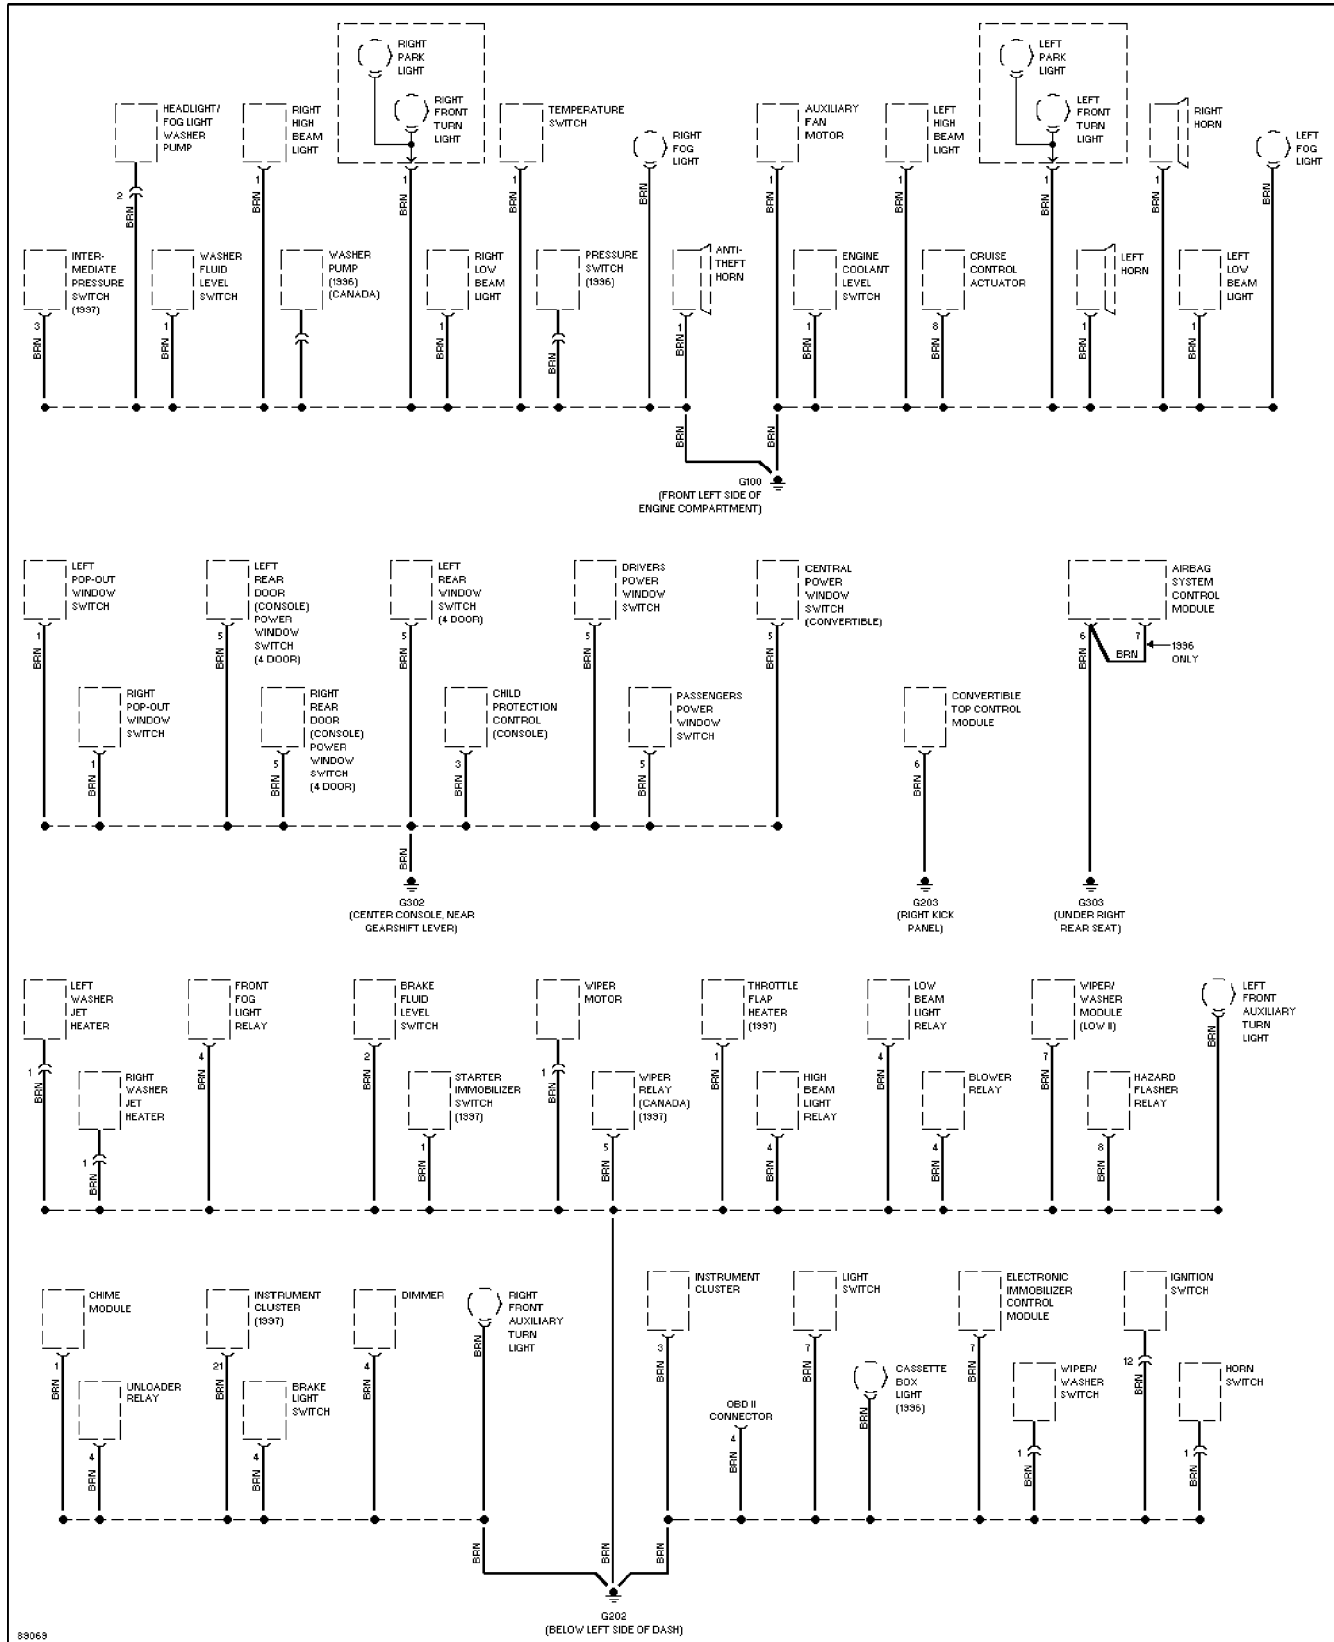

SYSTEM WIRING DIAGRAMS

Ground Distribution Circuit (2 of 5)

1997 BMW 328i

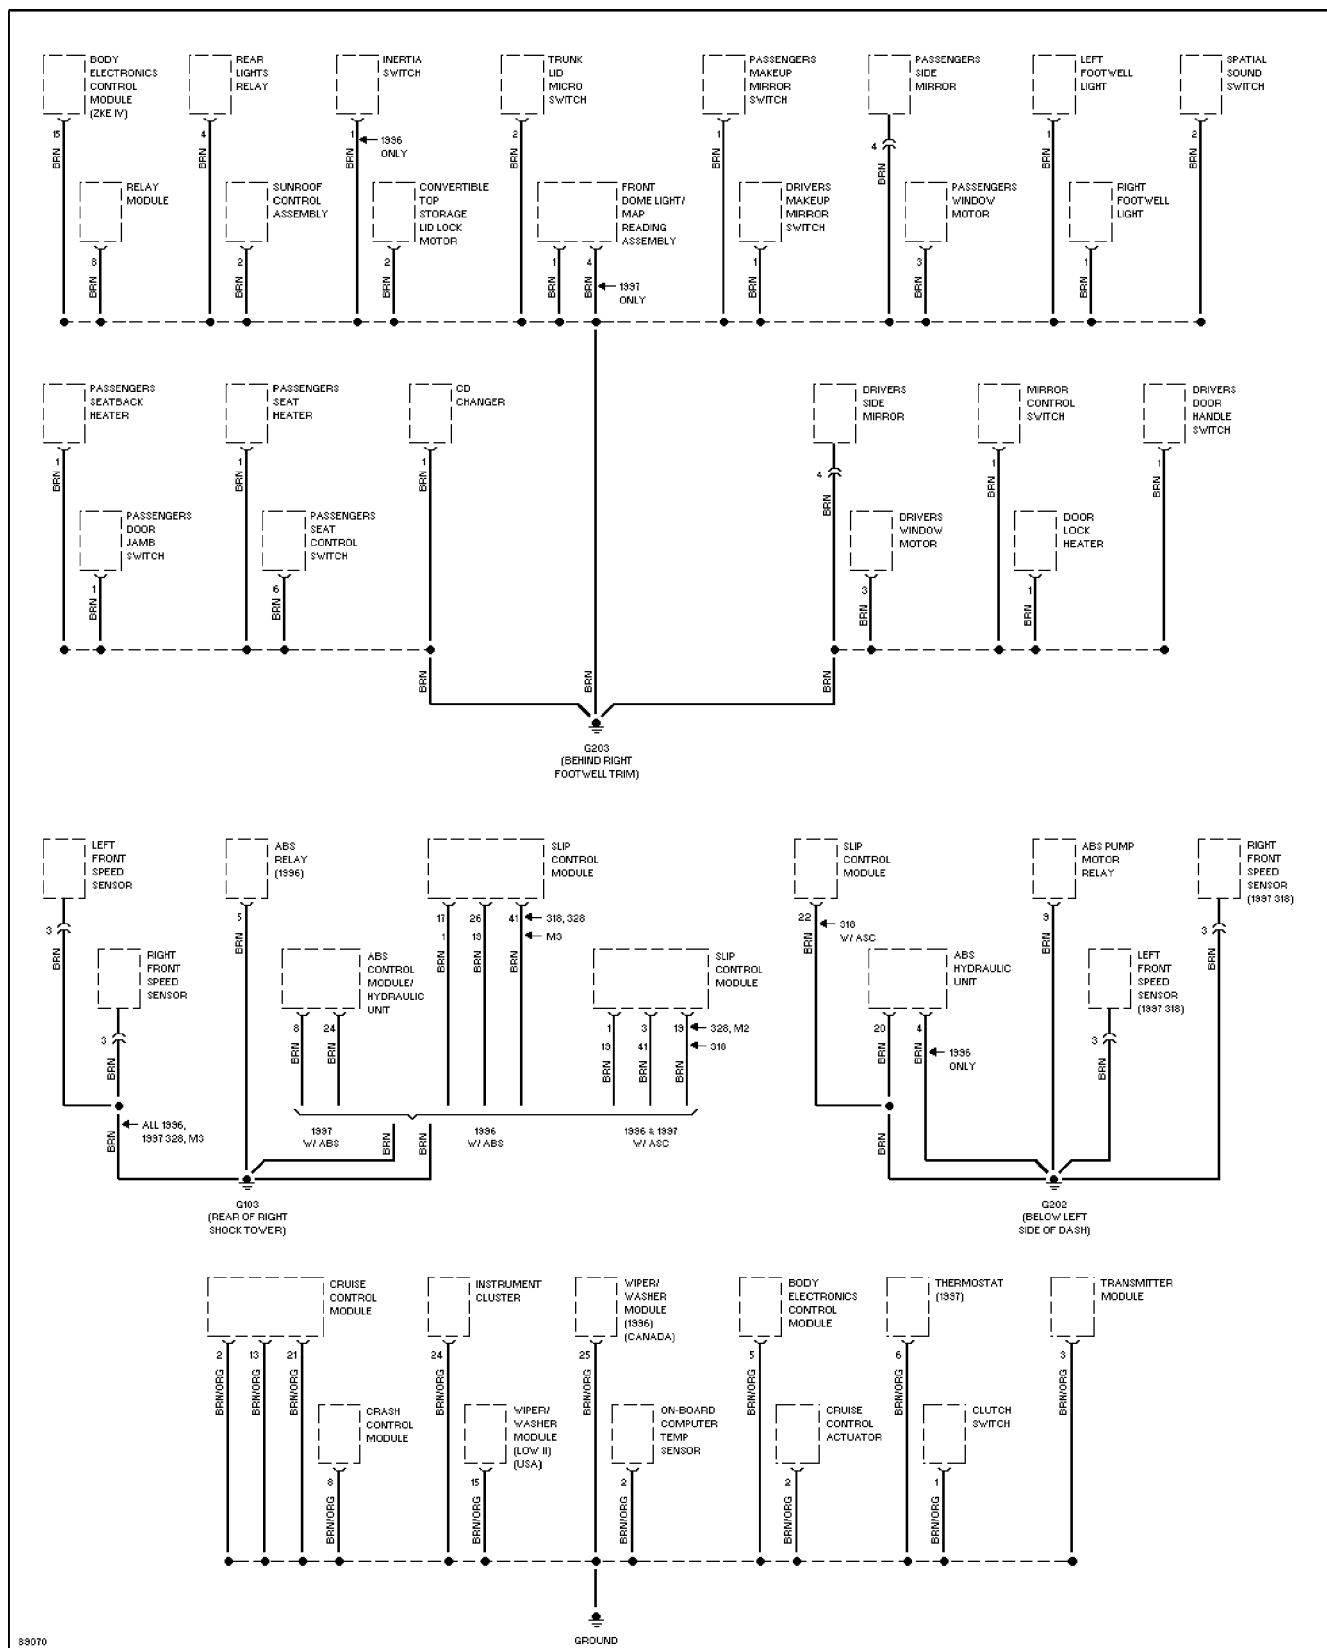

1997 BMW 328i



1997 BMW 328i




1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Headlight Circuit (1 of 2)


1997 BMW 328i

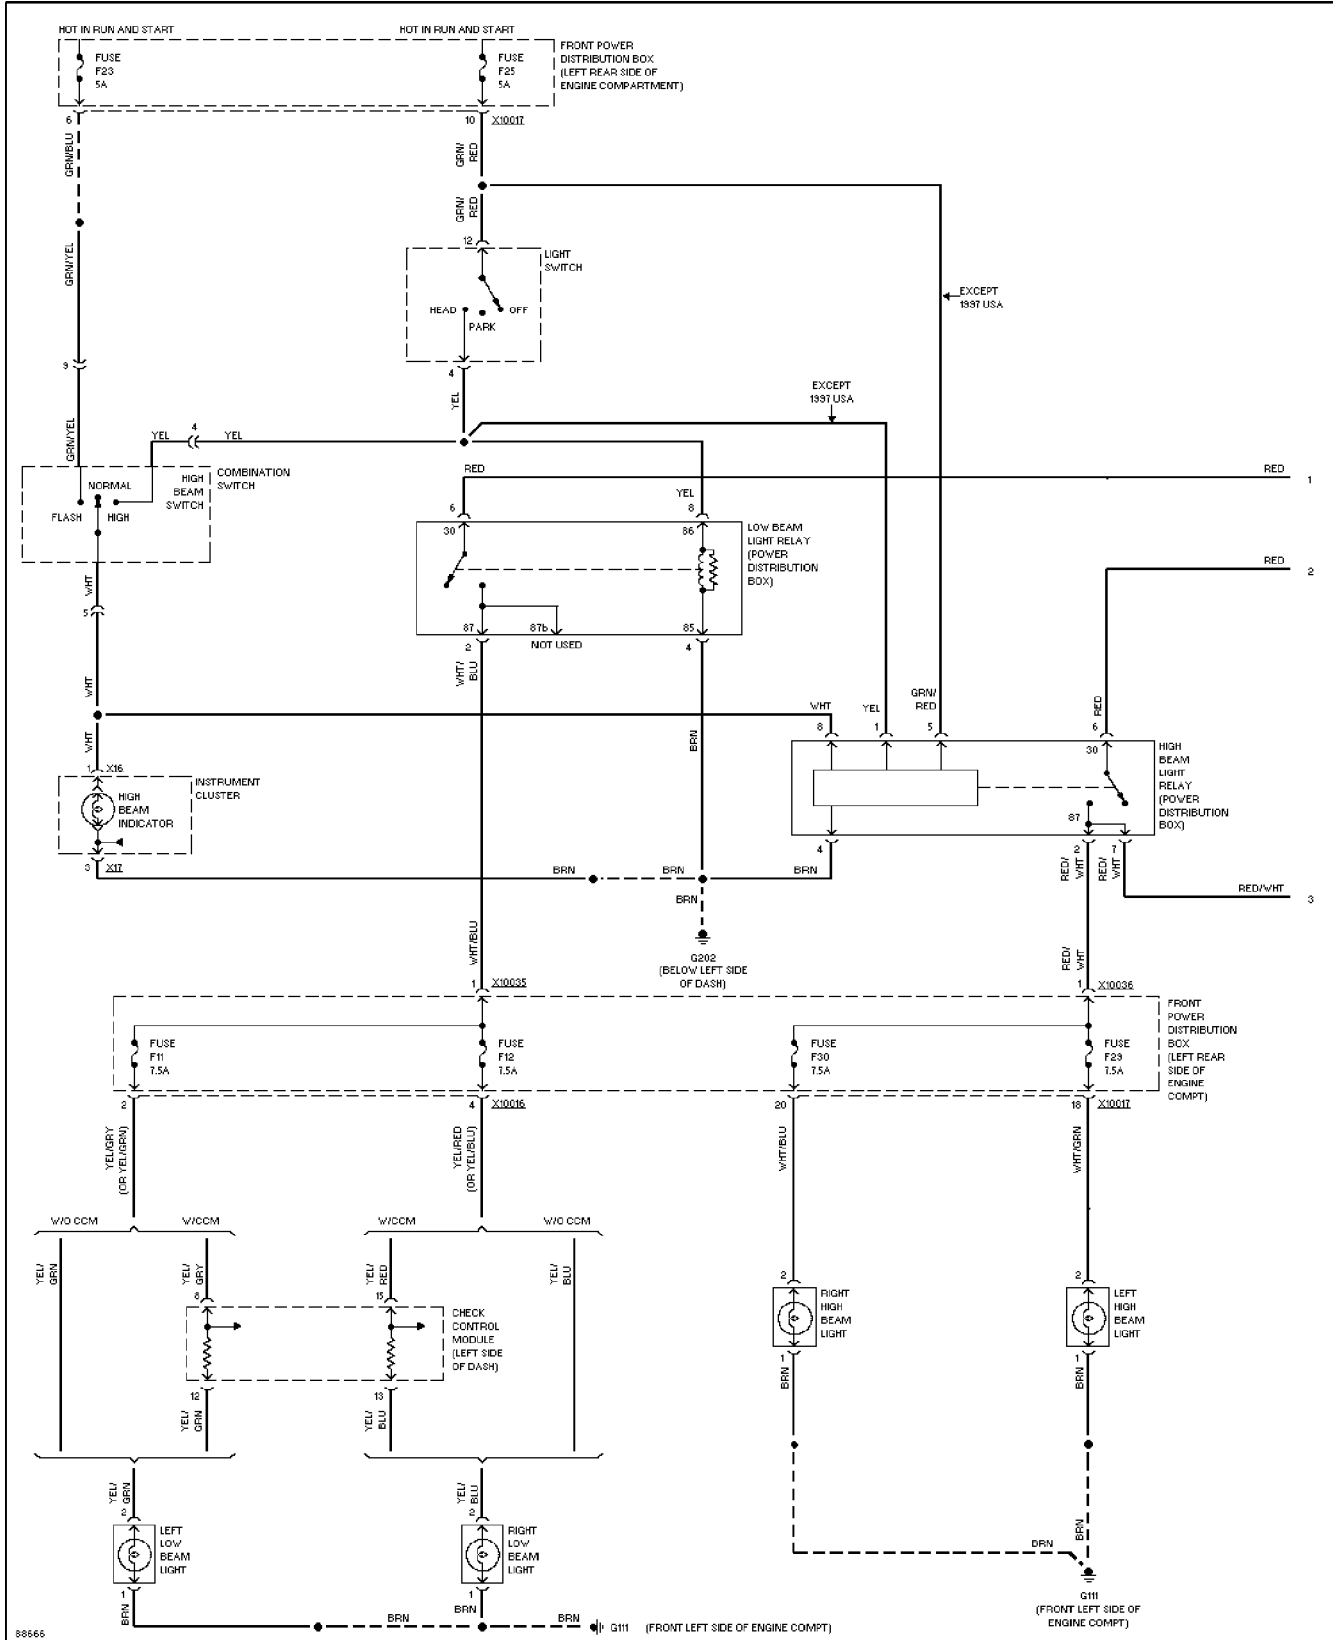

SYSTEM WIRING DIAGRAMS

Headlight Circuit (2 of 2)


1997 BMW 328i

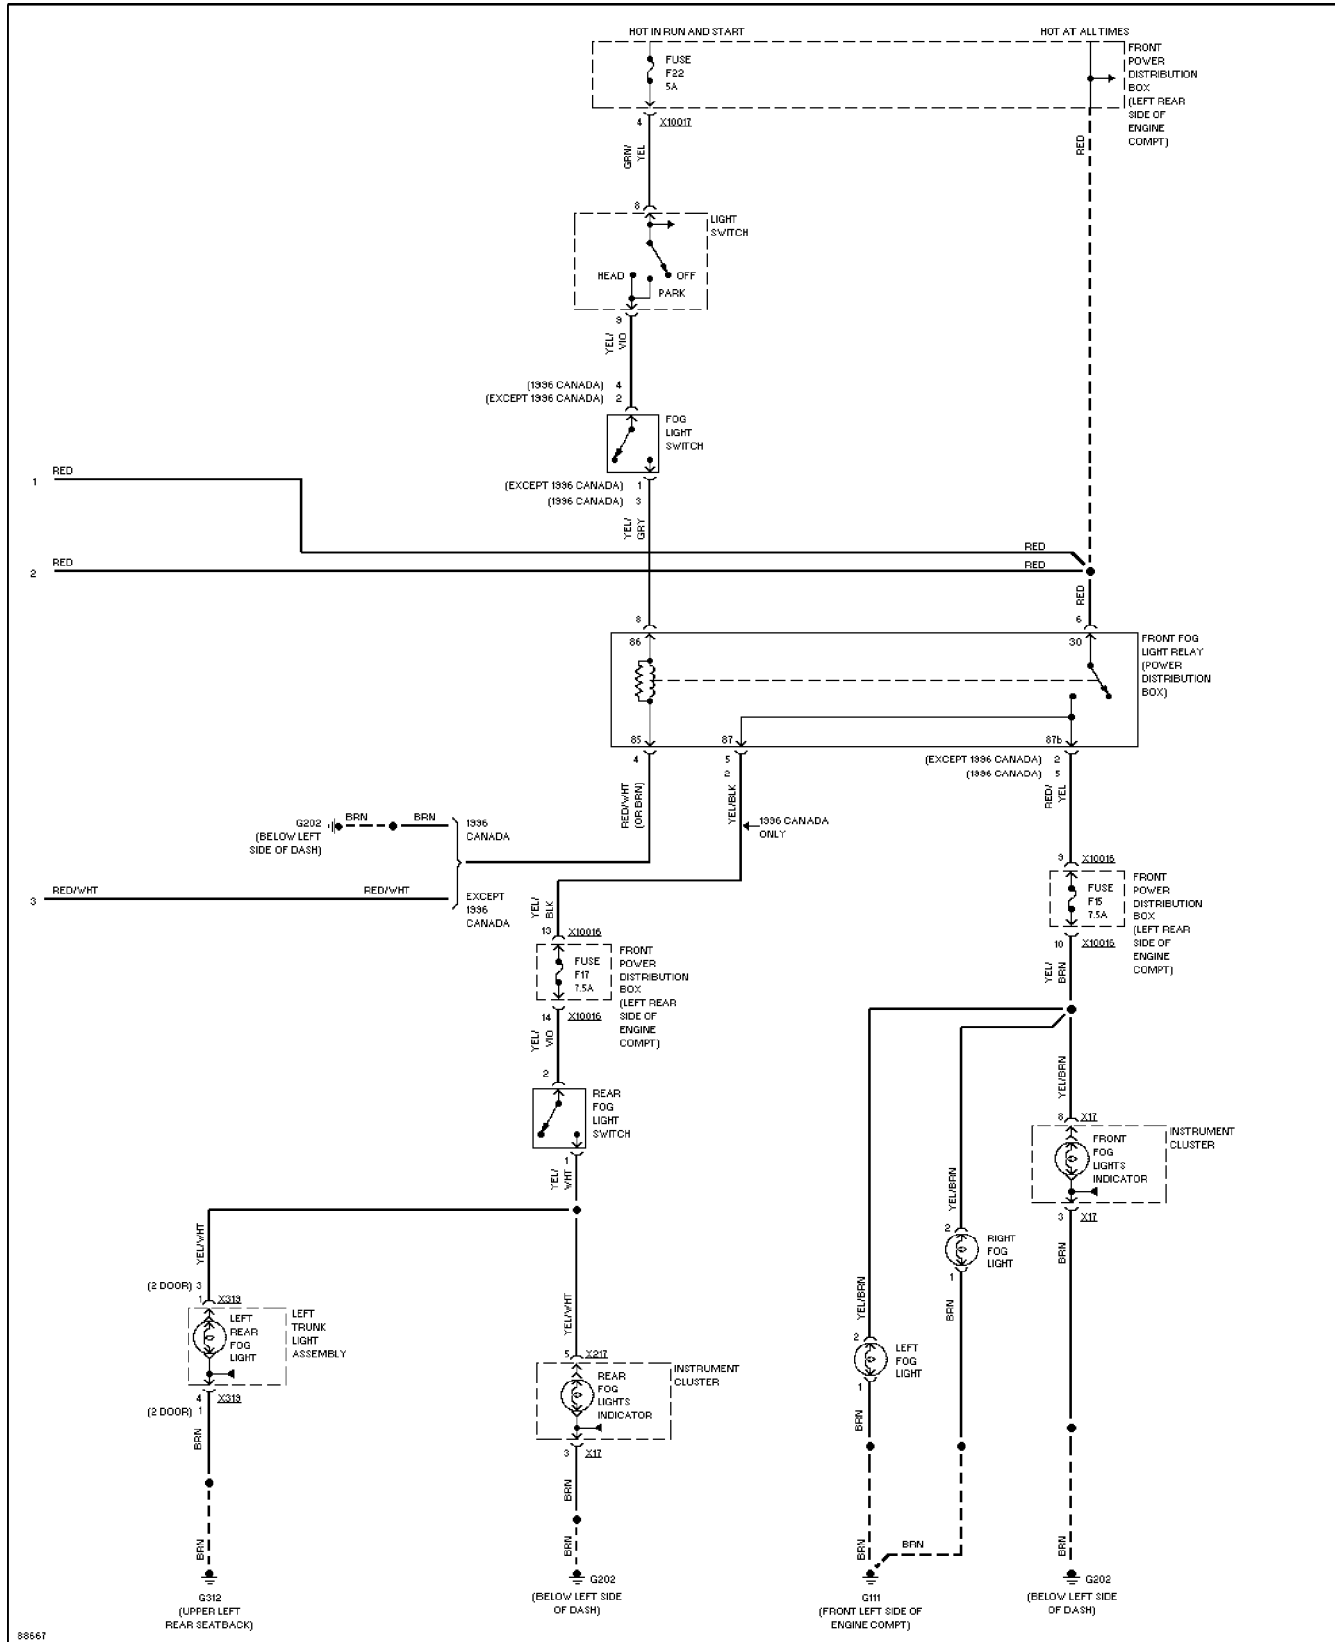

SYSTEM WIRING DIAGRAMS

Horn Circuit


1997 BMW 328i

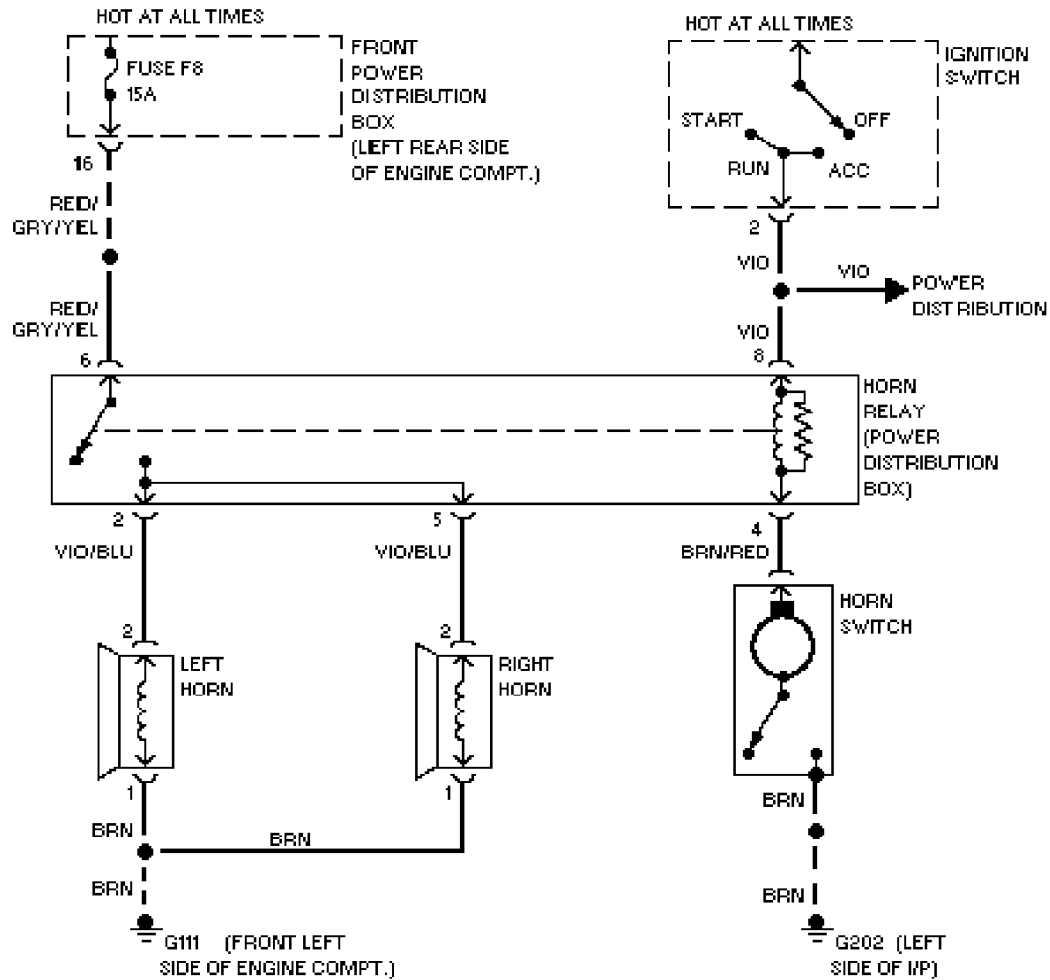

SYSTEM WIRING DIAGRAMS

Instrument Cluster Circuit (1 of 2)


1997 BMW 328i

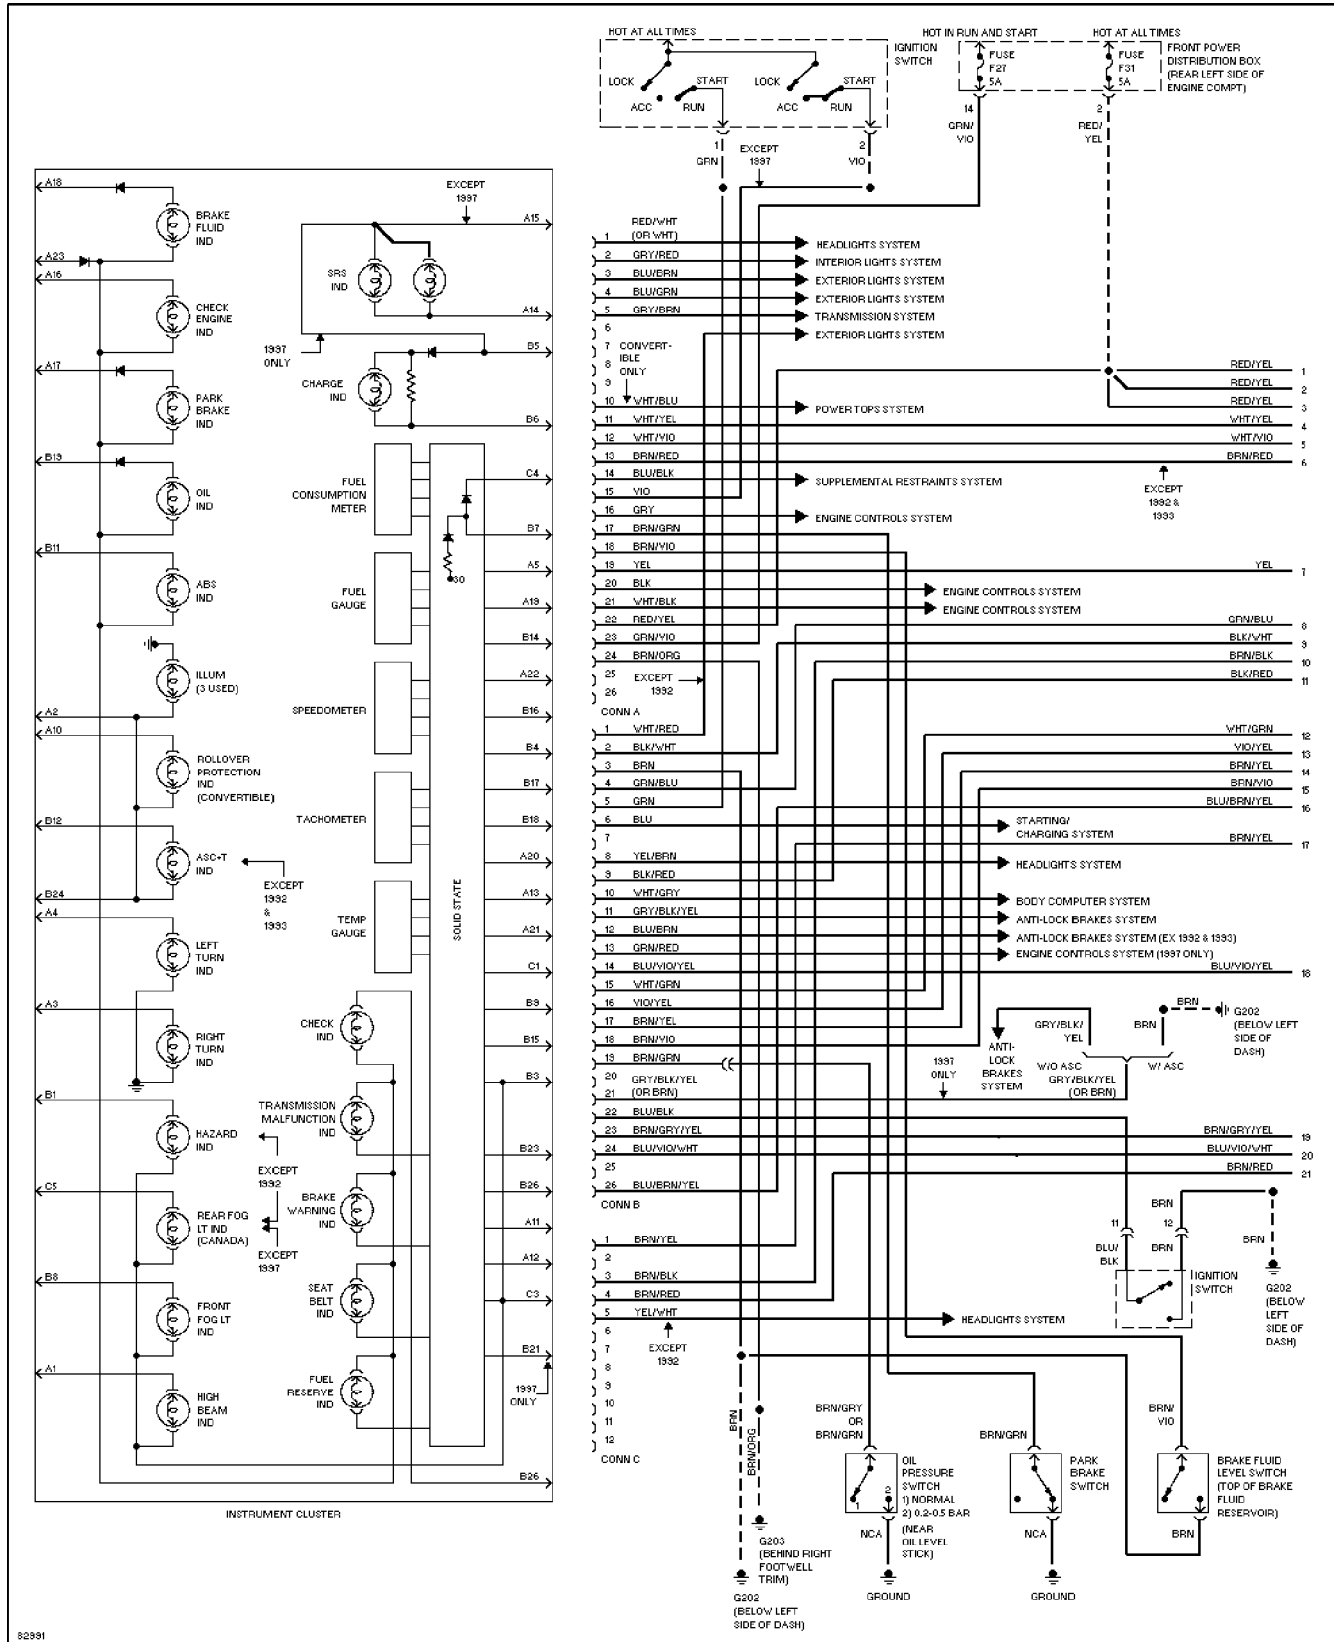

SYSTEM WIRING DIAGRAMS

Instrument Cluster Circuit (2 of 2)


1997 BMW 328i

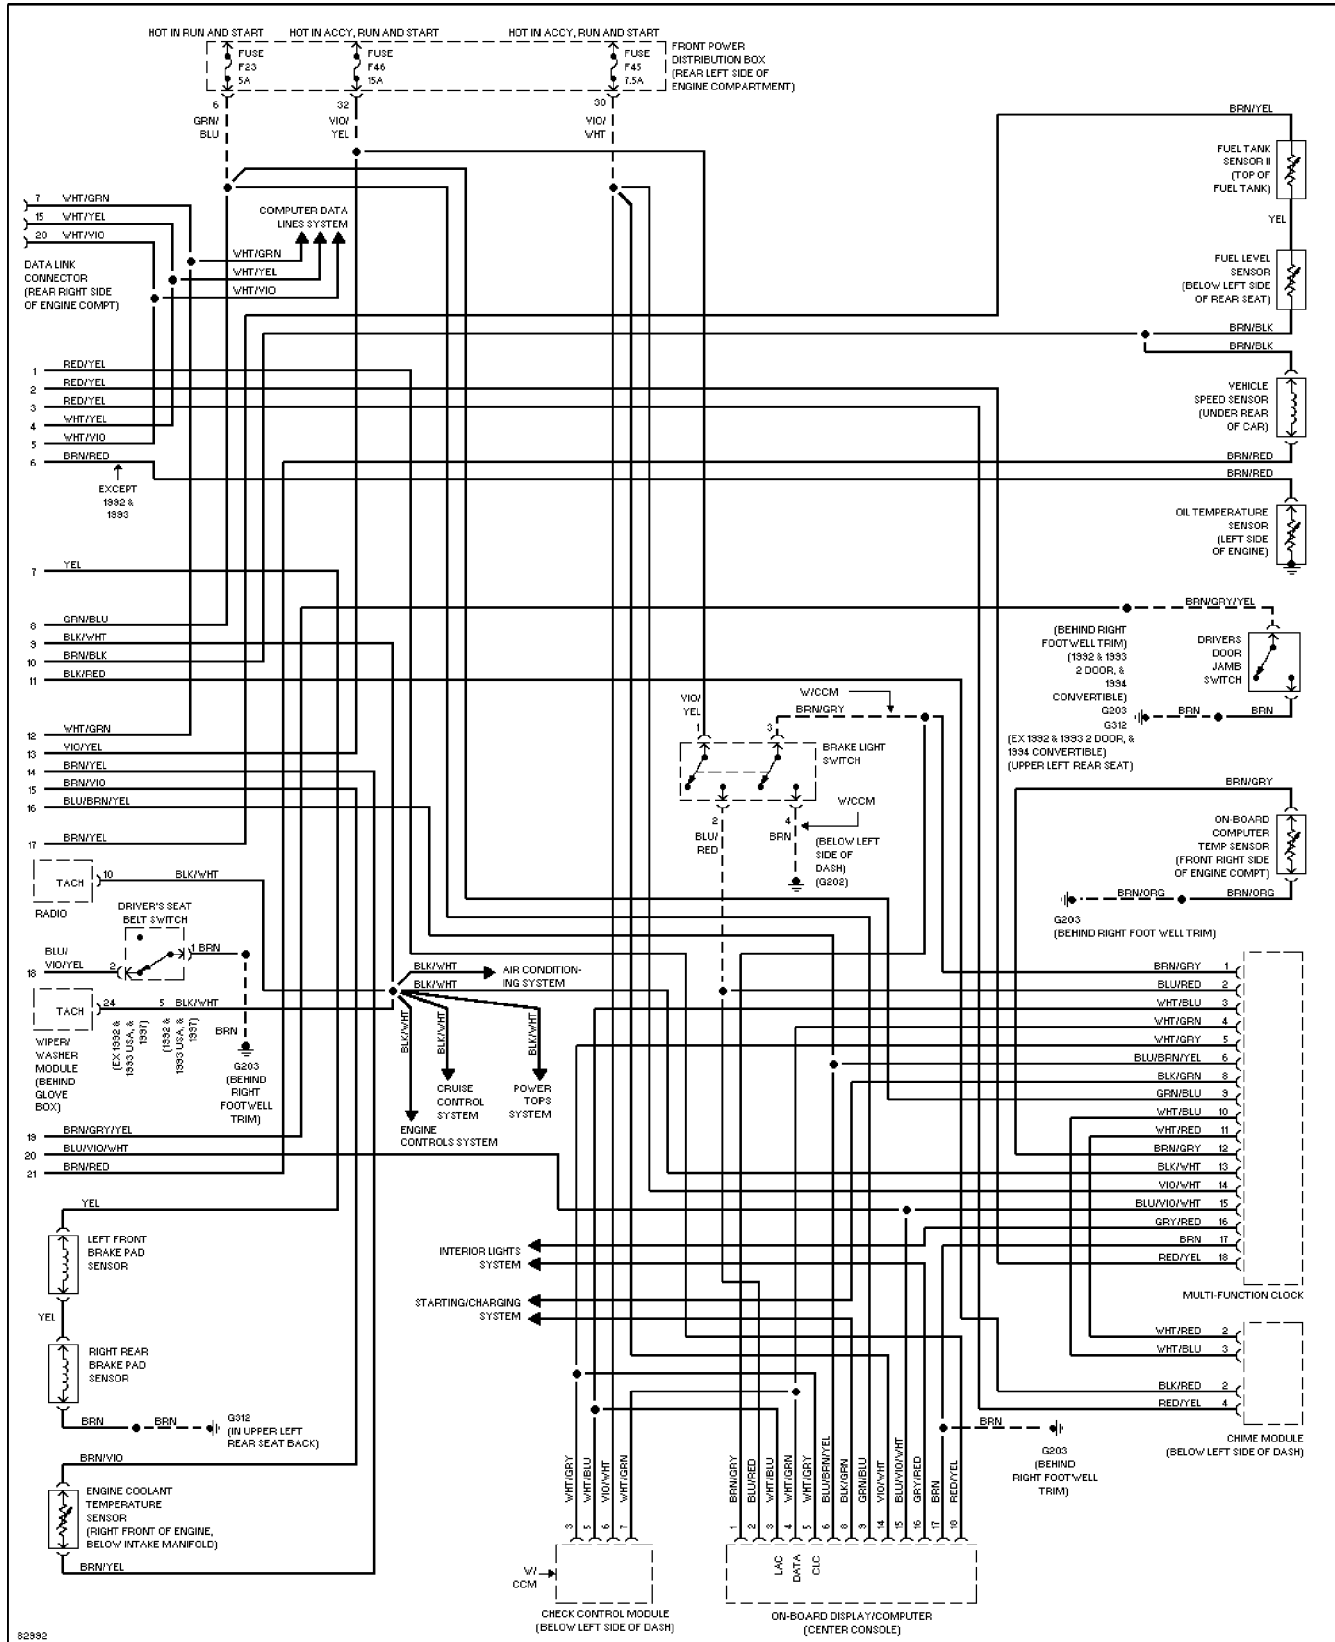

SYSTEM WIRING DIAGRAMS

Interior Light Circuit (1 of 2)

1997 BMW 328i

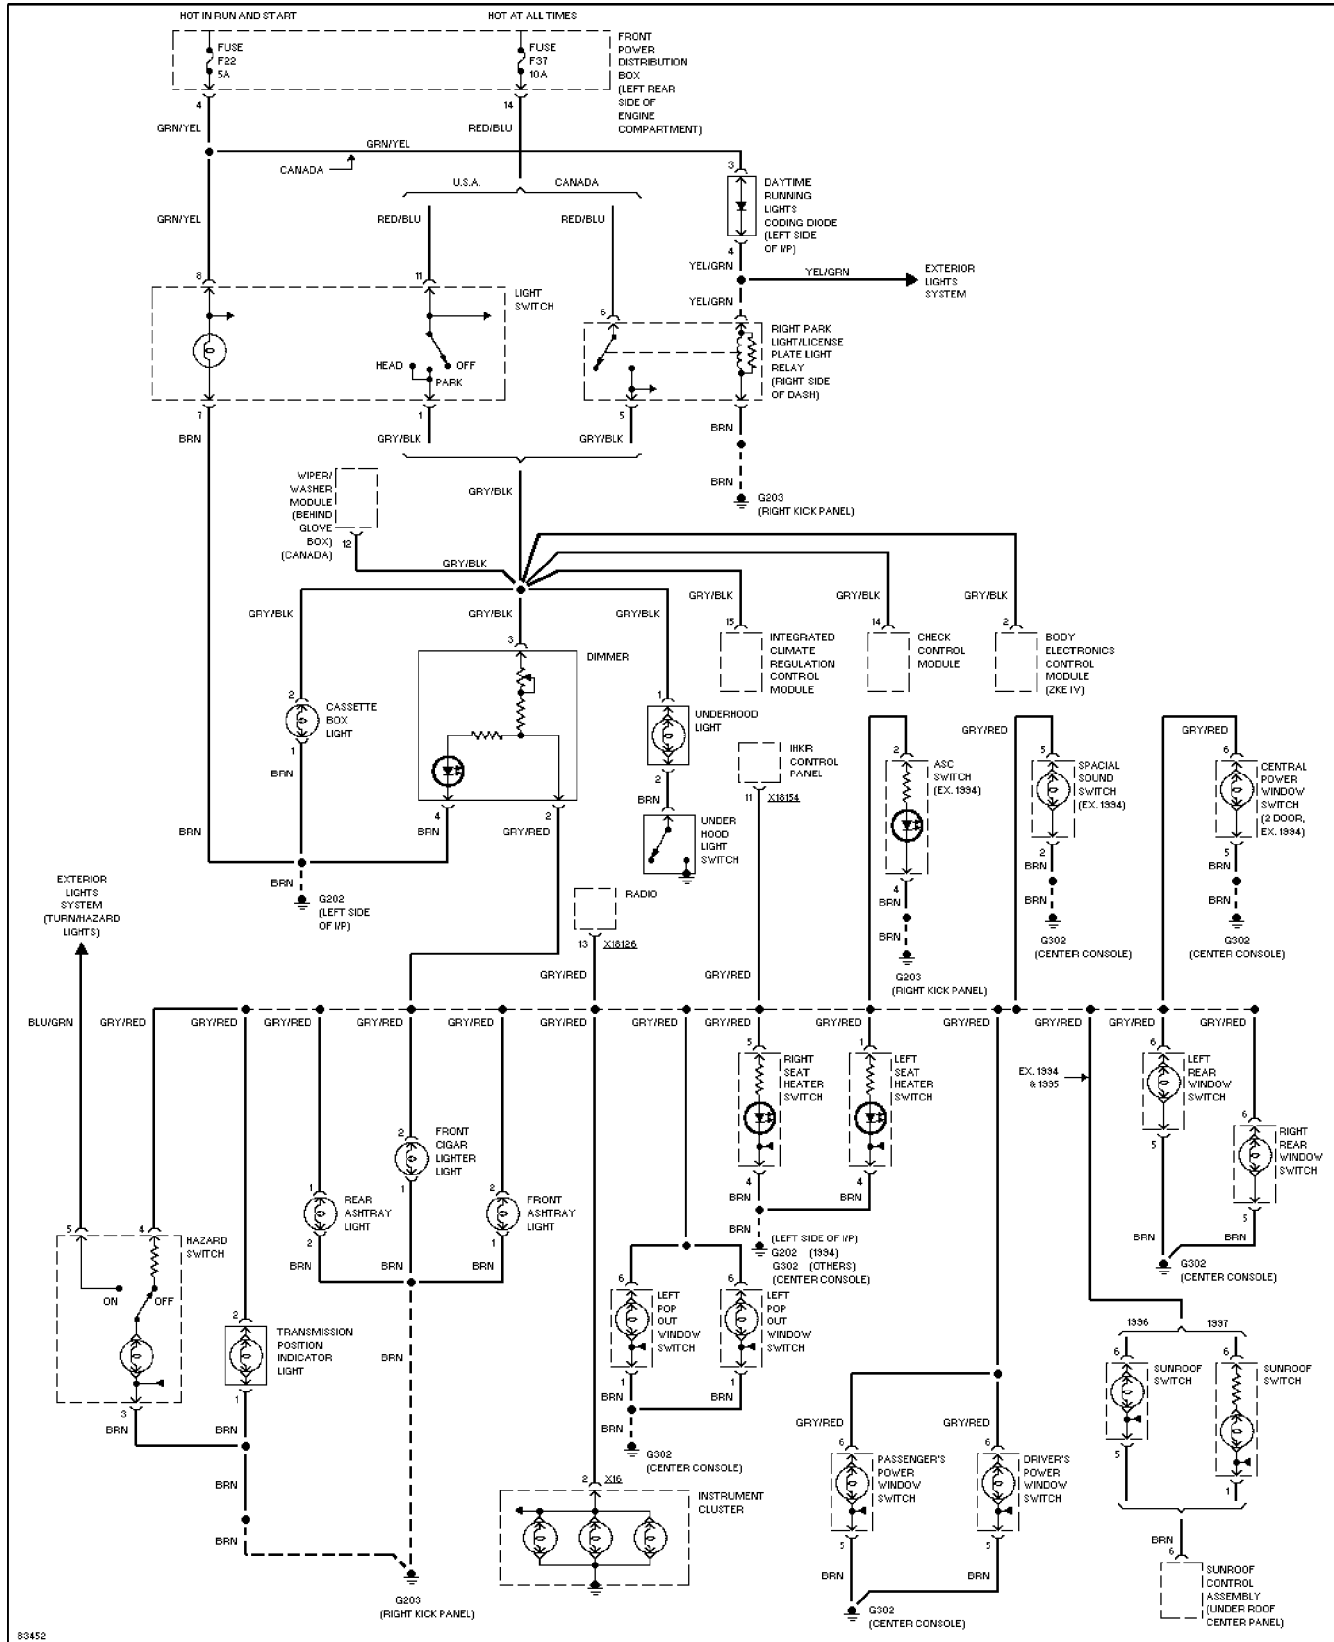


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Power Distribution Circuit (1 of 5)


1997 BMW 328i

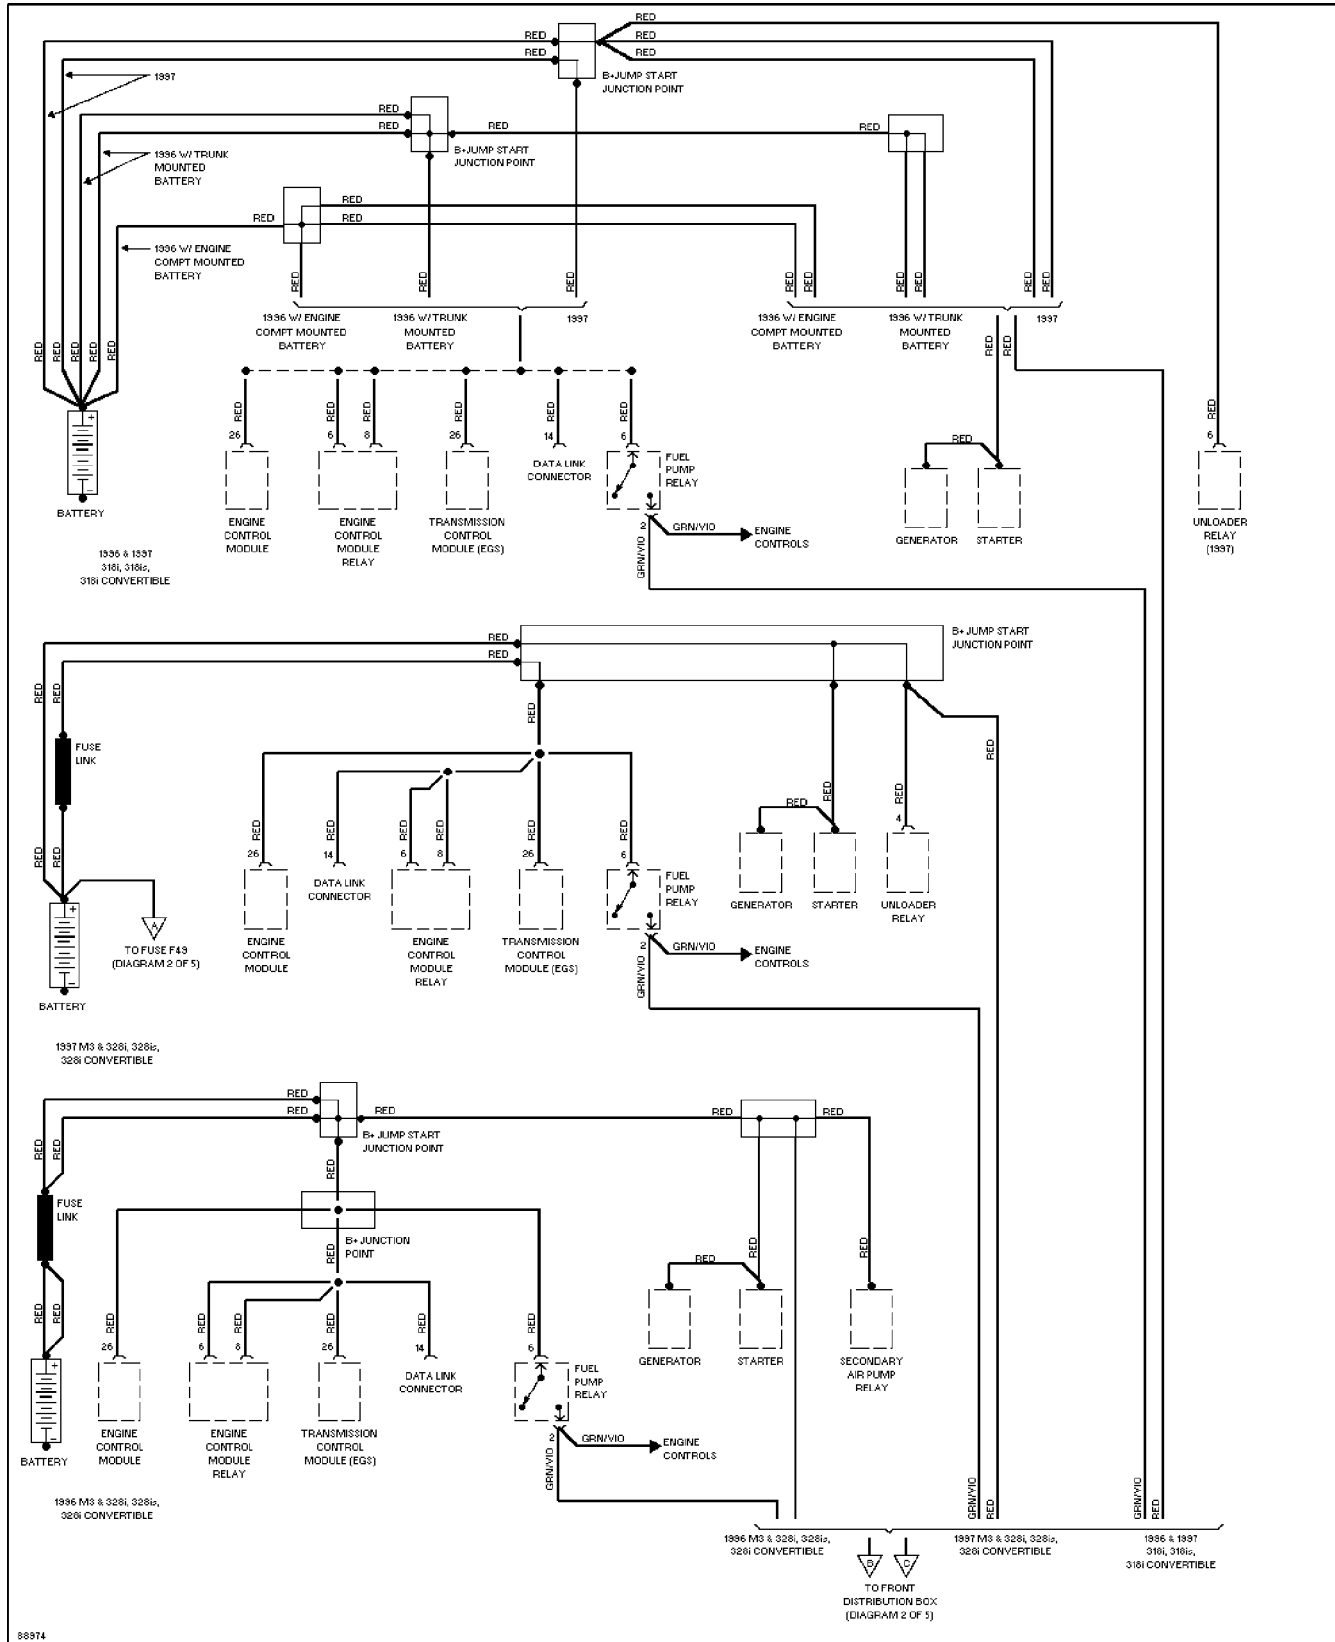

SYSTEM WIRING DIAGRAMS

Power Distribution Circuit (2 of 5)


1997 BMW 328i

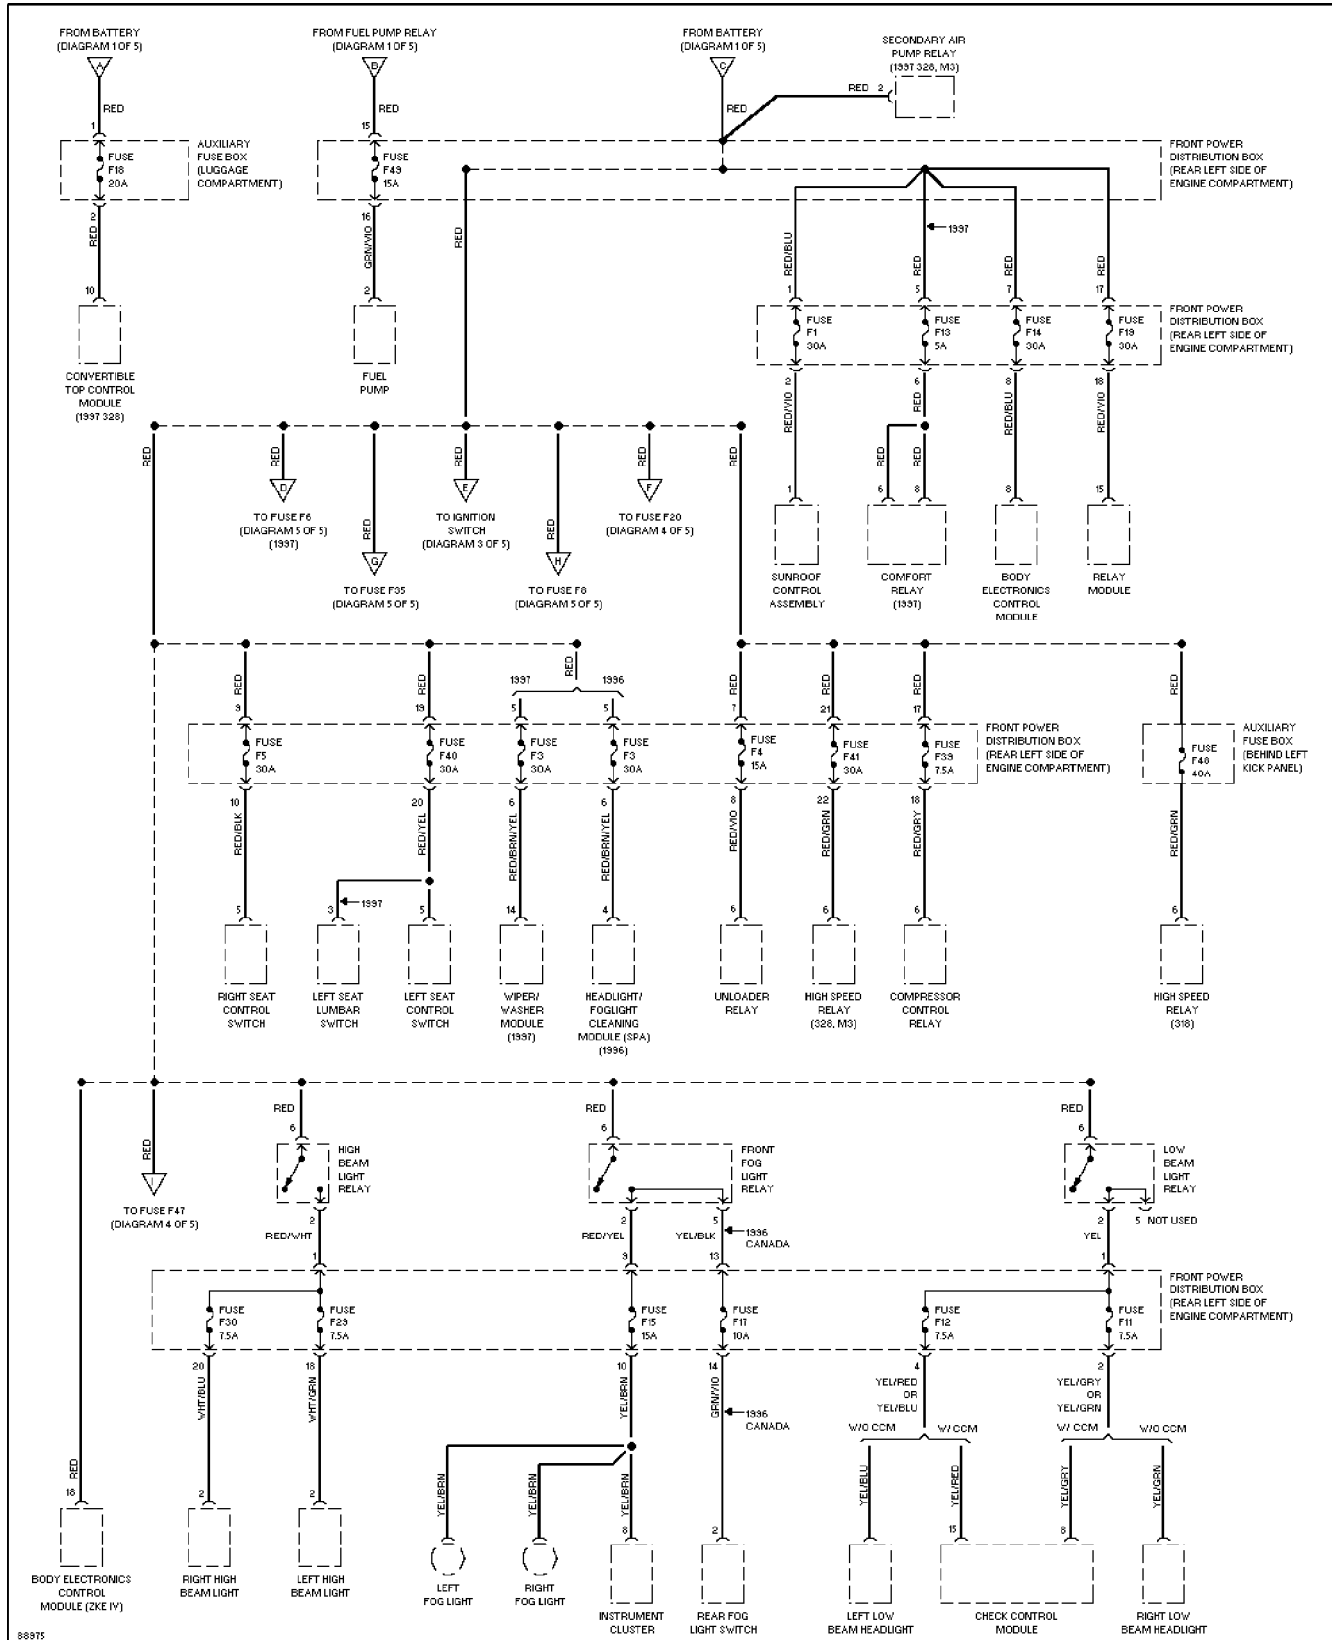

SYSTEM WIRING DIAGRAMS

Power Distribution Circuit (3 of 5)


1997 BMW 328i

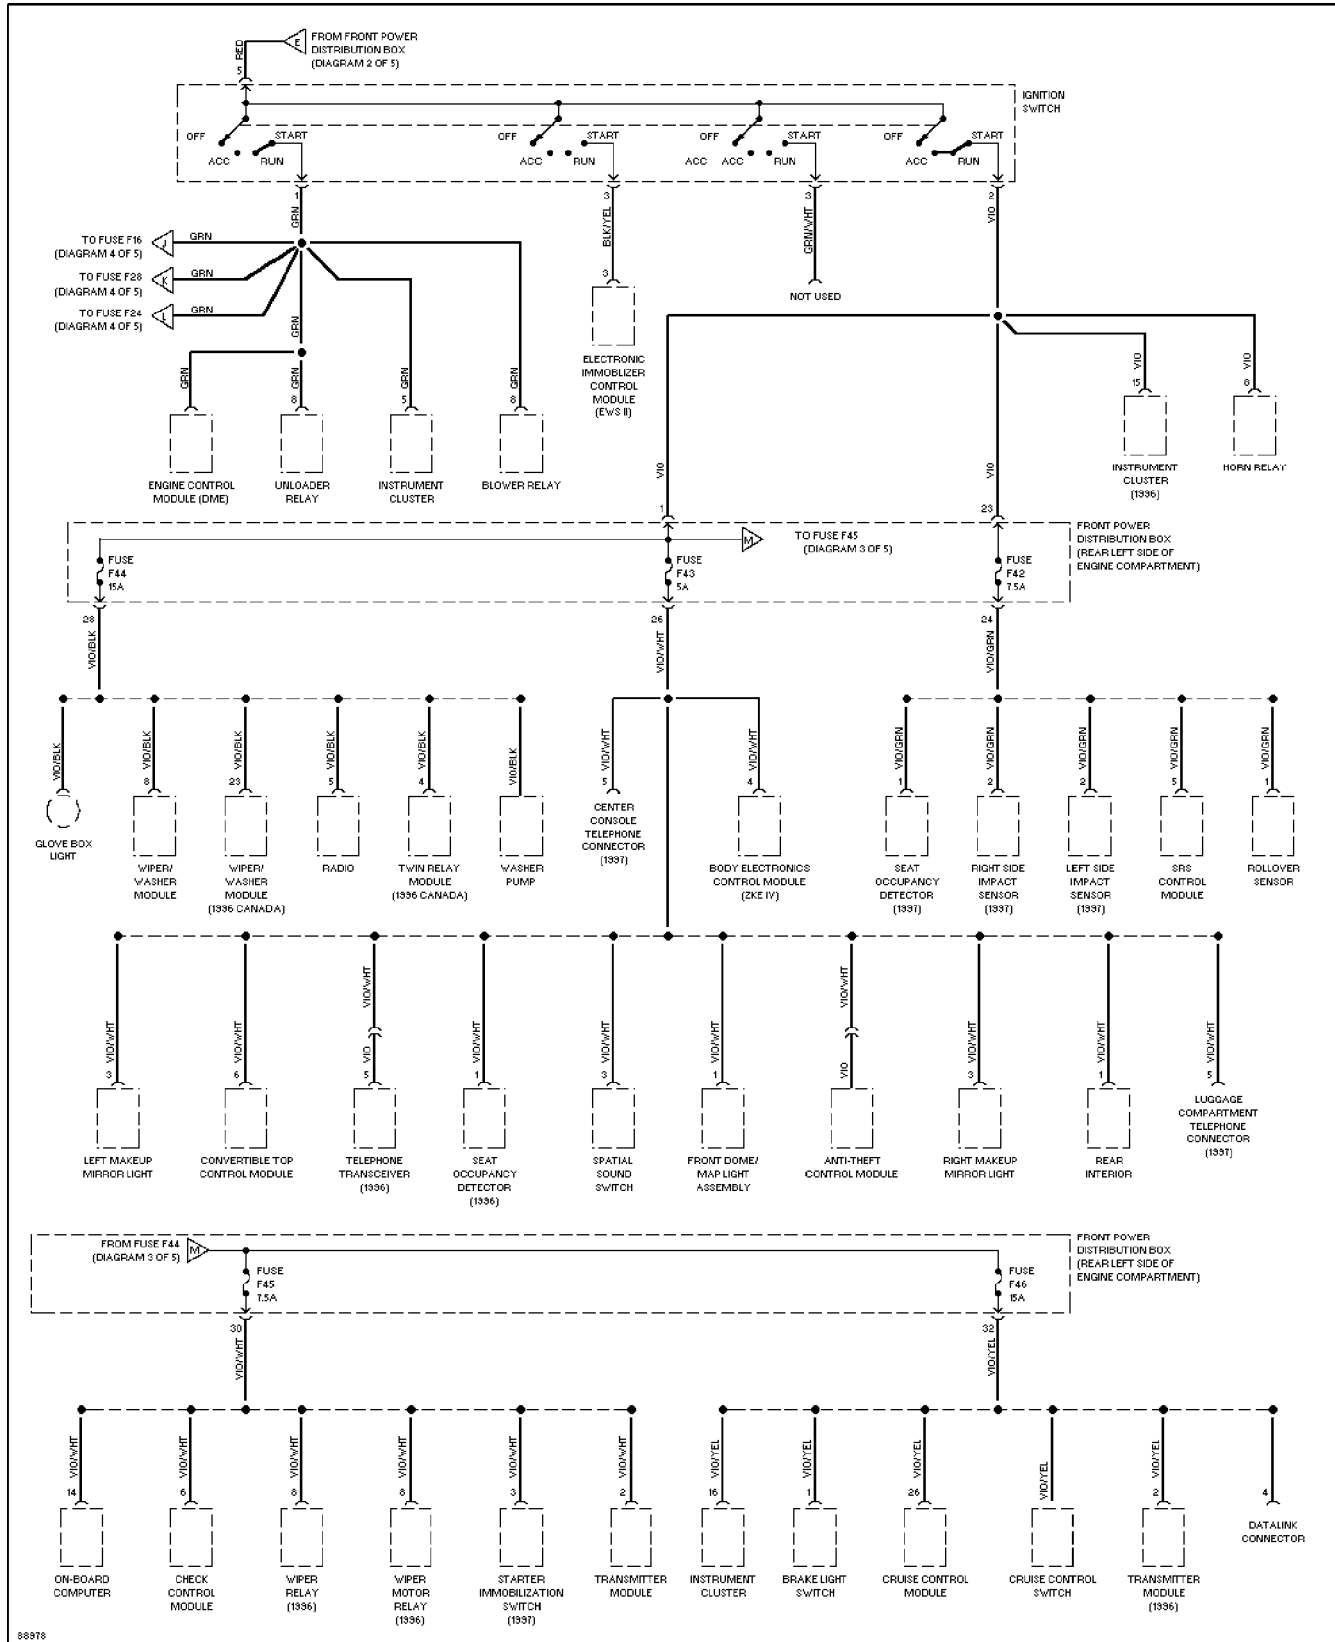

SYSTEM WIRING DIAGRAMS

Power Distribution Circuit (4 of 5)


1997 BMW 328i

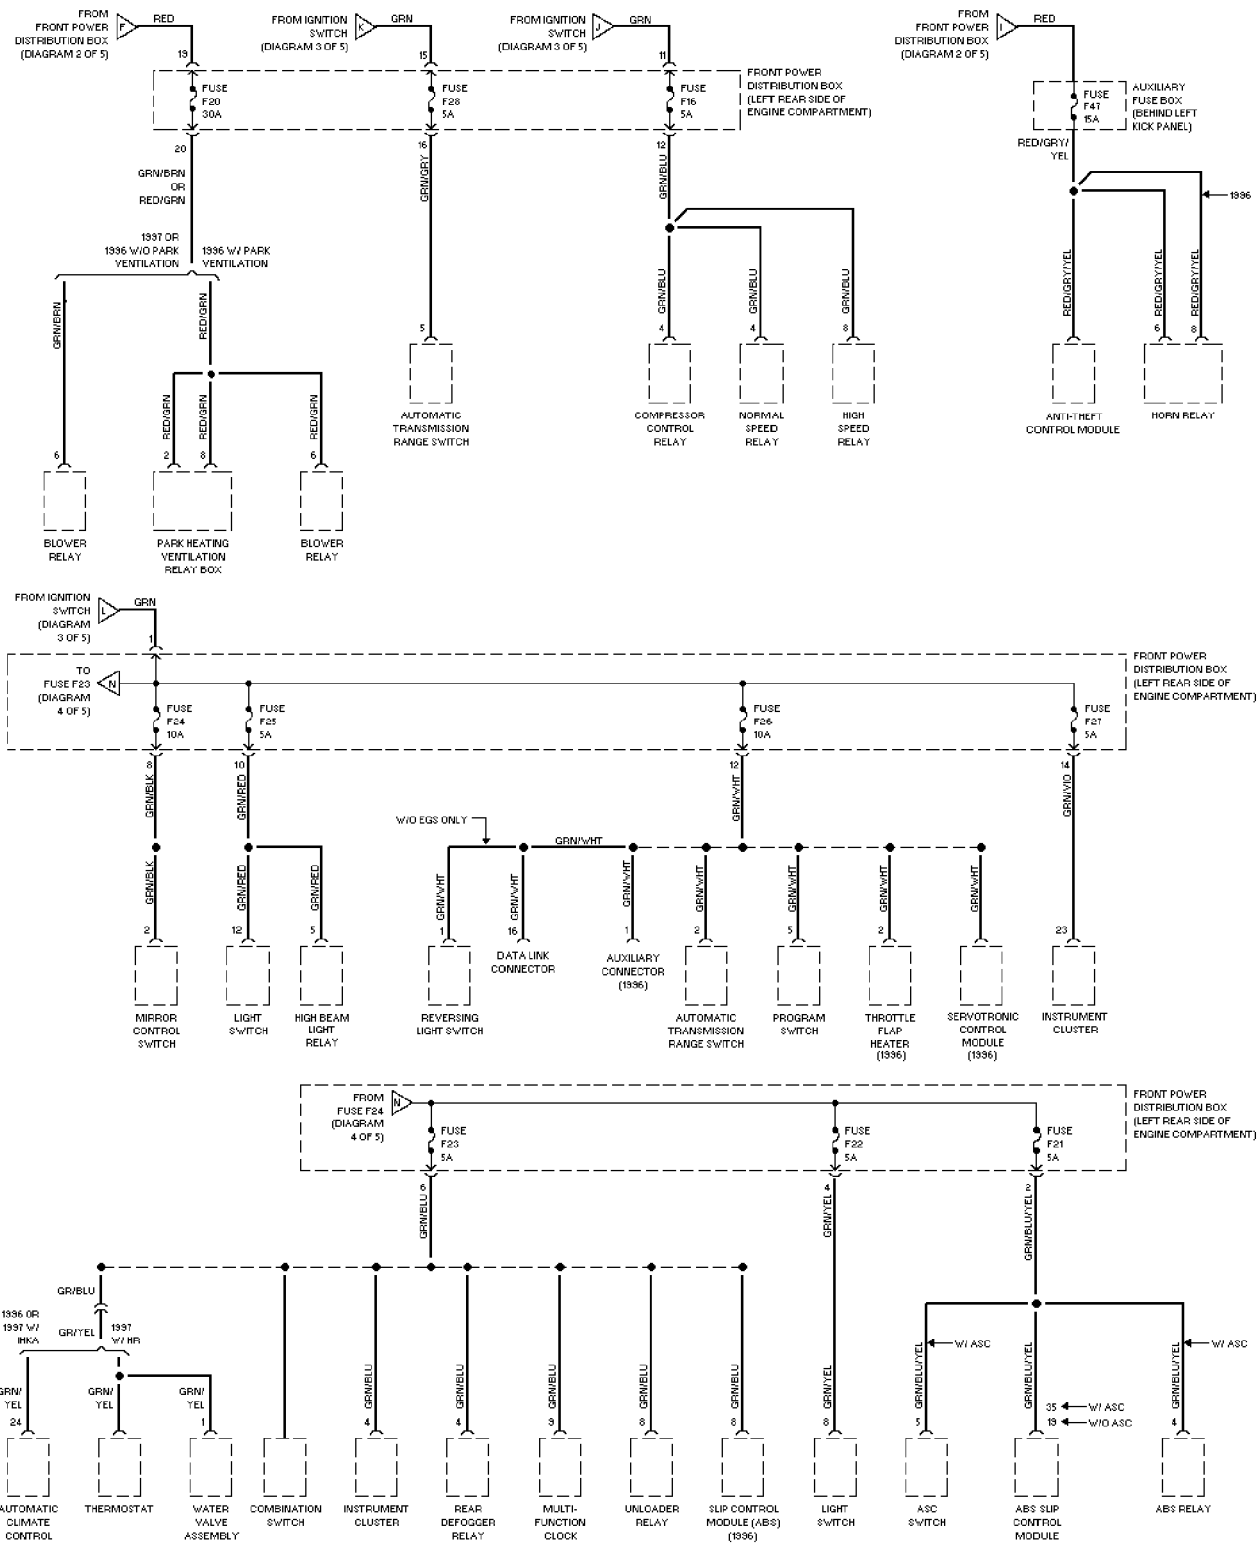

SYSTEM WIRING DIAGRAMS

Power Distribution Circuit (5 of 5)

1997 BMW 328i

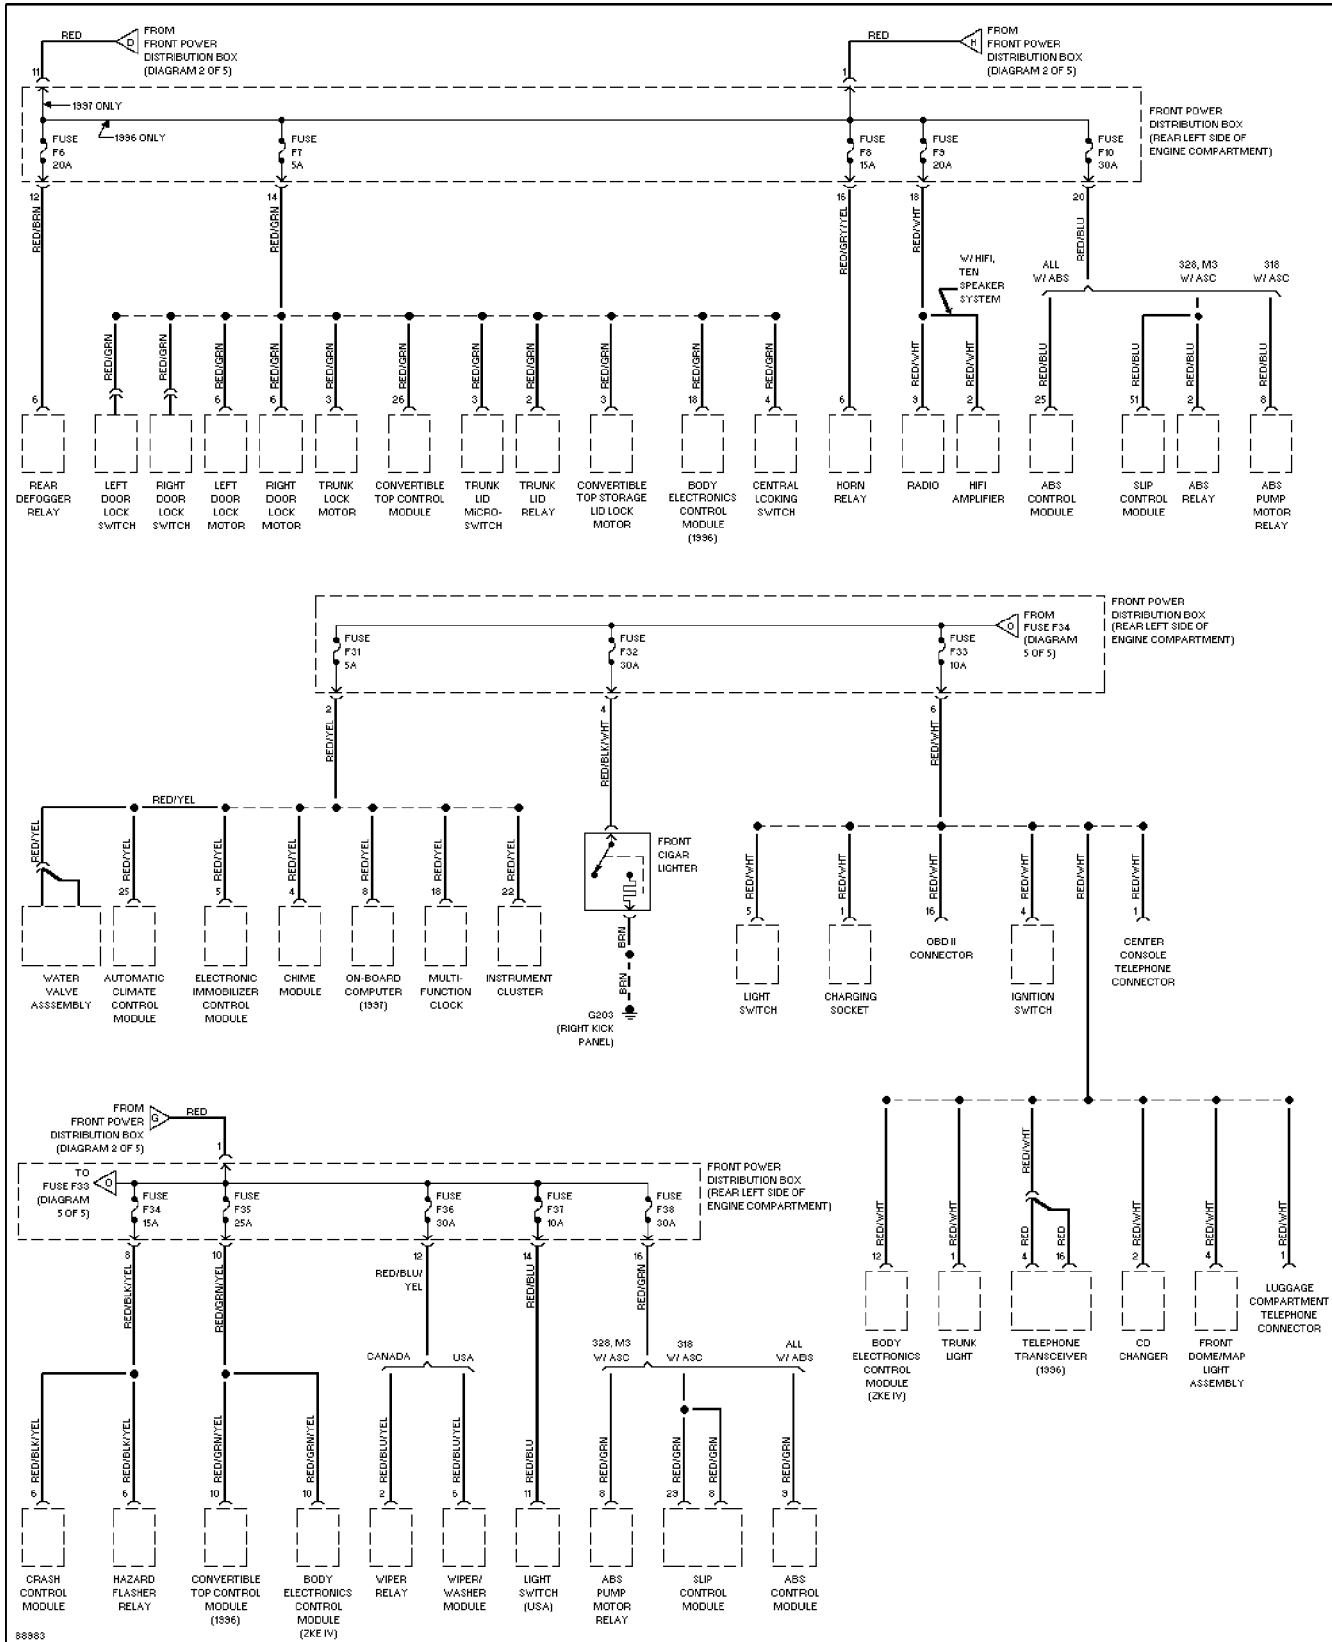


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Power Mirror Circuit


1997 BMW 328i

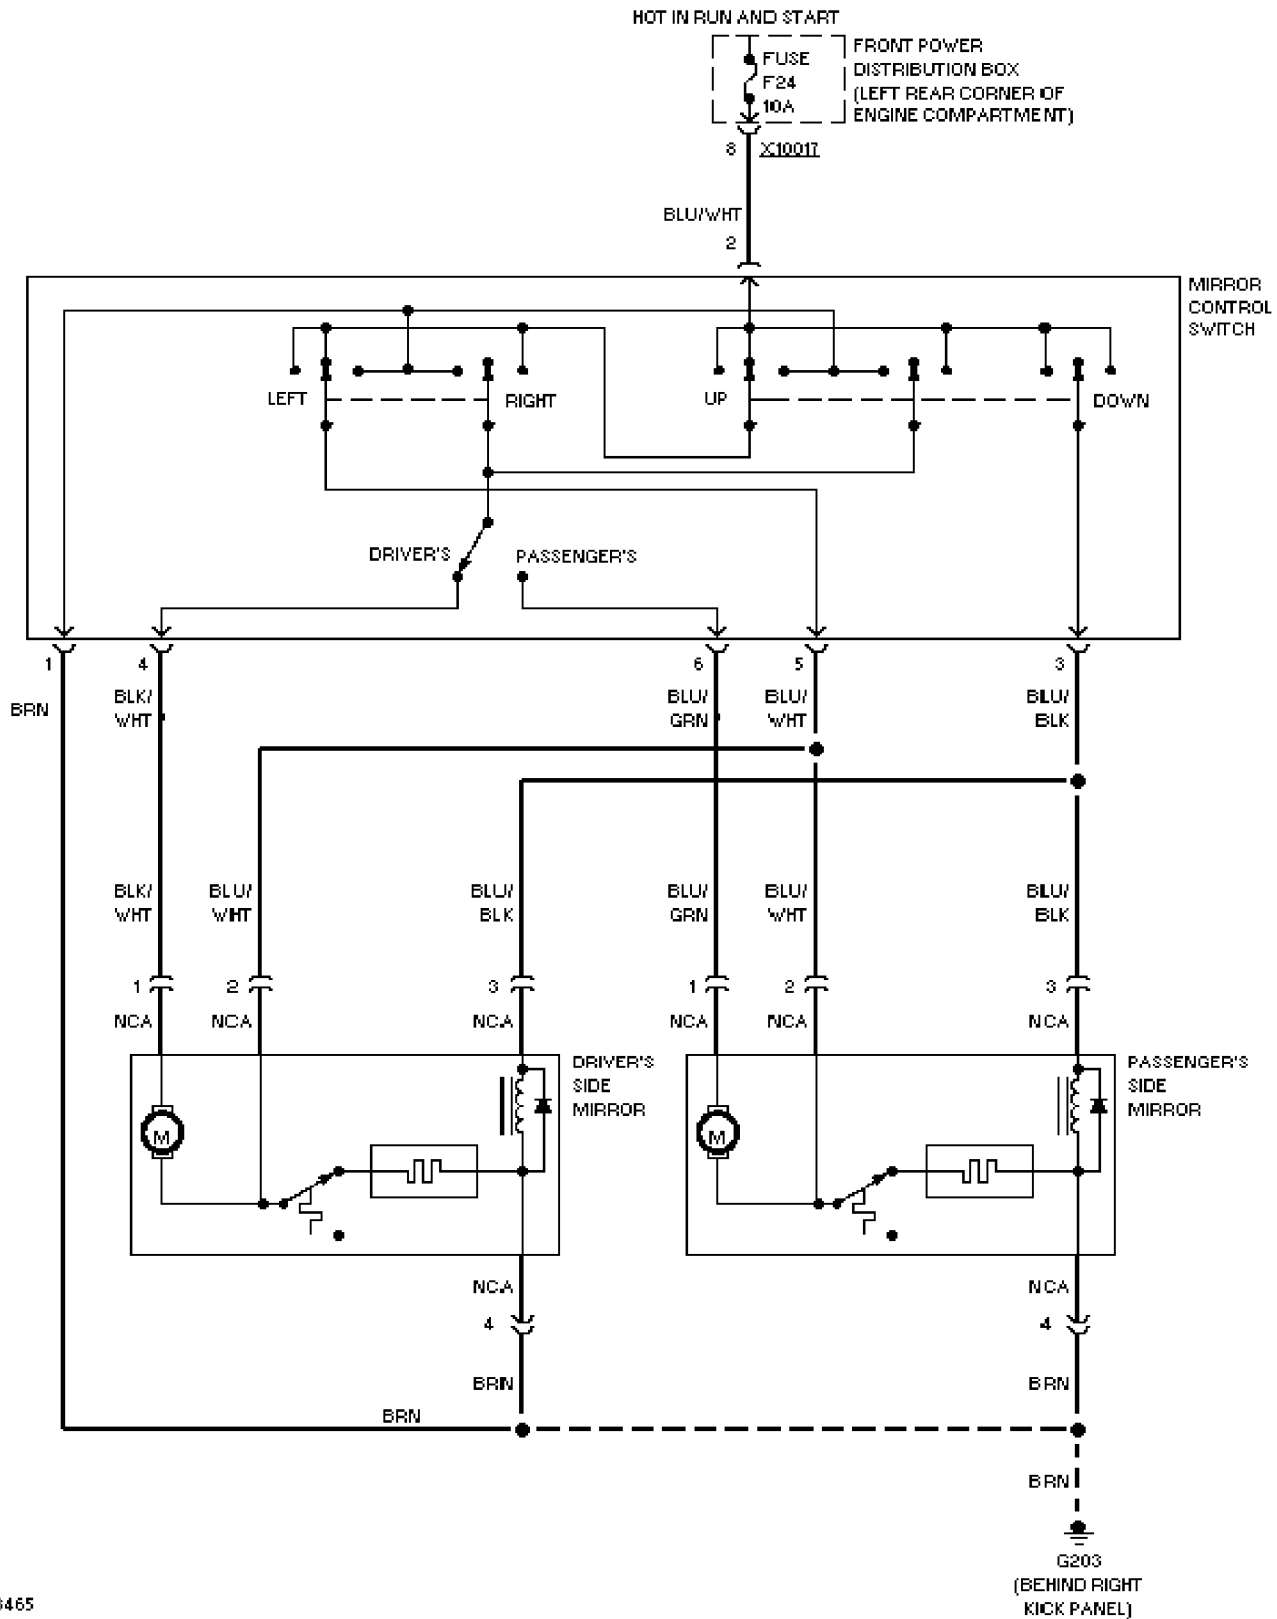

SYSTEM WIRING DIAGRAMS

Heated Seats Circuit


1997 BMW 328i

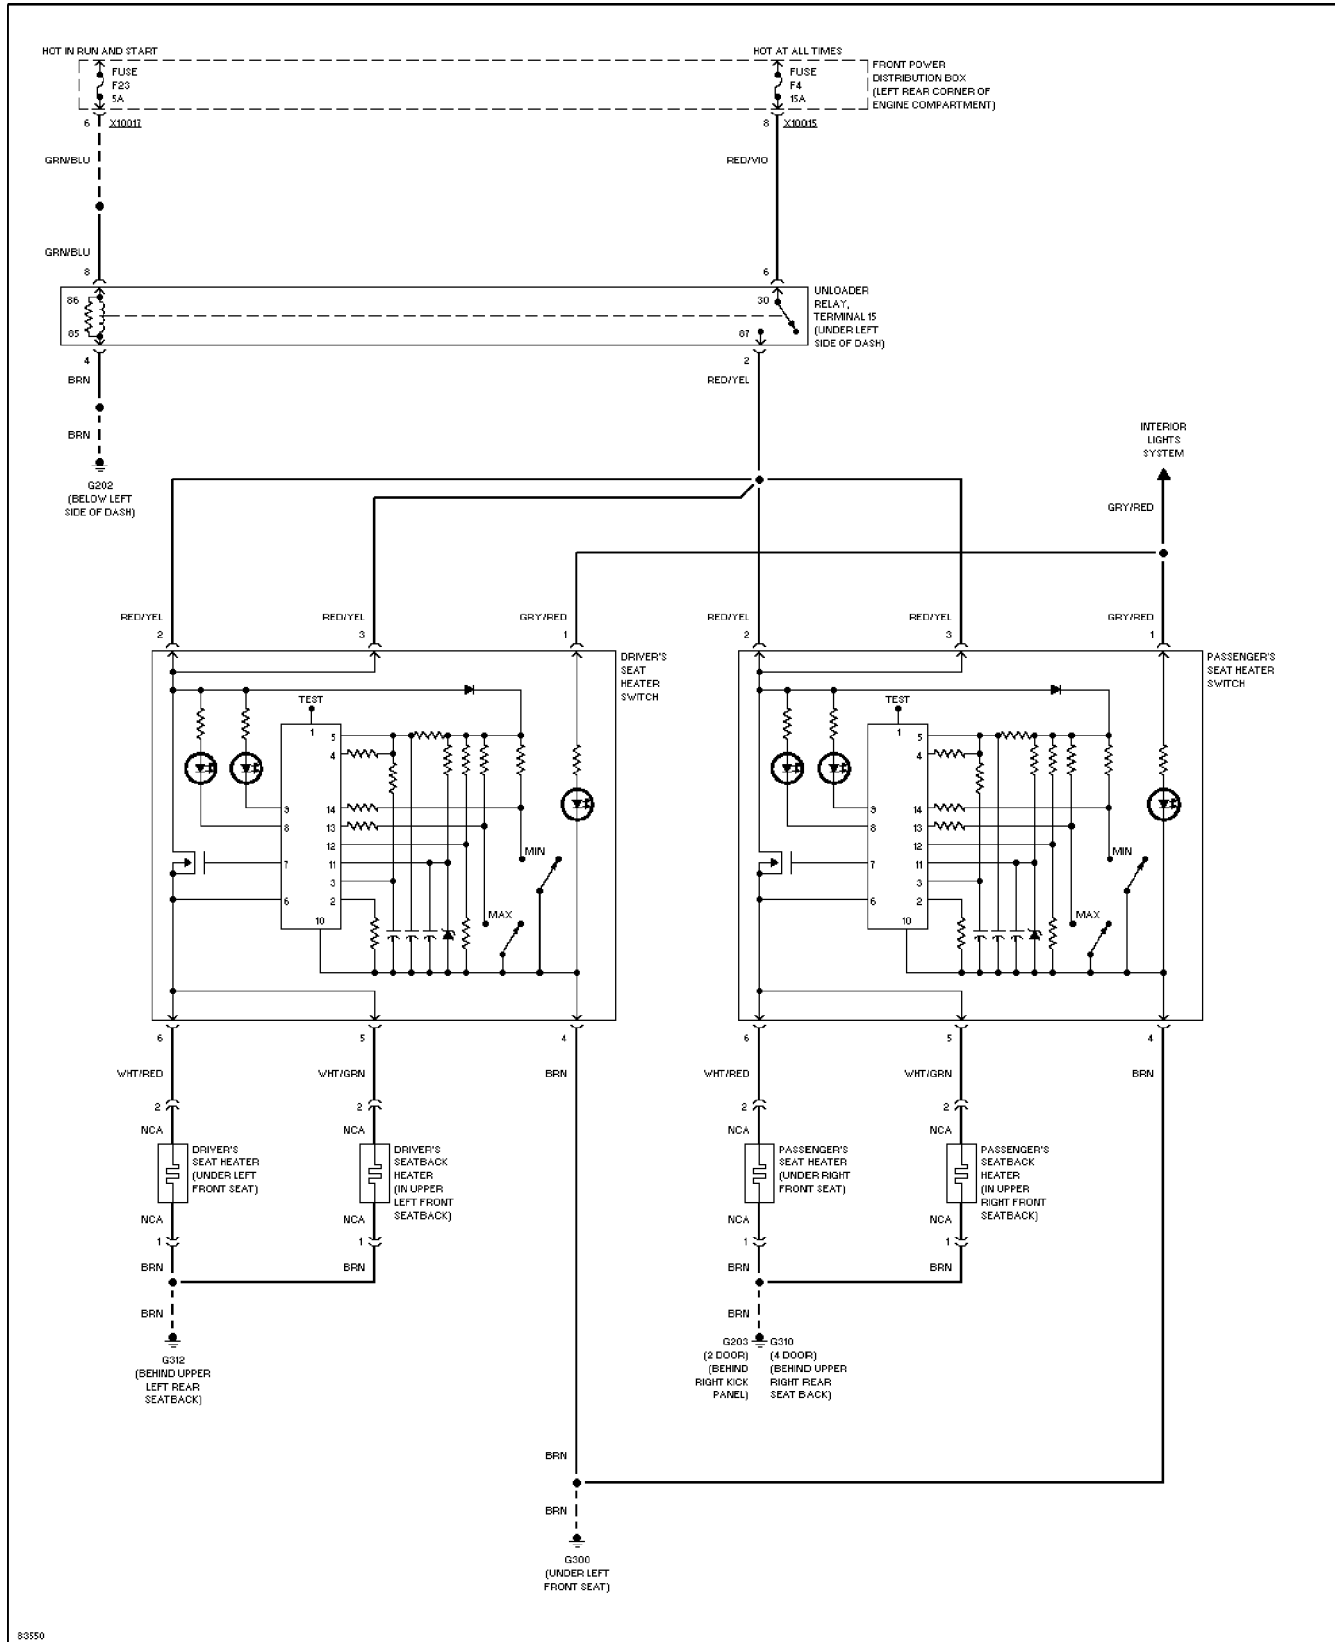

SYSTEM WIRING DIAGRAMS

Power Seat Circuit


1997 BMW 328i

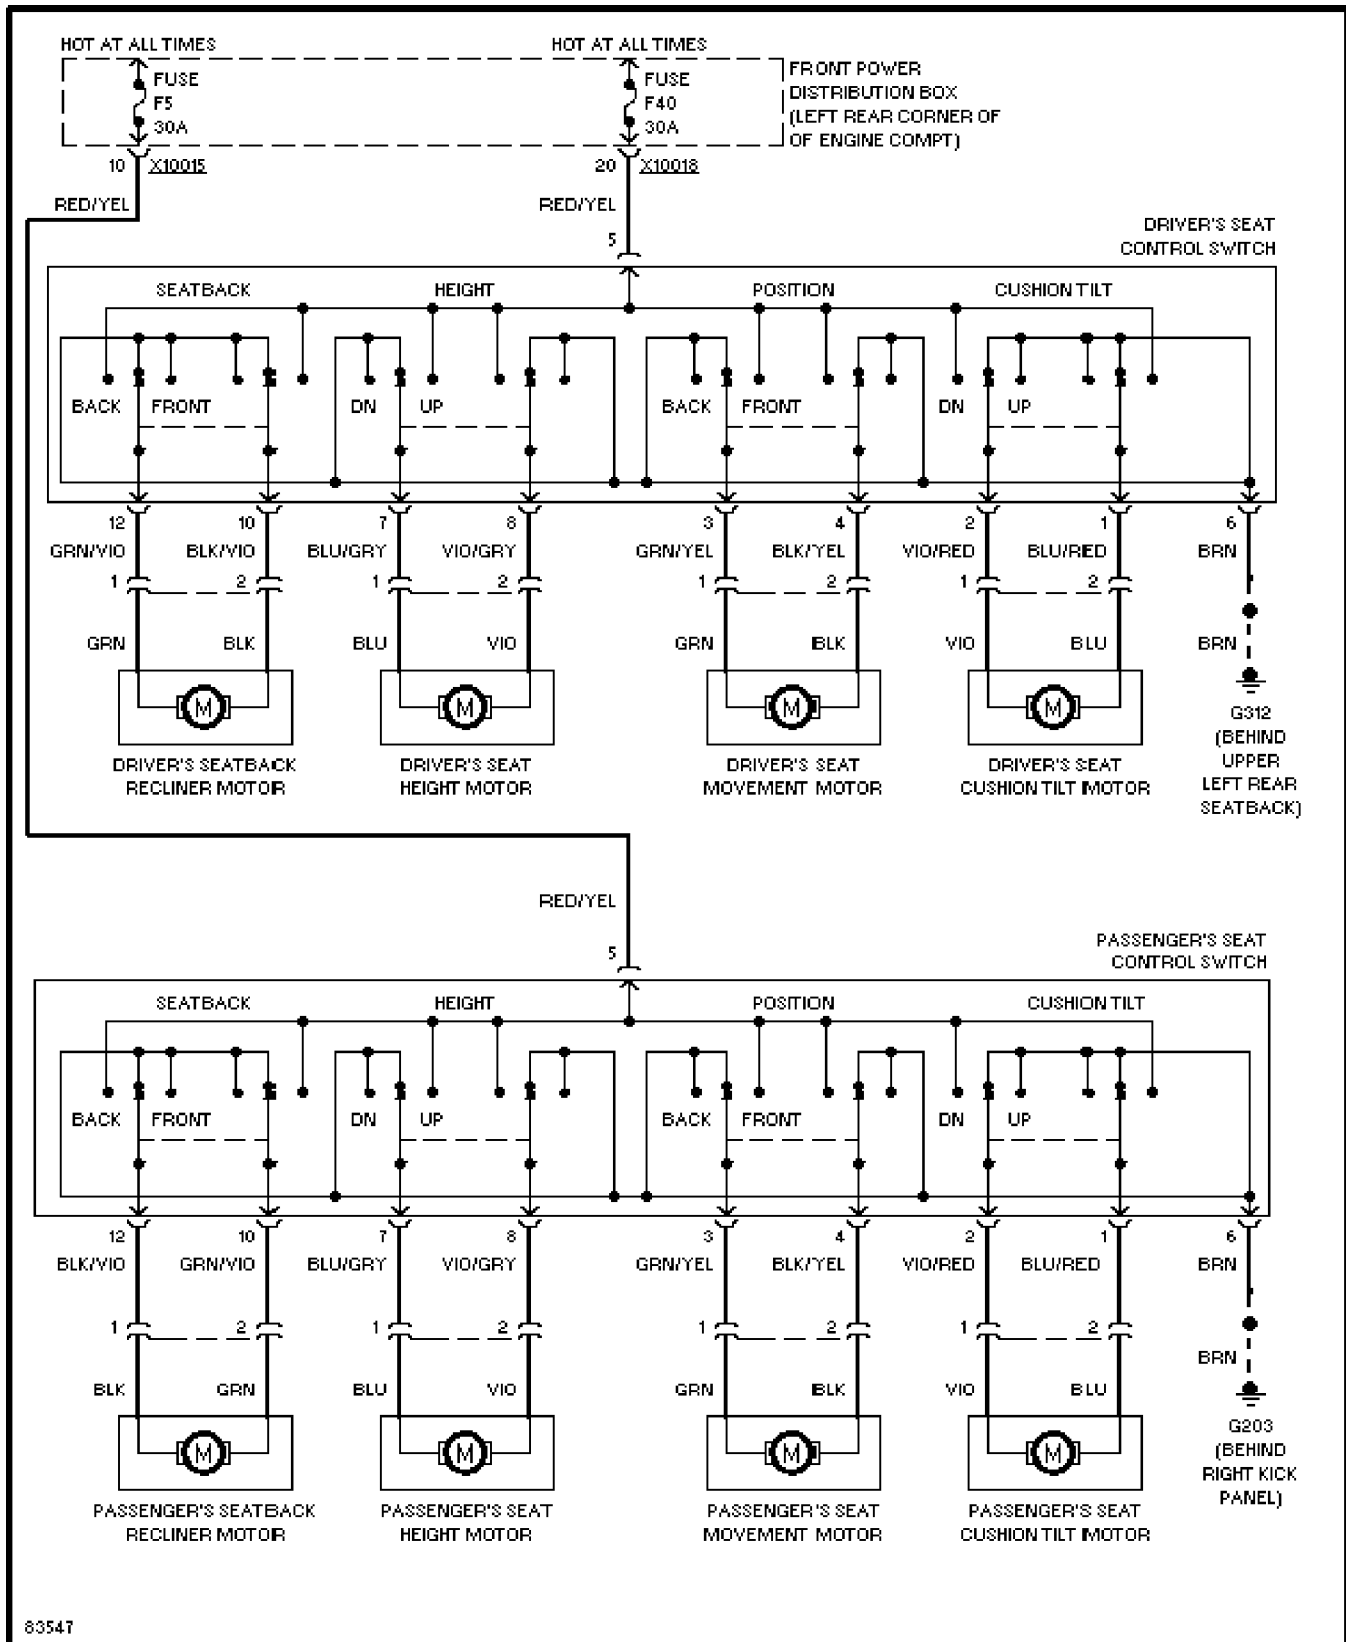

SYSTEM WIRING DIAGRAMS

Sunroof Circuit


1997 BMW 328i

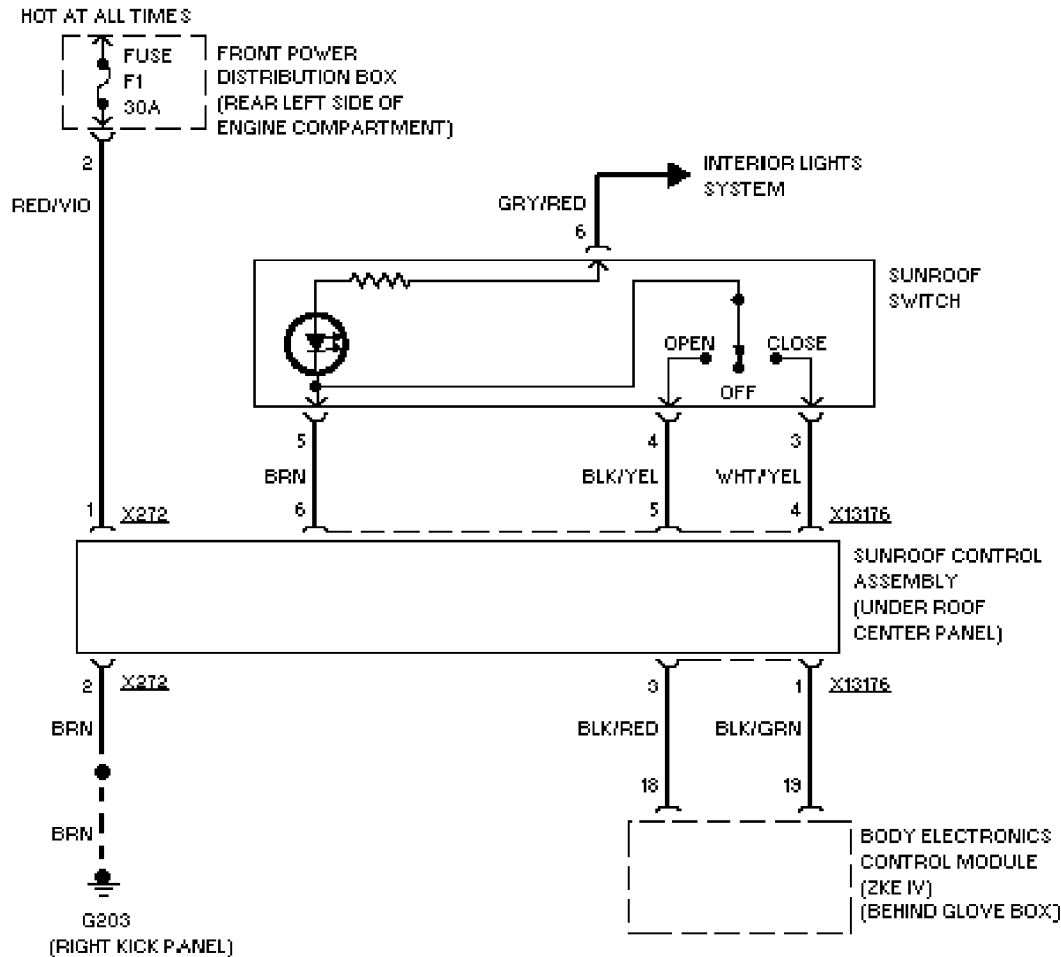

SYSTEM WIRING DIAGRAMS

Power Window Circuit (1 of 2)


1997 BMW 328i

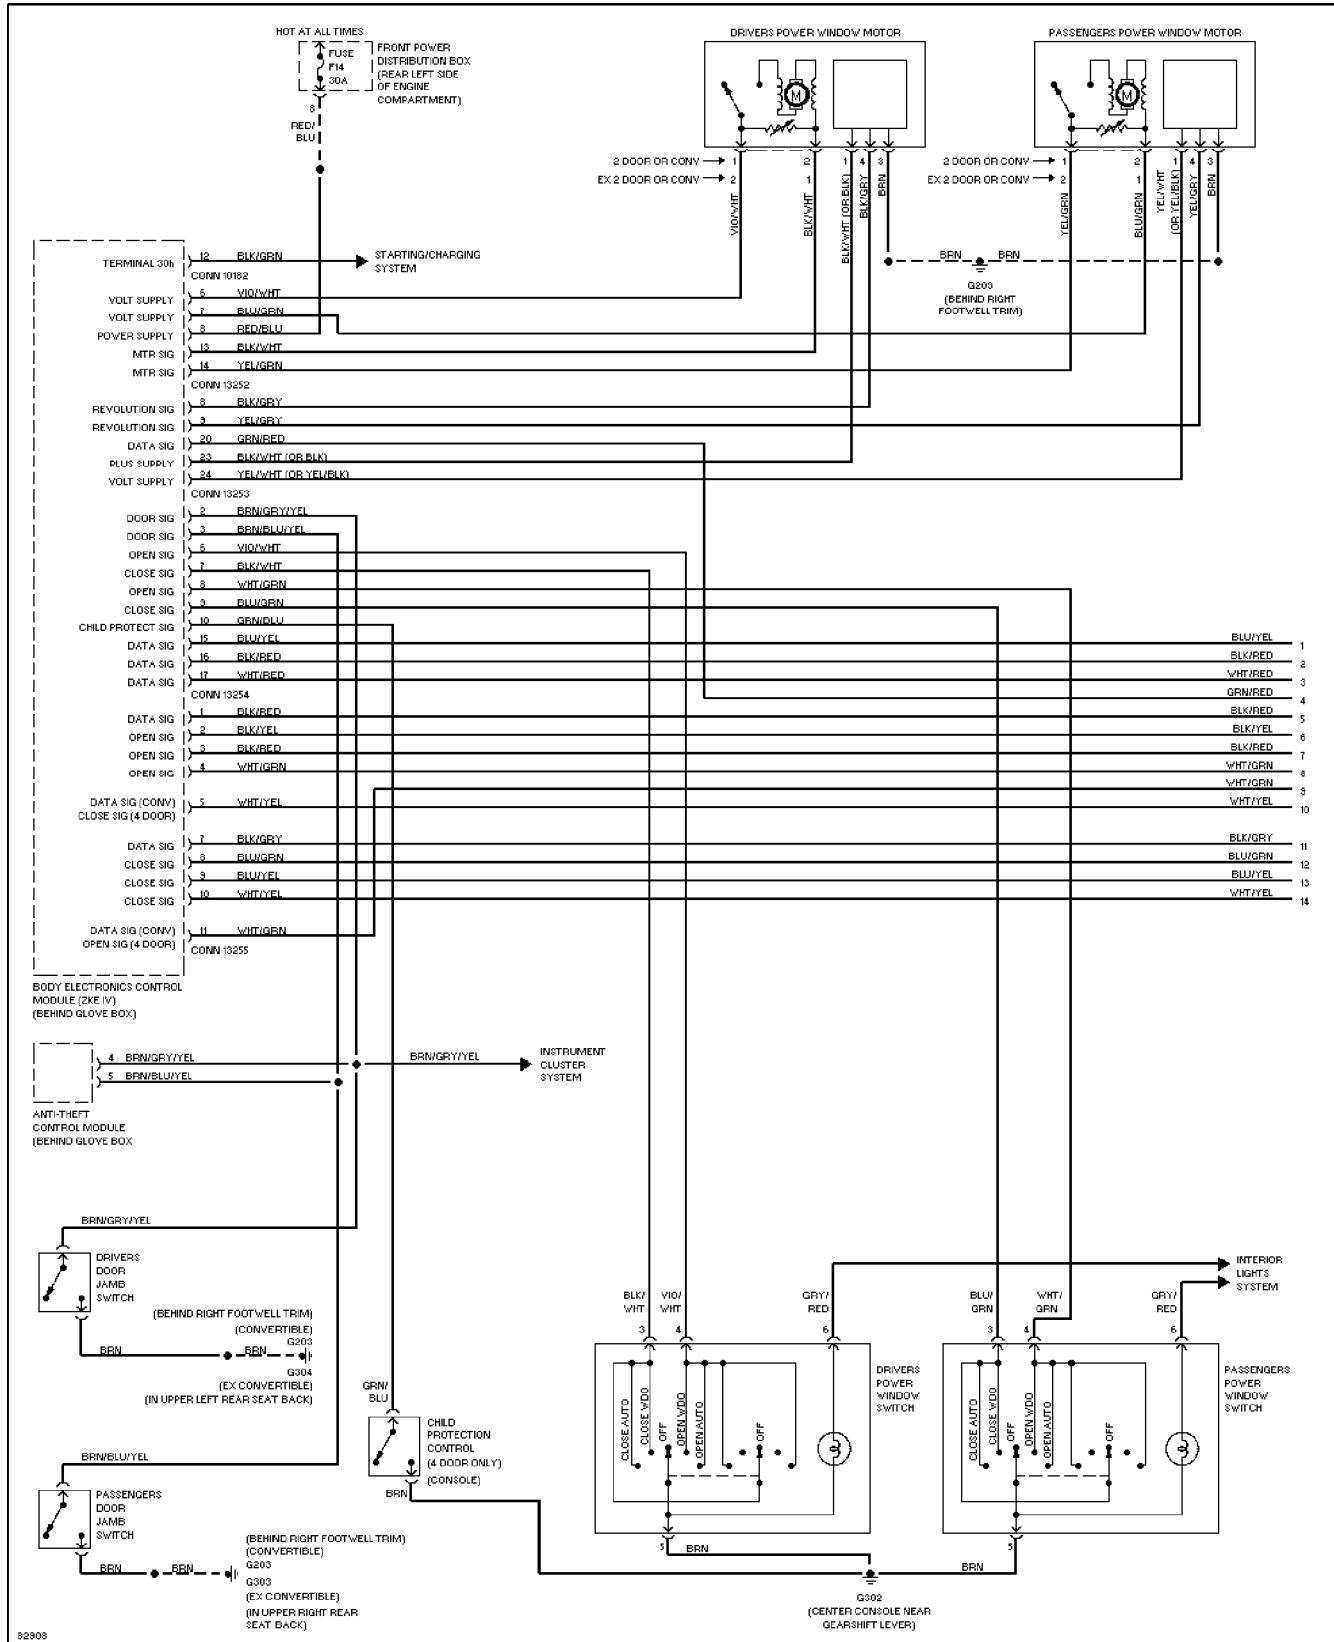

SYSTEM WIRING DIAGRAMS

Power Window Circuit (2 of 2)

1997 BMW 328i

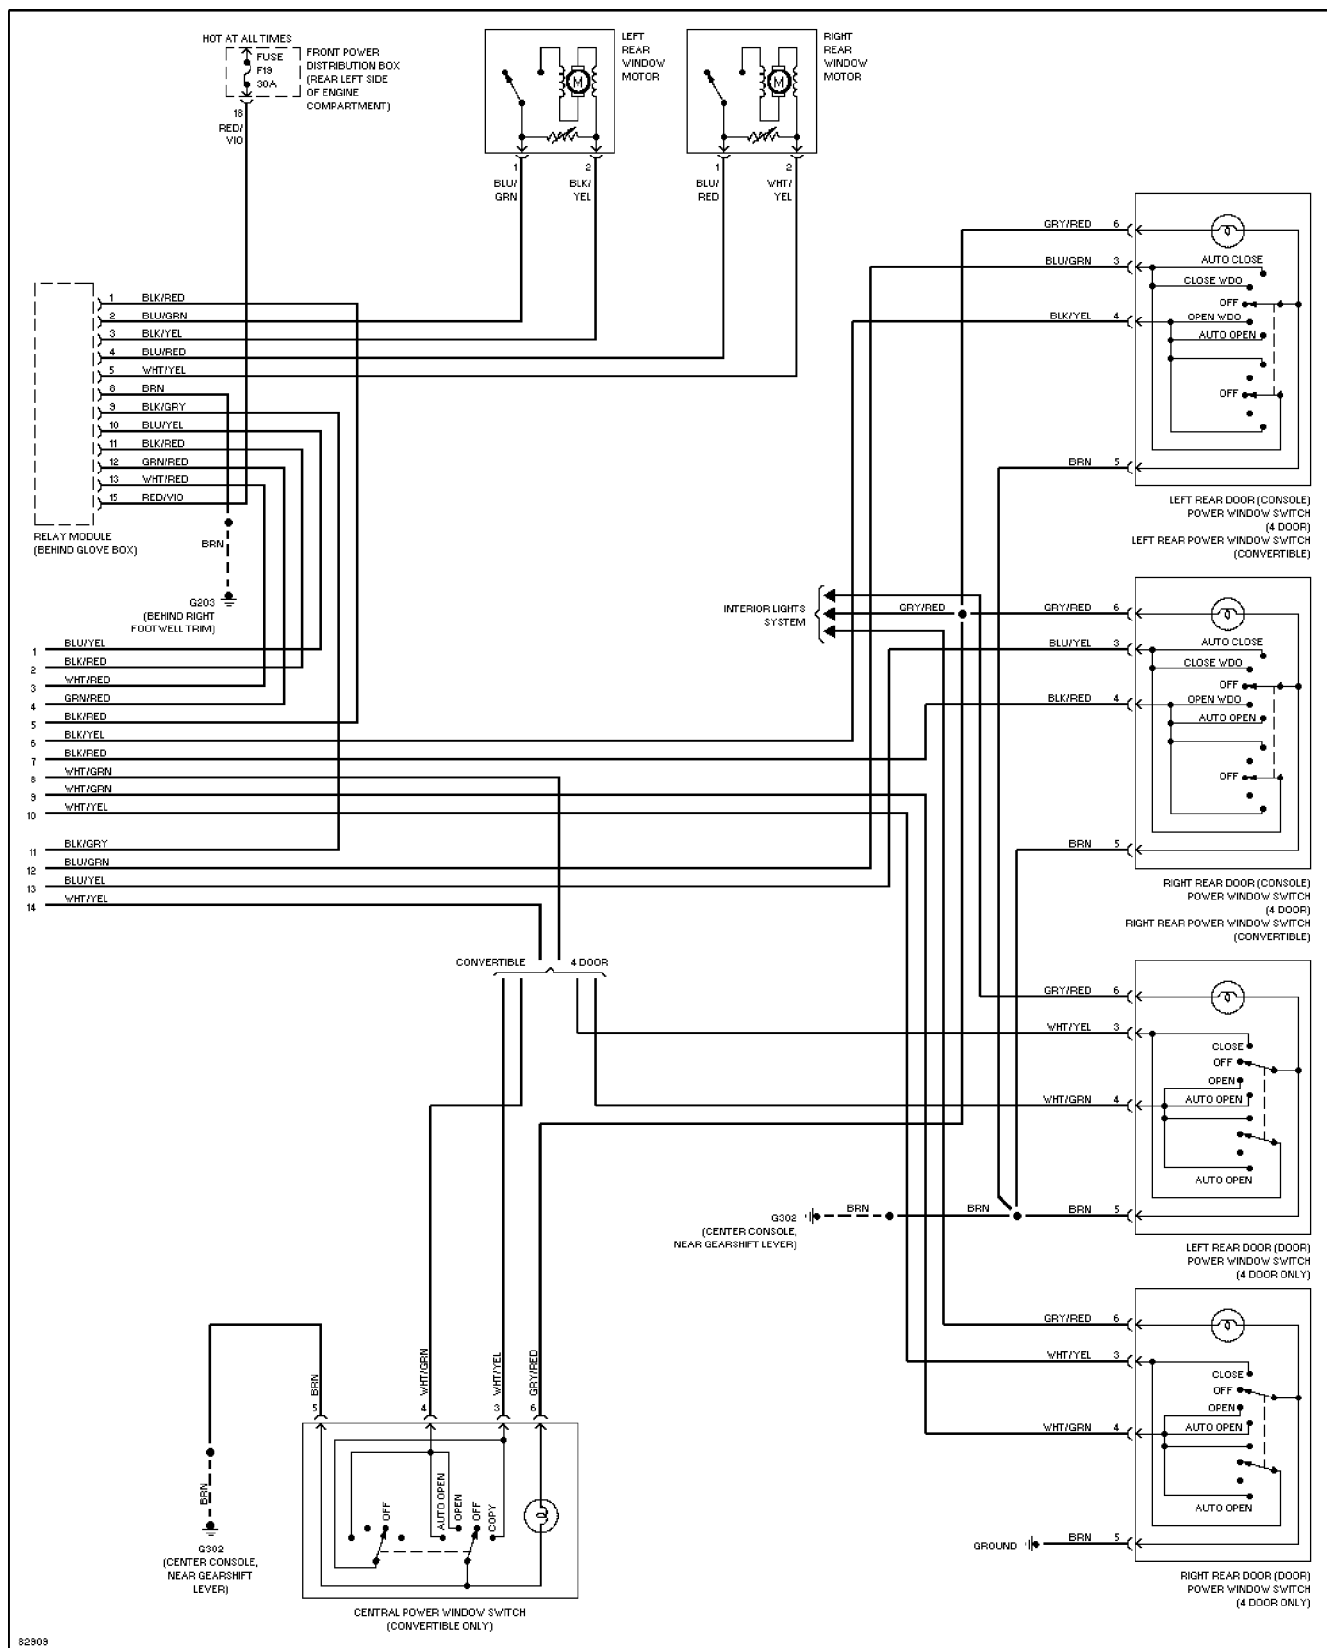


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Charging Circuit

1997 BMW 328i

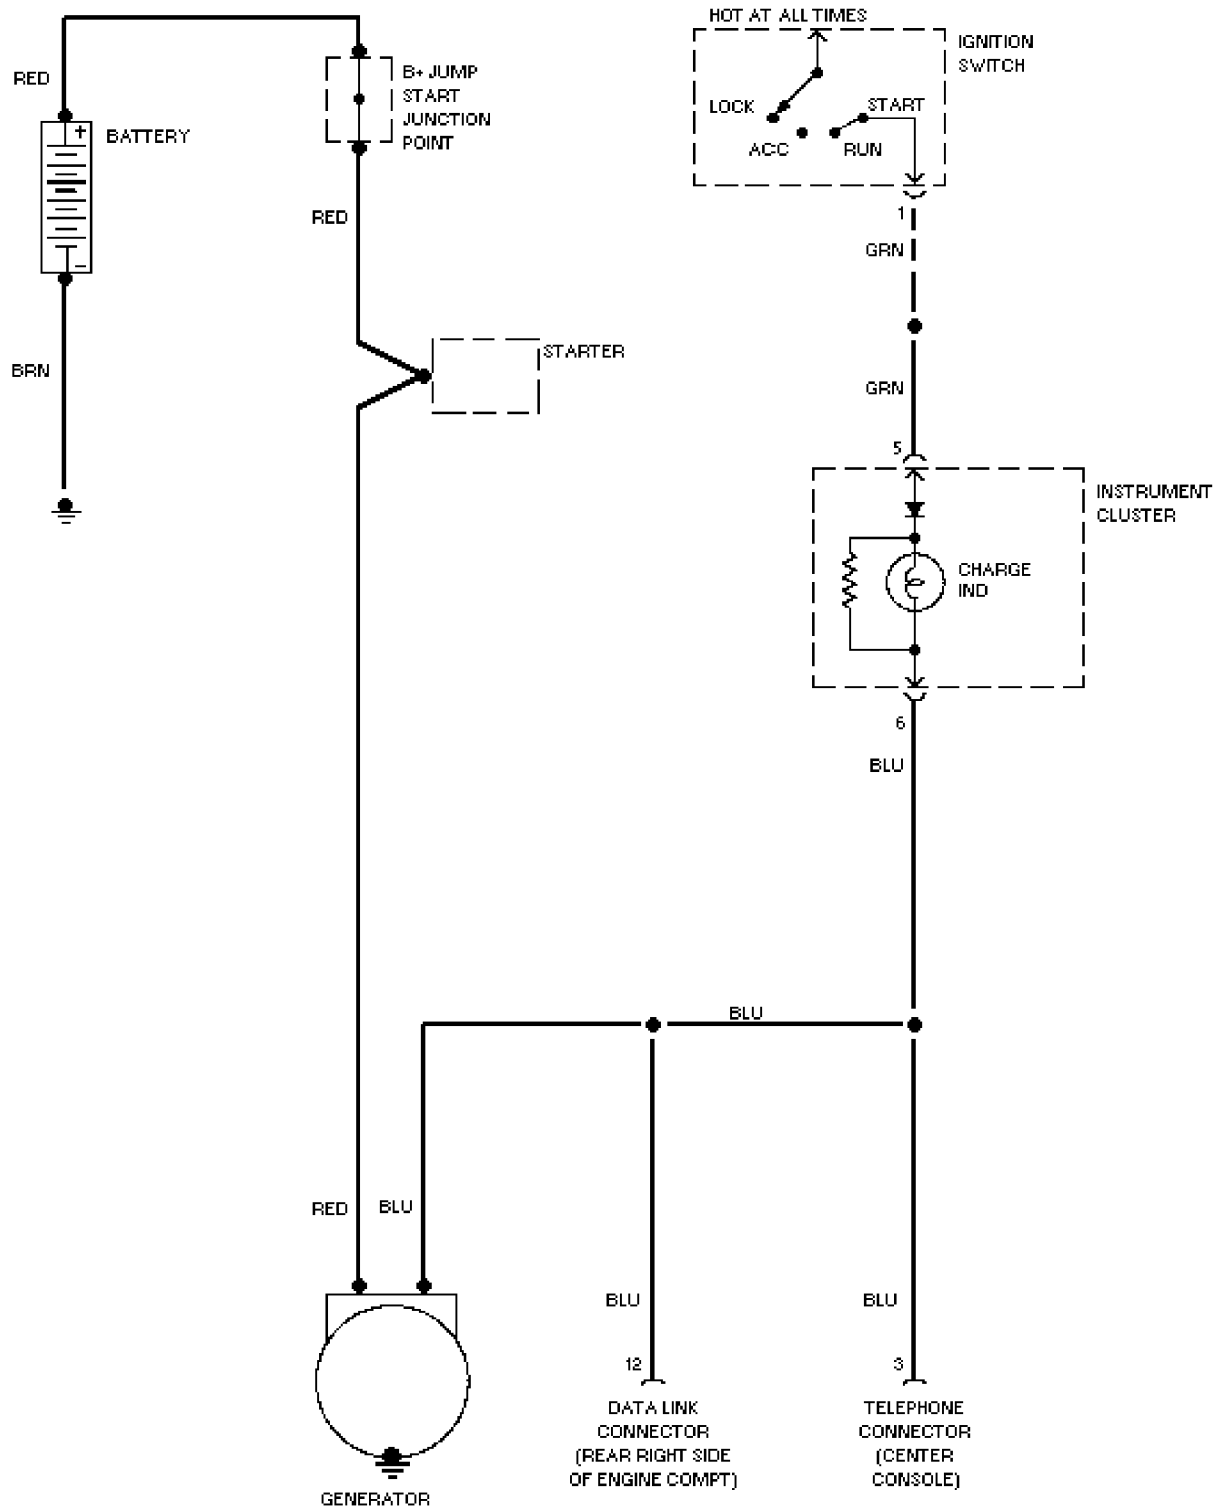


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Supplemental Restraint Circuit

1997 BMW 328i

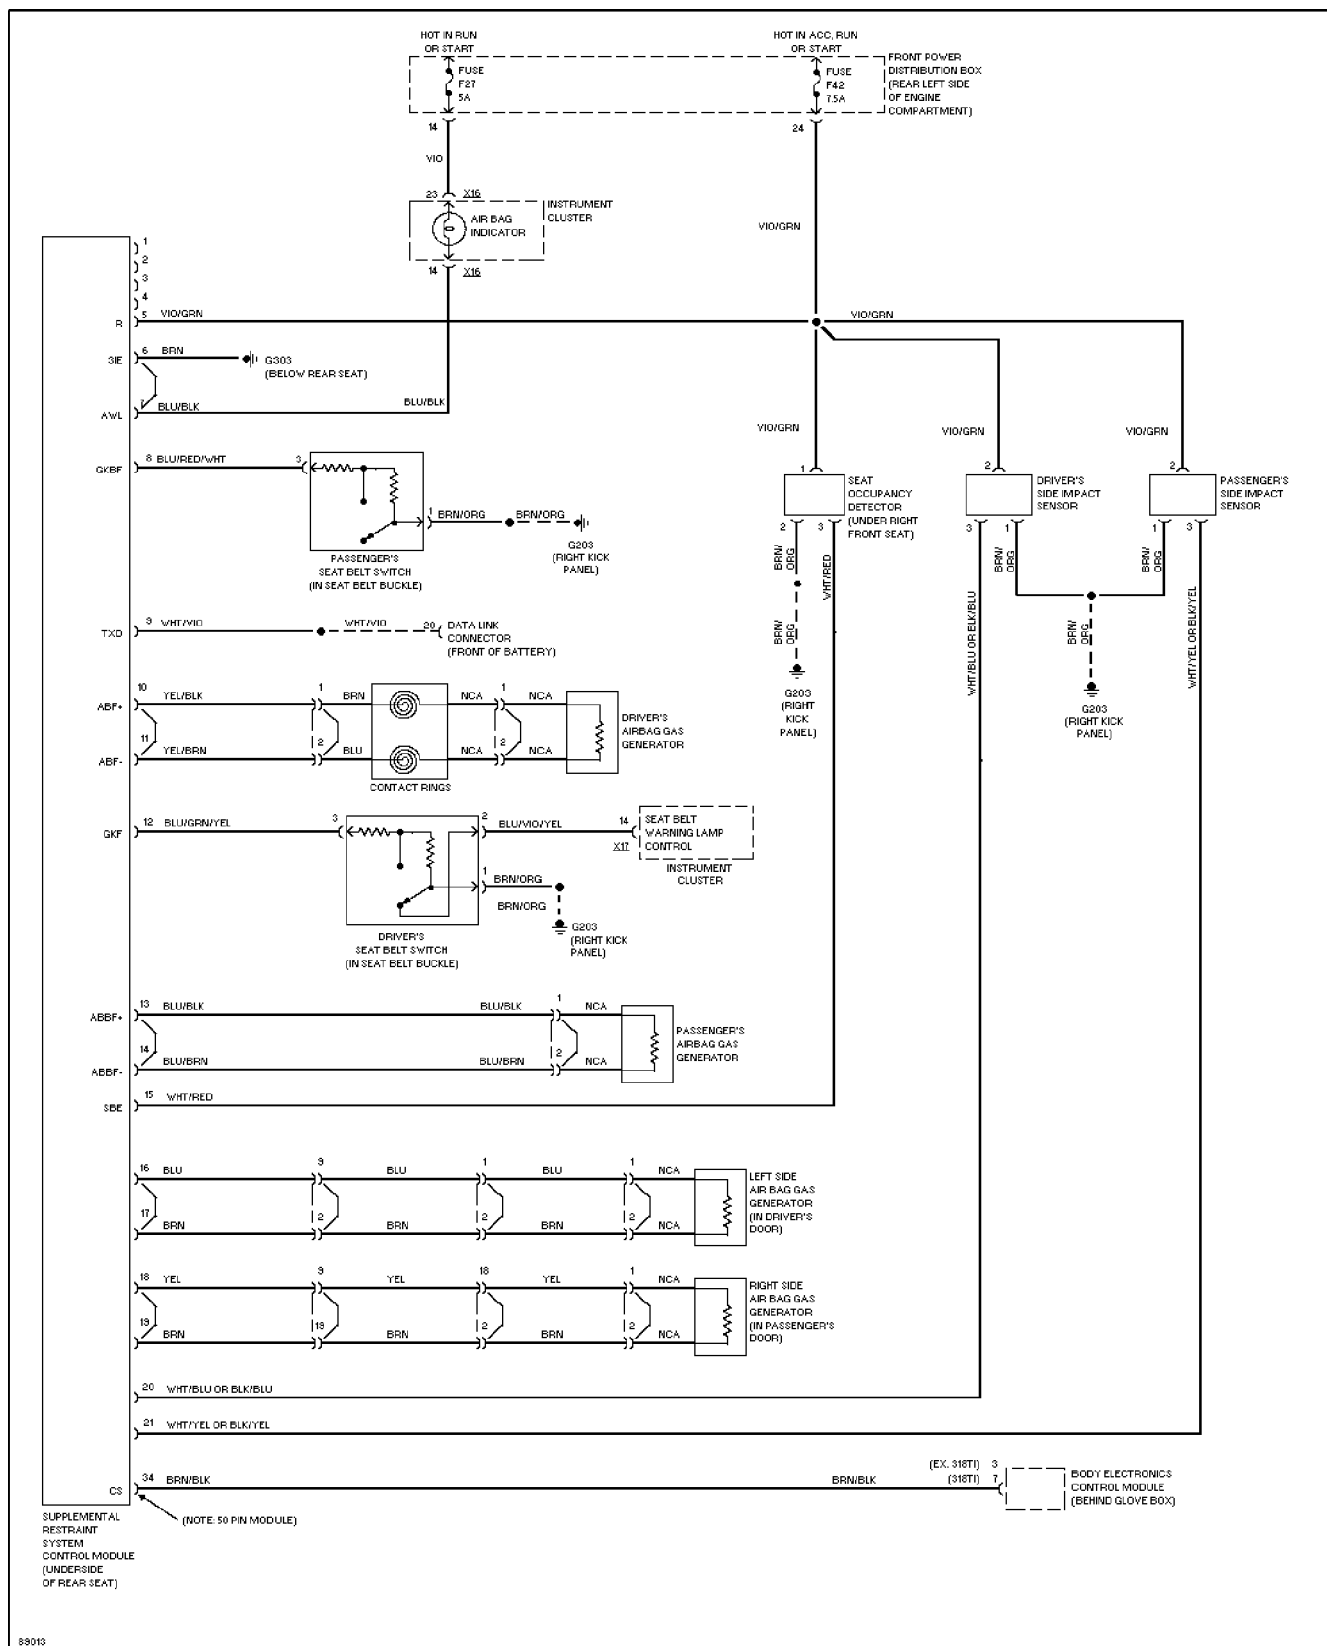

1997 BMW 328i




1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Transmission Circuit (1 of 2)

1997 BMW 328i

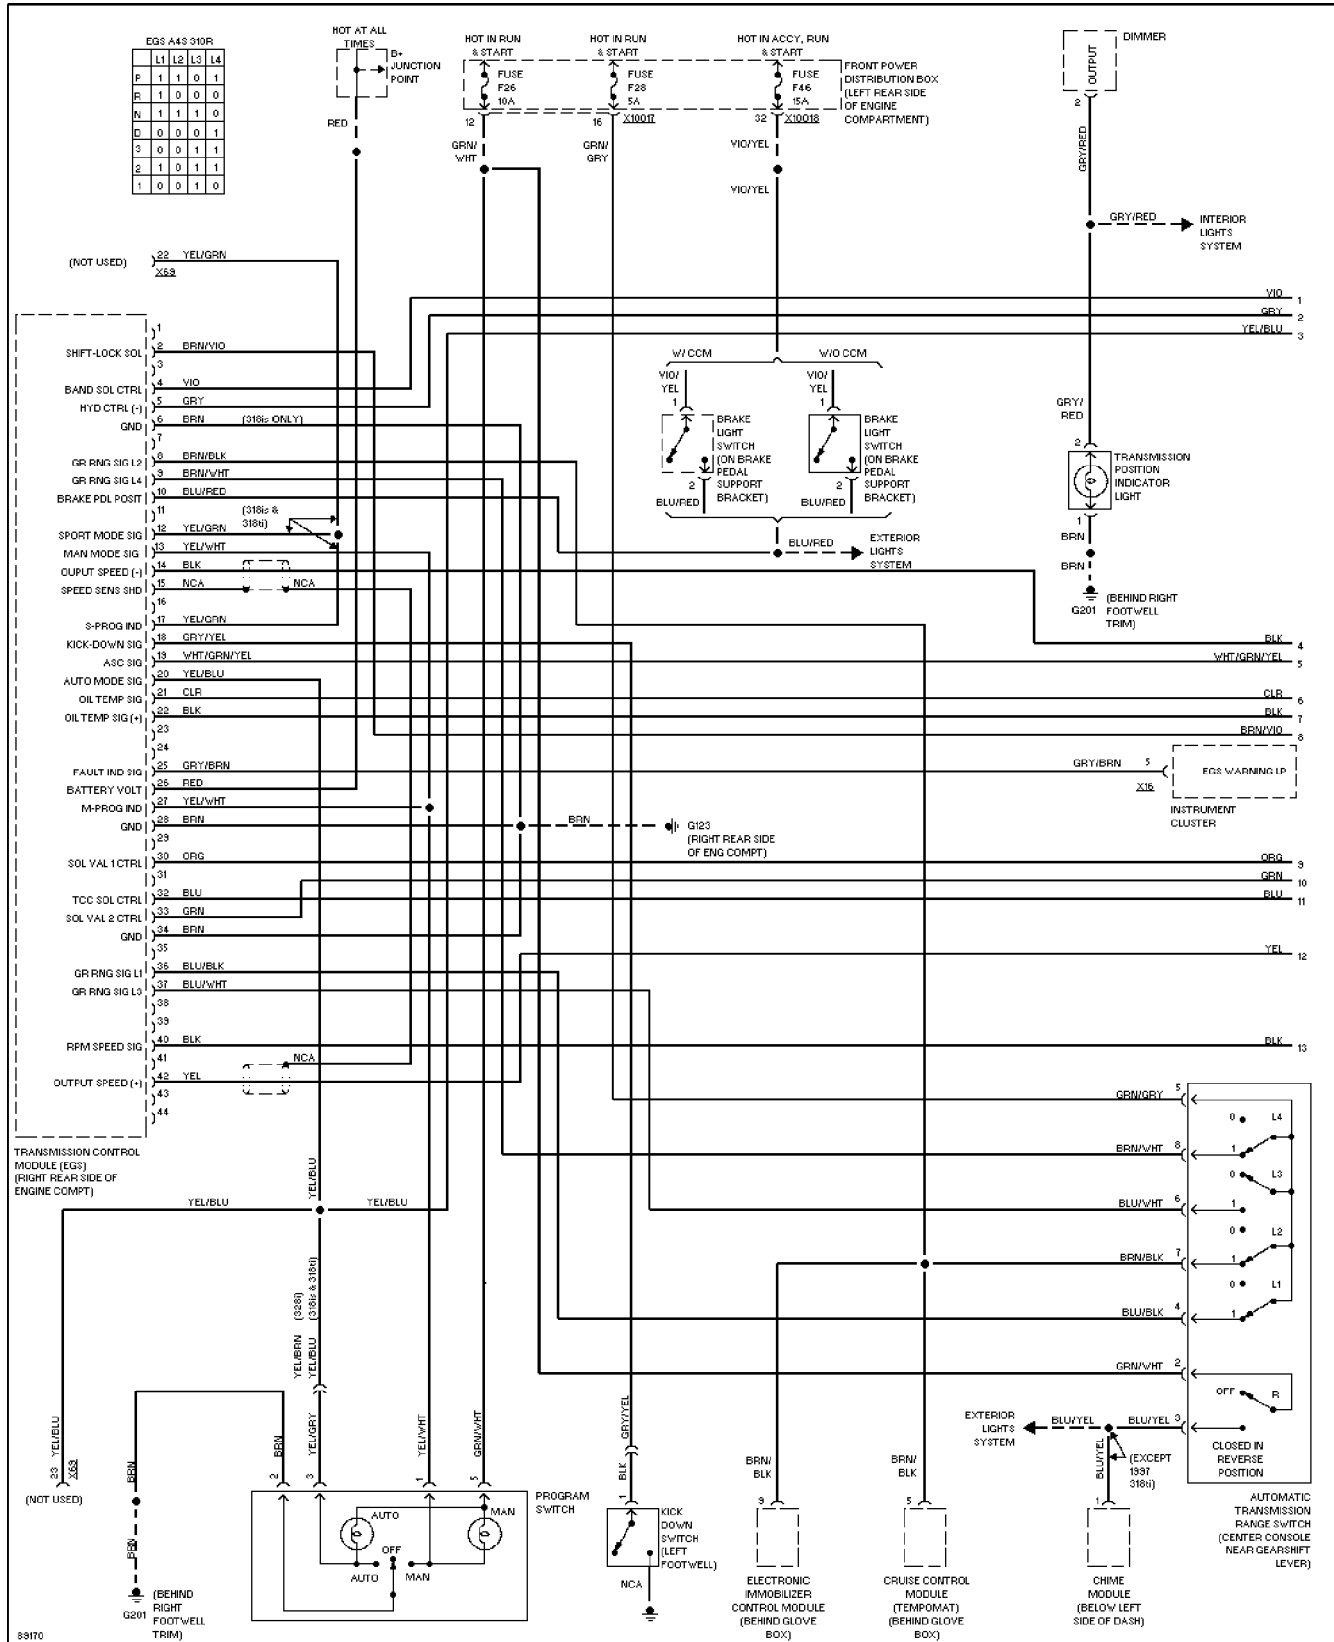


1997 BMW 328i



SYSTEM WIRING DIAGRAMS

Warning System Circuits


1997 BMW 328i

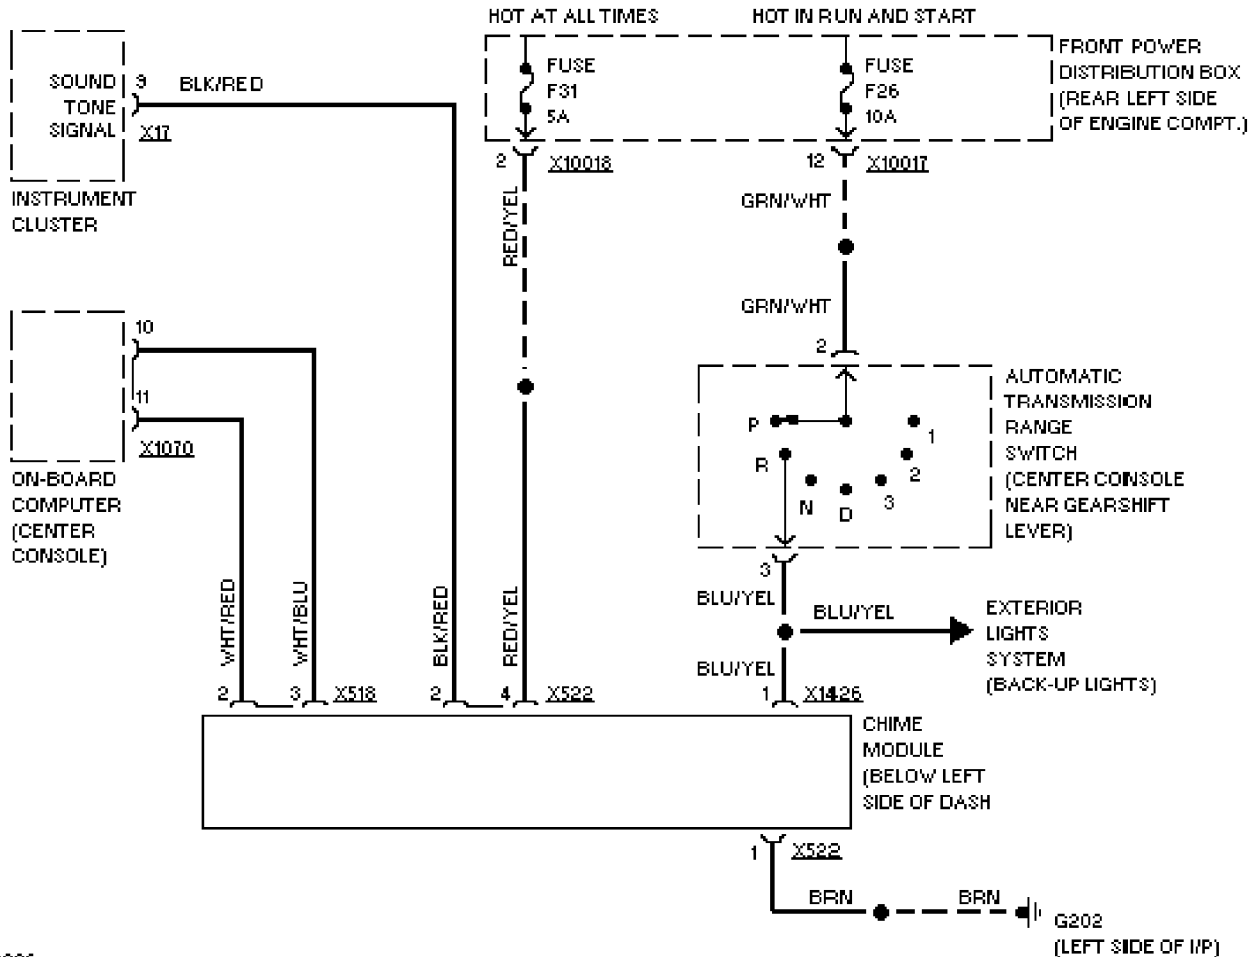

SYSTEM WIRING DIAGRAMS

Wiper/Washer Circuit, Canada

1997 BMW 328i

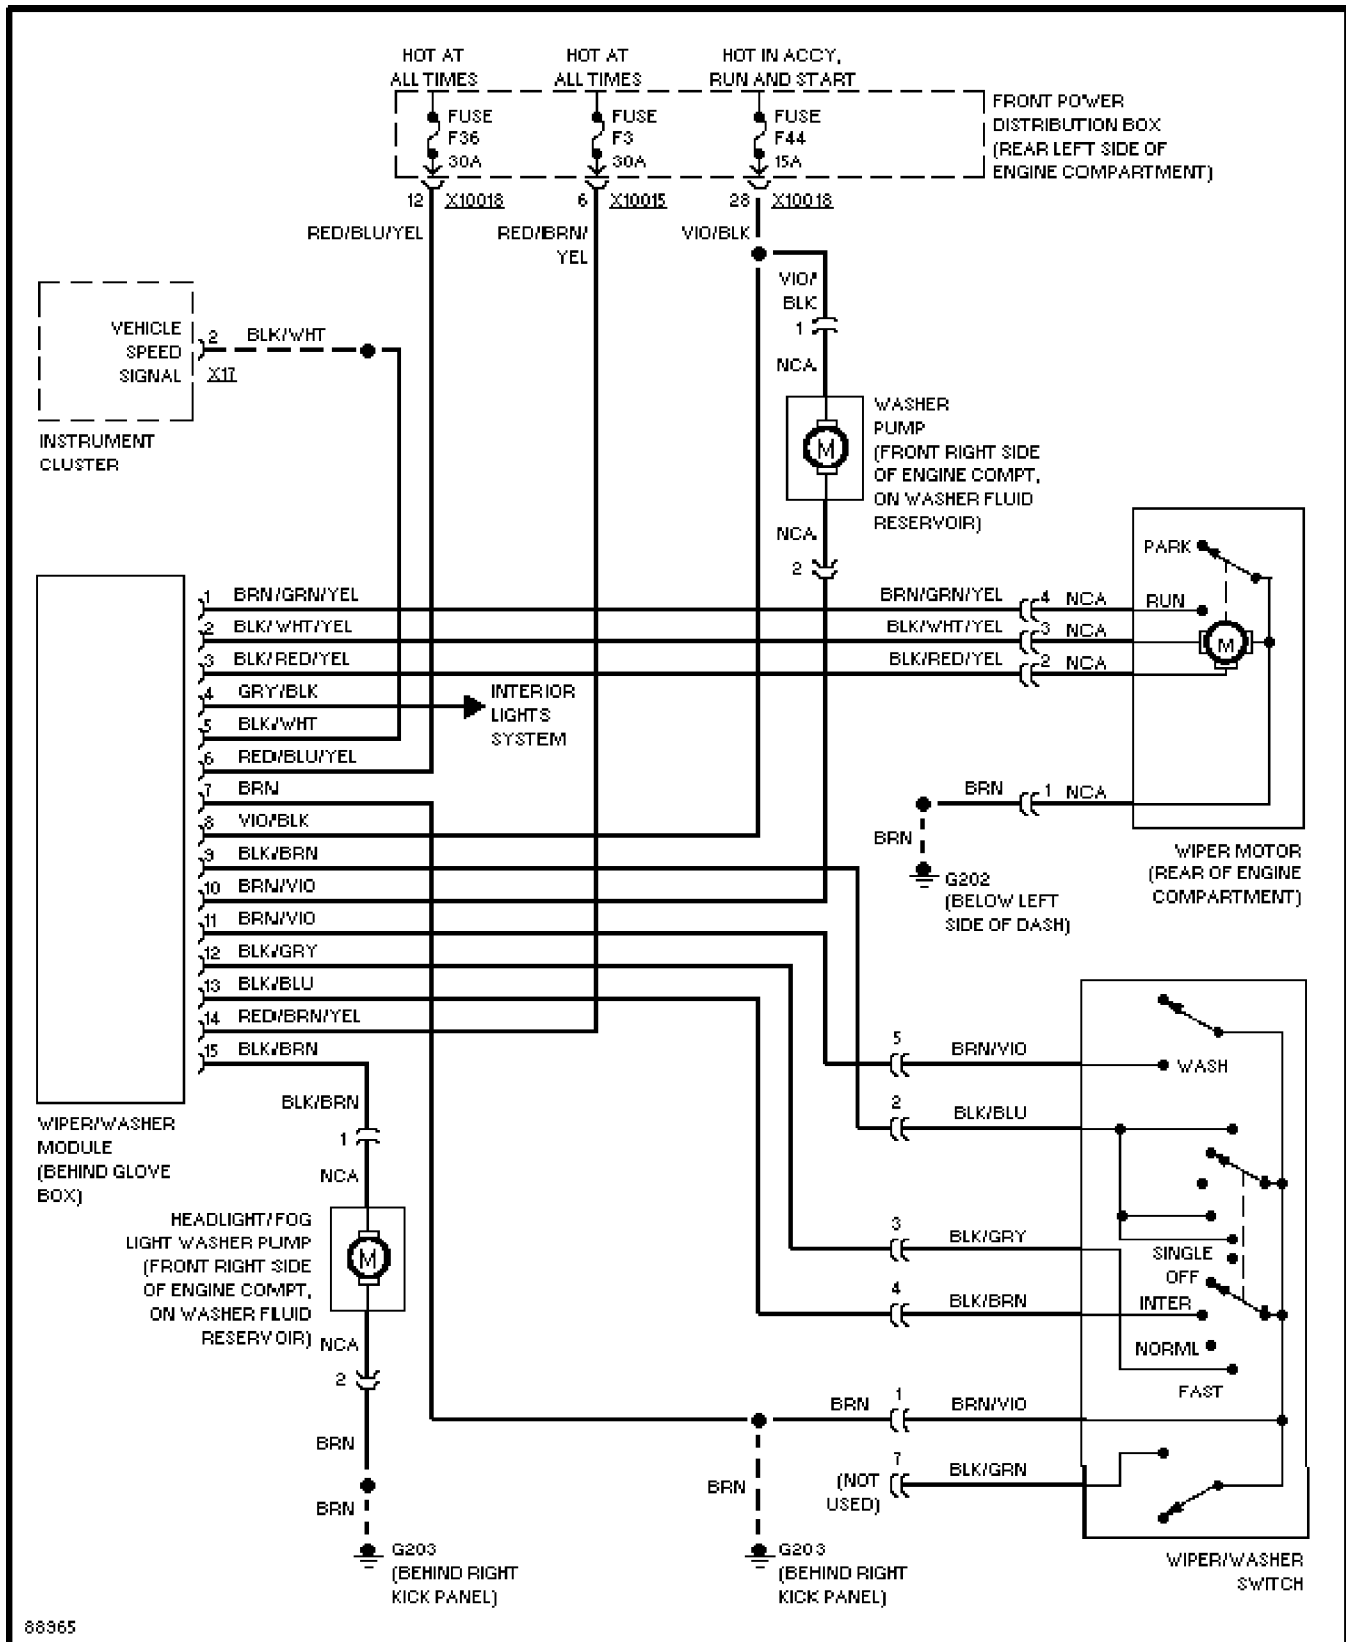

SYSTEM WIRING DIAGRAMS

Wiper/Washer Circuit, USA

1997 BMW 328i

