


If you are buying or building a **Kit - Aero Open Hand**

Things you Might need :

- Proto Board - [4PCS Breadboards Kit Include 2PCS 830 Point 2PCS 400 Point Solderless Breadboards for Proto Shield Distribution Connecting Blocks: Amazon.com: Industrial & Scientific](#)
- DC Power Supply - [Amazon.com: inShareplus 6V Low Voltage Power Supply, Transformer, Power Adapter, 10A 60 Watt Max, AC 100-240V to DC 6V, with 5.5/2.1 DC Female Barrel Connector : Electronics](#)
- Seeed Studio ESP32S3 - [Amazon.com: Seeed Studio XIAO ESP32S3-2.4GHz Wi-Fi, BLE 5.0, Dual-core, Battery Charge Supported, Power Efficiency and Rich Interface, Ideal for Smart Homes, IoT, Wearable Devices, Robotics ... : Electronics](#)
- Pin Headers - [HiLetgo 20pcs 40P 2.54mm Pitch Single Row Pin Header Strip 40Pin 2.54mm Pitch: Amazon.com: Industrial & Scientific](#)
- 3 Jumper Wires Pin - Pin (Male to Male) - [Antrader Multicolored Breadboard Jumper Wires 40 Pin 10CM Male to Male Ribbon Cables: Amazon.com: Industrial & Scientific](#)
- Soldering Material



Next Step: Solder Pin Headers to your ESP32 S3

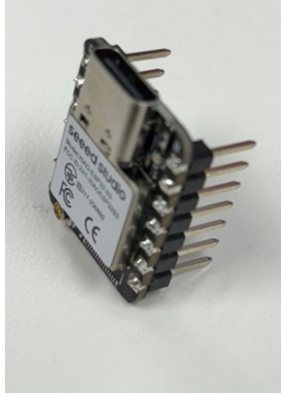

Once ESP is Soldered, Try to use Multimeter to check if any connections are not shorted Together.

Take out 3 Pin to Pin headers and the TTLinker Mini Servo Board.
Do the Connections on Protoboard

ESP TX ↔ TX
ESP RX ↔ RX
GND ↔ GND

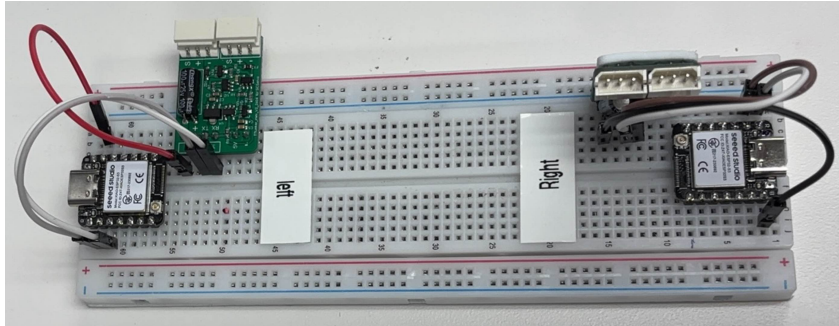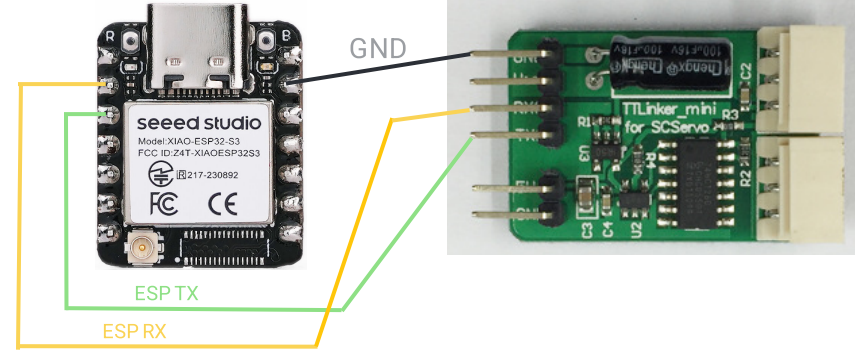

Once Setup is Done,
It should look like this.

Note: This setup is do to control 2 hands , Left to Control Left hand.
Right Indicates the same setup to control right hand.
It contains the same TTLinker mini board, Just at different angles.


Once ProtoBoard is Setup,
You need stable 6V 10A supply and a 3P Molex Connector and all set , Ready to go.




Connect to one of the
2 plugs of the TTL Linker Mini

Power
6V 10A

Servo Cable of Hand

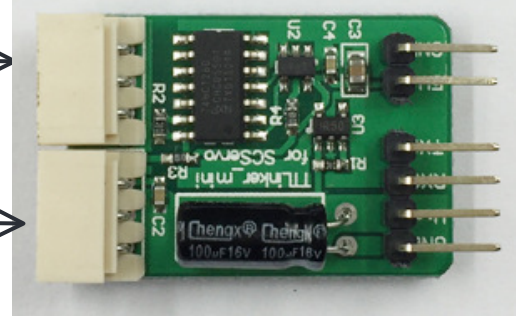


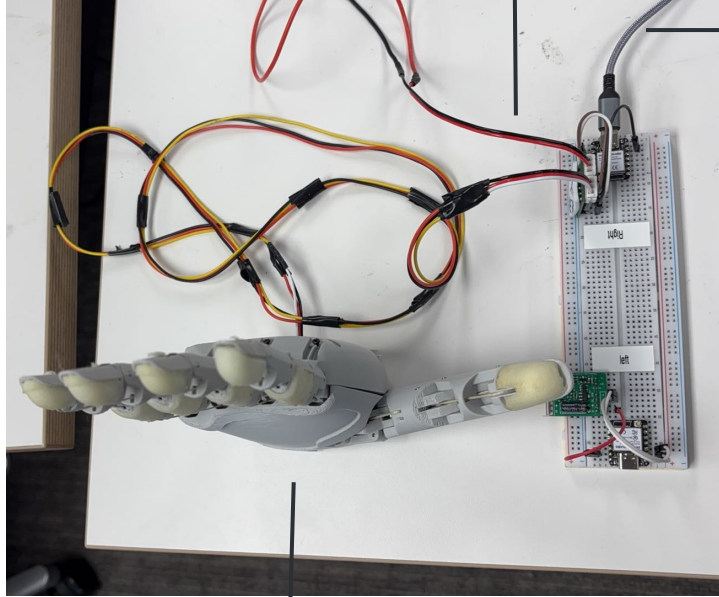

DC Power Supply 6V 10A

USB C to PC

Right Hand

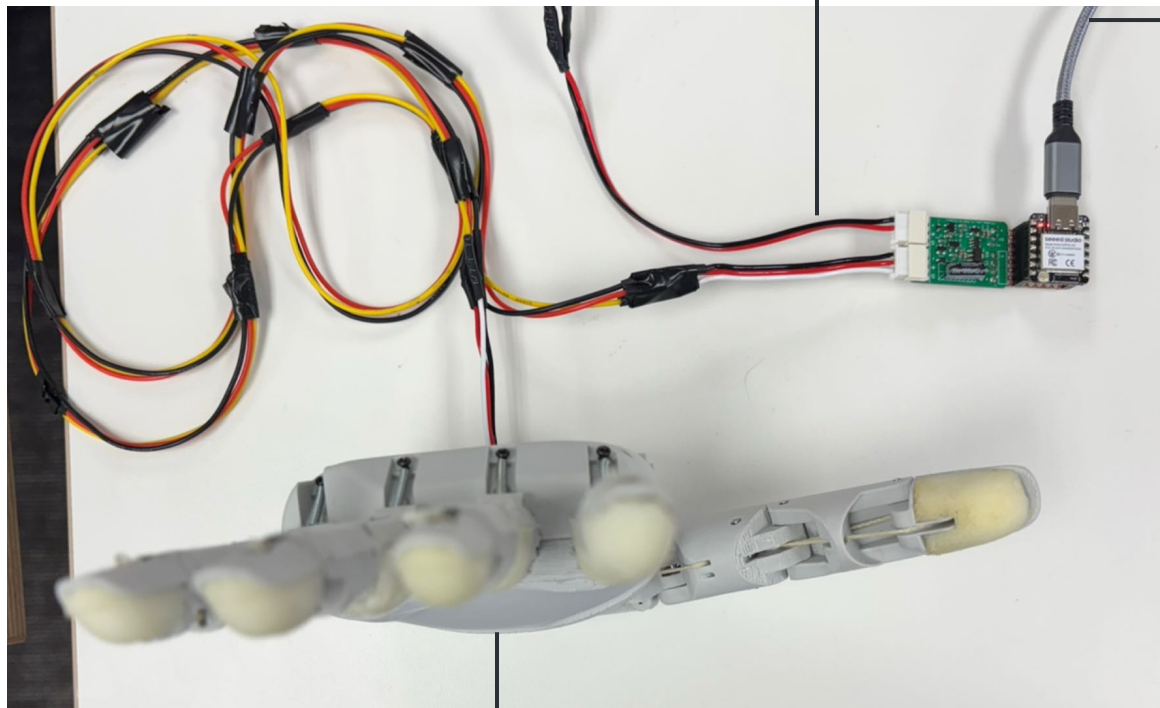

DC Power Supply Stable 6V 10A



USB C to PC



Right Hand

