


QMTECH

Cyclone V SoC Mister Case

Step by Step

6 PCBs in Total

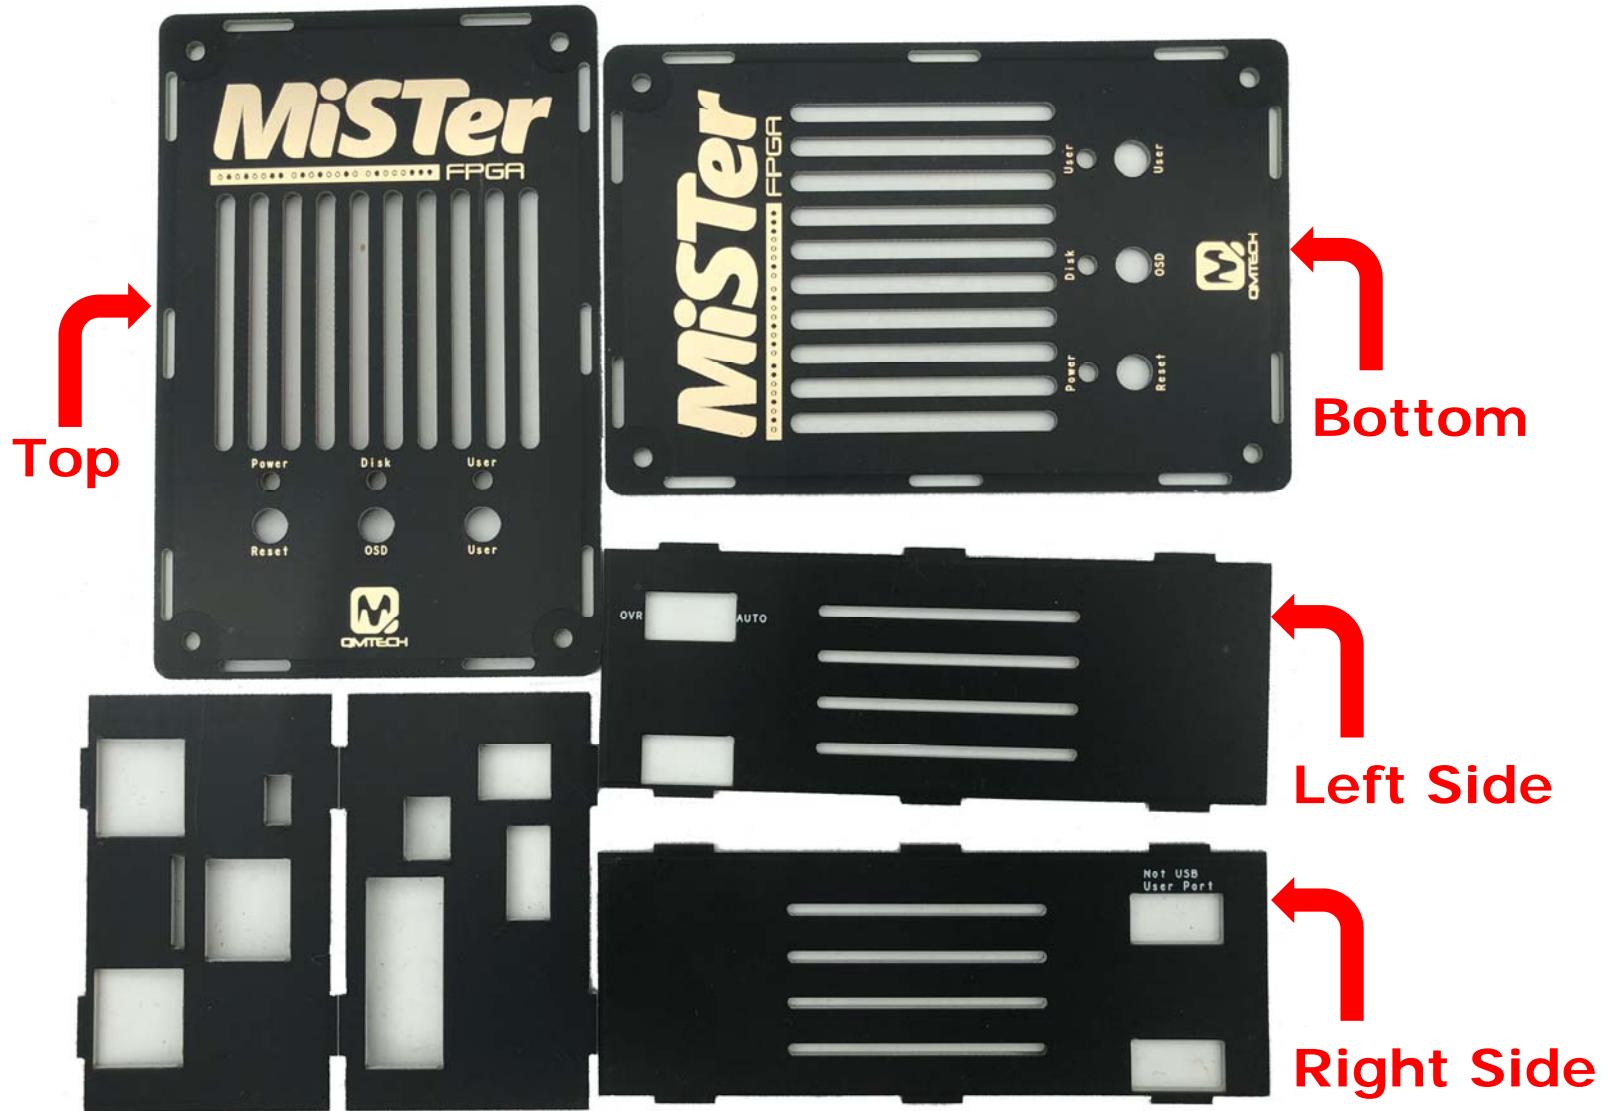

Notice:

Top and Bottom are using the same PCB.

Left side and Right side are using the same PCB.


Screws and Key Hats???




Step 1: Start from Bottom




Step 2: 5mm Screws

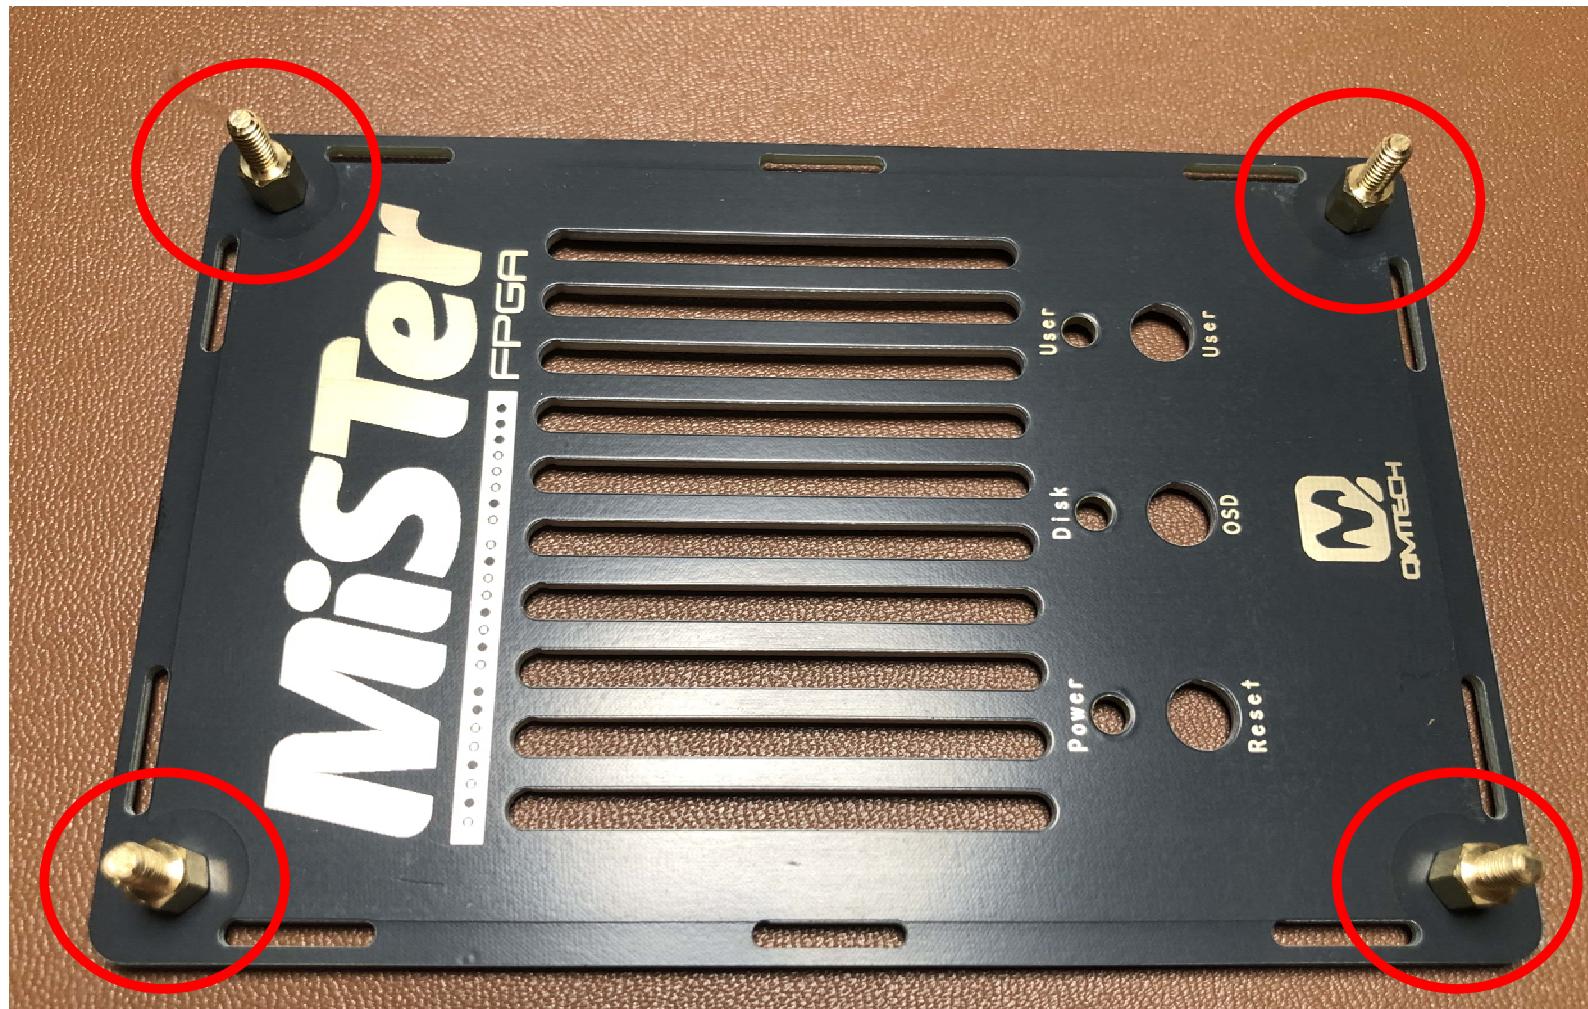


Step 3: Board with Built-in SDRAM

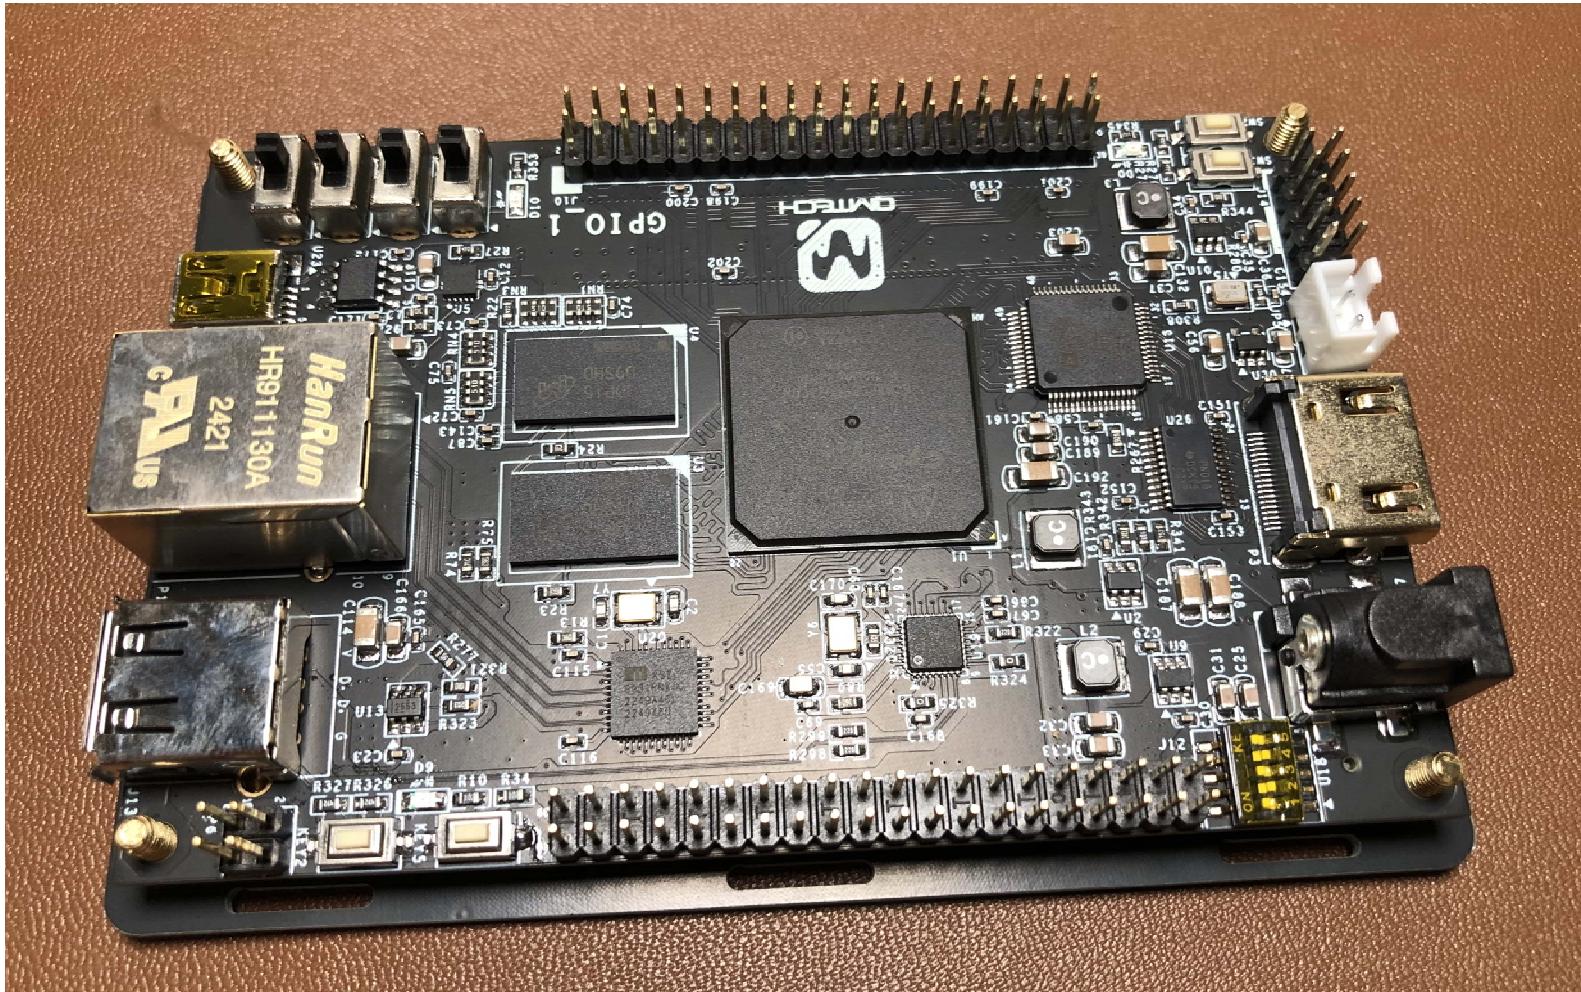


Step 3: Board with SDRAM Module

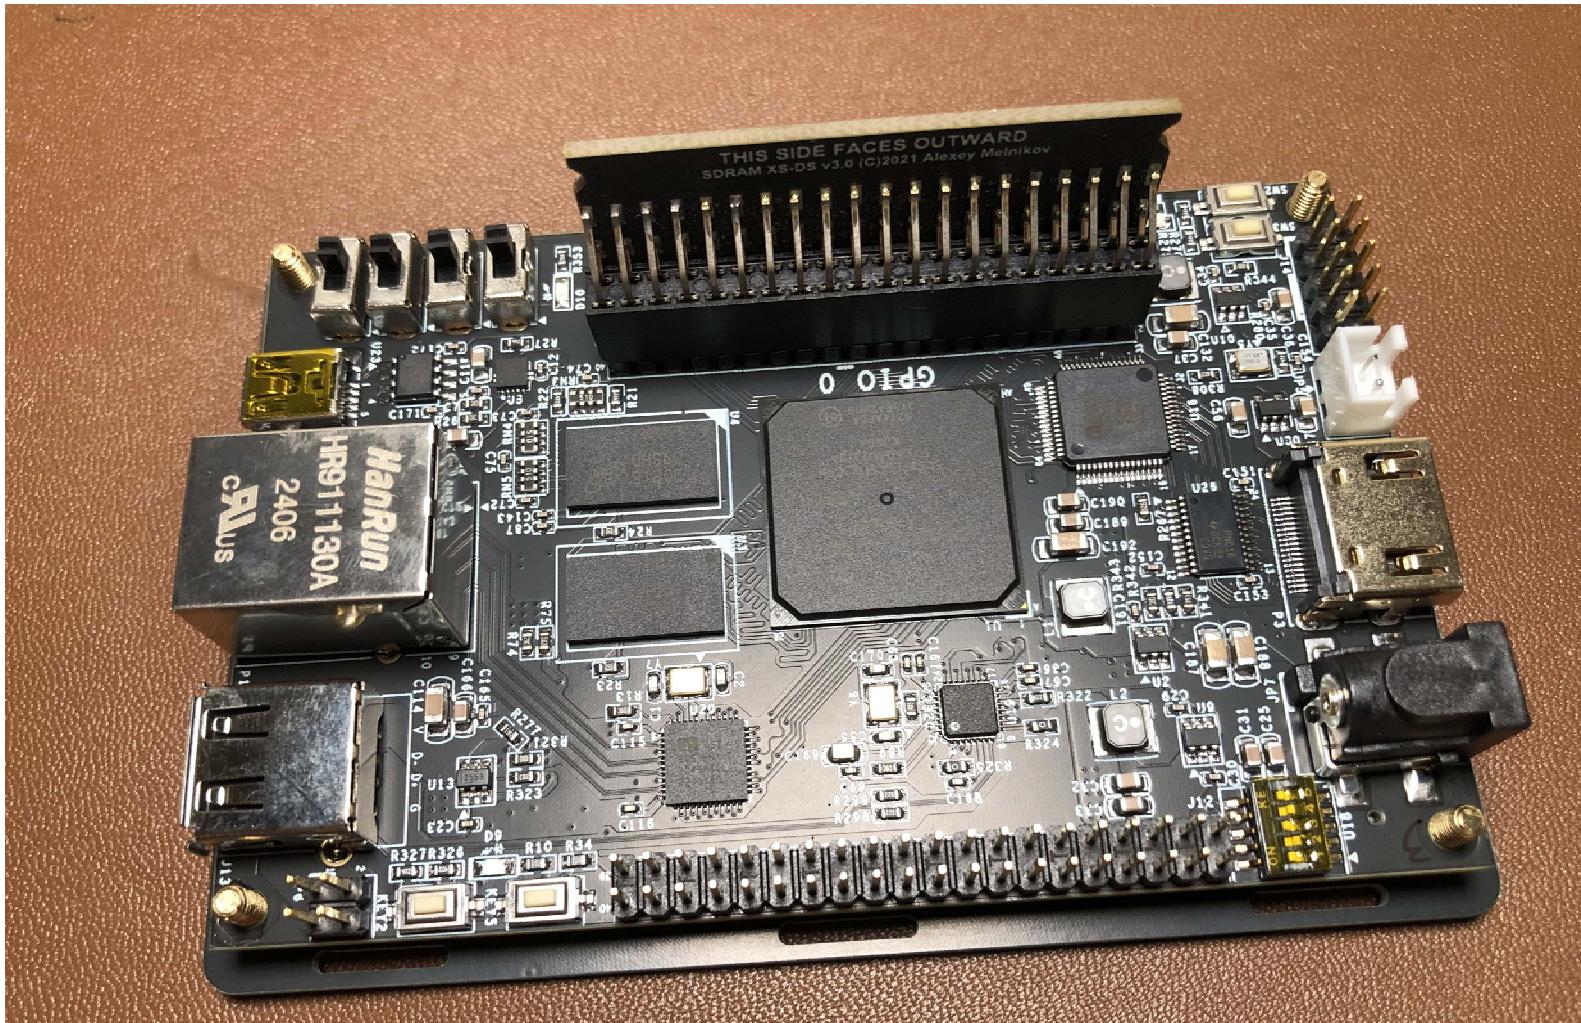


Step 4: 16mm Screws

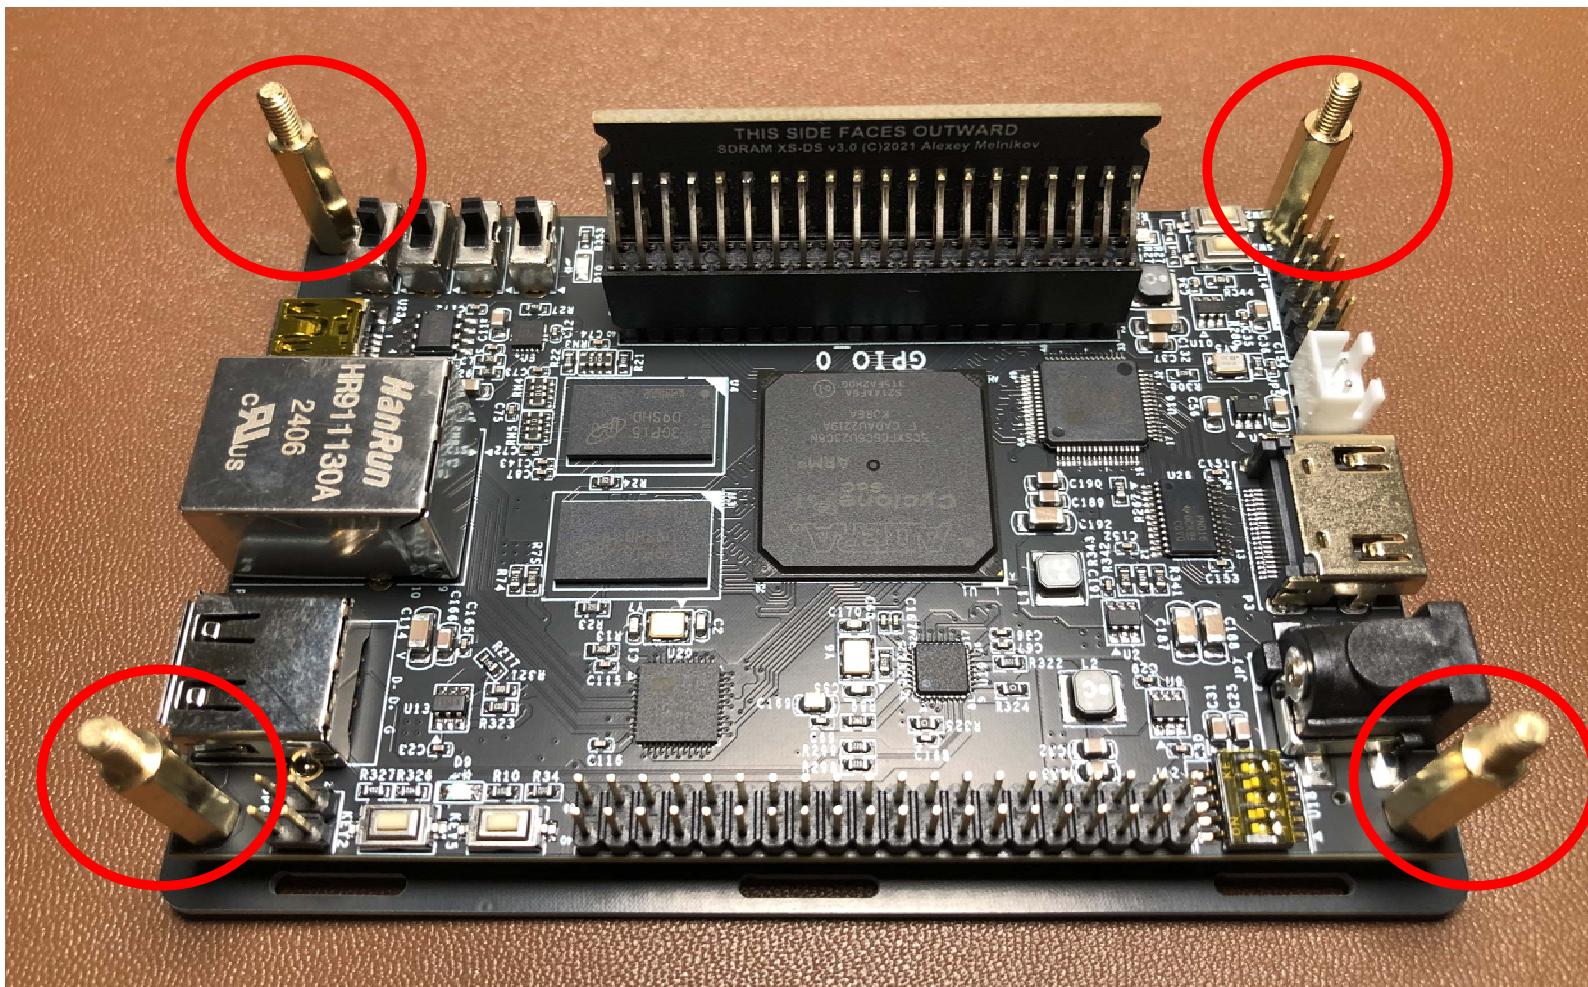


Step 5: Install IO Board

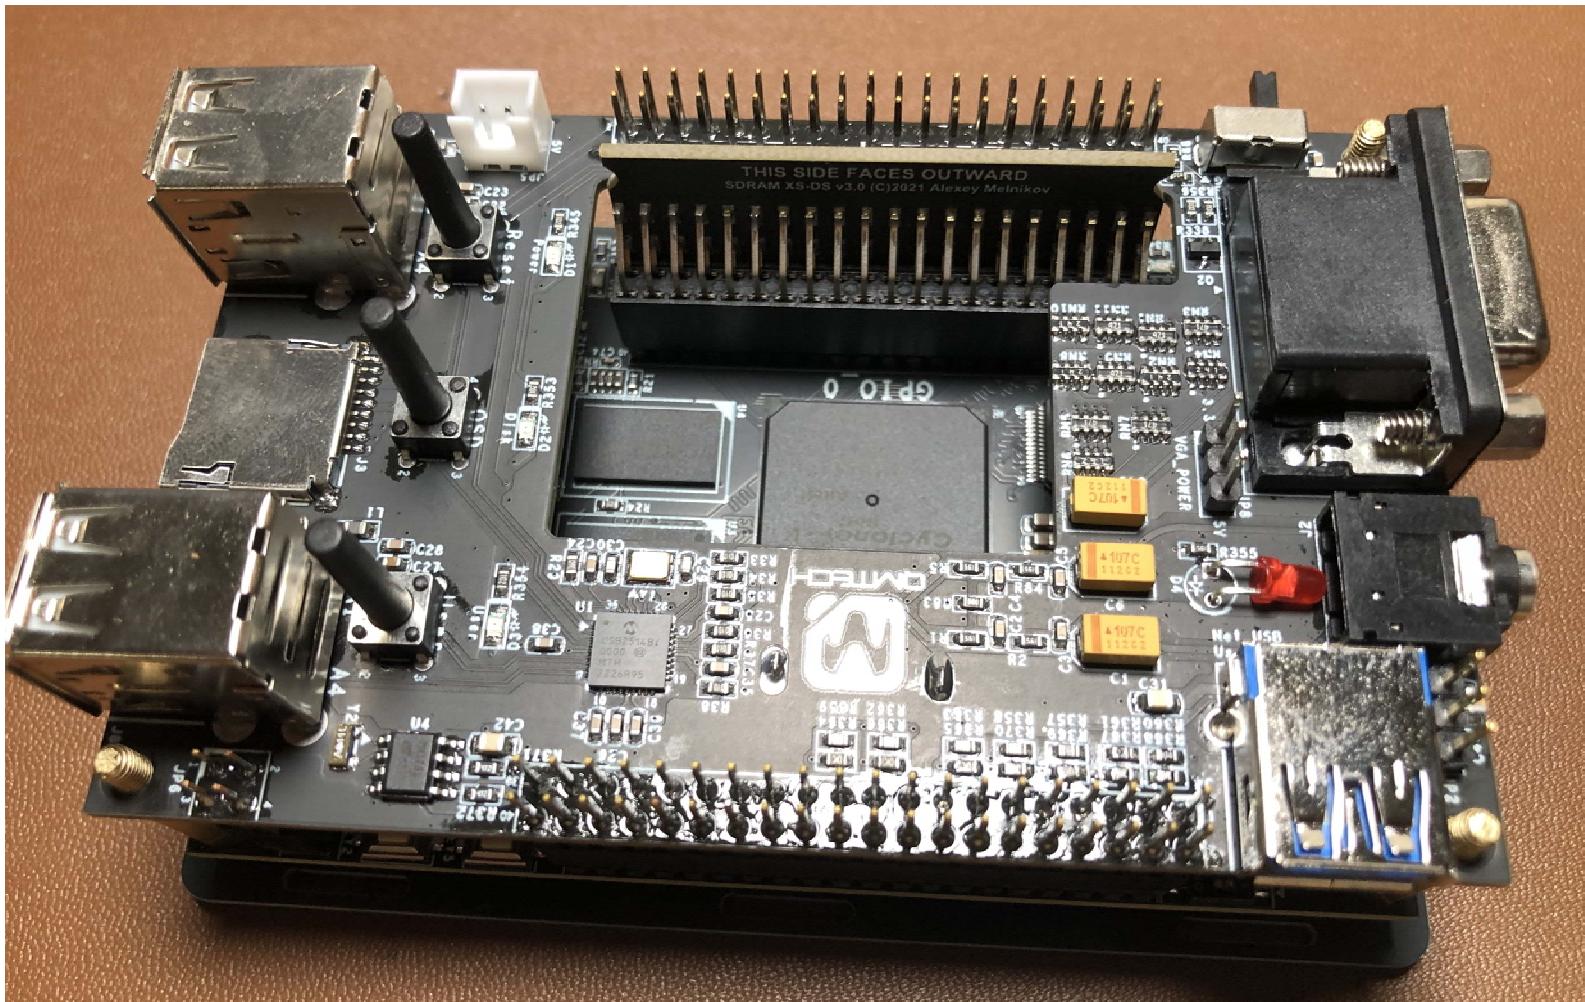


Step 6: 4P Connector for USB Hub

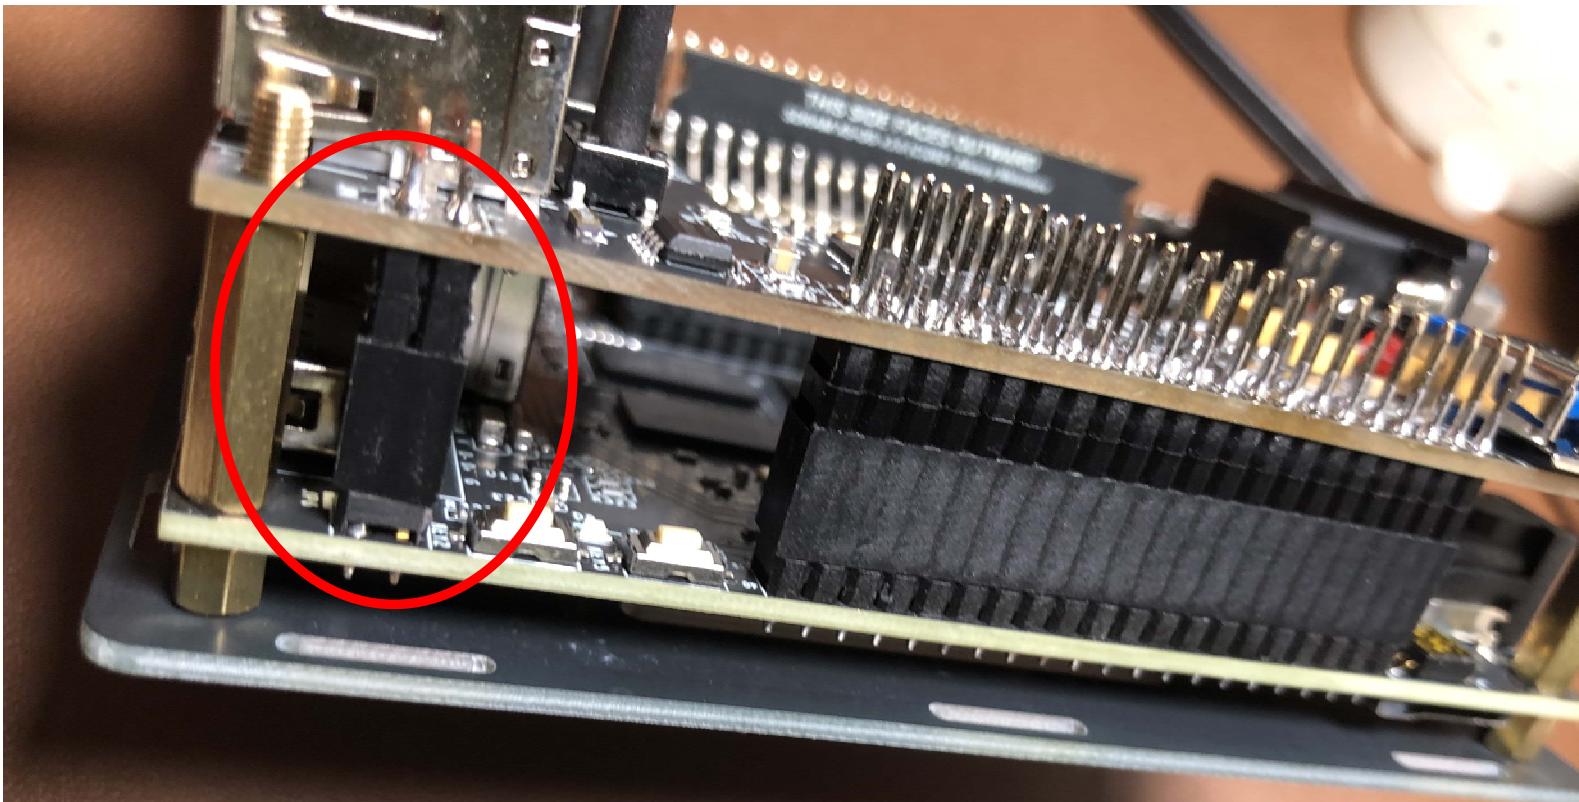


Step 7: 16mm Screws and Hats for Keys

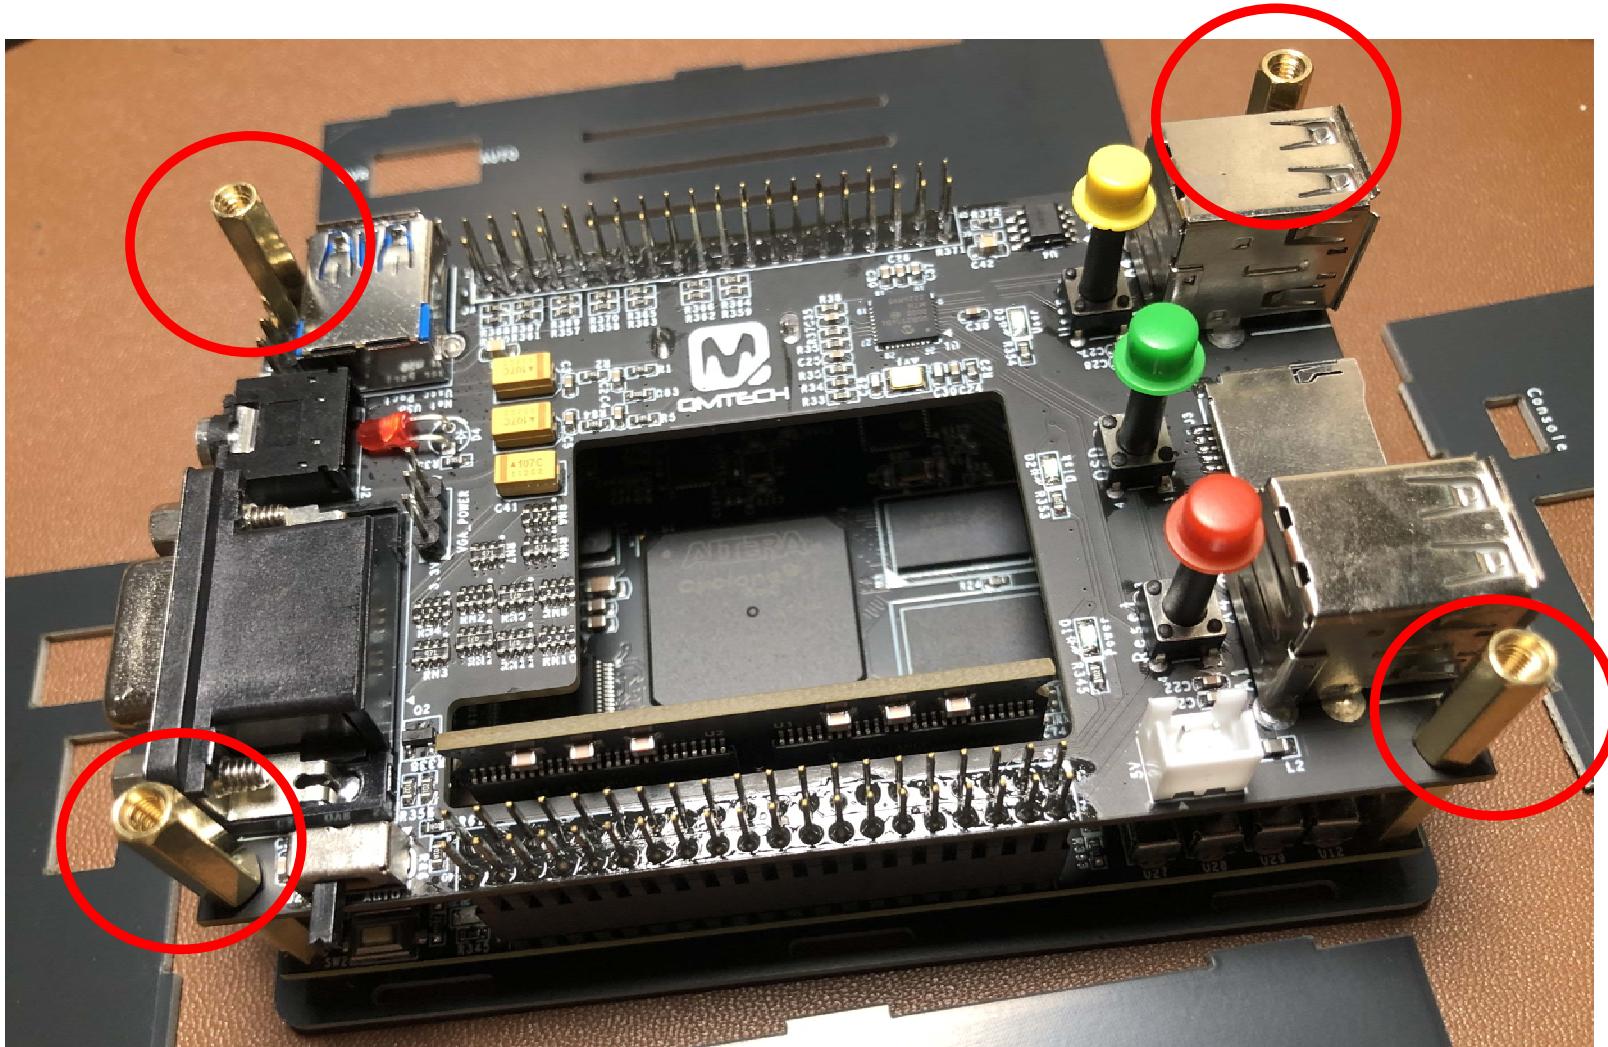

Step 8: SNAC and TF Card Slot

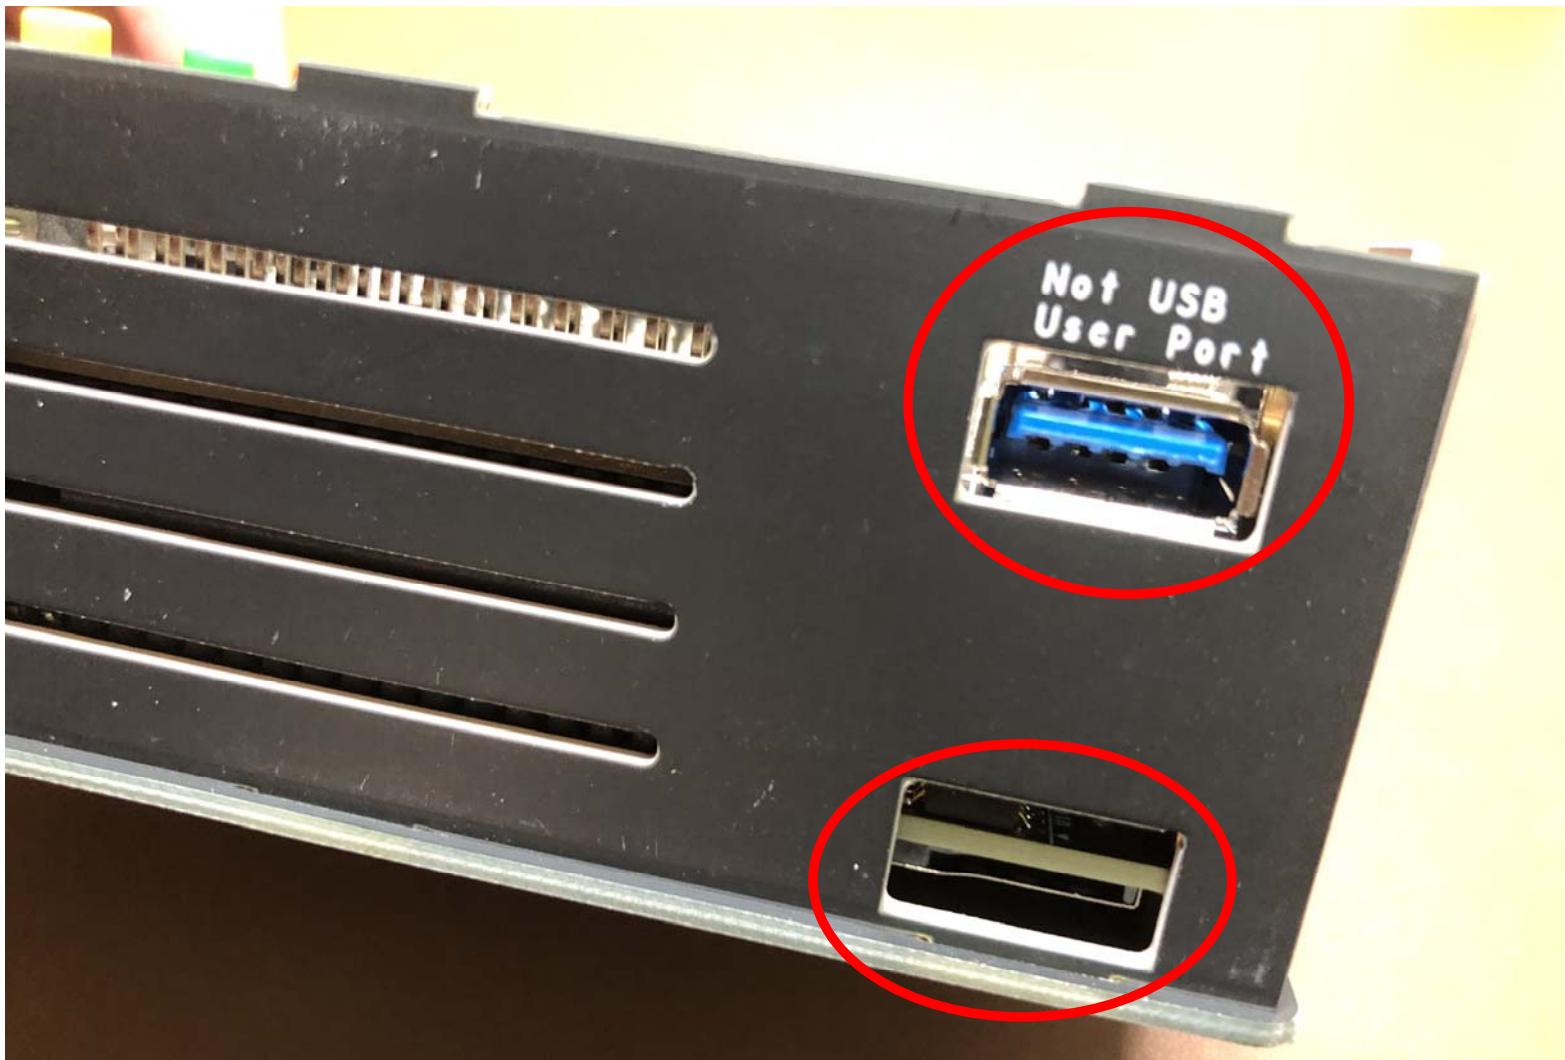

Step 9: A lot of Ports

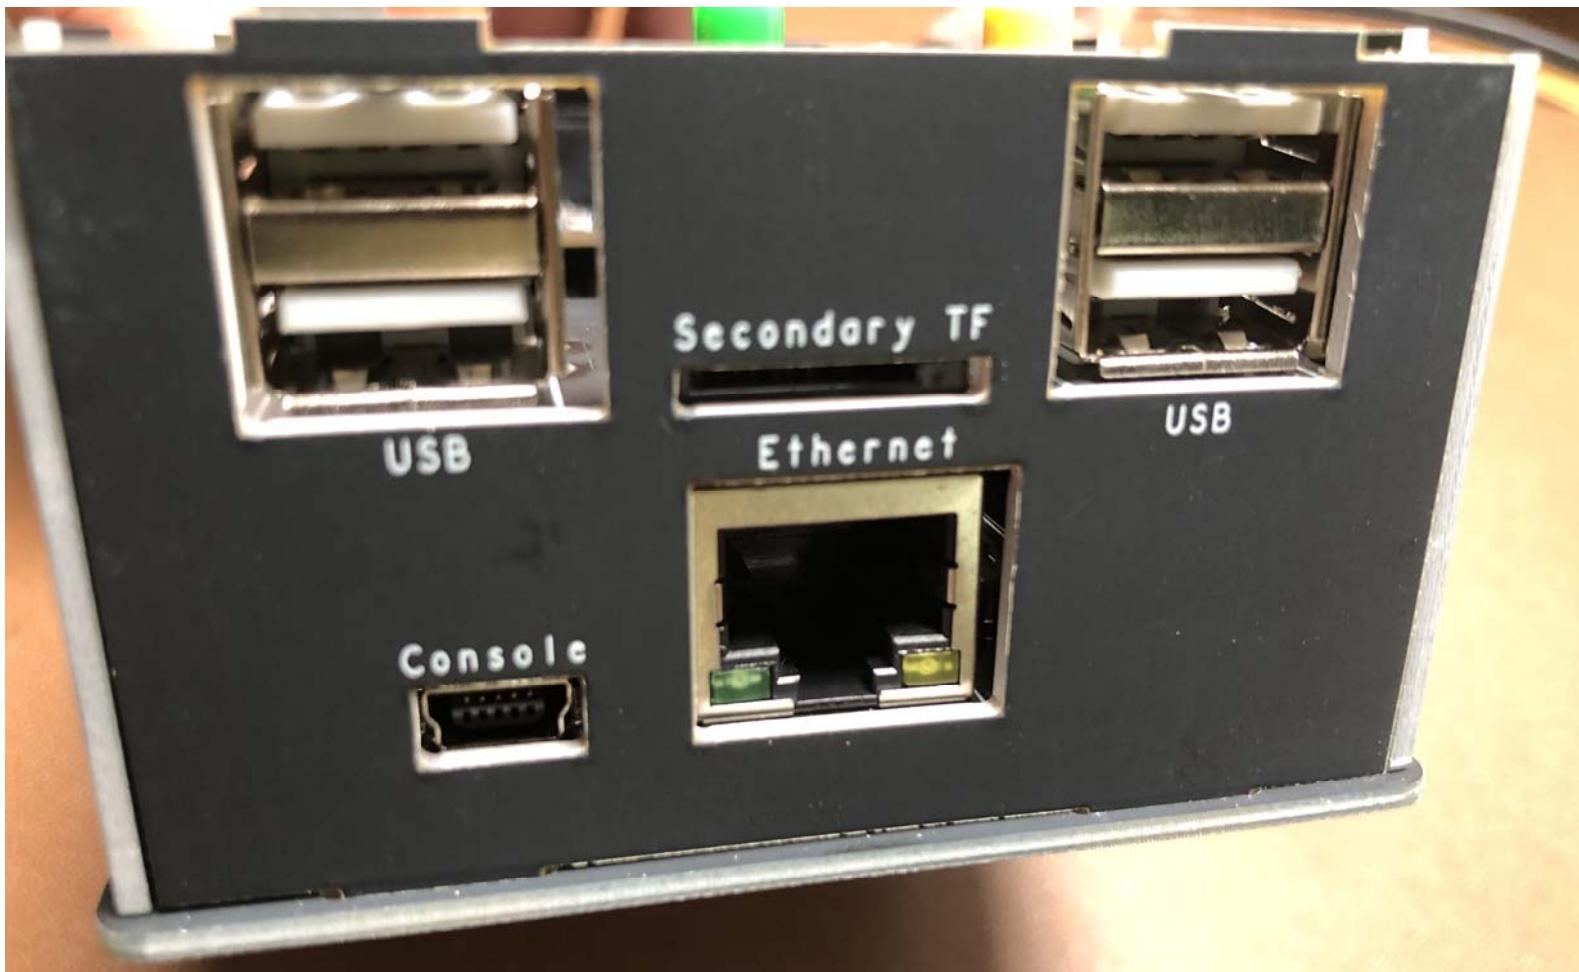

Step 10: SOG Port



Step 11: A lot of Ports Again



Step 12: 4 Screws



Thanks for watching.