

Appendix 14: OBD Junction Box Definitions

Instruction Manual

Instruction Manual Version: V2.04

Update Date: 2023.07.01

Note: This accessory is not required and is only used when the **CAN** interface is the **OBD** interface on the user's car with **CAN** communication. In other cases, it is sufficient to lead **CANH** and **CANL** directly to the corresponding terminals of the **USBCAN/CAN** analyzer.

OBD II adapter (male), plastic housing. This component is used when the USB CAN adapter needs to be connected to the car's OBD interface, and the user chooses to use it according to the actual situation.

This component is an accessory for the USB CAN adapter and is not sold separately!

The picture below shows the physical picture of the USBCAN adapter with the OBD terminal connected:

Product list:

- 1. OBD II male terminal box 1 + CAN special shielded cable 1 metre.**
- 2. Shielded wire and OBD have been welded, shielded wire tip has been tinned.**

Note: USBCAN/CANalyst-II analyser, when accessing the normal working CAN bus (termination resistor matching is normal), there is no longer any need to access any termination resistor, the dip switch of the

corresponding channel of CANalyst-II analyser should be dialed to the upper OFF position, and the USBCAN does not need to short R+ and R-. The car OBD belongs to the normal working CAN bus, so there is no need to connect any resistor.




OBD 公头

有效引脚:

6号引脚: CAN_H

14号引脚: CAN_L

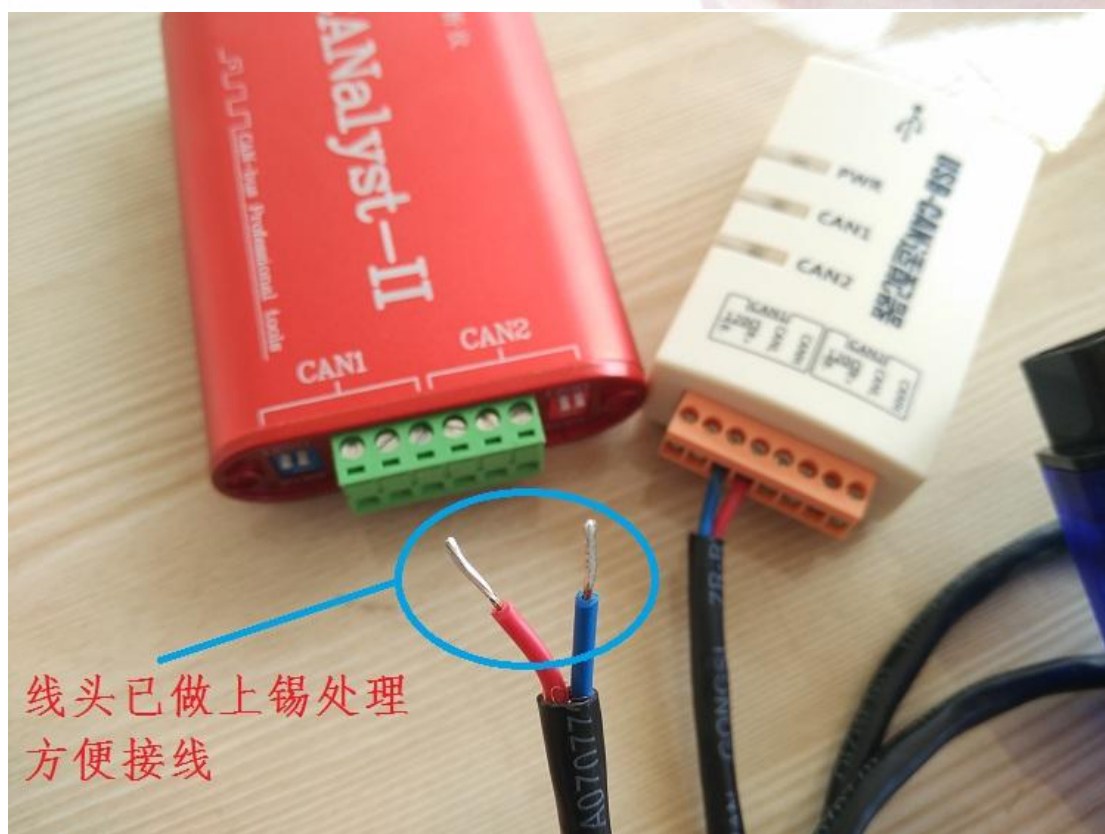

线头已做上锡处理
方便接线

配套使用效果图：


本宝贝只是图中OBD头一个



USBCAN-2A/USBCAN-2C/CANalyst-II(便携版)使用效果图



诊断座针脚定义

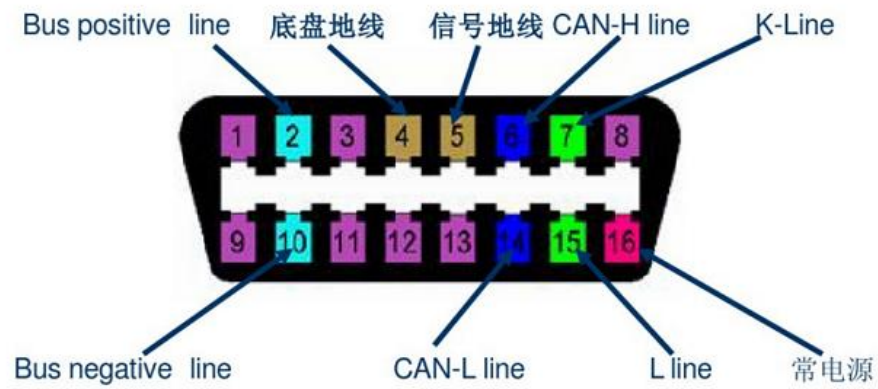

Q:我车上的OBDII接口在什么地方

A:一般在方向盘下面，刹车踏板上方。有些车有个盖子，需要打开；有些车需要向外拖拉接口才可看到。



A区域：通用，大众，福特，丰田，现代，雪铁龙，宝马等品牌的大部分车型

B区域：本田，大众途安，进口雷克萨斯等车型

C区域：东风雪铁龙，东风标致等少量车型

D区域：东风雪铁龙等少量车型

E区域：其他少量车型