SAM-Ba install procedure


1. Get the file from 03-Tools\SAM-BA,Double click it




2. Click Next




3. Click I Agree

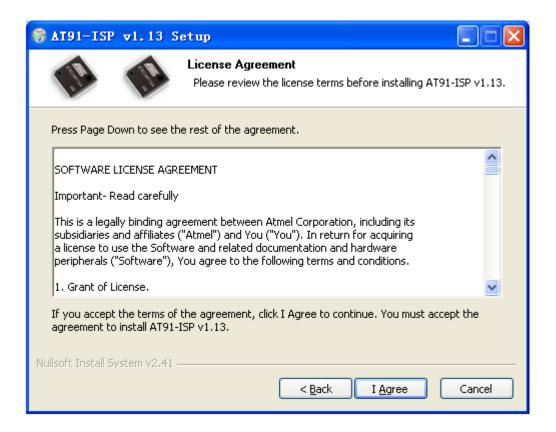


4. Click next

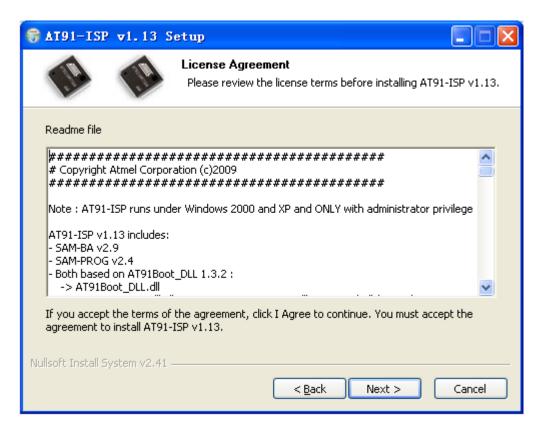


5. Select the install PATCH, Click Next

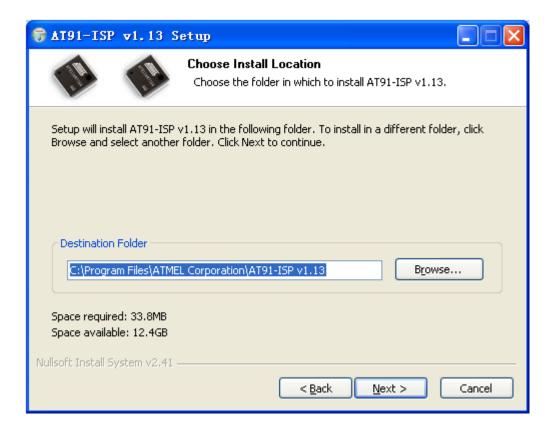


6. Click Install

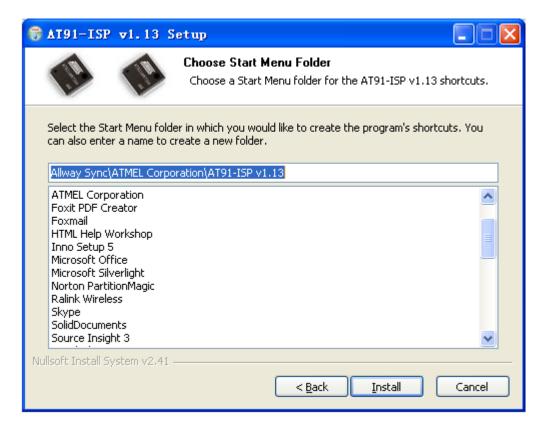


7. Installation Complete, Click Next

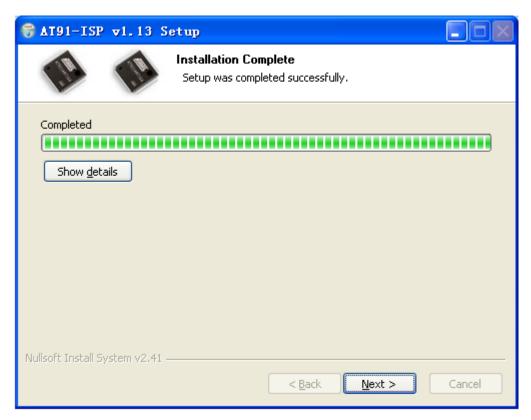

8. Select SAM-BA Shortcuts, Click Next

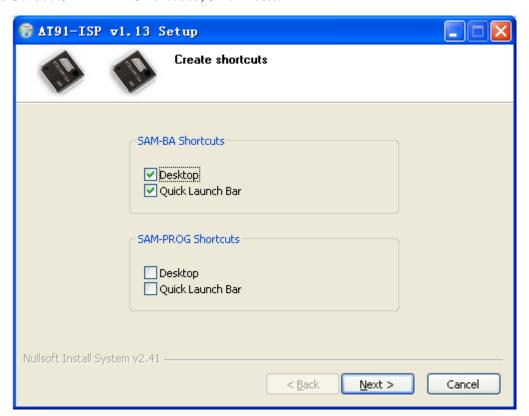

9. You need to reboot your computer, Cilck *Finish*

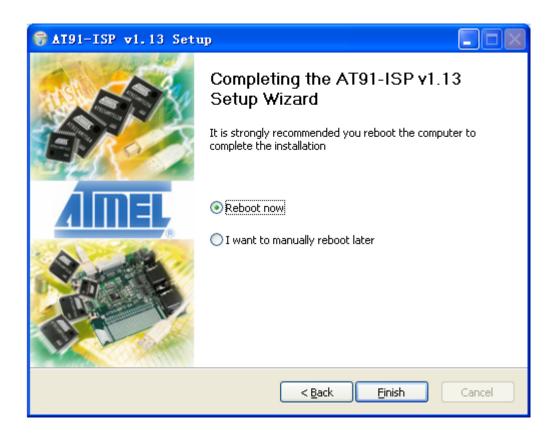

10. After the computer reboot finish, you can see the following shortcut

