

PennRadiant.com


Quick Reference Guide to Parts

8105 Perry Highway Pittsburgh PA 15237
P+ 800.438.2503 | F+ 412.635.8016



Series 2000 (L)

Body, Fan, Burner Parts

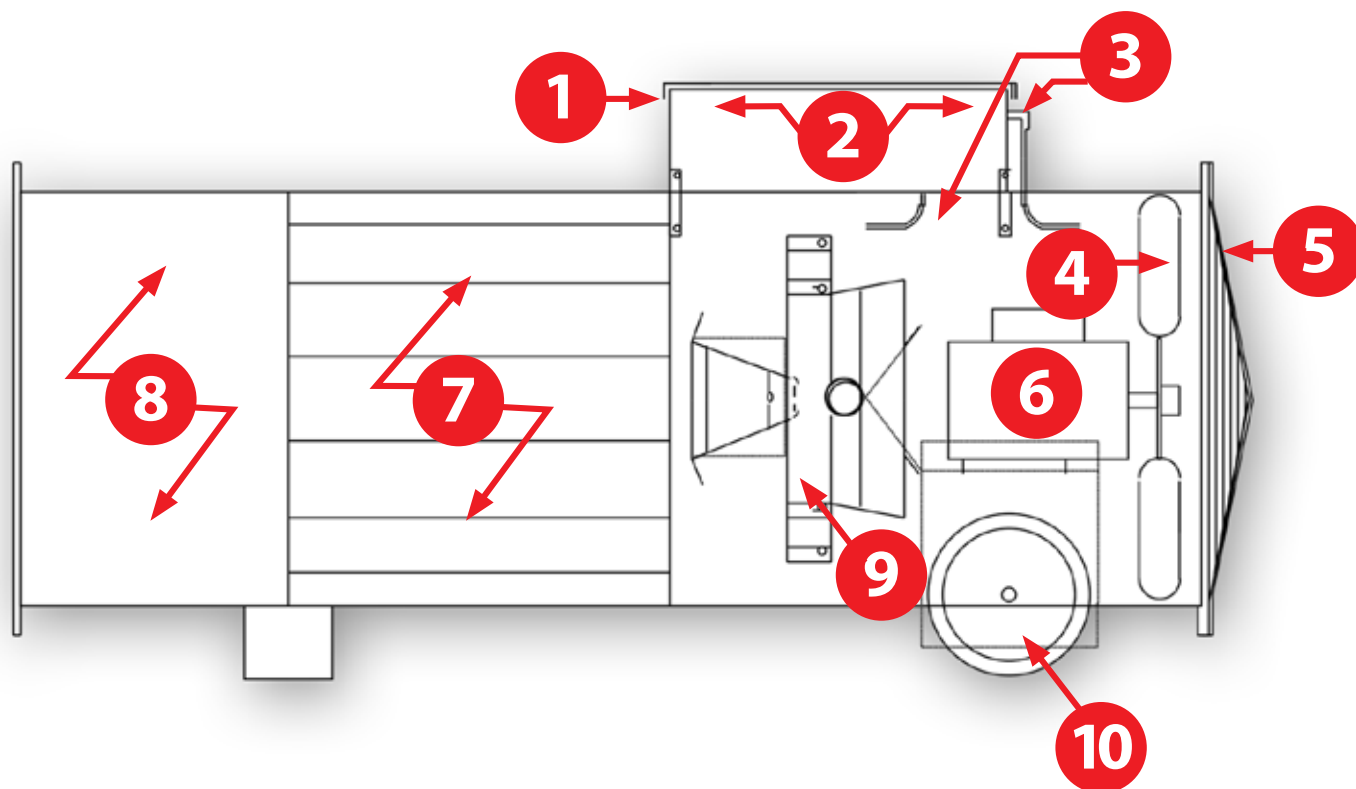


Item	Part #	Description
1	HWP HC1069B	Lid/Control Box
2	HWP HC1069A	Control Box w/Lid
3	N/S	Copper Tube / Air Switch
4	HWP HP1161	Fan Blade
5	HWP HG1167	Fan Guard
6	HWP HM1166	Motor 1 HP
7	HWP HB1177B	Heat Shield
8	HWP HB2000	Body
9	HWP HB1171B	Burner
10	HWP HW1164	Wheel 8" x 1.75" x 1/2" Hub
	HWP 2000A	Sub assembly w/body, wheels, axle
	HWP HB1171BA	Sub assembly w/burner & igniter
	HWP HW1164B	Axle
	HWP 110	Spec sheets



Series 2000 (L)

Liquid Pipe Train Parts

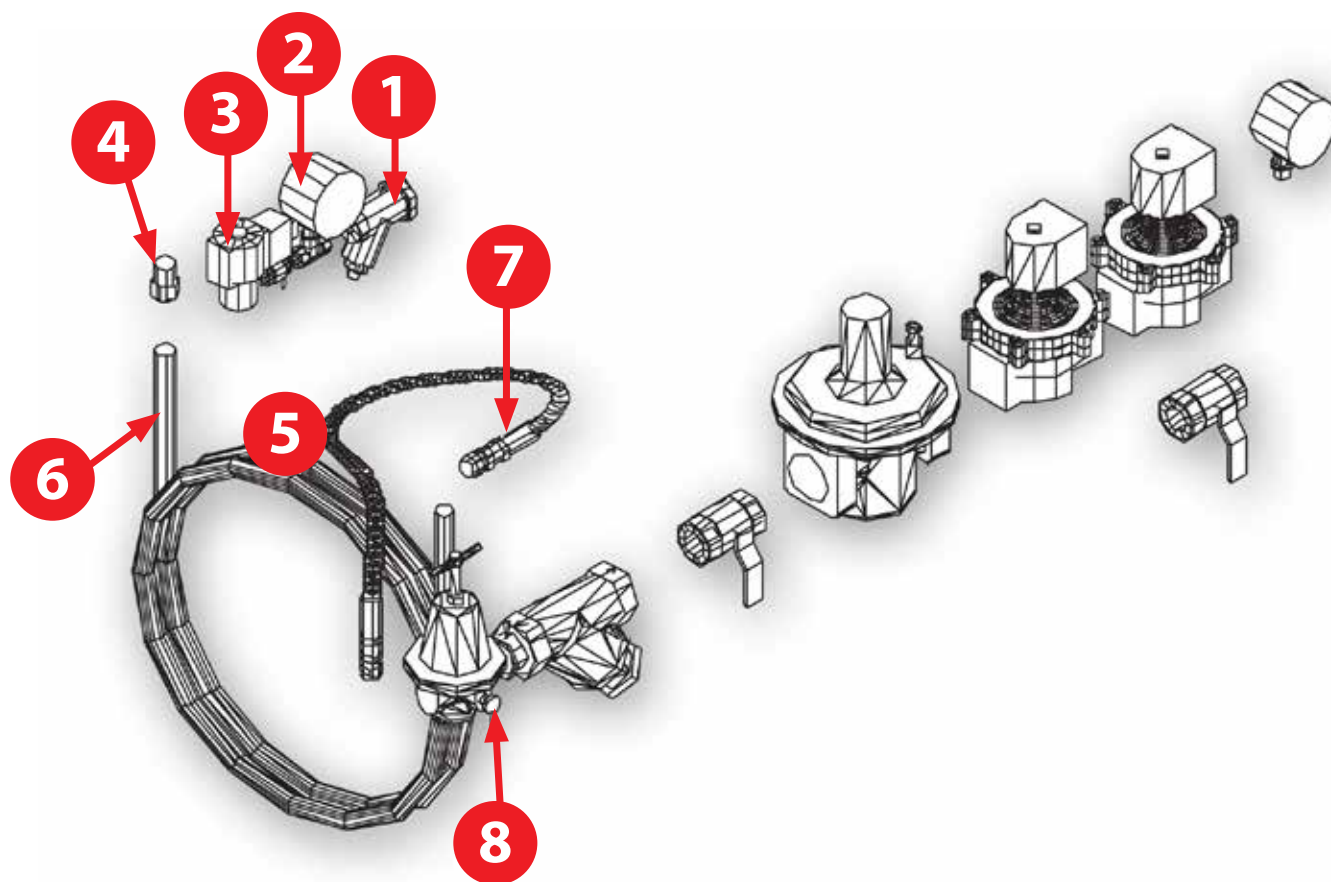


Item	Part #	Description
1	HWP HV1129	Liquid Strainer
2	HWP HV1054	Liquid High Pressure Gauge (200 psi liquid propane gauge)
3	HWP HV1137	Liquid Propane Solenoid Valve
4	HWP HV1039	Safety Relief Valve
5	HWP HV1123	Manual Shut-Off Valve
6	HWP HV1140	Vaporizing Ring
7	HWP HV1042B	Hose
8	HWP HR1053	High Pressure Regulator (LP) (1/2"NPT, 400 psi max inlet) (outlet 3-30 psi)



Series 2000 (L)

Vapor Pipe Train Parts

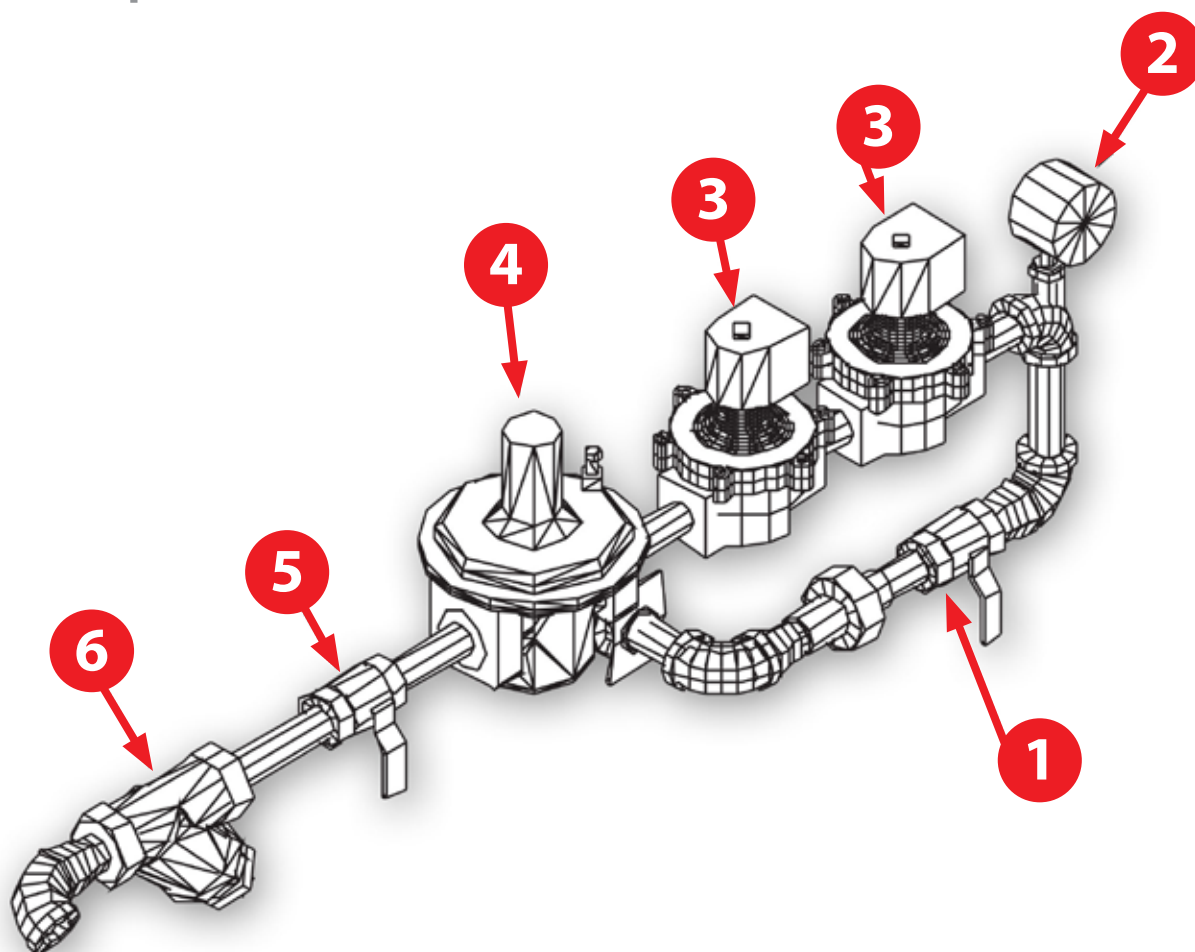


Item	Part #	Description
1	HWP HV1160	1" Locking Gas Selector Valve
2	HWP HV1169	W.C. Low-Pressure Gauge (0-30" W.C.)
3	HWP HV1032	Solenoid Valve - 1"
4	HWP HV20SV02B	Regulator - Low Pressure Regulator (10psi max)
5	HWP HV1035	1" Manual Shut Valve
6	HWP HV1129B	"Y" Strainer 1"
	HWP HV1032C	Coil Cover
	HWP HV1032RK	Rebuild Kit for HV1032



Series 2000 (L)


Control Panel Parts

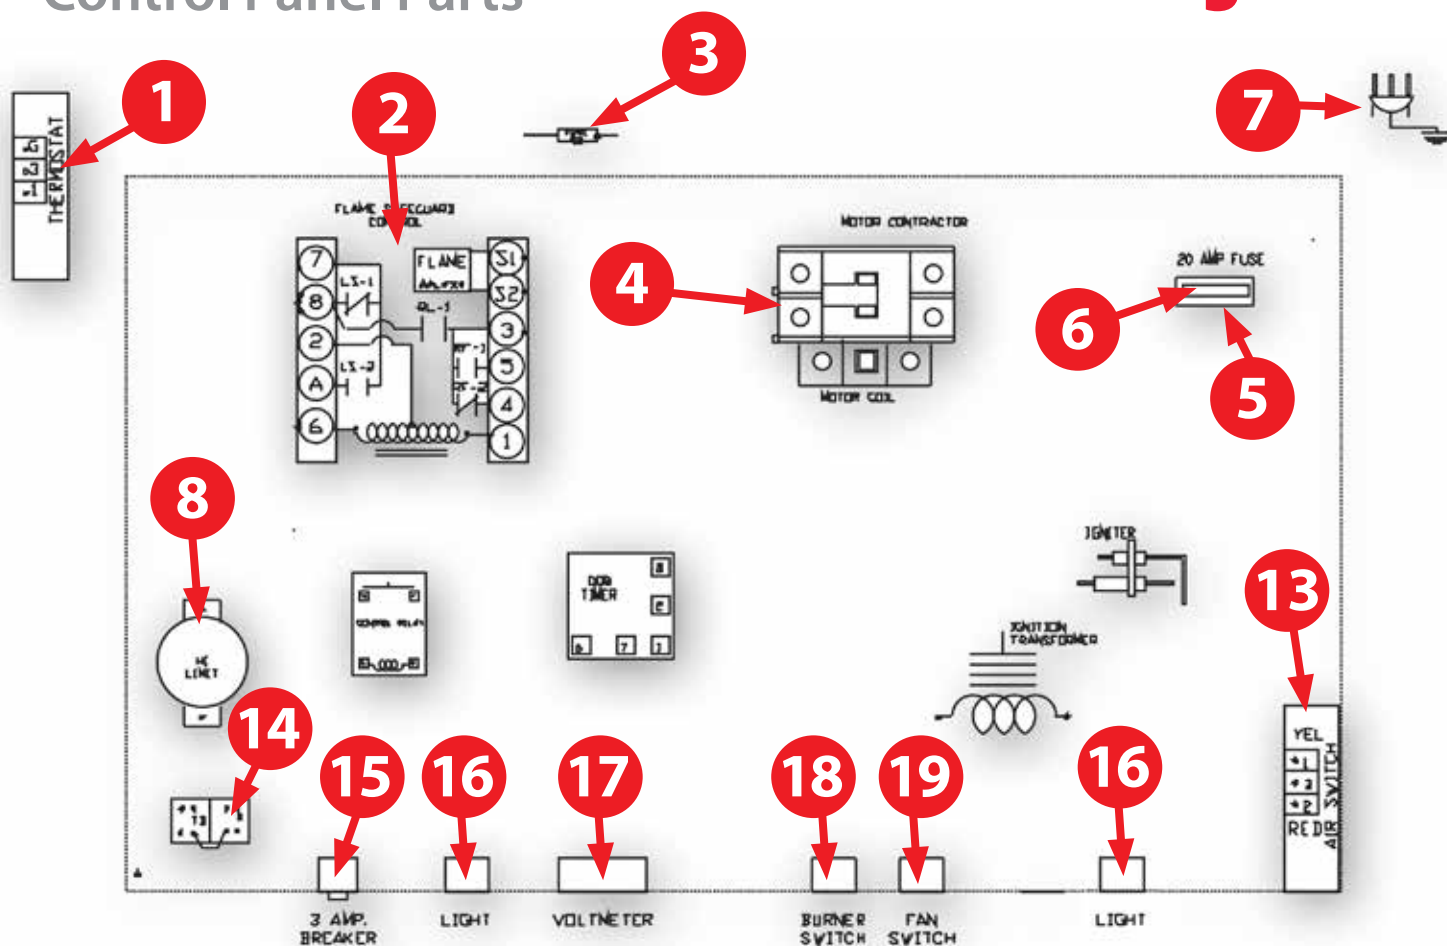

Item	Part #	Description	Item	Part #	Description
1	SFP2453	Thermostat	12	HWP 1190310	Igniter (replaces HC10040)
2	SFP2438	Flame Safeguard Control	13	HWP HC1010	Airflow Switch
3	HWP HC1004C	Flame Rod	14	099125-03	Terminal Block
4	SFP2436	Motor Relay	15	HWP HC1019B	Circuit Breaker 3 Amp
5	HWP HC1122	Fuse Block	16	SFP2505	Light
6	HWP HC1115	Fuse 20Amp	17	SFP5989	Voltmeter
7	HWP HC1020	Power Cord	18	HWP HC1011	Burner Switch
8	SFP2446	Hi Limit Switch	19	HWP HC1011	Fan Switch
9	SFP4512	Control Relay		HWP 2453A	Thermostat Sub Assembly w/15' Cord
10	HWP HC1003A	D.O.B. Timer			
11	SFP2501	Ignition Transformer			

Models CB, LTU40-75


Common Control Parts

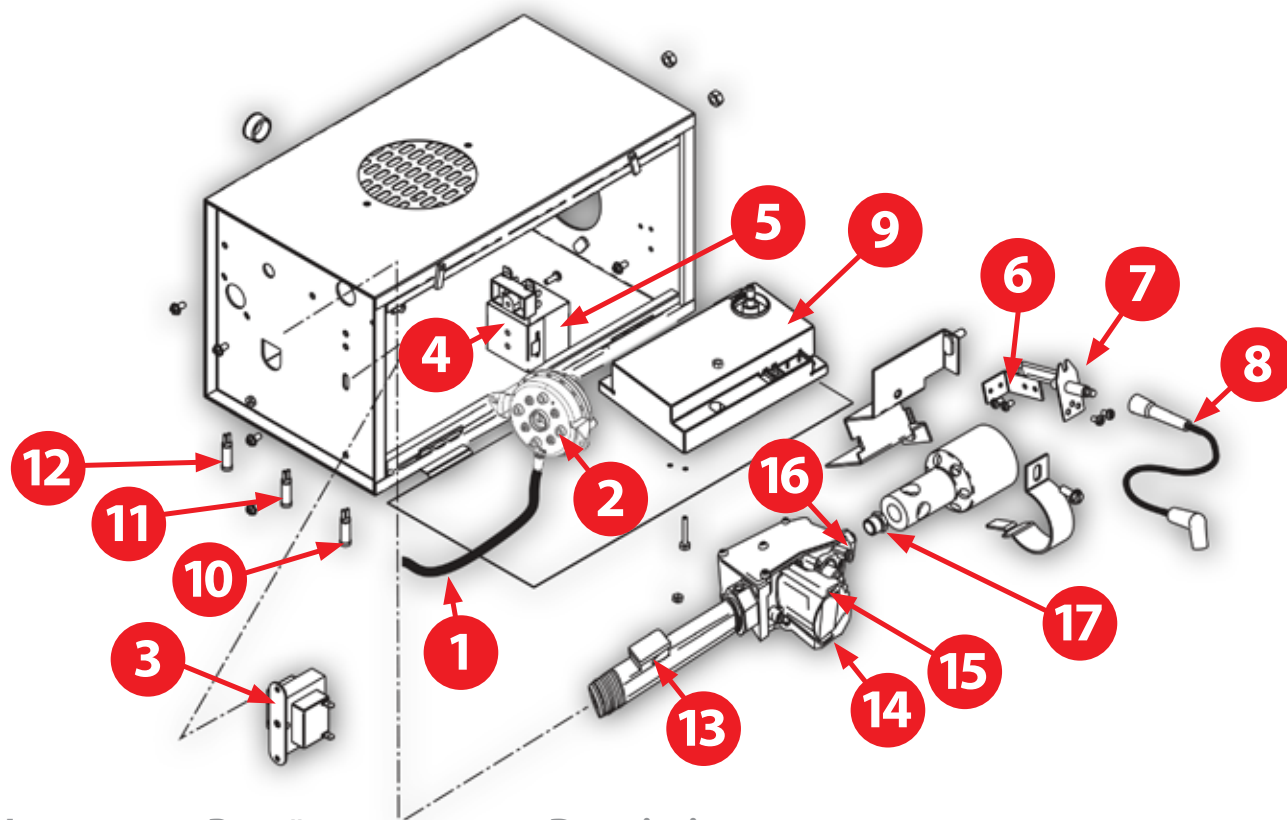

Item	Part #	Description
1	03988150	Plastic Vacuum Air Tube, 15" long 1
2	42837040	Air Switch Kit, set @0.11" W.C., #NS2-0307-00 1
3	30279980	Transformer, AT120B1051 1
4	42709000	Terminal Block Shield 1
5	30281000	Terminal Block, EK-204 1
6	42759000	Electrode Bracket 1
7	30295000	Electrode PSE-GF1 (Igniter/Sensor) 1
8	30314070	Ignition Cable, 7" long 1
9	44010010	Spark Module - Fenwal #35-608711-034 1
10	42398040	Monitoring Light, Green 1
11	42398060	Monitoring Light, Red 1
12	42398050	Monitoring Light, Amber 1
13	42757000	Restrainer Nipple, 5" long 1
14	30333070	Valve -- VR8205P-2408 @3½" W.C. (Natural Gas) 1
15	30333080	Valve -- VR8205P-2416 @10" W.C. (Propane Gas) 1
16	42701000	Orifice Fitting & Test Gauge Connection 1
17	03259xxx	Orifice for CB20-50 (State Model & Gas Type for Size) 1


SIR Series

Common Control Parts

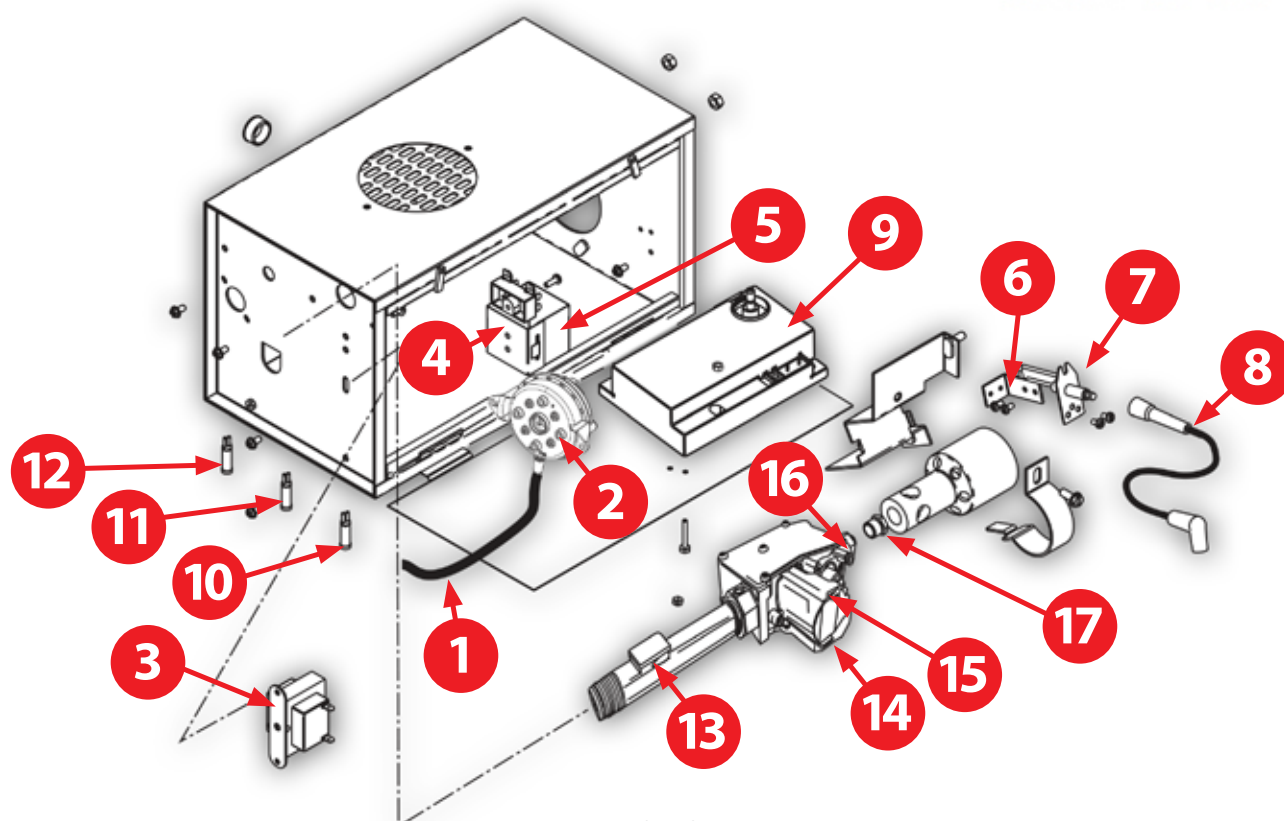

Item	Part #	Description
1	03988150	Plastic Vacuum Air Tube, 15" long 1
2	42837040	Air Switch Kit, set @0.11" W.C., #NS2-0307-00 1
3	30279980	Transformer, AT120B1051 1
4	42709000	Terminal Block Shield 1
5	30281000	Terminal Block, EK-204 1
6	42759000	Electrode Bracket 1
7	30295000	Electrode PSE-GF1 (Igniter/Sensor) 1
8	30314070	Ignition Cable, 7" long 1
9	44010010	Spark Module - Fenwal #35-608711-034 1
10	42398040	Monitoring Light, Green 1
11	42398060	Monitoring Light, Red 1
12	42398050	Monitoring Light, Amber 1
13	42757000	Restrainer Nipple, 5" long 1
14	30333070	Valve -- VR8205P-2408 @3½" W.C. (Natural Gas) 1
15	30333080	Valve -- VR8205P-2416 @10" W.C. (Propane Gas) 1
16	42701000	Orifice Fitting & Test Gauge Connection 1
17	03259xxx	Orifice for CB20-50 (State Model & Gas Type for Size) 1

SIS/SIU Series Common Control Parts

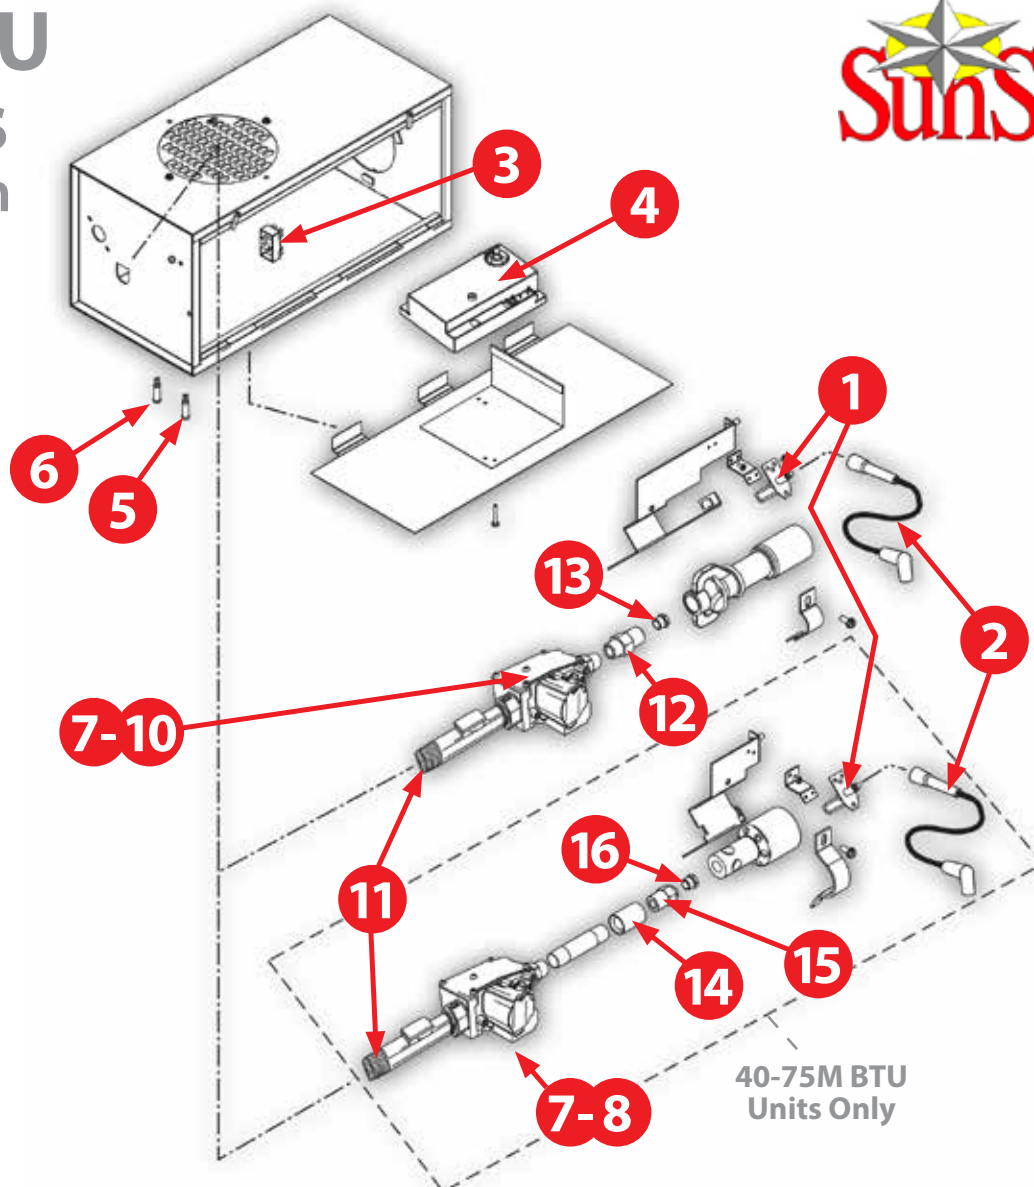


Item	Part #	Description
1	30295000	Electrode PSE-GF1 (Igniter/Sensor)
2	30314120	Ignition Cable, 14" long
3	30324000	Terminal Block, EK-104
4	44010010	Spark Module – Fenwal #35-608711-034
5	42398060	Monitoring Light, Red
6	42398050	Monitoring Light, Amber
7	30333070	Valve, VR8205P-2408 (Nat 40–200M Btu/hr)
8	30333080	Valve, VR8205P-2416 (LP 40–200M Btu/hr)

Item	Part #	Description
9	30475069	Valve Kit, VR8305P-3206 (Nat 225–250M Btu/hr)
10	30475039	Valve Kit, VR8305P-3214 (LP 225–250M Btu/hr)
11	42757010	Restrainer Nipple, 4" long
12	42889000	Orifice Fitting & Test Gauge Connection
13	03258xxx	Orifice (State Model & Gas Type for Size)
14	03540090	Coupling, ½"
15	42701000	Orifice Fitting & Test Gauge Connection
16	03259xxx	Orifice (State Model & Gas Type for Size)



LTS40-250, LTU80-250, ETS/ETU40-250 Series


Common Control Parts

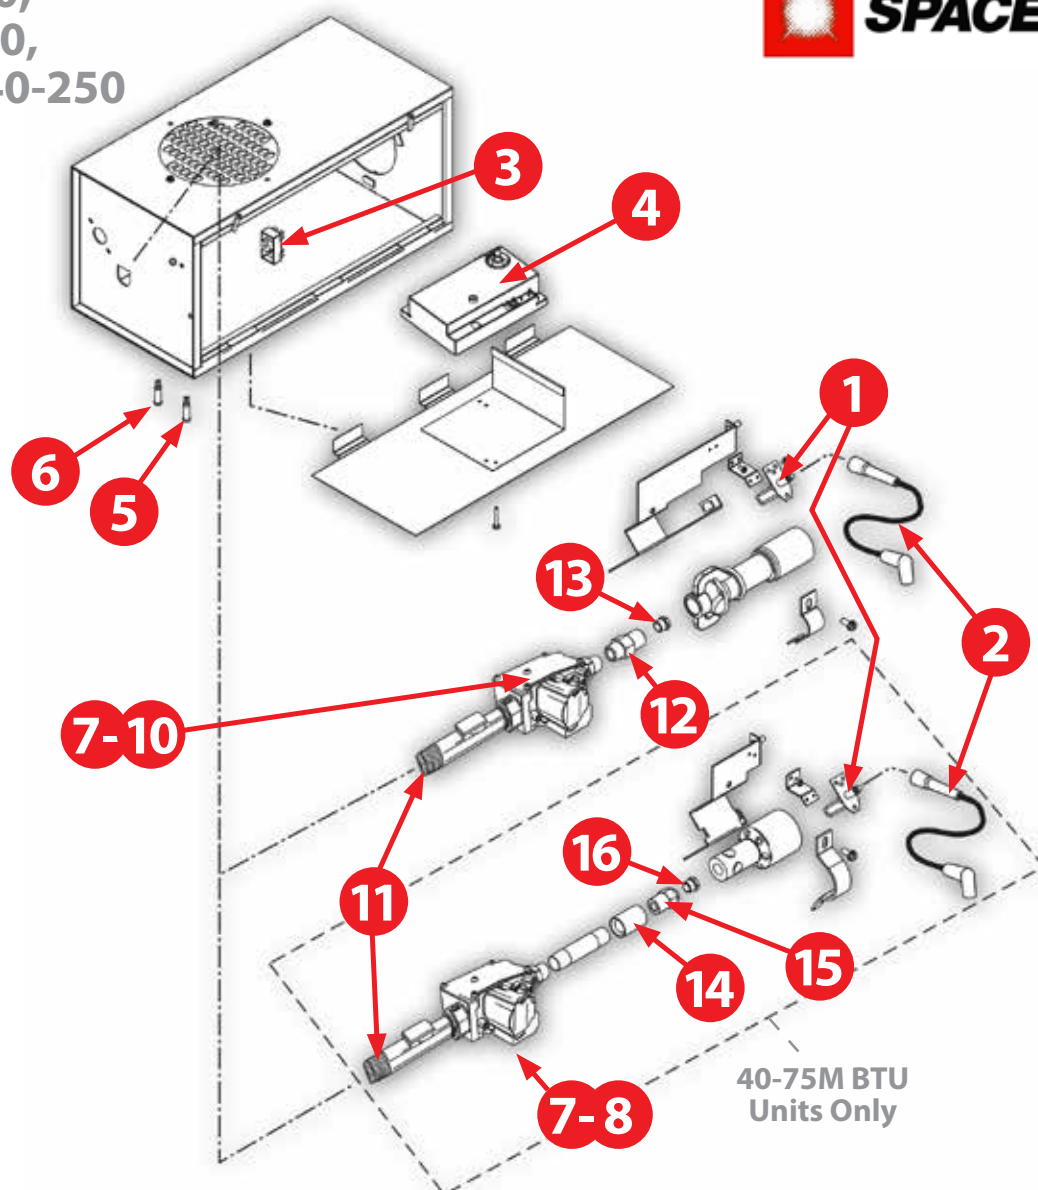

Item	Part #	Description	Item	Part #	Description
1	30295000	Electrode PSE-GF1 (Igniter/Sensor)	9	30475069	Valve Kit, VR8305P-3206 (Nat 225-250M Btu/hr)
2	30314120	Ignition Cable, 14" long	10	30475039	Valve Kit, VR8305P-3214 (LP 225-250M Btu/hr)
3	30324000	Terminal Block, EK-104	11	42757010	Restrainer Nipple, 4" long
4	44010010	Spark Module - Fenwal #35-608711-034	12	42889000	Orifice Fitting & Test Gauge Connection
5	42398060	Monitoring Light, Red	13	03258xxx	Orifice (State Model & Gas Type for Size)
6	42398050	Monitoring Light, Amber	14	03540090	Coupling, 1/2"
7	30333070	Valve, VR8205P-2408 (Nat 40-200M Btu/hr)	15	42701000	Orifice Fitting & Test Gauge Connection
8	30333080	Valve, VR8205P-2416 (LP 40-200M Btu/hr)	16	03259xxx	Orifice (State Model & Gas Type for Size)



ALL LTS, LTU80-250, ALL ETS & ETU Draft Inducer Parts

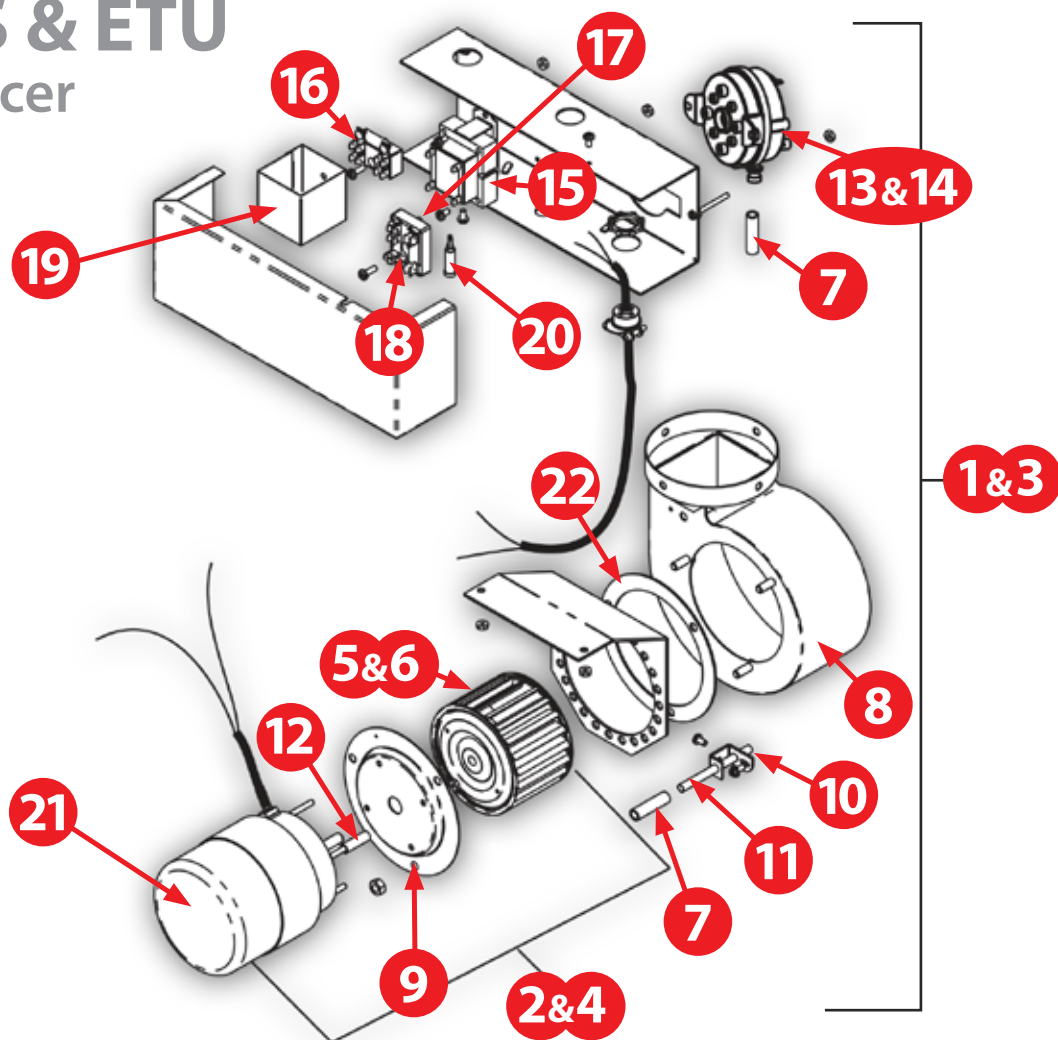


Item	Part #	Description	Item	Part #	Description
1	42917000	Draft Inducer Assembly, 40M-175M Btu/hr	12	30347000	Motor Spacer (4 per motor)
2	42928000	Motor Replacement Kit, 40M-175M Btu/hr	13	42837050	Air Switch Kit (40-175M Btu/hr)
3	42917010	Draft Inducer Assembly, 180M-250M Btu/hr	14	42837060	Air Switch Kit (180-250M Btu/hr)
4	42928010	Motor Replacement Kit, 180M-250M Btu/hr	15	30279000	Transformer
5	03723020	Blower Wheel, Beckett (180M-250M Btu/hr)	16	30281000	Terminal Block, EK-204
6	03723000	Blower Wheel, Revcor (40M-175M Btu/hr)	17	30330000	Terminal Block, TFB-323
7	03988120	Plastic Vacuum Air Tube, 12" long	18	30202000	Fuse, 2A 250V
8	42739010	Blower Housing Sub-Assembly	19	42709000	Terminal Block Shield
9	42740000	Motor Plate	20	42398040	Monitoring Light, Green
10	42742000	Sensing Tube Bracket	21	03721000	Motor
11	42744000	Sensing Tube, Draft Inducer	22	43221000	Draft Inducer Gasket



ALL SIS & SIU

Draft Inducer


Parts

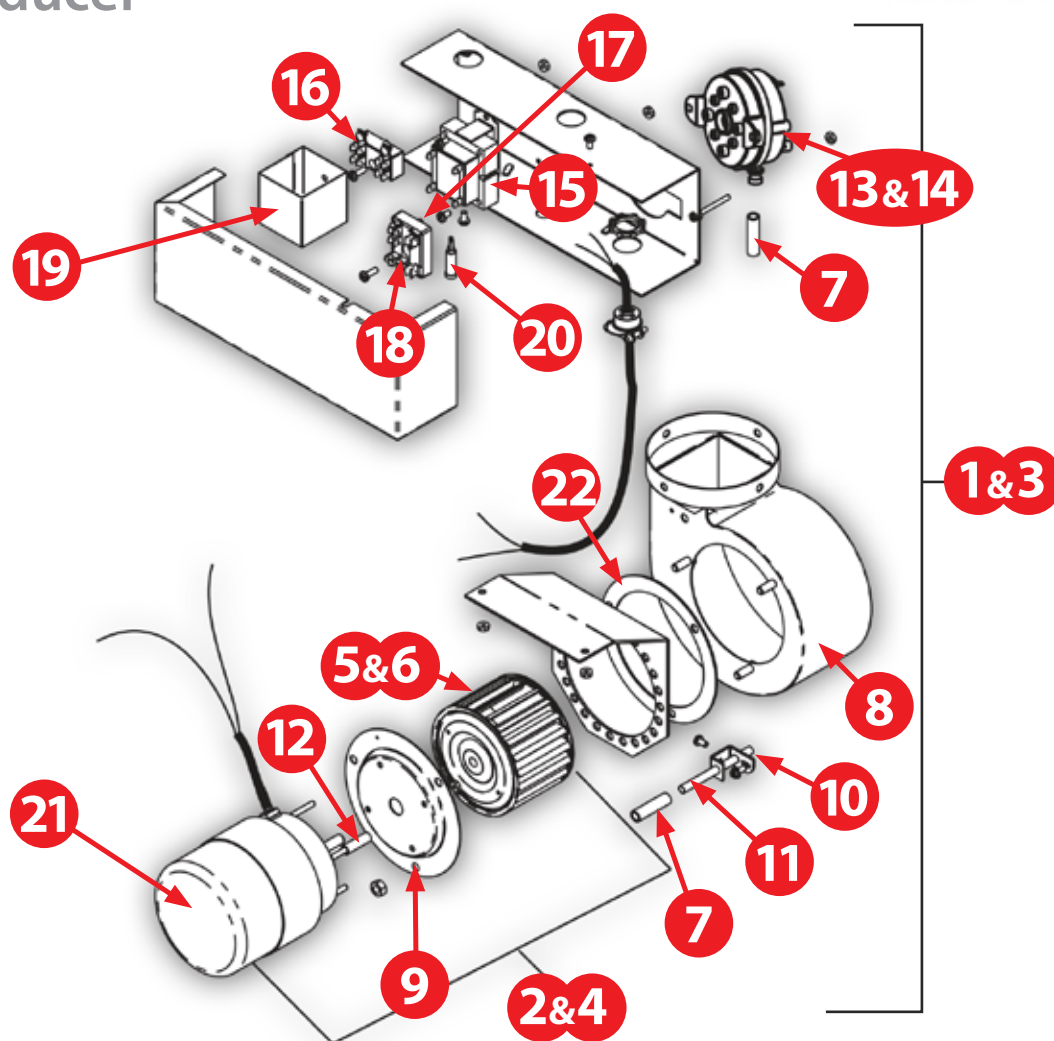

Item	Part #	Description	Item	Part #	Description
1	42917000	Draft Inducer Assembly, 40M-175M Btu/hr	12	30347000	Motor Spacer (4 per motor)
2	42928000	Motor Replacement Kit, 40M-175M Btu/hr	13	42837050	Air Switch Kit (40-175M Btu/hr)
3	42917010	Draft Inducer Assembly, 180M-250M Btu/hr	14	42837060	Air Switch Kit (180-250M Btu/hr)
4	42928010	Motor Replacement Kit, 180M-250M Btu/hr	15	30279000	Transformer
5	03723020	Blower Wheel, Beckett (180M-250M Btu/hr)	16	30281000	Terminal Block, EK-204
6	03723000	Blower Wheel, Revcor (40M-175M Btu/hr)	17	30330000	Terminal Block, TFB-323
7	03988120	Plastic Vacuum Air Tube, 12" long	18	30202000	Fuse, 2A 250V
8	42739010	Blower Housing Sub-Assembly	19	42709000	Terminal Block Shield
9	42740000	Motor Plate	20	42398040	Monitoring Light, Green
10	42742000	Sensing Tube Bracket	21	03721000	Motor
11	42744000	Sensing Tube, Draft Inducer	22	43221000	Draft Inducer Gasket




All CB & LTU40-75 Draft Inducer Parts

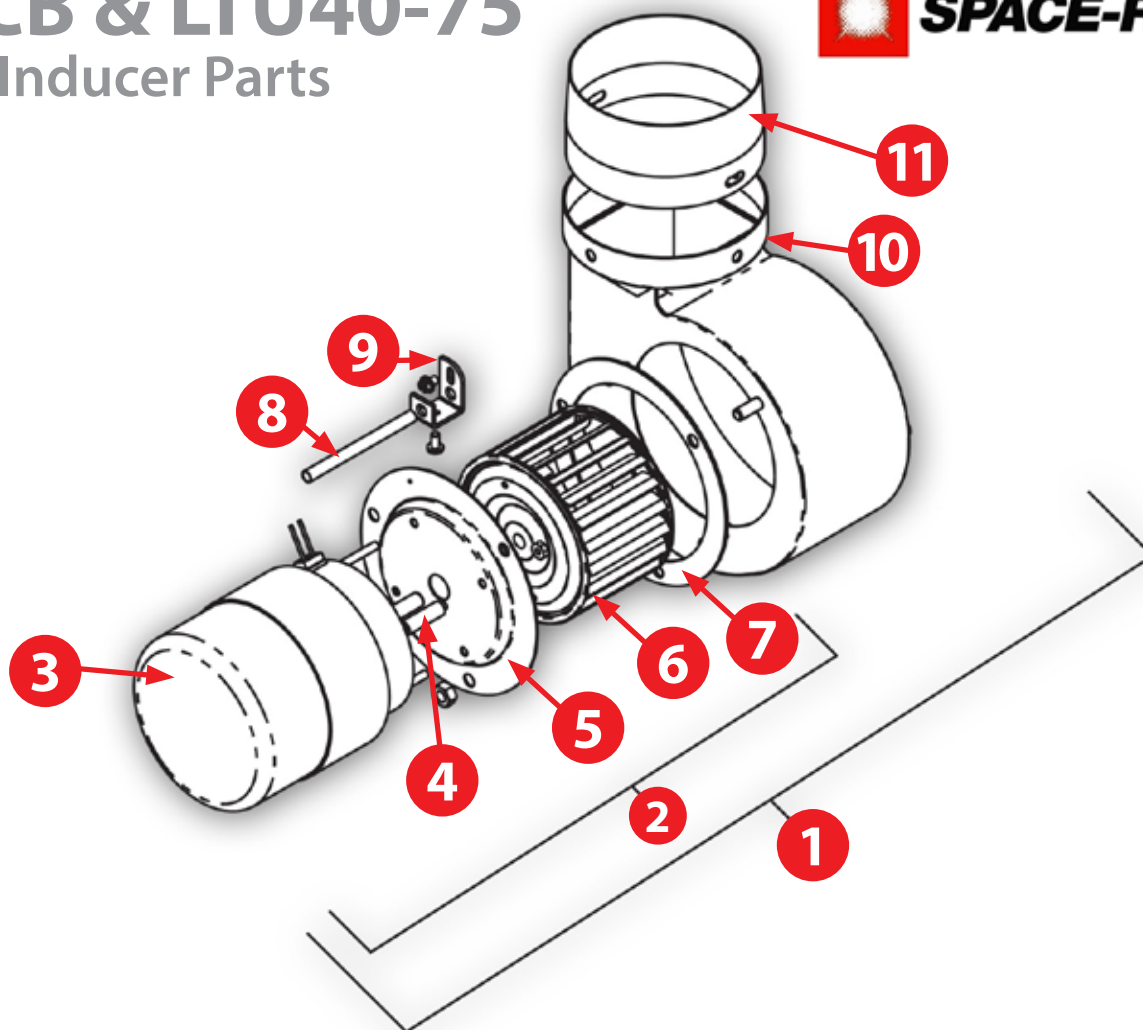

Item	Part #	Description
1	42737000	Draft Inducer Assembly
2	42928000	Motor Replacement Kit
3	03721000	Motor
4	30347000	Motor Spacer (4 per motor)
5	42740000	Motor Plate
6	03723000	Blower Wheel
7	43221000	Draft Inducer Gasket
8	42744000	Sensing Tube, Draft Inducer
9	42742000	Sensing Tube Bracket
10	42739000	Blower Housing Sub-Assembly
11	40504020	4" O.D. Flue Pipe Starting Collar



All SIR Series Draft Inducer Parts

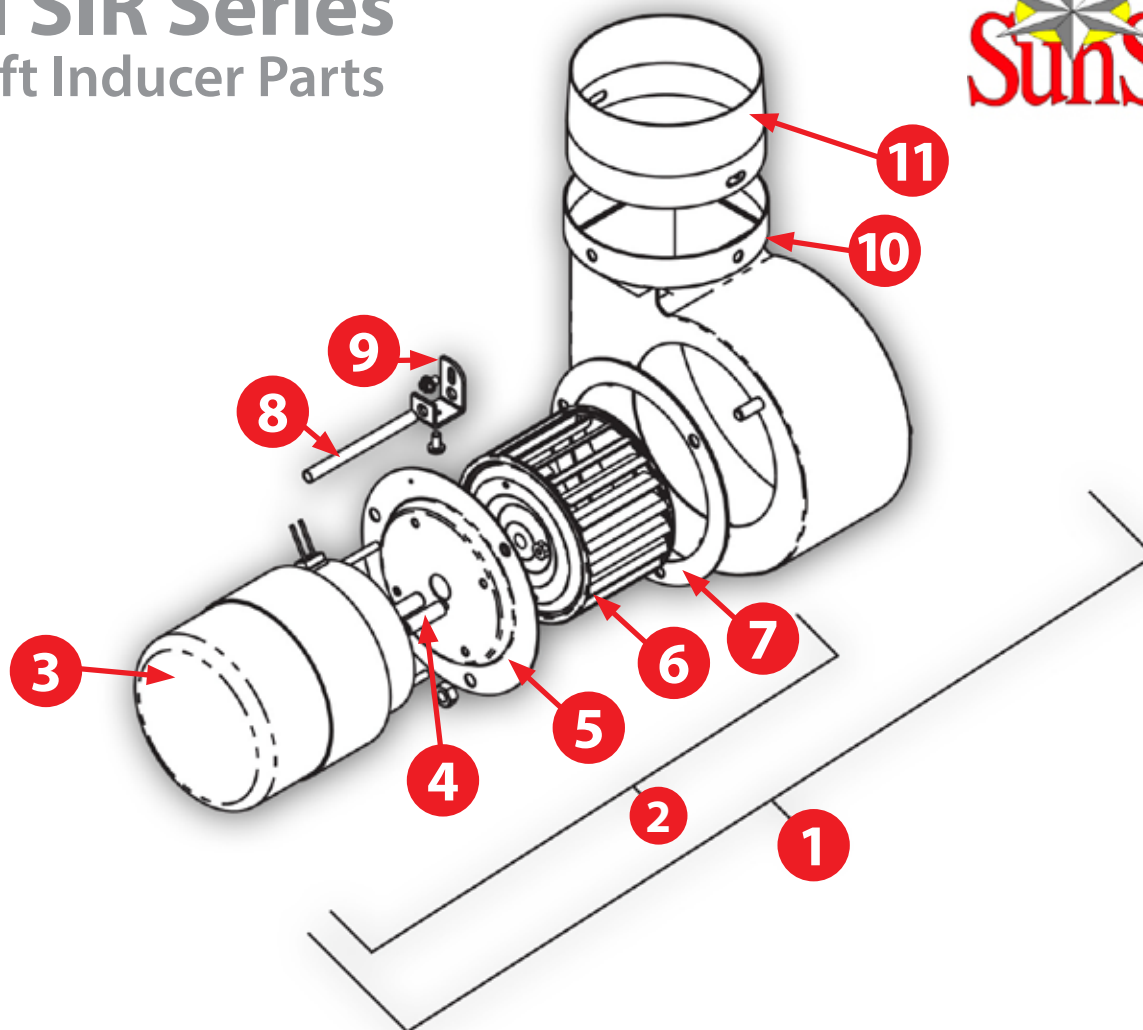


Item	Part #	Description
1	42737000	Draft Inducer Assembly
2	42928000	Motor Replacement Kit
3	03721000	Motor
4	30347000	Motor Spacer (4 per motor)
5	42740000	Motor Plate
6	03723000	Blower Wheel
7	43221000	Draft Inducer Gasket
8	42744000	Sensing Tube, Draft Inducer
9	42742000	Sensing Tube Bracket
10	42739000	Blower Housing Sub-Assembly
11	40504020	4" O.D. Flue Pipe Starting Collar



LTU40-75 (3" Dia.)

Body/Tube Parts

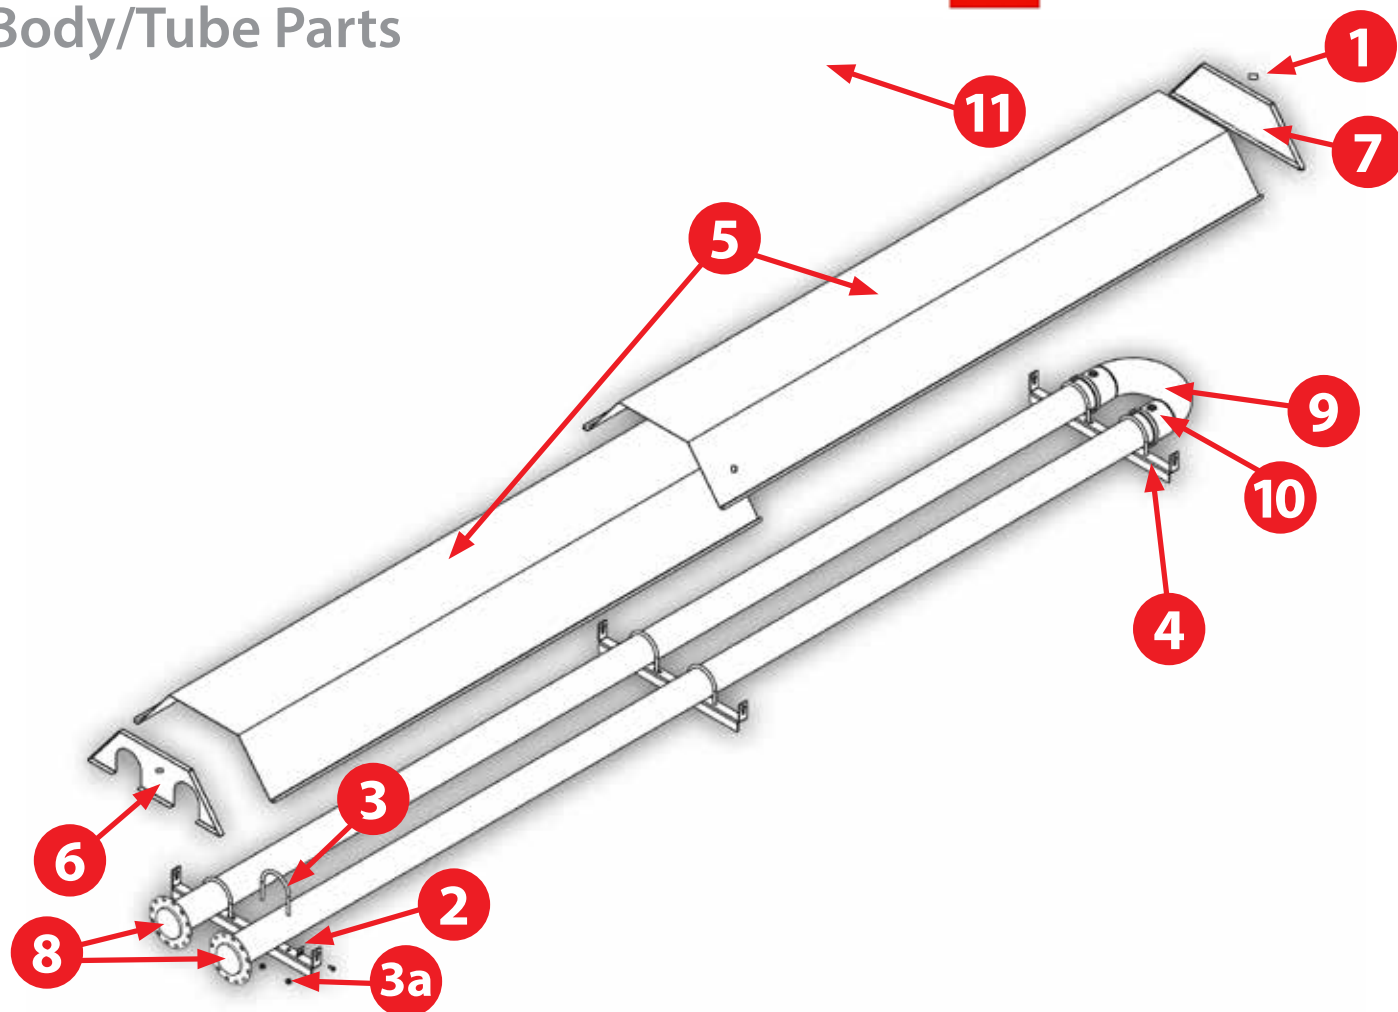

SPACE-RAY


Item	Part #	Description
1	02266010	Reflector Speed Clip
2	42769011	Reflector Clamp with screw (6 per heater)
3	42770000	"U" Bolt Clamp, 3" OD Tube (6 per heater)
3a	02127110	"U" Bolt Hex Nut, 5/16-18 (2 per "U" Bolt)
4	42773000	Tube Support/Hanger Bracket, 18-1/2" (3 per heater)
5	42763080	Reflector, 8' long (2 per heater)
6	42762010	Reflector, control end
7	42761010	Reflector, foot end
8	44028140	15' Tube Replacement Kit, 3" OD, ALC w/one 12 radial hole flange—for LTU40-75
9	42764000	U Bend, 3" OD x 3-3/4" centerline radius
10	02254010	Set Screw, 5/16-24 x 1/2" (2 per heater)



LTS40-250

Body/Tube Parts

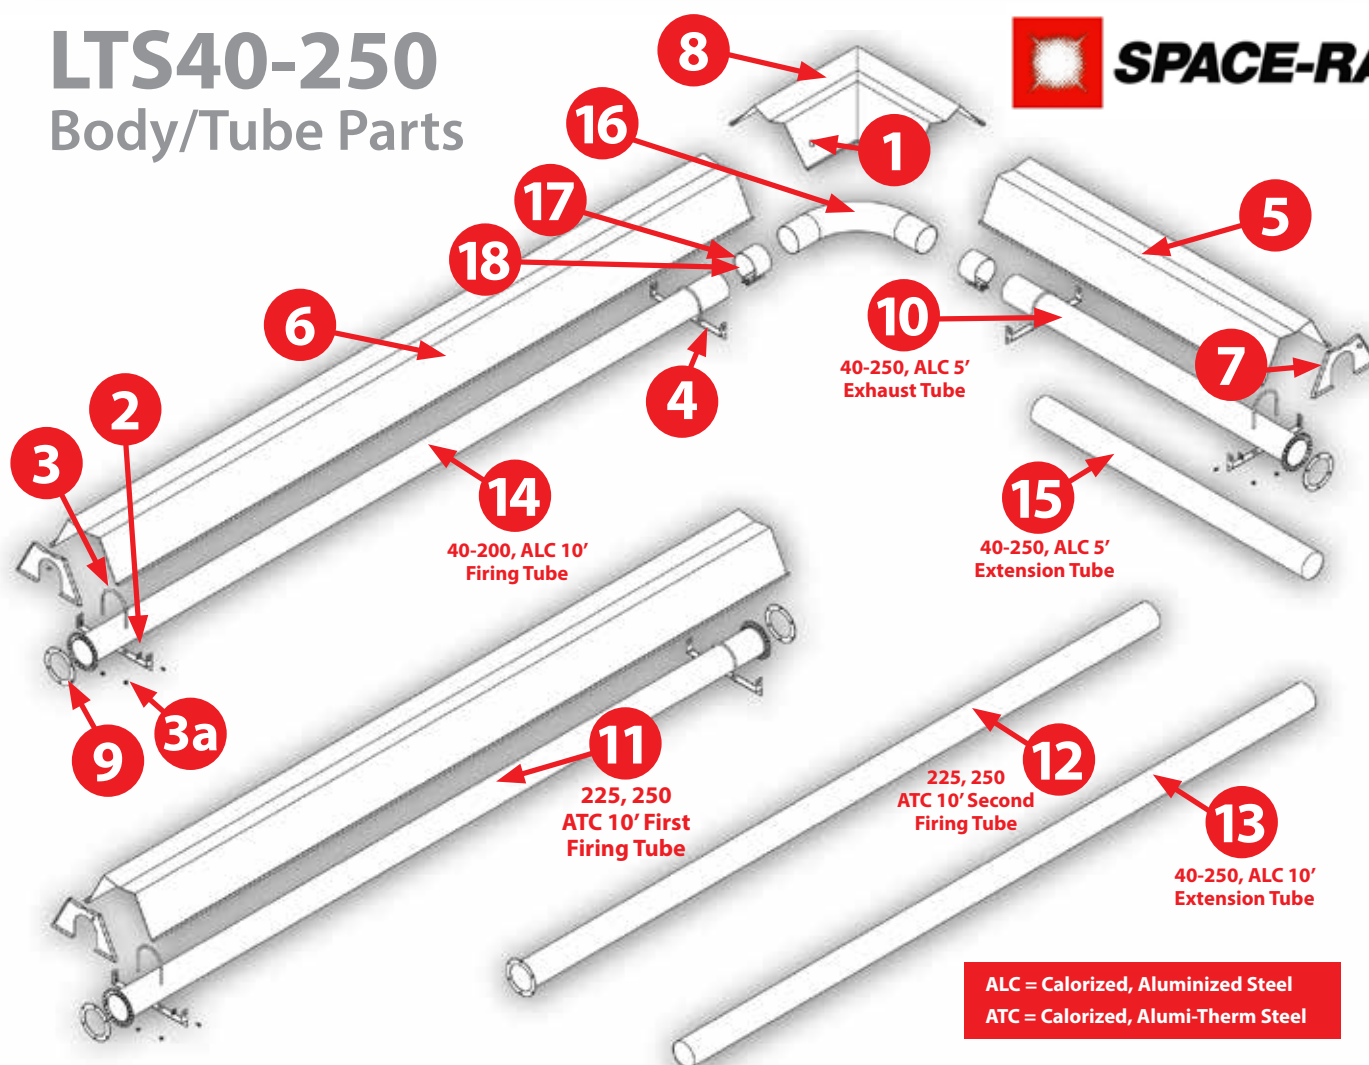


ALC = Calorized, Aluminized Steel
ATC = Calorized, Alumi-Therm Steel

Item	Part #	Description
1	02266010	Reflector Speed Clip
2	42769011	Reflector Clamp with Screw
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13" (2 per 5 ft. or 10 ft. body section)
5	43319050	Reflector, 4'-11½" long (5 ft. section only; 1 per 5 ft. body section)
6	43319100	Reflector, 9'-11½" long (10 ft. section only; 1 per 10 ft. body section)
7	43320000	End Reflector (2 per heater)
8	43342000	Corner Reflector Package
9	42921000	Tube Flange Gasket
10	44028020	5'Tube Assembly Kit, 4" OD, ALC steel with one 24-hole flange (Exhaust tube) – LTS40-250
11	44028200	10'Tube Assembly Kit, 4" OD, ATC w/ two 6-hole flanges (Firing tube) – LTS225-250
12	44028170	10'Tube Assembly Kit, 4" OD, ATC w/ one 6-hole flange (2nd firing tube) – LTS225-250
13	44028060	10'Tube Assembly Kit, 4" OD, ALC w/o flanges (Extension Tube) – LTS40-250
14	44028030	10'Tube Assembly Kit, 4" OD, ALC w/ one 24-hole flange (Firing Tube) – LTS40-250
15	44028010	5'Tube Assembly Kit, 4" OD, ALC w/o flanges (Extension tube) – LTS40-250
16	43208010	4" O.D. Elbow Package
17	02189020	#10 x ½" Self-Drilling Screw (2 per coupling)
18	30462980	4" OD Tube Compression Coupling w/bolts



LTU80-250

Body/Tube Parts

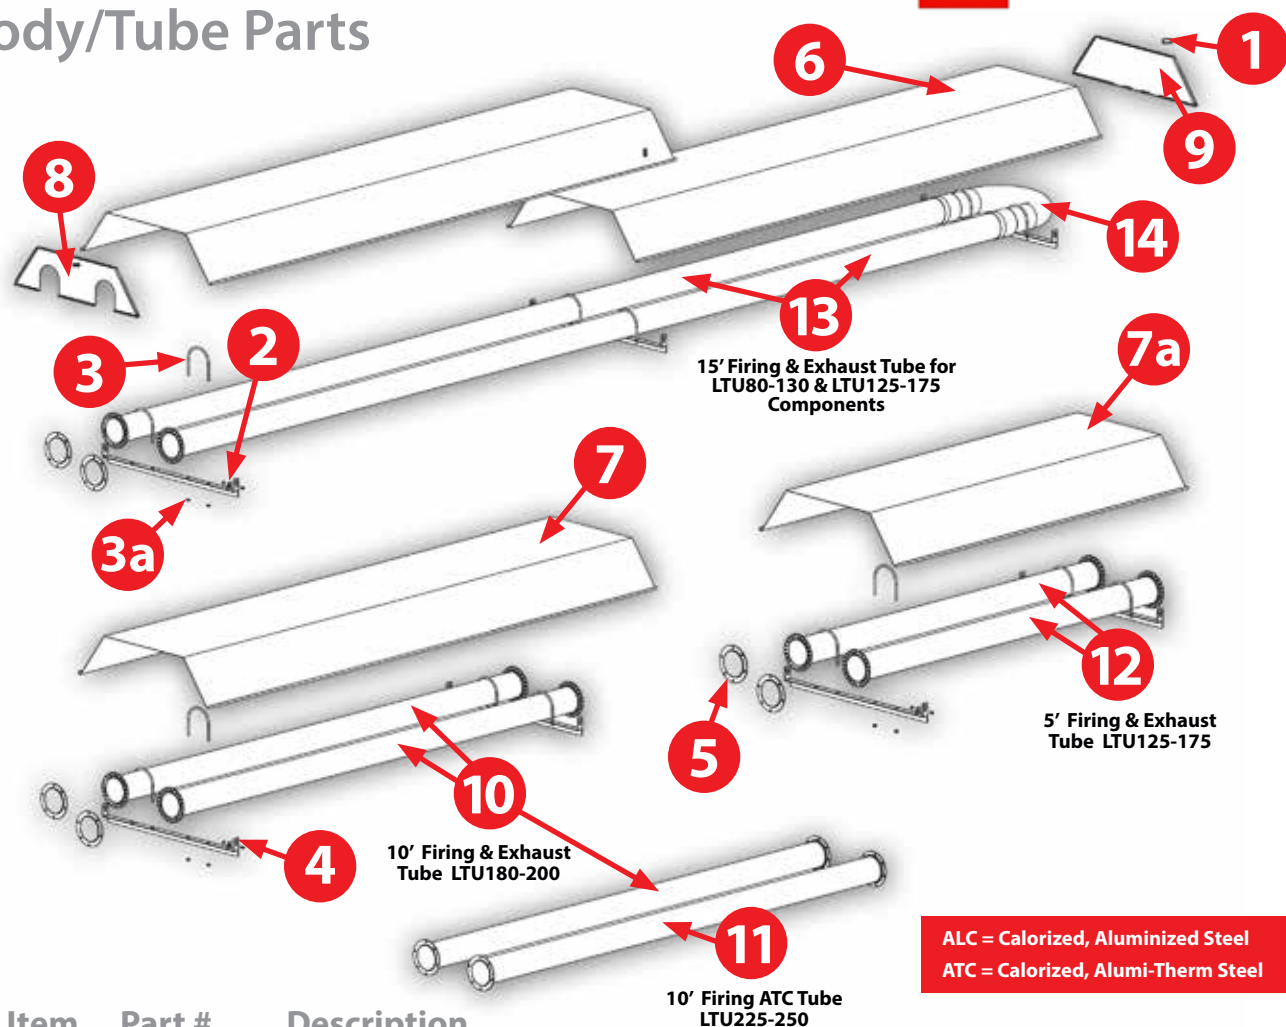

SPACE-RAY


Item	Part #	Description
1	02266010	Reflector Speed Clip
2	42769011	Reflector Clamp with Screw
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	42898000	Tube Support/Hanger Bracket, 28"
5	42921000	Tube Flange Gasket
6	42894080	Reflector, 8'-4" long (15 ft. section only; 2 per 15 ft. body section)
7	42894100	Reflector, 9'-11½" long (10 ft. section only; 1 per 10 ft. body section)
7a	42894050	Reflector, 4'-11½" long (5 ft. section only; 1 per 5 ft. body section)
8	42895000	Reflector, Control End
9	42896000	Reflector, Foot End
10	44028090	10' Tube Assembly Kit, 4" OD, ALC w/ two 12-radial hole flanges (firing tube) – for LTU180-200
11	44028200	10' Tube Assembly Kit, 4" OD, ATC w/ two 6-hole flanges (firing tube) – for LTU225-250
12	44028070	5' Tube Assembly Kit, 4" OD, ALC w/ two 12-radial hole flanges (firing tube) – for LTU125-175
13	44028080	15' Tube Assembly Kit, 4" OD, ALC w/ one 12-hole flange ALC = Calorized, Aluminized Steel
14	42913000	U Bend, 4" OD x 6" centerline radius ATC = Calorized, Alum-Therm Steel



Coldblocker

Body/Tube Parts

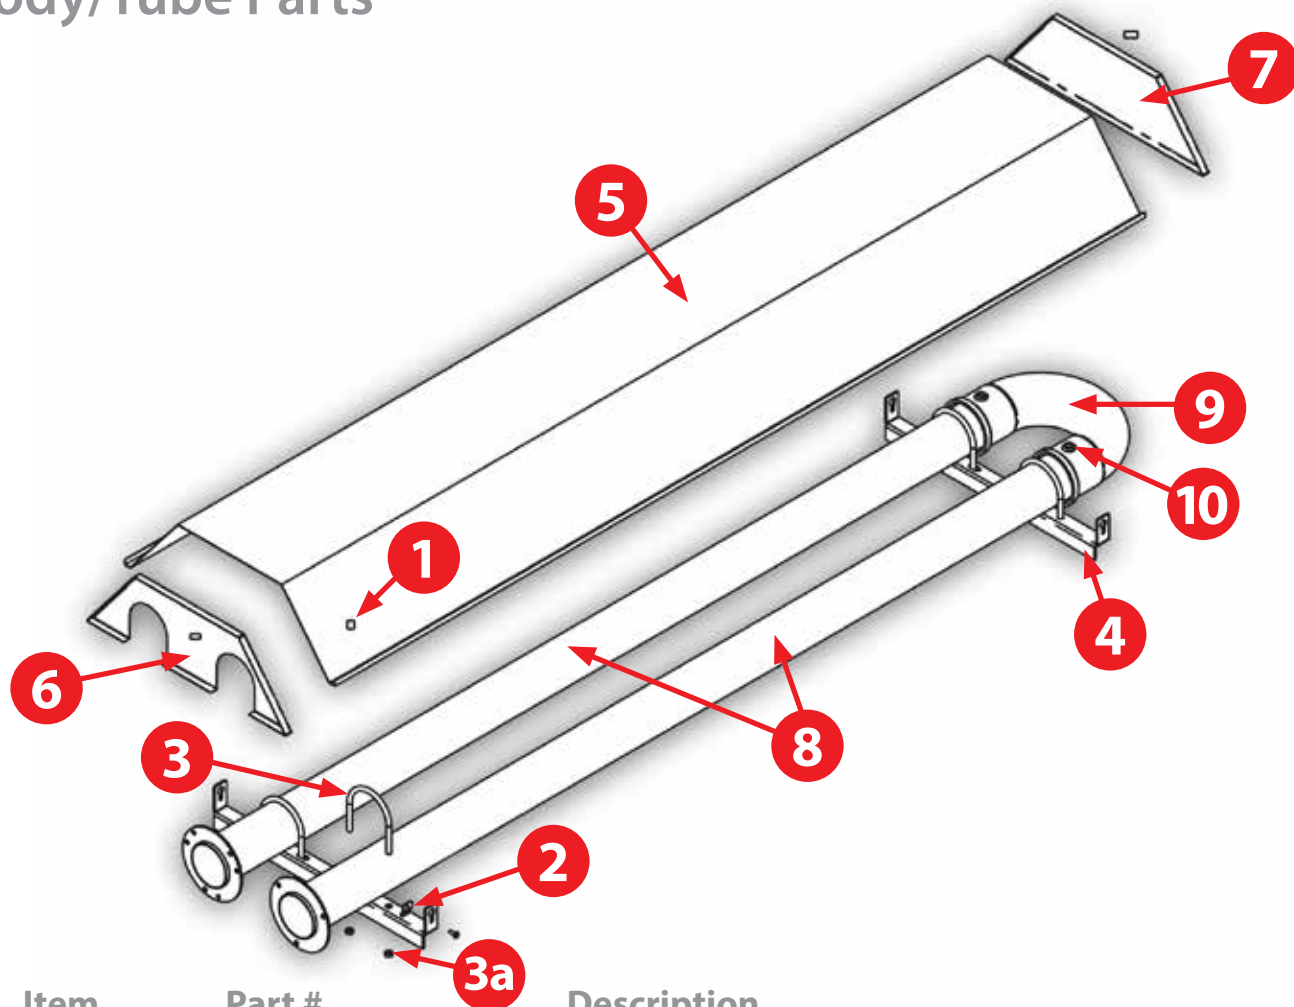


Item	Part #	Description
1	02266010	Reflector Speed Clip
2	42769011	Reflector Clamp with screw (4 per heater)
3	42770000	"U" Bolt Clamp, 3" OD Tube (6 per heater)
3a	02127110	"U" Bolt Hex Nut, 5/16-18 (2 per "U" Bolt)
4	42773000	Tube Support/Hanger Bracket, 18-1/2" (2 per heater)
5	42763080	Reflector, 8' long (1 per heater)
6	42762010	Reflector, control end
7	42761010	Reflector, foot end
8	44028130	7-1/2' Tube Replacement Kit, 3" OD, ALC w/one 3-hole flange (Firing tube) –for CB20-50
9	42764000	U Bend, 3" OD x 3-3/4" centerline radius
10	02251040	Set Screw, 5/16-24 x 1/2" (2 per heater)



SIR Series

Body/Tube Parts

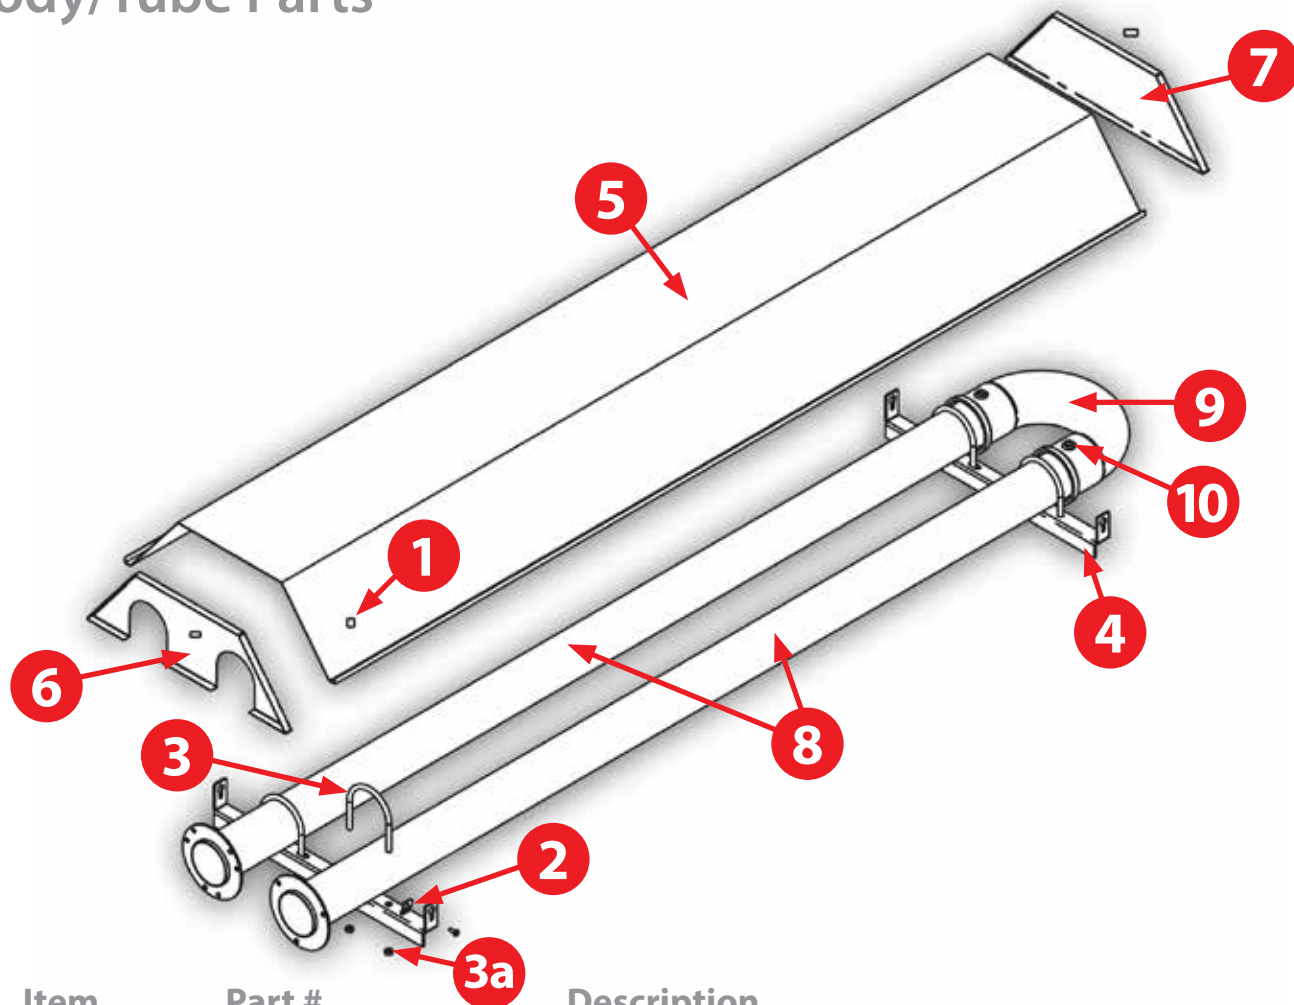


Item	Part #	Description
1	02266010	Reflector Speed Clip
2	42769011	Reflector Clamp with screw (4 per heater)
3	42770000	"U" Bolt Clamp, 3" OD Tube (6 per heater)
3a	02127110	"U" Bolt Hex Nut, 5/16-18 (2 per "U" Bolt)
4	42773000	Tube Support/Hanger Bracket, 18-1/2" (2 per heater)
5	42763080	Reflector, 8' long (1 per heater)
6	42762010	Reflector, control end
7	42761010	Reflector, foot end
8	44028130	7-1/2' Tube Replacement Kit, 3" OD, ALC w/one 3-hole flange (Firing tube) –for CB20-50
9	42764000	U Bend, 3" OD x 3-3/4" centerline radius
10	02251040	Set Screw, 5/16-24 x 1/2" (2 per heater)



ETS/ETU40-175

Body/Tube Parts

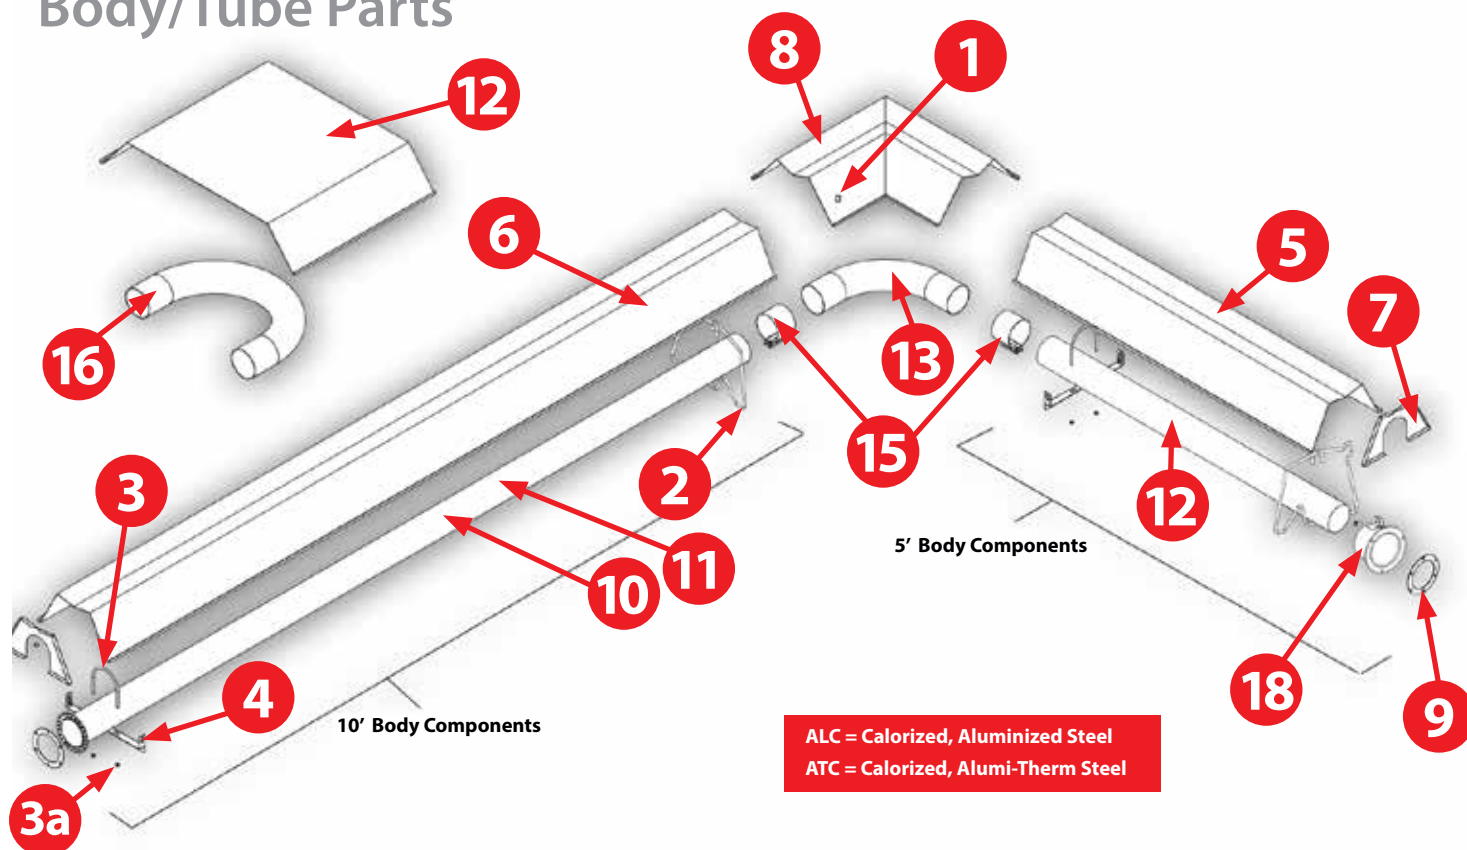


ALC = Calorized, Aluminized Steel
ATC = Calorized, Alumi-Therm Steel

Item	Part #	Description
1	02266010	Reflector Speed Clip
2	43980010	Wire Hanger
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13"
5	43319050	Reflector, 4'-11½" long (5' section only; 1 per 5 ft. tube section)
6	43319100	Reflector, 9'-11½" long (10' section only; 1 per 10 ft. tube section)
7	43320000	End Reflector
8	43342000	Corner Reflector Package
9	42921000	Tube Flange Gasket
10	44028030	10' Tube Assembly Kit, 4" OD, ALC steel with one 24-hole flange (firing/start tube)
11	44028100	10' Tube Assembly Kit, 4" OD, HR steel without flanges (extension tube & exhaust tube)
12	44028120	5' Tube Assembly Kit, 4" OD, HR steel without flanges (extension tube & exhaust tube)
13	43208010	4" O.D. Elbow Package
14	02189020	#10 x ½" Self-Drilling Screw (2 per coupling)
15	30462980	4" OD Tube Compression Coupling w/bolts
16	43208020	4" OD U-Bend (Required for ETU Only)
17	43488000	U-Bend Reflector (ETU Option)
18	44015251	Tube Flange Assembly (with 1/4-20 x 1" screw)



SIS/SIU40-175

Body/Tube Parts

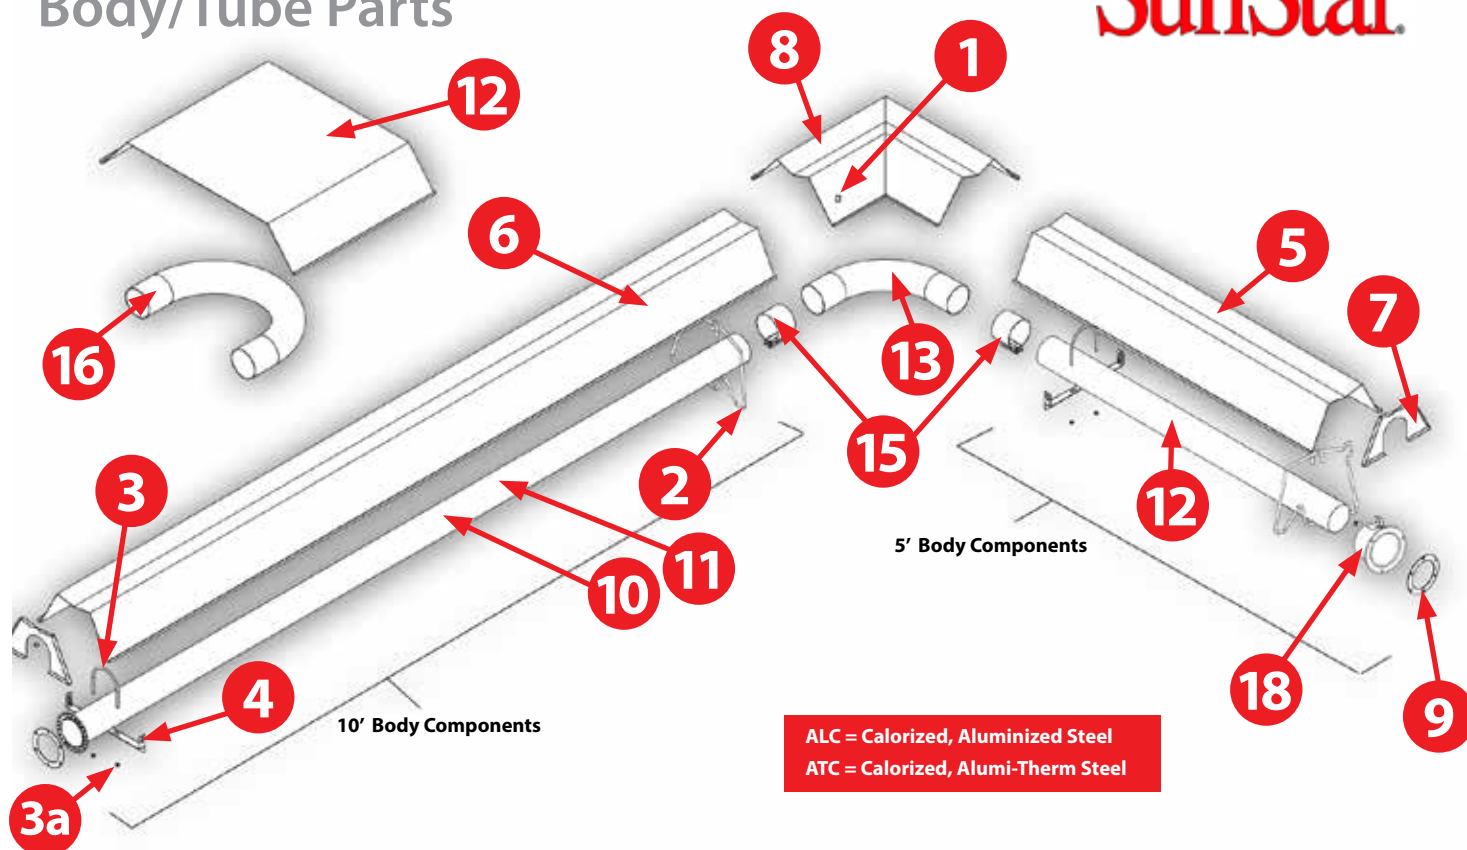


Item	Part #	Description
1	02266010	Reflector Speed Clip
2	43980010	Wire Hanger
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13"
5	43319050	Reflector, 4'-11½" long (5' section only; 1 per 5 ft. tube section)
6	43319100	Reflector, 9'-11½" long (10' section only; 1 per 10 ft. tube section)
7	43320000	End Reflector
8	43342000	Corner Reflector Package
9	42921000	Tube Flange Gasket
10	44028030	10' Tube Assembly Kit, 4" OD, ALC steel with one 24-hole flange (firing/start tube)
11	44028100	10' Tube Assembly Kit, 4" OD, HR steel without flanges (extension tube & exhaust tube)
12	44028120	5' Tube Assembly Kit, 4" OD, HR steel without flanges (extension tube & exhaust tube)
13	43208010	4" O.D. Elbow Package
14	02189020	#10 x ½" Self-Drilling Screw (2 per coupling)
15	30462980	4" OD Tube Compression Coupling w/bolts
16	43208020	4" OD U-Bend (Required for ETU Only)
17	43488000	U-Bend Reflector (ETU Option)
18	44015251	Tube Flange Assembly (with 1/4-20 x 1" screw)



SIS/SIU180-250

Body/Tube Parts

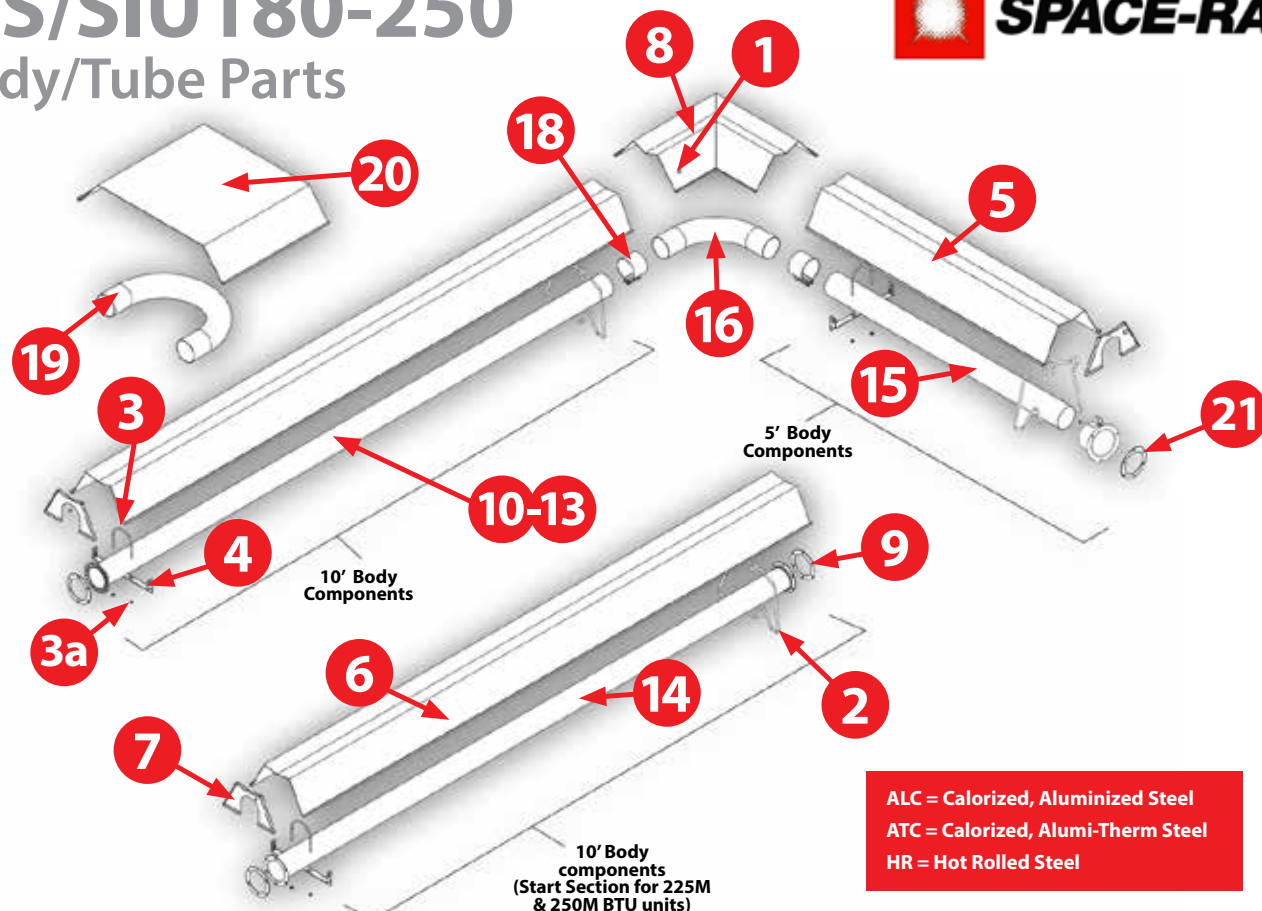


ALC = Calorized, Aluminized Steel
 ATC = Calorized, Alumi-Therm Steel
 HR = Hot Rolled Steel

Item	Part #	Description
1	02266010	Reflector Speed Clip
2	43980010	Wire Hanger
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13"
5	43319050	Reflector, 4'-11½" long (5' section only; 1 per 5 ft. tube section)
6	43319100	Reflector, 9'-11½" long (10' section only; 1 per 10 ft. tube section)
7	43320000	End Reflector
8	43342000	Corner Reflector Package
9	42921000	Tube Flange Gasket
10	44028250	10' Tube Assembly Kit, 4" OD, ALC steel with one 12-radial hole flange for 180M--200M Btu/hr models, firing tube
11	44028170	10' Tube Assembly Kit, 4" OD, ATC steel with one 6-hole flange for 225M--250M Btu/hr models, second firing tube
12	44028060	10' Tube Assembly Kit, 4" OD, ALC steel without flanges for 180M--200M Btu/hr models, second firing tube
13	44028100	10' Tube Assembly Kit, 4" OD, HR steel without flanges for 225M--250M Btu/hr models, extension tube & exhaust tube
14	44028200	10' Tube Assembly Kit, 4" OD, ATC steel with two 6-hole flanges for 225M--250M Btu/hr models, firing tube
15	44028120	5' Tube Assembly Kit, 4" OD, HR steel without flanges for 180M--250M Btu/hr models, extension tube & exhaust tube
16	43208010	4" O.D. Elbow Package
17	02189020	#10 x ½" Self-Drilling Screw (2 per coupling)
18	30462980	4" OD Tube Compression Coupling w/bolts
19	43208020	4" OD U-Bend (Required for ETU Only) ALC = Calorized, Aluminized Steel
20	43488000	U-Bend Reflector (ETU Option) ATC = Calorized, Alumi-Therm Steel
21	44015251	Tube Flange Assembly (with 1/4-20 x 1" screw)



DK Series

Replacement Parts

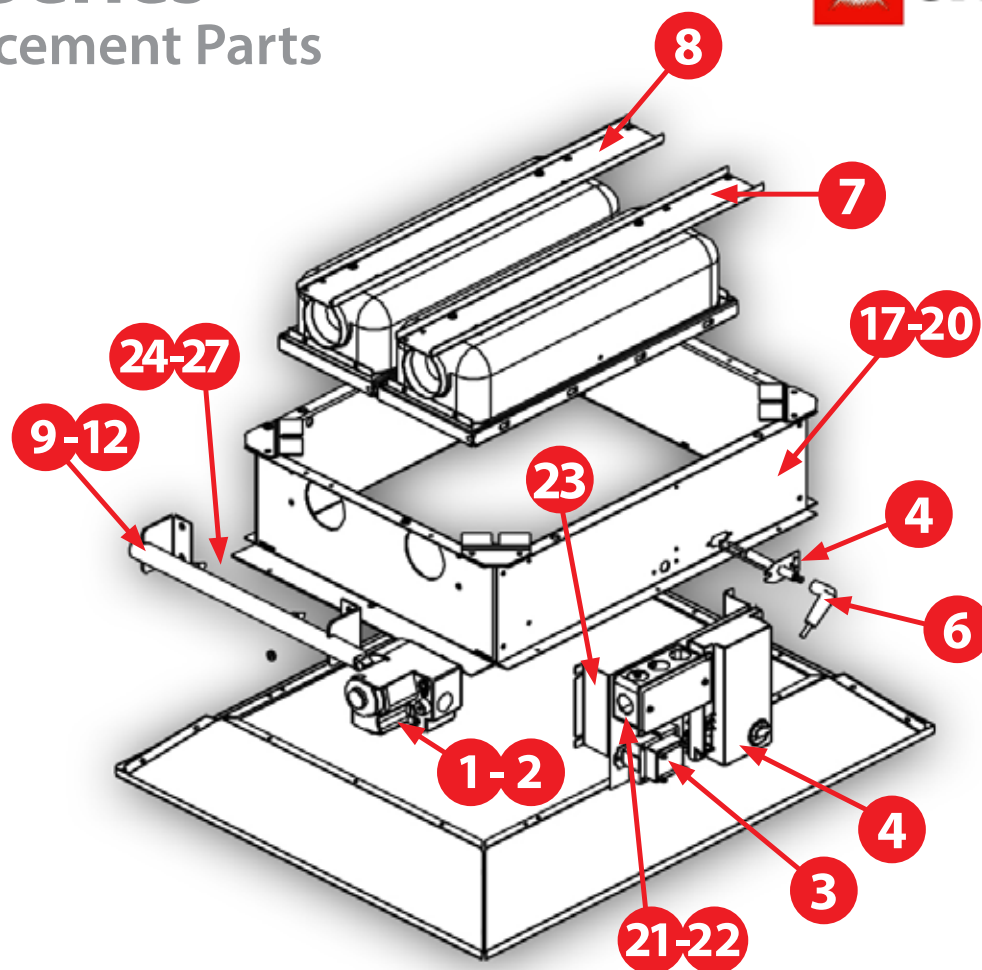


Item	Part #	Description	Item	Part #	Description
1	30333110	Valve VR8205M-2971 @ 10" W.C. – Propane Gas	17	43908010	Frame Assembly (1 Burner Unit)
2	30333120	Valve VR8205M-2989 @ 6" W.C. – Natural Gas	18	43908020	Frame Assembly (2 Burner Unit)
3	30279000	Transformer AT120B1051	19	43908030	Frame Assembly (3 Burner Unit)
4	30632030	Spark Module, Fenwal #35-605950-015	20	43908040	Frame Assembly (4 Burner Unit)
5	30295020	Electrode PSE-GF9	21	03548000	Junction Box, 2 x 4 x 1½
6	30567079	Ignition Cable 7" (Fenwal)	22	03606000	Cover Plate
7	43856029	Burner Assembly Kit (Ignition Unit)	23	43849000	Ignition Control Bracket
8	43856029	Burner Assembly Kit (2nd, 3rd, and 4th Unit)	24	43872380	Orifice #38 for DK40, DK80, DK120, DK160 – Natural Gas
9	43862010	Manifold for DK33, DK35, DK40	25	43872410	Orifice #41 for DK35, DK70, DK100, DK140 – Natural Gas
10	43862020	Manifold for DK60, DK66, DK70, DK80	26	43872980	Orifice 3/32" for DK30, DK60 – Natural Gas
11	43862030	Manifold for DK100, DK120	27	43872520	Orifice #52 for DK33, DK66, DK100, DK132 – Propane Gas
12	43862040	Manifold for DK132, DK140, DK160			
13	43847010	Reflector for DK33, DK35, DK40			
14	43847020	Reflector for DK60, DK66, DK70, DK80			
15	43847030	Reflector for DK100, DK120			
16	43847040	Reflector for DK132, DK140, DK160			



SG Series

Replacement Parts

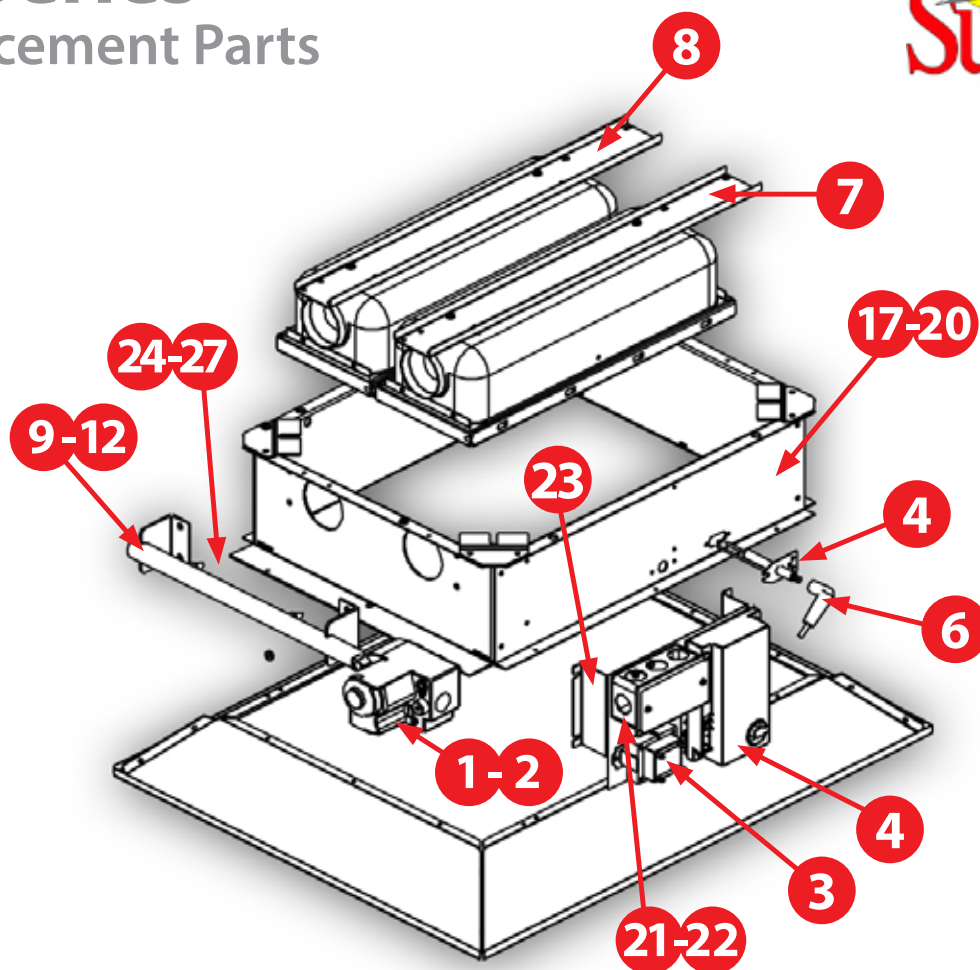


Item	Part #	Description
1	30333110	Valve VR8205M-2971 @ 10" W.C. – Propane Gas
2	30333120	Valve VR8205M-2989 @ 6" W.C. – Natural Gas
3	30279000	Transformer AT120B1051
4	30632030	Spark Module, Fenwal #35-605950-015
5	30295020	Electrode PSE-GF9
6	30567079	Ignition Cable 7" (Fenwal)
7	43856029	Burner Assembly Kit (Ignition Unit)
8	43856029	Burner Assembly Kit (2nd, 3rd, and 4th Unit)
9	43862010	Manifold for SG3, SG4
10	43862020	Manifold for SG6, SG8
11	43862030	Manifold for SG10, SG12
12	43862040	Manifold for SG13, SG14, SG15
13	43847010	Reflector for SG3, SG4
14	43847020	Reflector for SG6, SG8
15	43847030	Reflector for SG10, SG12
16	43847040	Reflector for SG13, SG14, SG15

Item	Part #	Description
17	43908010	Frame Assembly (1 Burner Unit)
18	43908020	Frame Assembly (2 Burner Unit)
19	43908030	Frame Assembly (3 Burner Unit)
20	43908040	Frame Assembly (4 Burner Unit)
21	03548000	Junction Box, 2 x 4 x 1½
22	03606000	Cover Plate
23	43849000	Ignition Control Bracket
24	43872380	Orifice #38 for SG3, SG4, SG8, SG12, SG15 – Natural Gas
25	43872410	Orifice #41 for SG10, SG14 – Natural Gas
26	43872980	Orifice 3/32" for SG3, SG6 – Natural Gas
27	43872520	Orifice #52 for SG3, SG6, SG10, SG13 – Propane Gas



RFPA25

Replacement Parts

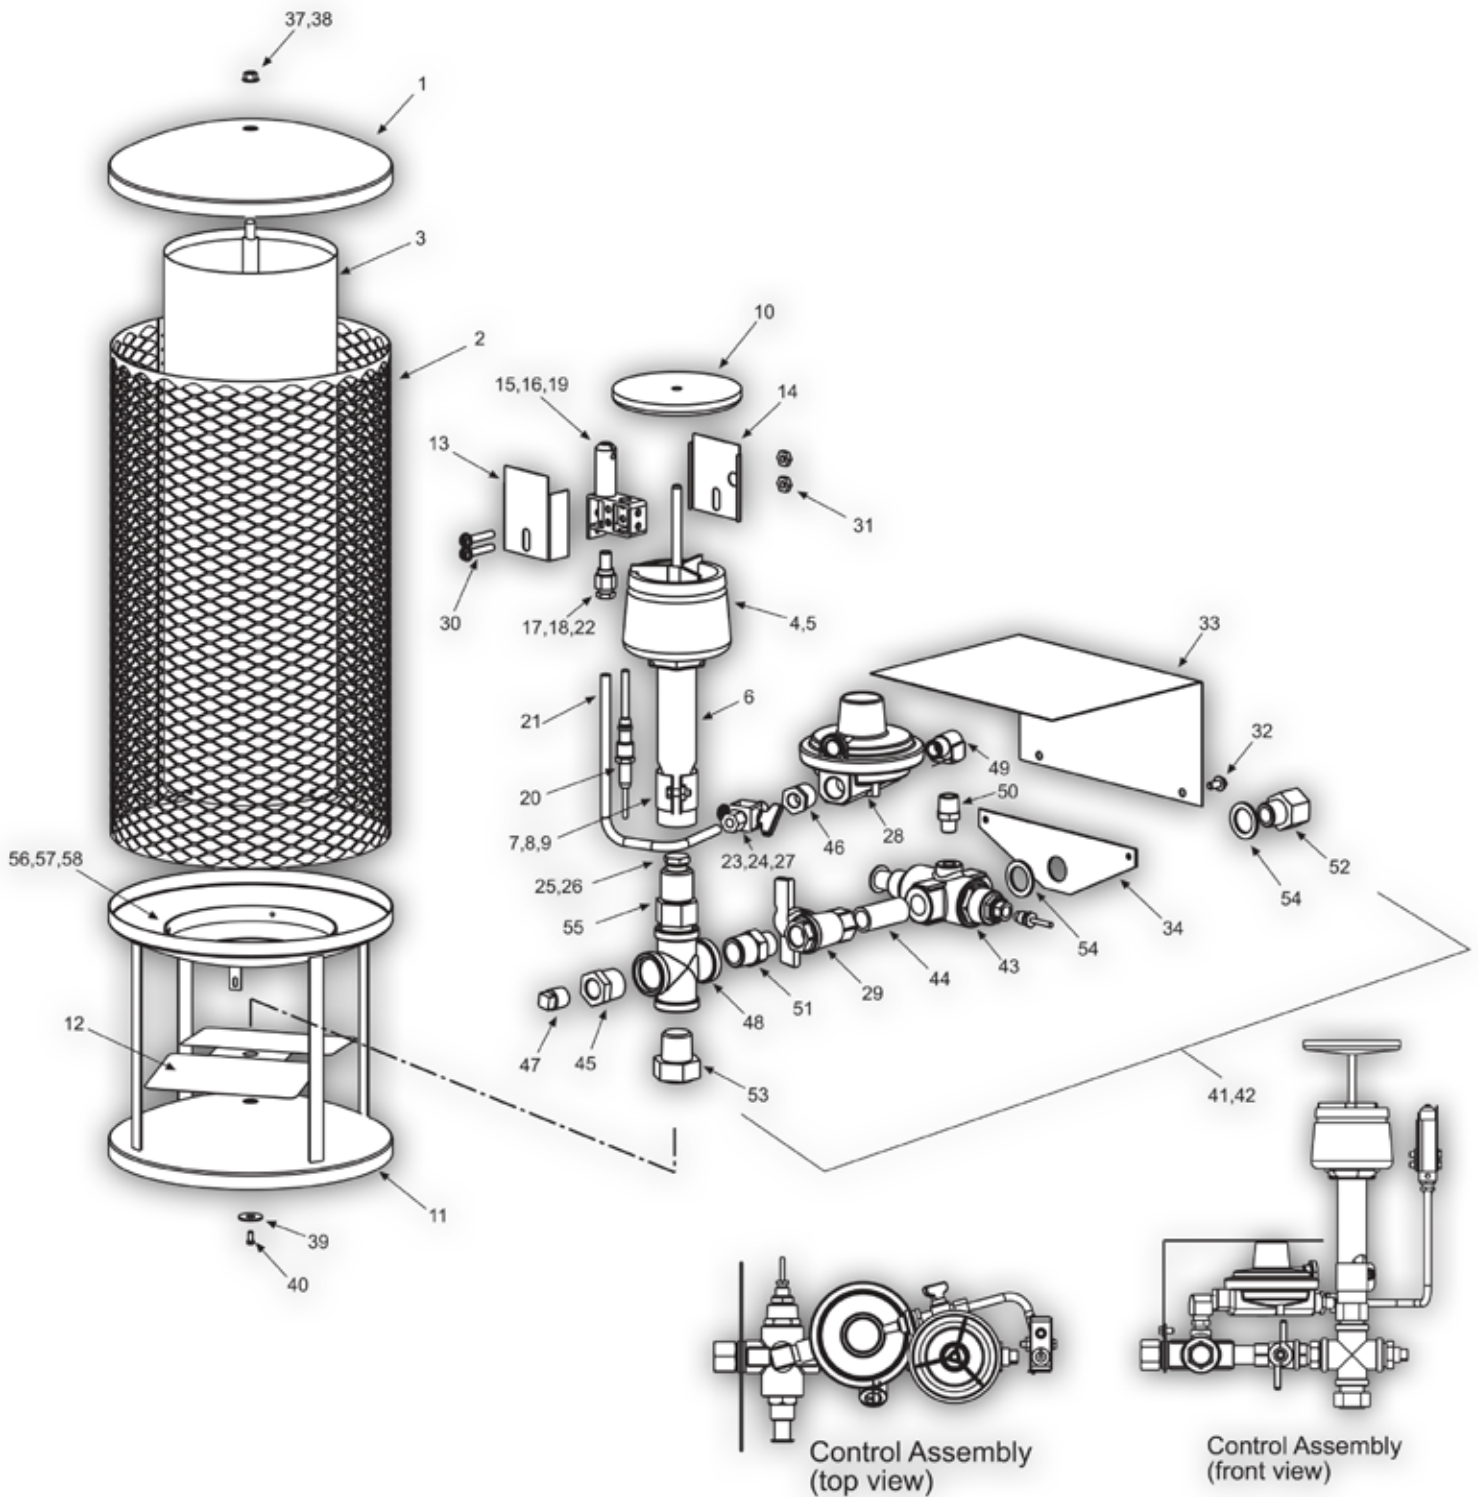




RFPA25

Replacement Parts



Item Part # Description


1	04114000	Upper Head			
2	04593030	Expanded Metal Guard			
3	04485000	Heat Exchanger Assembly			
4	41258000	Main Burner Assembly (complete)			
5	42011000	Burner Top & Target Support Assembly			
6	07022000	Burner Tube			
7	02125130	Round Head Machine Screw #10-24 x 1/2" (2 each)			
8	02126050	Nut- Square #10-24 (2 each)			
9	04304000	Air Shutter			
10	40338000	Burner Target			
11	04783010	Base Assembly			
12	41806020	Label Plate Holder			
13	41795020	Pilot Shield - Outer			
14	41795010	Pilot Shield - Inner			
15	03399020	Pilot Burner & Orifice Fitting - Nat. #J129DDA3223	37	02127150	Nut - Hex 1/2-13
16	03399030	Pilot Burner & Orifice Fitting - LP #J129DDA4212	38	02129160	Washer - Flat 1/2
17	03345010	Pilot Orifice - Nat (.023") #Y90AA - 3223	39	41847000	Washer - Burner Fitting
18	03345020	Pilot Orifice - LP (.012") #Y90AA - 4212	40	02247010	Hex Head Machine Screw 1/2-13 x 1
19	03437000	Pilot Burner less Orifice #J129DDA			
20	03401030	Thermocouple 18"	41	41254040	Control Arm Complete - Nat. (less pilot shields/burner)
21	41684010	Pilot Tubing	42	41254050	Control Arm Complete - LP (less pilot shields/burner)
22	03527000	Break Away Fitting - (included with pilot orifice)	43	03166000	Pilot Safety Gas Valve #H19LA-1
23	03601010	Nut, Compression 1/4" (included with pilot valve)	44	03330040	Nipple, 3/8 NPT x 1-1/2" Long
24	03600010	Sleeve, Compression 1/4" (included with pilot valve)	45	03338100	Reducing Bushing, 1/2 x 1/4 NPT
25	03258330	Main Burner Orifice (Nat.) #33	46	03338110	Reducing Bushing, 3/8 x 1/8 NPT
26	03258420	Main Burner Orifice (LP) #42	47	03339040	Plug, 1/4 NPT (pressure tap)
27	03384020	Pilot Valve, 1/8 MPT x 1/4" OD Tube	48	03340080	Cross, 1/2 NPT
28	30524030	Pilot Regulator 1/4 x 3/8	49	30643010	Street Ell, 1/4
29	30285010	Manual Ball Valve 3/8"	50	30527000	Nipple, Hex Reducing 1/4 MPT x 1/8 MPT
30	02004030	Round Head Machine Screw #10-32 x 1-1/8" (2 each)	51	30527010	Nipple, Hex Reducing 1/2 MPT x 3/8 MPT
31	02126060	Nut - Square #10-32 (2 each)	52	30528000	Adapter, Reducing 1/2 FPT x 3/8 MPT
32	02152010	Thread Cut Screw #10-32 x 3/8" (2 each)	53	41849000	Manifold Holder Stud
33	04508020	Radiation Shield (nameplate holder)	54	04088990	Spacer Washer (2 each)
34	04088000	Bracket, Radiation Shield	55	42889000	Orifice Holder Fitting
35	41358010	Instruction Manual (not shown)	56	02104060	Speed Nut #10 (4 each)
36	43630170	Nameplate Label (not shown) State Gas Type	57	02129050	Washer - Flat #10 (4 each)
			58	02240010	Hex Head Sheet Metal Screw #12 x 3/4" (4 each)

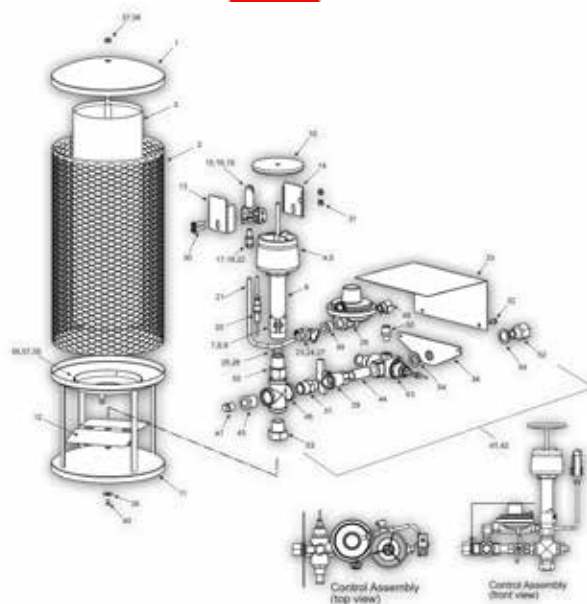



RFPA21

Replacement Parts

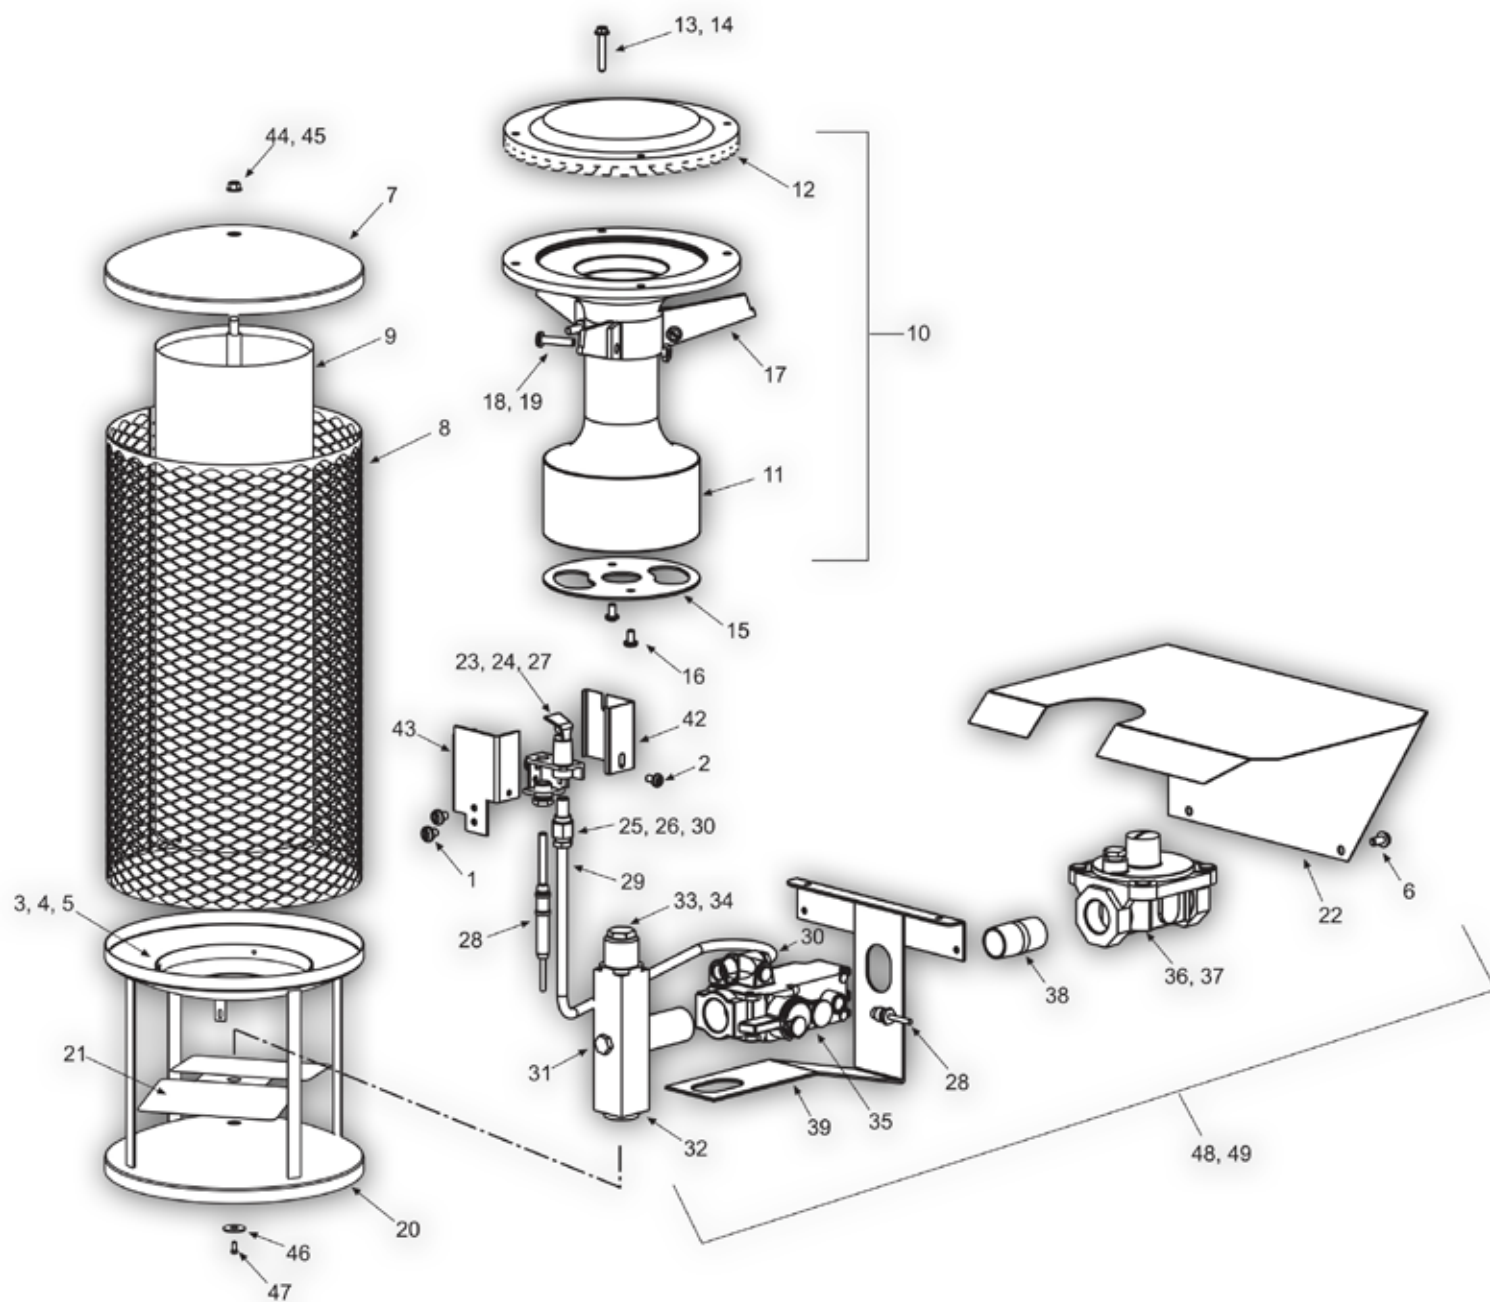




RFPA21

Replacement Parts


Item	Part #	Description	Item	Part #	Description
1	02004010	Round Head Machine Screw #10-32 x 1/4 (3 each)	39	43136000	Manifold Support & Nameplate Bracket
2	02123030	Round Head Machine Screw #8-32 x 3/16"	40	41357080	Instruction Manual (not shown)
3	02240010	Hex Washer Head Sheet Metal Screw #12 x 3/4" (4 each)	41	41874030	Nameplate Label - State Gas Type (not shown)
4	02129050	Washer - Flat #10 (4 each)	42	42918010	Pilot Shield - Inner
5	02104060	Nut - Speed #10 (4 each)	43	42918020	Pilot Shield - Outer
6	02152010	Hex Head Thread Cut Screw #10-24 x 3/8" (2 each)	44	02127150	Nut - Hex 1/2-13
7	04114000	Upper Head	45	02129160	Washer - Flat 1/2
8	04593030	Expanded Metal Guard	46	41847000	Washer - Burner Fitting
9	04485000	Heat Exchanger Assembly	47	02247010	Hex Head Machine Screw 1/2-13 x 1
10	04380000	Main Burner Assembly (less alignment bracket)	48	41848030	Control Arm Assembly (complete) - Nat.
11	41858000	Burner Base	49	41848040	Control Arm Assembly (complete) - LP
12	41859000	Burner Cap			
13	02215040	Hex Washer Head Machine Screw #8-32 x 1" (4 each)			
14	02186040	Hex - Nut #8-32 (4 each)			
15	04094010	Shutter Plate - Fixed			
16	02166010	Pan Head Machine Screw #8-32 x 3/8" (2 each)			
17	40584000	Burner Alignment Bracket Assembly			
18	02004040	Round Head Machine Screw #10-32 x 3/4" (3 each)			
19	02126060	Nut - Square #10-32 (3 each)			
20	04783010	Base Assembly			
21	41806020	Label Holder Plate			
22	41874990	Radiation Shield (nameplate holder)			
23	30335010	Pilot Burner & Orifice Fitting - Nat. #J181EKA3223			
24	30335020	Pilot Burner & Orifice Fitting - LP #J181EKA4214			
25	03345010	Pilot Orifice - Nat (.023") #Y90AA - 3223			
26	03345060	Pilot Orifice - LP (.014") #Y90AA - 4214			
27	30335000	Pilot Burner less Orifice #J181EKA			
28	03401030	Thermocouple #K16BA-18+C31			
29	04659000	Pilot Tubing - Baso valve			
30	03527000	Break Away Fitting (included with valve and pilot orifice)			
31	03339020	Plug - 1/8" (pressure tap)			
32	41834000	Burner Fitting Assembly			
33	03258980	Main Burner Orifice (Nat.) "H"			
34	03258200	Main Burner Orifice (LP) #20			
35	03695000	Gas Valve - Baso #H43BA-5D			
36	03307230	Regulator - RV48 (Nat.) @ 5" W.C.			
37	03307210	Regulator - RV48 (LP) @ 10" W.C.			
38	03333040	Nipple 1/2 x 1-1/2			

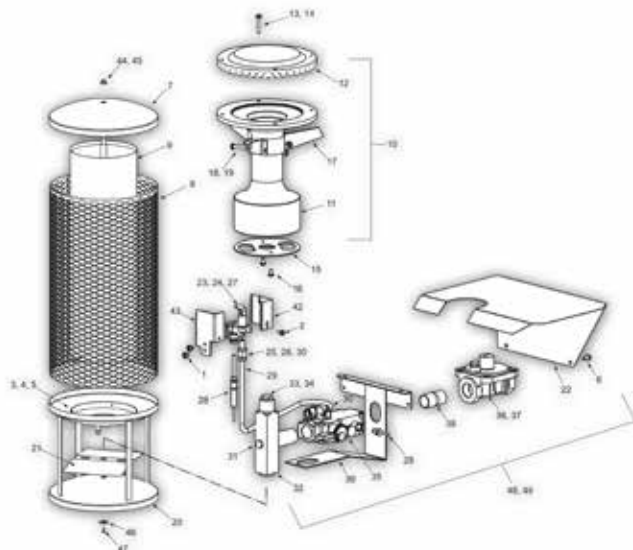



RFPA10

Replacement Parts

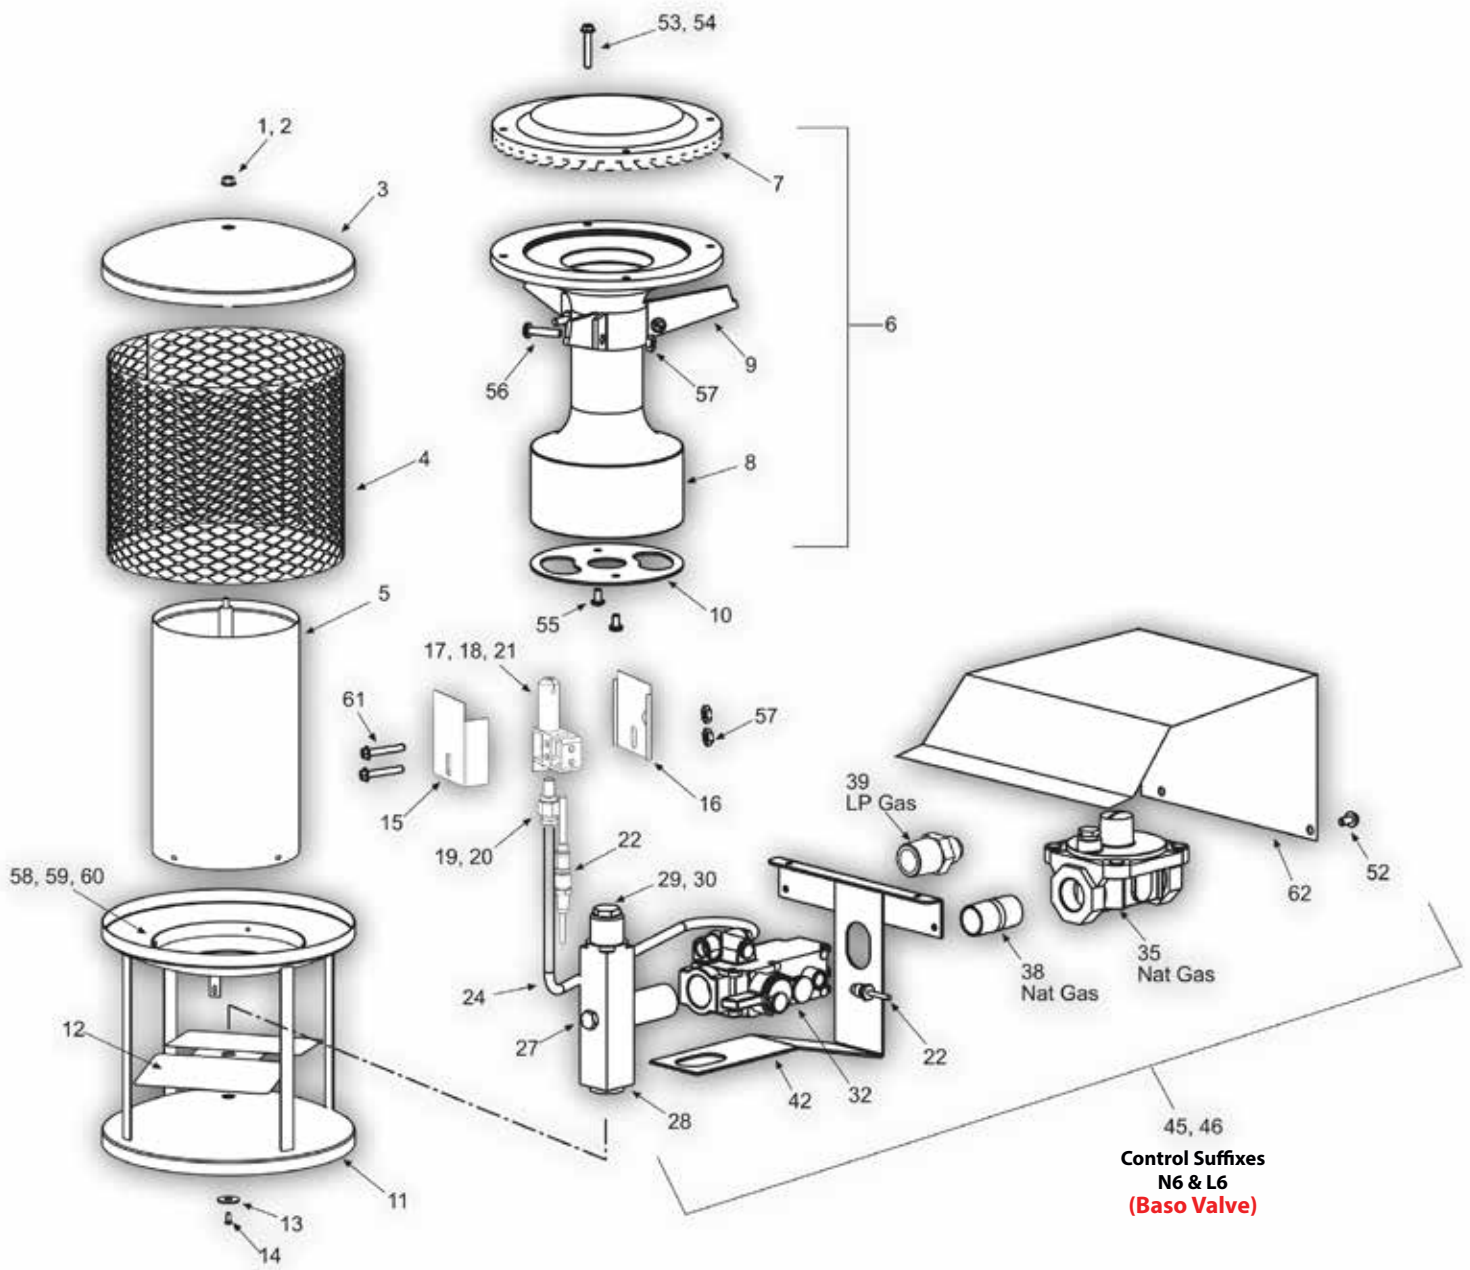



RFPA10

Replacement Parts

MODEL NUMBER SUFFIXES

N - Natural Gas

L - LP Gas

6 - 100% Gas Shutoff Control - Manually Operated (Baso valve)

6C - 100% Gas Shutoff Control - Manually Operated (White-Rodgers valve)

9A - 100% Gas Shutoff Control - Thermostatically Operated (Robertshaw valve)

Item	Part #	Description	Model Used On
1	02127150	Hex Nut 1/2-13	RFPA10C (ALL MODELS)
2	02129160	Flat Washer 1/2	RFPA10C (ALL MODELS)
3	04114000	Upper Head	RFPA10C (ALL MODELS)
4	04593020	Expanded Metal Guard	RFPA10C (ALL MODELS)
5	04362020	Heat Exchanger Assembly	RFPA10C (ALL MODELS)
6	04380000	Main Burner Assembly (complete)	RFPA10C (ALL MODELS)
7	41859000	Burner Cap	RFPA10C (ALL MODELS)
8	41858000	Burner Base	RFPA10C (ALL MODELS)
9	40584000	Burner Alignment Bracket Assembly	RFPA10C (ALL MODELS)
10	04094010	Shutter Plate - Fixed	RFPA10C (ALL MODELS)
11	04783010	Base Assembly	RFPA10C (ALL MODELS)
12	41806020	Label Mounting Plate	RFPA10C (ALL MODELS)
13	41847000	Washer - Burner Fitting	RFPA10C (ALL MODELS)
14	02247010	Machine Screw 1/2-13 x 1	RFPA10C (ALL MODELS)
15	41795020	Pilot Shield - Outer	RFPA10C (ALL MODELS)
16	41795010	Pilot Shield - Inner	RFPA10C (ALL MODELS)
17	03399020	Pilot Burner & Orifice Fitting - Nat. #J129DDA3223	RFPA10C-N6,N6C,N9A
18	03399030	Pilot Burner & Orifice Fitting - LP #J129DDA4212	RFPA10C-L6,L6C,L9A
19	03345010	Pilot Orifice - Nat (.023") #Y90AA - 3223	RFPA10C-N6,N6C,N9A
20	03345020	Pilot Orifice - LP (.012") #Y90AA - 4212	RFPA10C-L6,L6C,L9A
21	03437000	Pilot Burner less Orifice #J129DDA	RFPA10C (ALL MODELS)
22	03401030	Thermocouple	RFPA10C (ALL MODELS)
23	41799000	Pilot Tubing - White-Rodgers valve	RFPA10C-6C
24	04659000	Pilot Tubing - Baso valve	RFPA10C-6
25	43137010	Pilot Tubing - Robertshaw valve	RFPA10C-9A
26	03527000	Break Away Fitting - included w/Valve & Pilot Orifice	RFPA10C (ALL MODELS)
27	03339020	Plug - 1/8" (pressure tap)	RFPA10C (ALL MODELS)
28	41834000	Burner Fitting Assembly	RFPA10C (ALL MODELS)
29	03258120	Main Burner Orifice (Nat.) #12	RFPA10C-N6,N6C,N9A
30	03258910	Main Burner Orifice (LP) 7/64"	RFPA10C-L6,L6C,L9A
31	30091010	Gas Valve - White-Rodgers #764-2	RFPA10C-6C
32	03695000	Gas Valve - Baso	RFPA10C-6
33	30640010	Gas Valve - Robertshaw (Nat 3.5" w.c.)	RFPA10C-N9A
34	30640000	Gas Valve - Robertshaw (LP 10" w.c.)	RFPA10C-L9A
35	03307100	Regulator - RV48 (Nat.)	RFPA10C-N6,N6C
36	30524000	*Regulator - 230 (LP) POL x 3/8" (not shown)	RFPA10C-L6,L6C,L9A
37	03333100	Nipple 1/2 x 3	RFPA10C-6C
38	03333040	Nipple 1/2 x 1-1/2	RFPA10C-N6
39	30241010	Flare Fitting 3/8" Tube x Male 1/2" NPT	RFPA10C-L6,L9A
40	30630010	Flare Fitting 3/8" Tube x Female 1/2" NPT	RFPA10C-L6C
41	30528030	Adaptor Fitting 1/2" FPT x 1/2" NPT	RFPA10C-N9A
42	43136000	Manifold Support	RFPA10C-6,6C
43	43136050	Manifold Support (for Robertshaw valve)	RFPA10C-9A
44	41357040	Instruction Manual (Not Shown)	RFPA10C (ALL MODELS)
45	41848010	Control Arm - Nat (Baso)	RFPA10C-N6
46	41848050	Control Arm - LP (Baso)	RFPA10C-L6
47	41783010	Control Arm - Nat (White-Rodgers)	RFPA10C-N6C



RFPA10

Replacement Parts

MODEL NUMBER SUFFIXES

N - Natural Gas


L - LP Gas

6 - 100% Gas Shutoff Control - Manually Operated (Baso valve)

6C - 100% Gas Shutoff Control - Manually Operated (White-Rodgers valve)

9A - 100% Gas Shutoff Control - Thermostatically Operated (Robertshaw valve)



Item	Part #	Description	Model Used On
48	41783030	Control Arm - LP (White-Rodgers)	RFPA10C-L6C
49	43138090	Control Arm - Nat (Robertshaw)	RFPA10C-N9A
50	43138100	Control Arm - LP (Robertshaw)	RFPA10C-L9A
51	41870050	Bulb Retainer	RFPA10C-9A
52	02152010	Hex Head Thread Cut Screw #10-24 x 3/8" (2 each)	RFPA10C (ALL MODELS)
53	02215040	Hex Washer Head Machine Screw #8-32 x 1 (4 each)	RFPA10C (ALL MODELS)
54	02186040	Hex Nut #8-32 (4 each)	RFPA10C (ALL MODELS)
55	02166010	Pan Head Machine Screw #8-32 x 3/8 (2 each)	RFPA10C (ALL MODELS)
56	02004040	Round Head Machine Screw #10-32 x 3/4 (3 each)	RFPA10C (ALL MODELS)
57	02126060	Square Nut #10-32 (5 each)	RFPA10C (ALL MODELS)
58	02240010	Hex Washer Head Sheet Metal Screw #12 x 3/4 (4ea)	RFPA10C (ALL MODELS)
59	02129050	Flat Washer #10 (4 each)	RFPA10C (ALL MODELS)
60	02104060	Speed Nut #10 (4 each)	RFPA10C (ALL MODELS)
61	02004030	Round Head Machine Screw #10-32 x 1-1/8 (2 each)	RFPA10C (ALL MODELS)
62	41988990	Plate, Label Holder	RFPA10C (ALL MODELS)

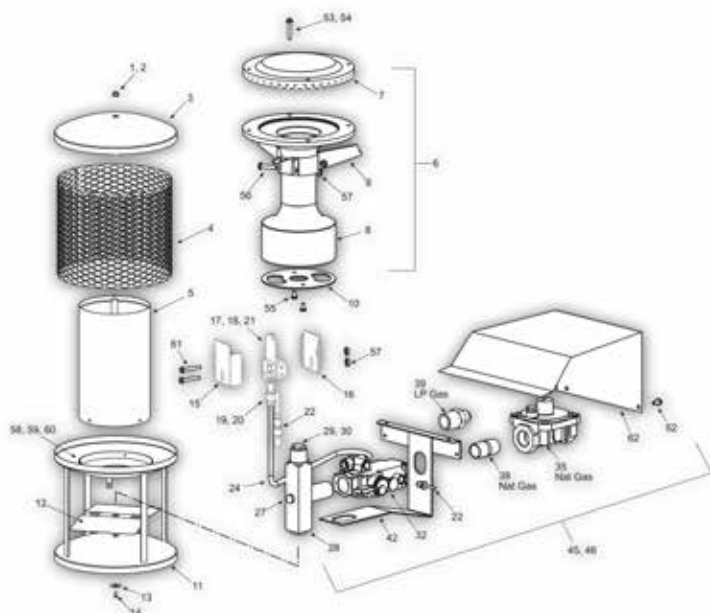






RFPA10

Replacement Parts

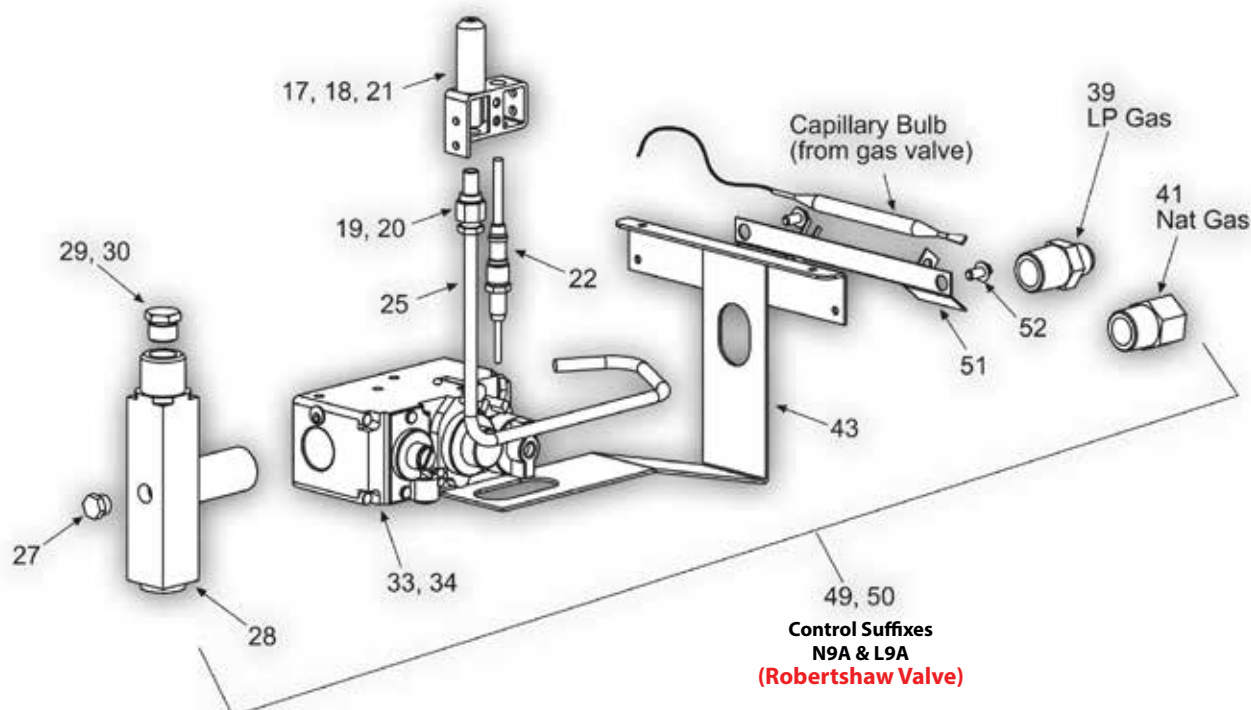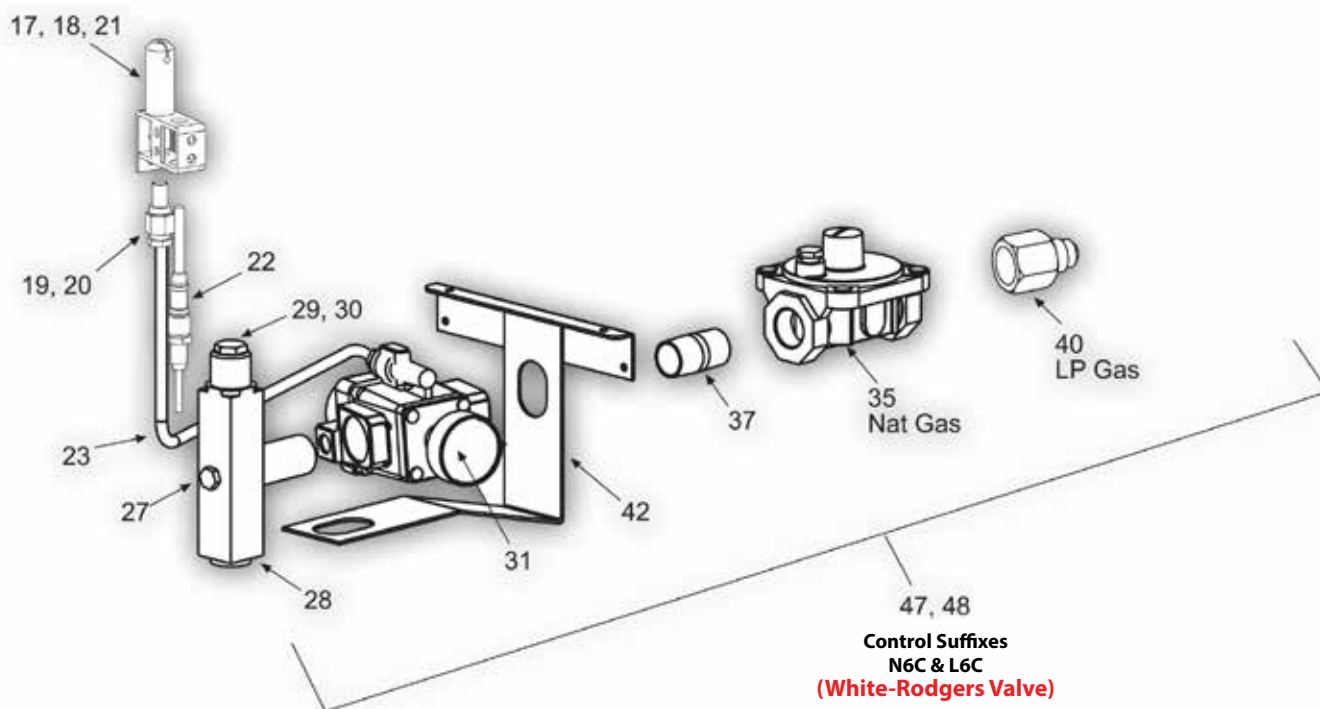



PTS/PTU Banner Components

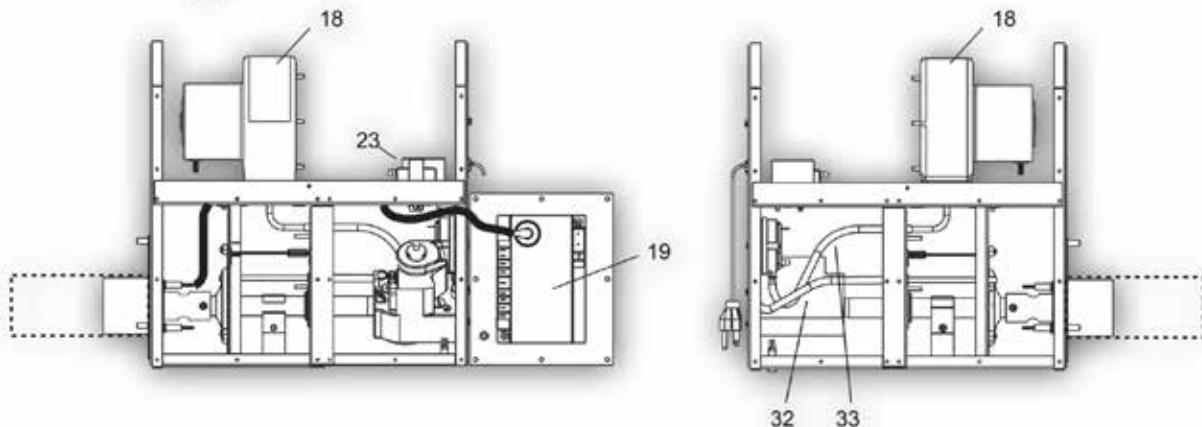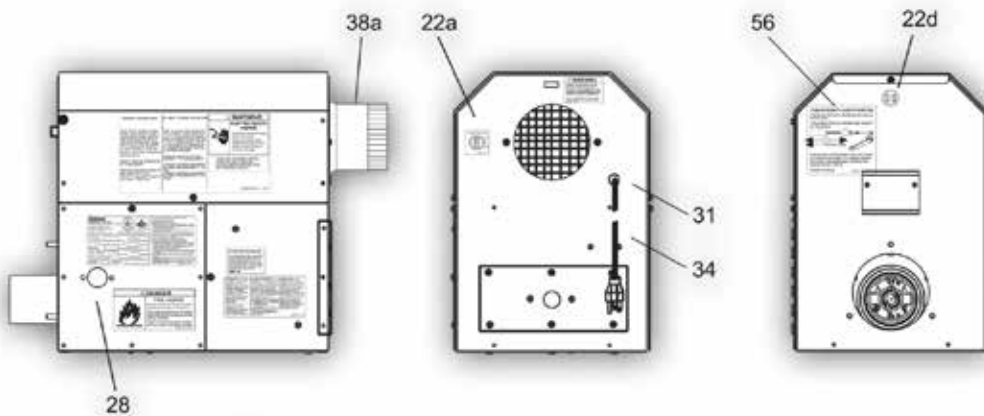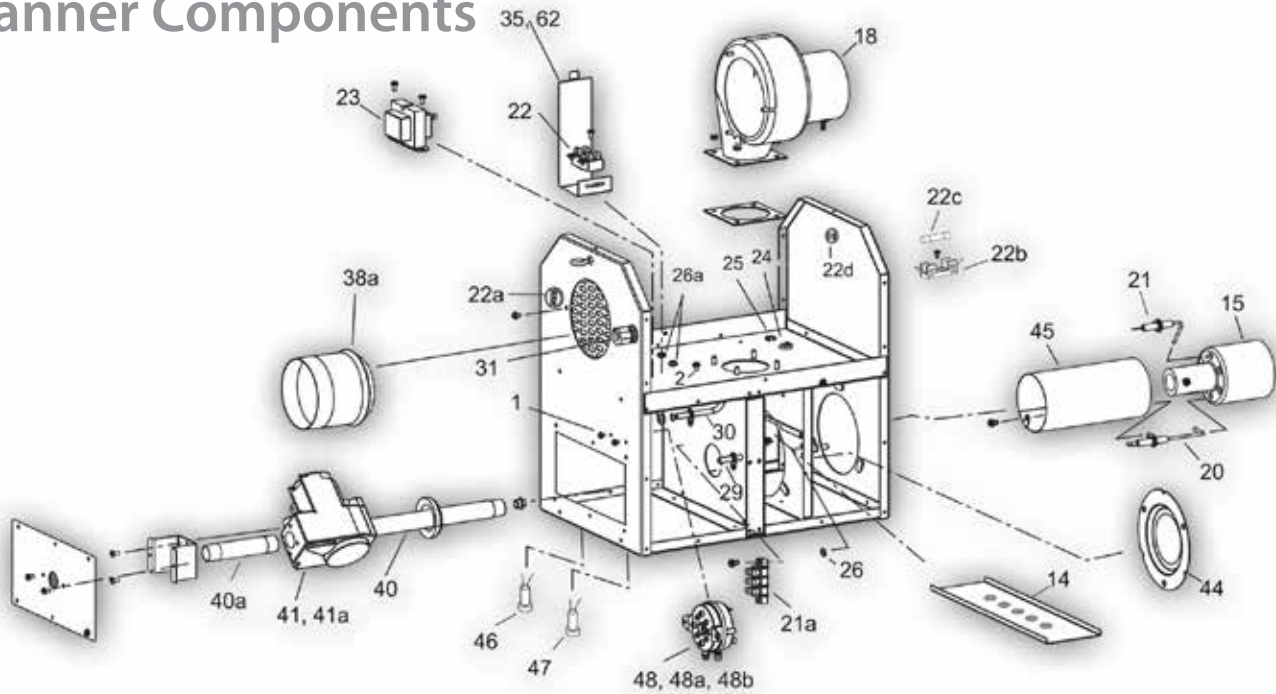

PennRadiant.com


1-800-438-2503

U.S.A Proud




Guard Ring Installation Kit

Universal – RFPA10C | RFPA21A | RFPA25

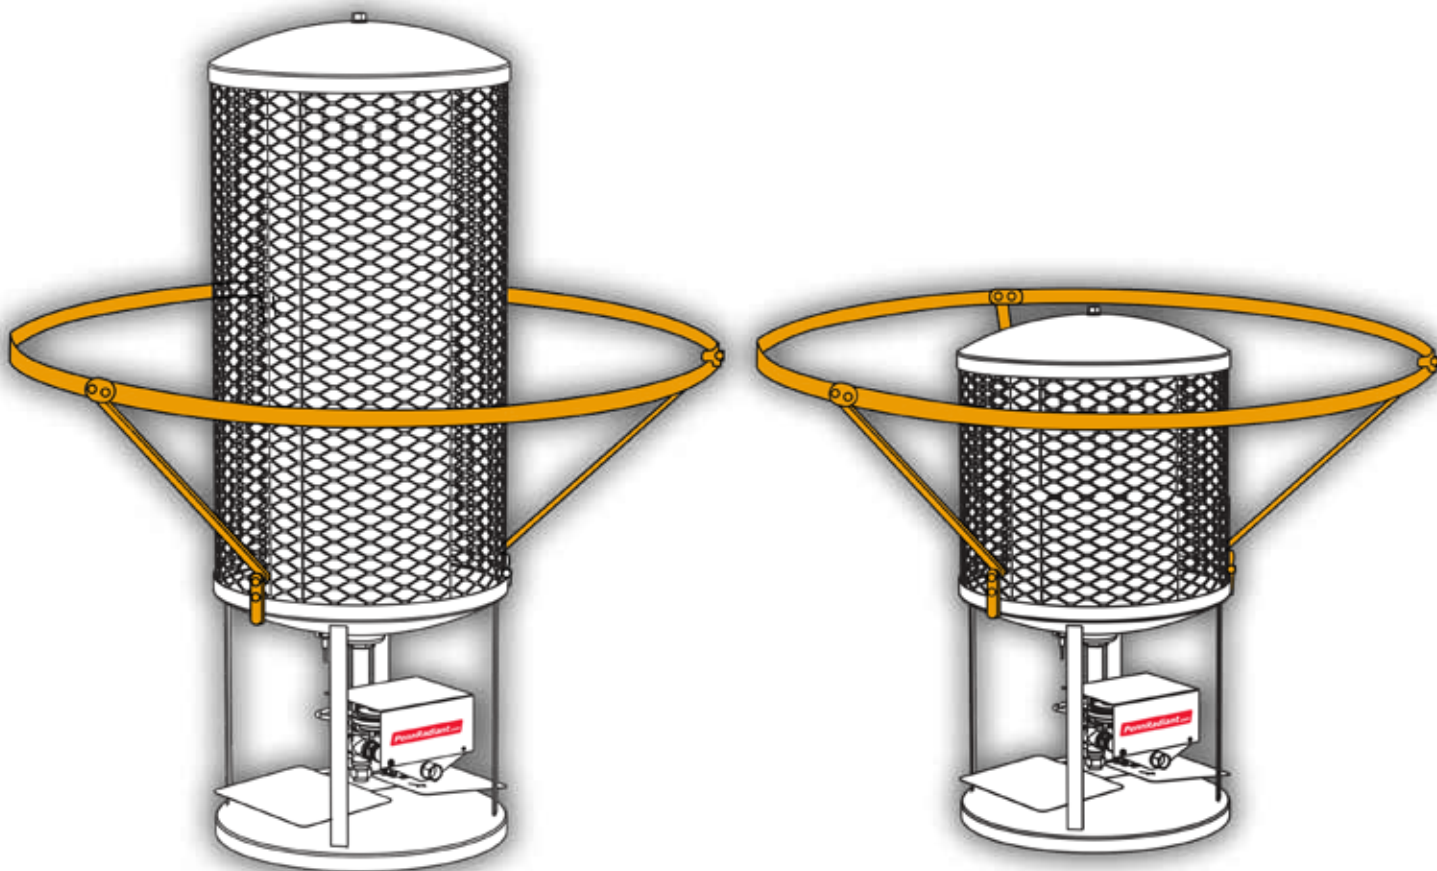

Item	Part #	Description	Qty.
1	0216503	Screw	12
2	0213009	Lock Washer	12
3	0212709	Hex Nut	6
4	4133800	Rail	3
5	4133900	Leg	3
6	4134000	Clamp	3

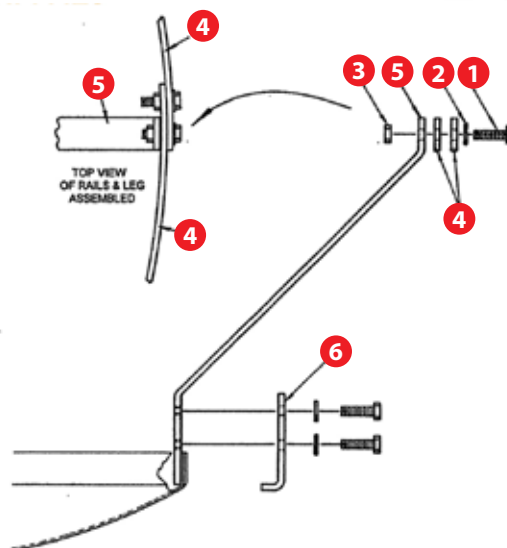




PTS/PTU



Banner Components



Item Part # Description

15	42700500	Burner, Investment Casting - Machined 1
16	44146080	Manifold Support Bracket 1
16a	44146070	Shim Plate 1
17	44146060	Manifold Support Clamp 1
17a	44146050	Manifold Extension Bracket 1
18	30703000	Blower Assembly 1
19	30632500	Spark Module - Fenwal-24V #35-615935-197 1
20	30702010	Flame Sensor #PSE-GF24 1
21	30702020	Electrode #PSE-GF25 1
21a	30743000	Terminal Block #EL-3008 1
22	30281000	Terminal Block #EK-204 1
22a	30738030	Terminal Bushing (3 x 1/4" tabs) 1
22b	30713000	Fuse Holder 1
22c	30202000	Fuse 1/4 x 1-1/4" (2 amp) 1
22d	30738020	Terminal Bushing (2 x 1/4" tabs) 1
23	30279000	Transformer 120v-24V 20VA 1
24	02175020	Strain Relief #SR-6P3-4 (ignition cable) 1
25	02175060	Strain Relief #SR-2M-1 (flame sensor wire) 1
26	30514020	Grommet .250ID #739 (air sensing tube) 1
26a	30512020	Split Bushing #2871 (misc. wiring, ignition cable, sensor wire) 2
27	30700040	Grommet, Pipe Sealing 1/2" #63595K34 1
28	42447000	Sight Glass (1-5/8" square plexiglass) 1
29	42744079	Air Sensing Tube Asm. (straight) 1/4"od 1
30	42744069	Air Sensing Tube Asm. (90 deg bend) 1/4" 1
31	30635030	Cord Connector 1/2" #LPCG50 1
32	03988100	Plastic Vacuum Air Tube 10" (P2- to static pressure point) 1
33	03988100	Plastic Vacuum Air Tube 10" (P1+ to total pressure point) 1
34	43563040	Supply Cord -Flat (SPT-1 18/3 x 72" long) 1
35	42709000	Shield, Terminal Block 1
36	42395010	Gasket, Blower 1
37	03946010	Sealing Strip 1/8" x 3/8" wide (access panels) -not shown- Ft.
38	42752250	Air Inlet Screen 1
38a	30504040	Starting Collar (combustion air inlet) 1
39	30701240	Ignition Cable - Female (2) 1/4" QC x 24"lg #PSE-GF23 -not shown- 1
40	44145060	Manifold Pipe - 6-1/4"lg 1
40a	03333140	Pipe Nipple - 4"lg 1
41	30333070	Gas Valve #VR8205P-2408 (natural gas) 1
41a	30333080	Gas Valve #VR8205P-2416 (propane gas) 1
43	03259xxx	Main Burner Orifice #7/16-27 (see size requirements in Section5.0) 1
44	42741150	Air Restrictor Plate 2-3/4" 1
45	44151010	Burner Screen Sub-Assembly (200 BTU units only) 1
46	42398030	Monitoring Light - Amber (gas valve operation) 1
47	42398150	Monitoring Light - Red (air switch operation) 1
48	30186250	Air Switch (set point @ .93"WC, RED LABEL) PTS/PTU40 & 50 1
48a	30186260	Air Switch (set point @ .65"WC, BLUE LABEL) PTS/PTU75 & 100 1
48b	30186270	Air Switch (set point @ .34"WC, GREEN LABEL) PTS/PTU125,150,175 & 200 1

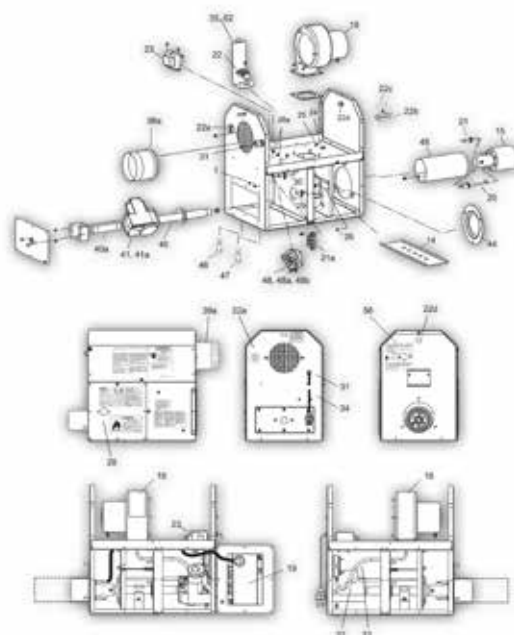

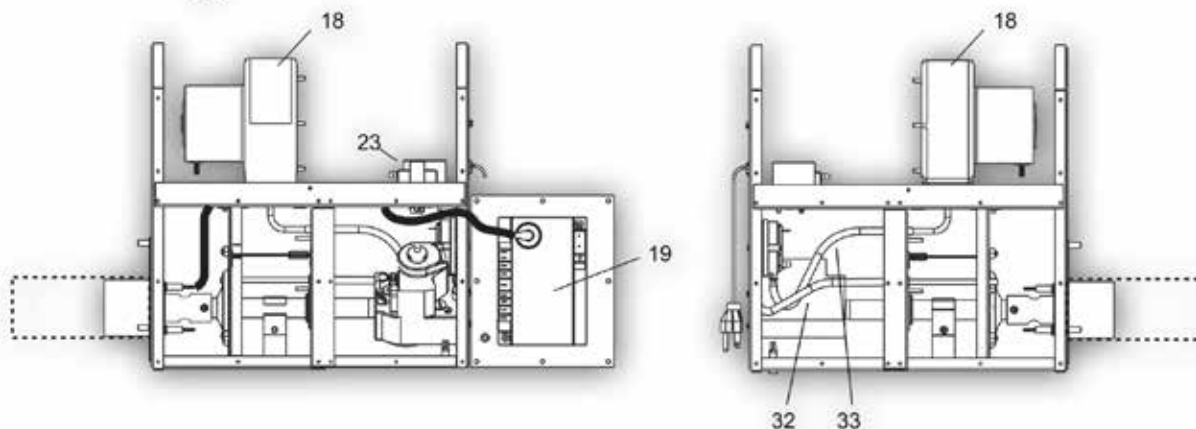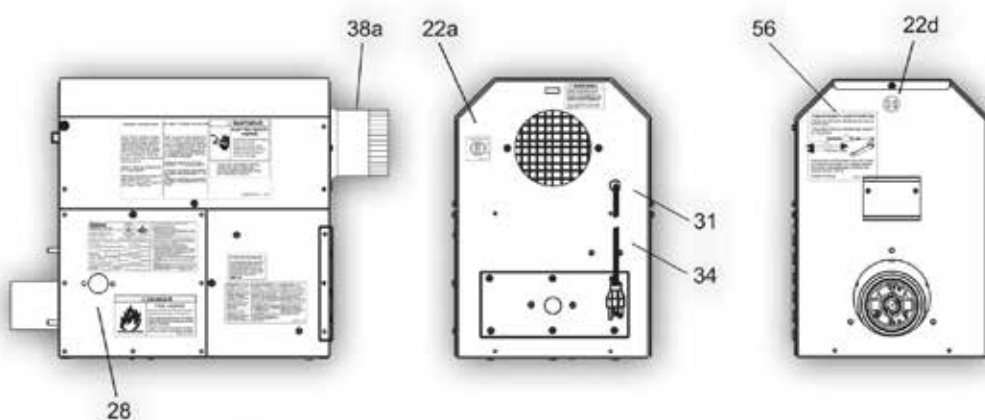




SPS/SPU

Banner Components




Item Part # Description

15	42700500	Burner, Investment Casting - Machined 1
16	44146080	Manifold Support Bracket 1
16a	44146070	Shim Plate 1
17	44146060	Manifold Support Clamp 1
17a	44146050	Manifold Extension Bracket 1
18	30703000	Blower Assembly 1
19	30632500	Spark Module - Fenwal-24V #35-615935-197 1
20	30702010	Flame Sensor #PSE-GF24 1
21	30702020	Electrode #PSE-GF25 1
21a	30743000	Terminal Block #EL-3008 1
22	30281000	Terminal Block #EK-204 1
22a	30738030	Terminal Bushing (3 x 1/4" tabs) 1
22b	30713000	Fuse Holder 1
22c	30202000	Fuse 1/4 x 1-1/4" (2 amp) 1
22d	30738020	Terminal Bushing (2 x 1/4" tabs) 1
23	30279000	Transformer 120v-24V 20VA 1
24	02175020	Strain Relief #SR-6P3-4 (ignition cable) 1
25	02175060	Strain Relief #SR-2M-1 (flame sensor wire) 1
26	30514020	Grommet .250ID #739 (air sensing tube) 1
26a	30512020	Split Bushing #2871 (misc. wiring, ignition cable, sensor wire) 2
27	30700040	Grommet, Pipe Sealing 1/2" #63595K34 1
28	42447000	Sight Glass (1-5/8" square plexiglass) 1
29	42744079	Air Sensing Tube Asm. (straight) 1/4"od 1
30	42744069	Air Sensing Tube Asm. (90 deg bend) 1/4" 1
31	30635030	Cord Connector 1/2" #LPCG50 1
32	03988100	Plastic Vacuum Air Tube 10" (P2- to static pressure point) 1
33	03988100	Plastic Vacuum Air Tube 10" (P1+ to total pressure point) 1
34	43563040	Supply Cord -Flat (SPT-1 18/3 x 72" long) 1
35	42709000	Shield, Terminal Block 1
36	42395010	Gasket, Blower 1
37	03946010	Sealing Strip 1/8" x 3/8" wide (access panels) -not shown- Ft.
38	42752250	Air Inlet Screen 1
38a	30504040	Starting Collar (combustion air inlet) 1
39	30701240	Ignition Cable - Female (2) 1/4" QC x 24"lg #PSE-GF23 -not shown- 1
40	44145060	Manifold Pipe - 6-1/4"lg 1
40a	03333140	Pipe Nipple - 4"lg 1
41	30333070	Gas Valve #VR8205P-2408 (natural gas) 1
41a	30333080	Gas Valve #VR8205P-2416 (propane gas) 1
43	03259xxx	Main Burner Orifice #7/16-27 (see size requirements in Section5.0) 1
44	42741150	Air Restrictor Plate 2-3/4" 1
45	44151010	Burner Screen Sub-Assembly (200 BTU units only) 1
46	42398030	Monitoring Light - Amber (gas valve operation) 1
47	42398150	Monitoring Light - Red (air switch operation) 1
48	30186250	Air Switch (set point @ .93"WC, RED LABEL) PTS/PTU40 & 50 1
48a	30186260	Air Switch (set point @ .65"WC, BLUE LABEL) PTS/PTU75 & 100 1
48b	30186270	Air Switch (set point @ .34"WC, GREEN LABEL) PTS/PTU125,150,175 & 200 1

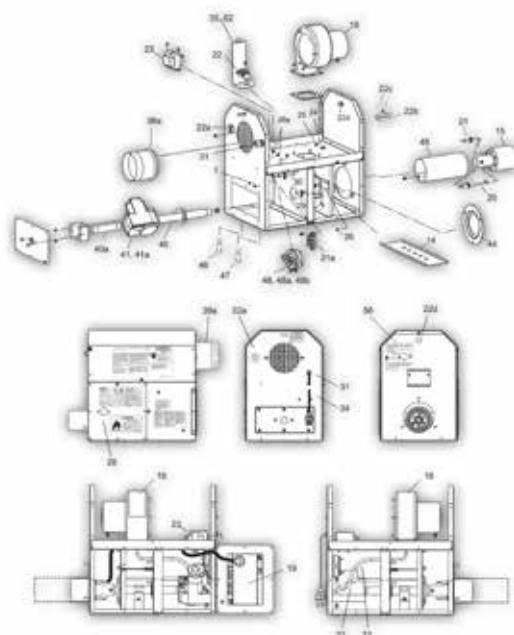



PTS/PTU Tube Parts

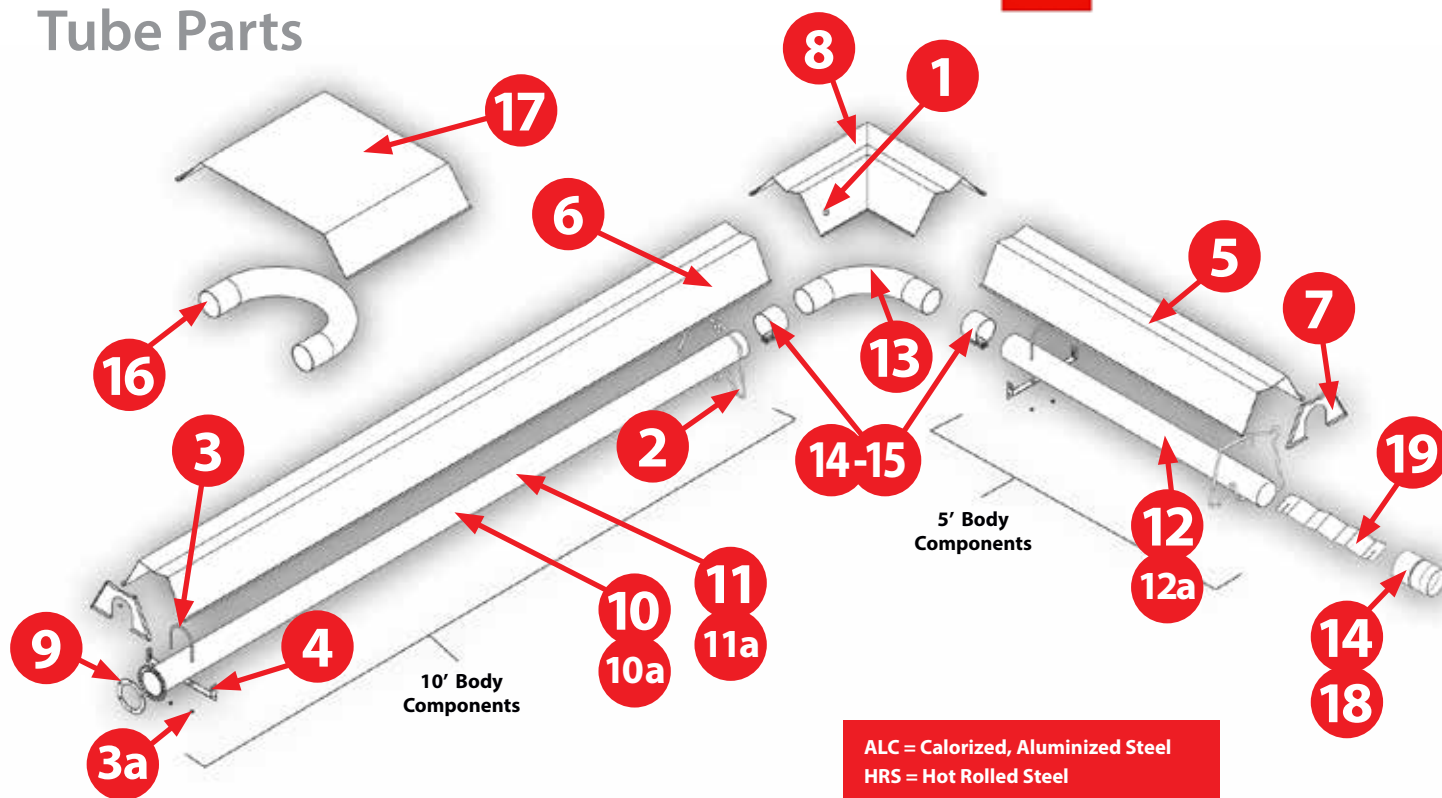


ALC = Calorized, Aluminized Steel
HRS = Hot Rolled Steel
ATC = Calorized, Alumi-Therm Steel

Item	Part #	Description
1	02266010	Reflector Speed Clip
2	43980010	Wire Hanger
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13"
5	43319050	Reflector, 4'-11½" long (5' section only; 1 per 5 ft. body section)
6	43319100	Reflector, 9'-11½" long (10' section only; 1 per 10 ft. body section)
7	43320000	End Reflector (optional)
8	43342000	Corner Reflector Package (optional)
9	42921000	Tube Flange Gasket
10*	44028170	10' Tube Assembly Kit, 4" OD, ATC steel with one 6-hole flange (start tube)
10a**	44028030	10' Tube Assembly Kit, 4" OD, ALC steel with one 24-hole flange (start tube)
11	44028100	10' Tube Assembly Kit, 4" OD, HRS steel without flanges (extension tube & exhaust tube)
11a	44028060	10' Tube Assembly Kit, 4" OD, ALC steel without flanges (extension tube & exhaust tube)
12	44028120	5' Tube Assembly Kit, 4" OD, HRS steel without flanges (extension tube & exhaust tube)
12a	44028010	5' Tube Assembly Kit, 4" OD, ALC steel without flanges (extension tube & exhaust tube)
13	43208010	4" O.D. Elbow Package
14	02189020	#10 x ½" Self-Drilling Screw
15	30462980	4" OD Tube Compression Coupling w/bolts
16	43208020	4" OD U-Bend (Required for PTU Only)
17	43488000	U-Bend Reflector (PTU Option)
18	30504500	Flue Adapter Collar
19	44152240	Turbulator (See Section 5.0) for quantities)



SPS/SPU Tube Parts

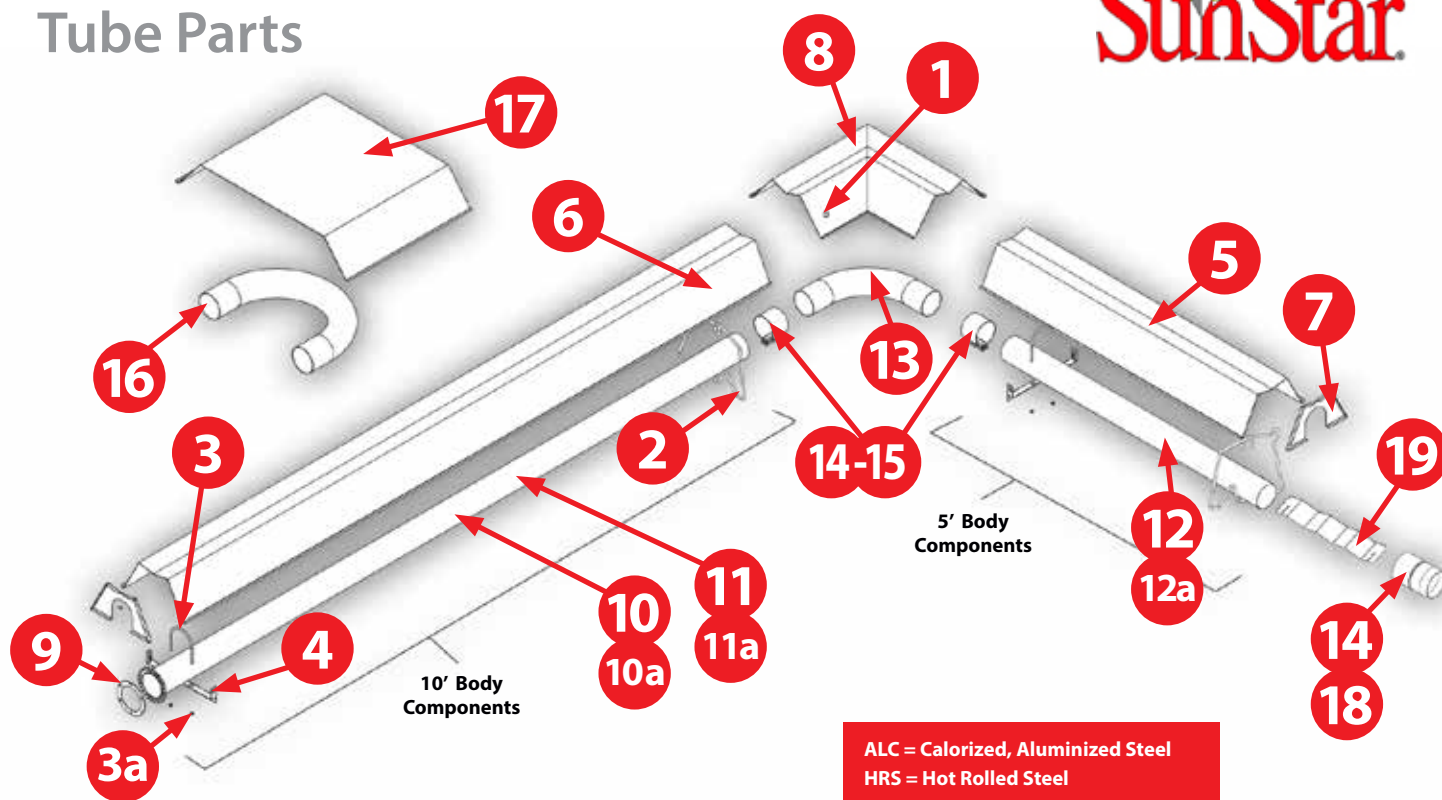

ALC = Calorized, Aluminized Steel
HRS = Hot Rolled Steel
ATC = Calorized, Alumi-Therm Steel

Item	Part #	Description
1	02266010	Reflector Speed Clip
2	43980010	Wire Hanger
3	42873000	"U" Bolt Clamp, 4" OD Tube
3a	02127110	5/16-18 Hex Nut (2 per "U" Bolt)
4	43318000	Tube Support/Hanger Bracket, 13"
5	43319050	Reflector, 4'-11½" long (5' section only; 1 per 5 ft. body section)
6	43319100	Reflector, 9'-11½" long (10' section only; 1 per 10 ft. body section)
7	43320000	End Reflector (optional)
8	43342000	Corner Reflector Package (optional)
9	42921000	Tube Flange Gasket
10*	44028170	10' Tube Assembly Kit, 4" OD, ATC steel with one 6-hole flange (start tube)
10a**	44028030	10' Tube Assembly Kit, 4" OD, ALC steel with one 24-hole flange (start tube)
11	44028100	10' Tube Assembly Kit, 4" OD, HRS steel without flanges (extension tube & exhaust tube)
11a	44028060	10' Tube Assembly Kit, 4" OD, ALC steel without flanges (extension tube & exhaust tube)
12	44028120	5' Tube Assembly Kit, 4" OD, HRS steel without flanges (extension tube & exhaust tube)
12a	44028010	5' Tube Assembly Kit, 4" OD, ALC steel without flanges (extension tube & exhaust tube)
13	43208010	4" O.D. Elbow Package
14	02189020	#10 x ½" Self-Drilling Screw
15	30462980	4" OD Tube Compression Coupling w/bolts
16	43208020	4" OD U-Bend (Required for PTU Only)
17	43488000	U-Bend Reflector (PTU Option)
18	30504500	Flue Adapter Collar
19	44152240	Turbulator (See Section 5.0) for quantities)

PennRadiant.com


1-800-438-2503

U.S.A Proud



RSCA3-N1, L1

Ceramic Heater Parts

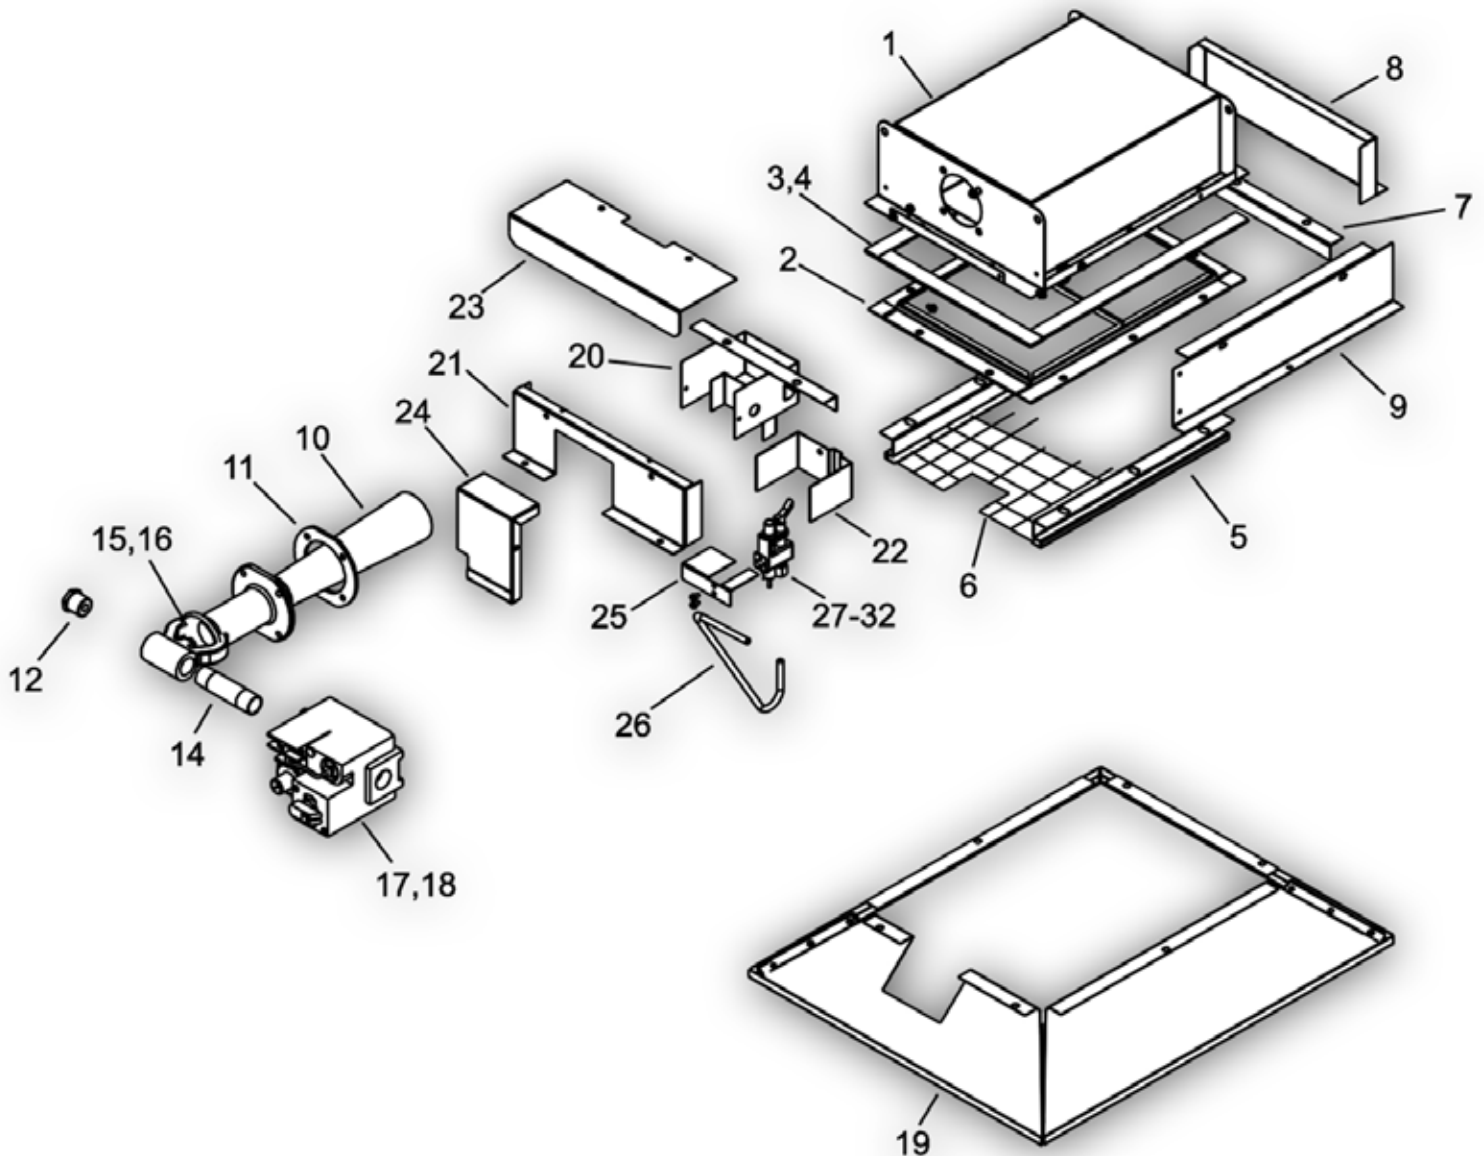


N1 & L1 Millivolt/Self Energizing
No electricity



RSCA3-N1, L1

Ceramic Heater Parts

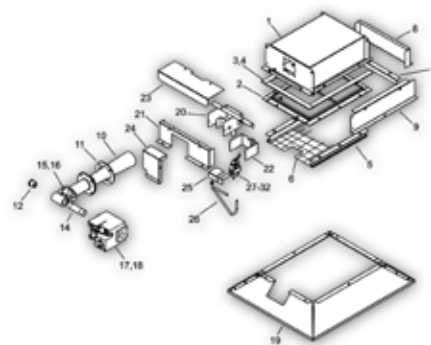

**N1 & L1 Millivolt/Self Energizing
No electricity**

Item	Part #	Description
1	42129000	Plenum Box Assembly
2	42192000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446130	Side Gasket (Qty. 2)
5	42133000	Screen Retainer (Qty. 2)
6	40670050	Reverb Screen (Pilot)
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	42132000	Side Flue Collar
10	42136000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333100	Nipple, 1/2 x 3"
15	03625420	Main Burner Orifice (#42) Nat. Gas
16	30236530	Main Burner Orifice (#53) LP Gas
17	30299010	Gas Valve @ 3-1/2" WC - VS820A-1039 Nat. Gas
18	30299030	Gas Valve @ 10" WC - VS820A-1120 LP Gas
19	42124000	Reflector Assembly (pilot)
20	40715000	Pilot Housing Assembly
21	40719000	End Flue Collar (pilot end)
22	40707000	Radiation Shield (housing)
23	40649000	Pilot Flue Baffle
24	40750000	Pilot Shield Assembly
25	40706000	Radiation Shield (pilot)
26	42184000	Pilot Tubing
27	03462070	Pilot Generator System - Nat. Gas
28	03462080	Pilot Generator System - LP Gas
29	03463000	Pilot Burner, Less Orifice (included in items #27 & #28)
30	03348020	Pilot Orifice, TJ020 - Nat. Gas (included in item #27)
31	03348030	Pilot Orifice, TJ011 - LP Gas (included in item #28)
32	03378060	Generator Cartridge, PG9 (included in items #27 & #28)
33	43219000	Installation Manual (not shown)
34	42849000	Label - Nameplate
35	42875000	Label - General Warnings
36	43247010	Label - Clearances to Combustibles
37	41250000	Label - Angle Mounting

PennRadiant.com


1-800-438-2503

U.S.A Proud



SGM3-N1, L1

Ceramic Heater Parts

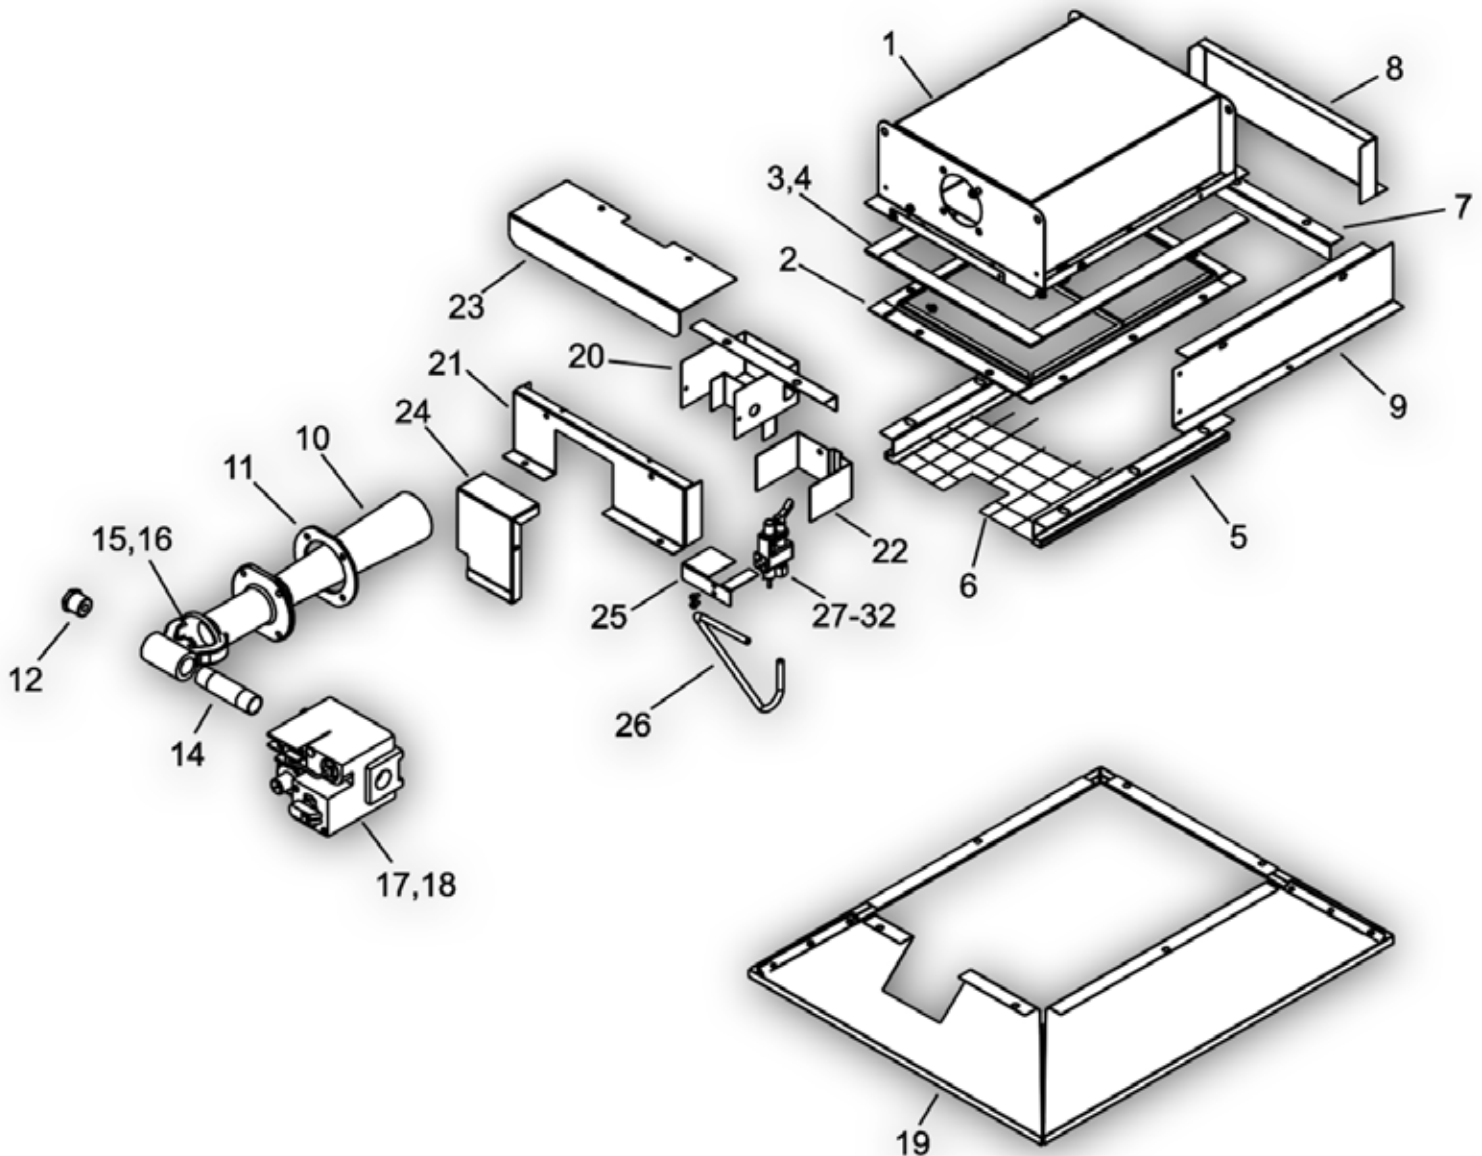

N1 & L1 Millivolt/Self Energizing
No electricity




SGM3-N1, L1

Ceramic Heater Parts



Item	Part #	Description
1	42129000	Plenum Box Assembly
2	42192000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446130	Side Gasket (Qty. 2)
5	42133000	Screen Retainer (Qty. 2)
6	40670050	Reverb Screen (Pilot)
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	42132000	Side Flue Collar
10	42136000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333100	Nipple, 1/2 x 3"
15	03625420	Main Burner Orifice (#42) Nat. Gas
16	30236530	Main Burner Orifice (#53) LP Gas
17	30299010	Gas Valve @ 3-1/2" WC - VS820A-1039 Nat. Gas
18	30299030	Gas Valve @ 10" WC - VS820A-1120 LP Gas
19	42124000	Reflector Assembly (pilot)
20	40715000	Pilot Housing Assembly
21	40719000	End Flue Collar (pilot end)
22	40707000	Radiation Shield (housing)
23	40649000	Pilot Flue Baffle
24	40750000	Pilot Shield Assembly
25	40706000	Radiation Shield (pilot)
26	42184000	Pilot Tubing
27	03462070	Pilot Generator System - Nat. Gas
28	03462080	Pilot Generator System - LP Gas
29	03463000	Pilot Burner, Less Orifice (included in items #27 & #28)
30	03348020	Pilot Orifice, TJ020 - Nat. Gas (included in item #27)
31	03348030	Pilot Orifice, TJ011 - LP Gas (included in item #28)
32	03378060	Generator Cartridge, PG9 (included in items #27 & #28)
33	43219000	Installation Manual (not shown)
34	42849000	Label - Nameplate
35	42875000	Label - General Warnings
36	43247010	Label - Clearances to Combustibles
37	41250000	Label - Angle Mounting

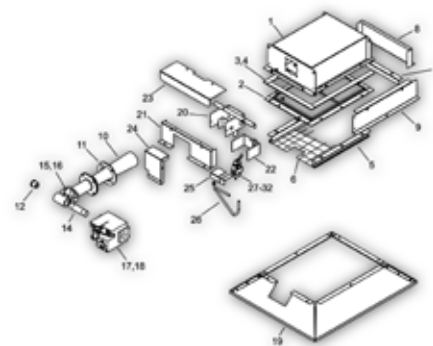

**N1 & L1 Millivolt/Self Energizing
No electricity**

PennRadiant.com


1-800-438-2503

U.S.A Proud



RSCA3-N5, L5

Ceramic Heater Parts

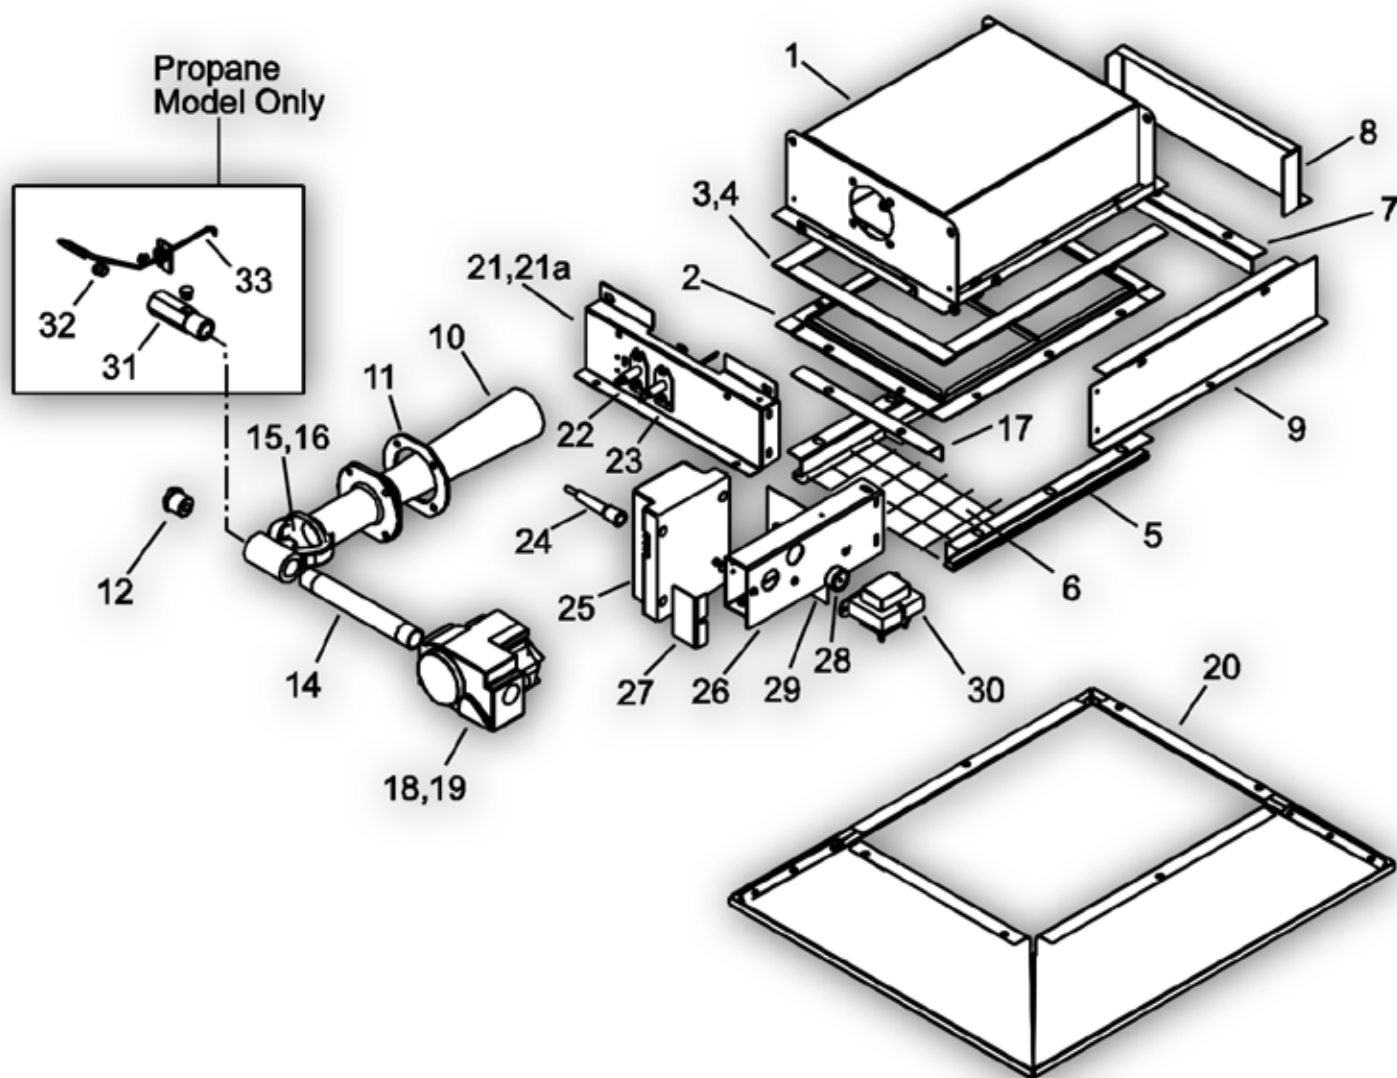

N5 & L5 Direct Spark Ignition




RSCA3-N5, L5

Ceramic Heater Parts



Item	Part #	Description
1	42129000	Plenum Box Assembly
2	42192000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446130	Side Gasket (Qty. 2)
5	42133000	Screen Retainer (Qty. 2)
6	41748030	Reverb Screen
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	42132000	Side Flue Collar
10	42136000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333220	Nipple, 1/2 x 6"
15	03625420	Main Burner Orifice (#42) Nat. Gas
16	30236530	Main Burner Orifice (#53) LP Gas
17	41156000	Reverb Baffle Assembly
18	30333030	Gas Valve @ 3-1/2" WC - VR8205A-2008 Nat. Gas
19	30333110	Gas Valve @ 10" WC - VR8205M-2971 LP Gas
20	42125000	Reflector Assembly
21	42429000	End Flue Collar (ignition end)
21a	42468000	End Flue Collar (ignition end with bleed tube hole) LP Gas
22	30216050	Spark Electrode #PSE-GF26
23	03763000	Flame Sensor #PSE-GF3
24	30314070	Ignition Cable - 7"
25	30198040	Spark Ignition Module #S87C-1030
26	42829000	Bracket Assembly - Module/Transformer
27	42830000	Bracket Cover Plate
28	30148000	Plastic Bushing
29	42831000	Radiation Shield
30	30279000	Transformer - 120/24V
31	42043030	Orifice Fitting Assembly - Bleed Tube (LP Gas Only)
32	30203000	Break-Away Fitting - 1/8"
33	42042000	Bleed Tube & Clamp Assembly (LP Gas Only)
34	43219000	Installation Manual (not shown)
35	42849000	Label - Nameplate
36	42875000	Label - General Warnings
37	43247010	Label - Clearances to Combustibles
38	41250000	Label - Angle Mounting
39	42052000	Label - Wire Connection Diagram

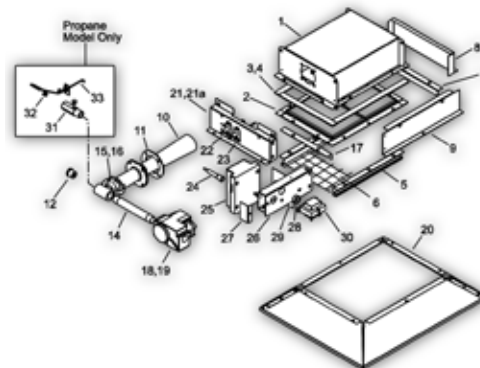

N5 & L5 Direct Spark Ignition

PennRadiant.com


1-800-438-2503

U.S.A Proud



RSCA6-N1, L1

Ceramic Heater Parts

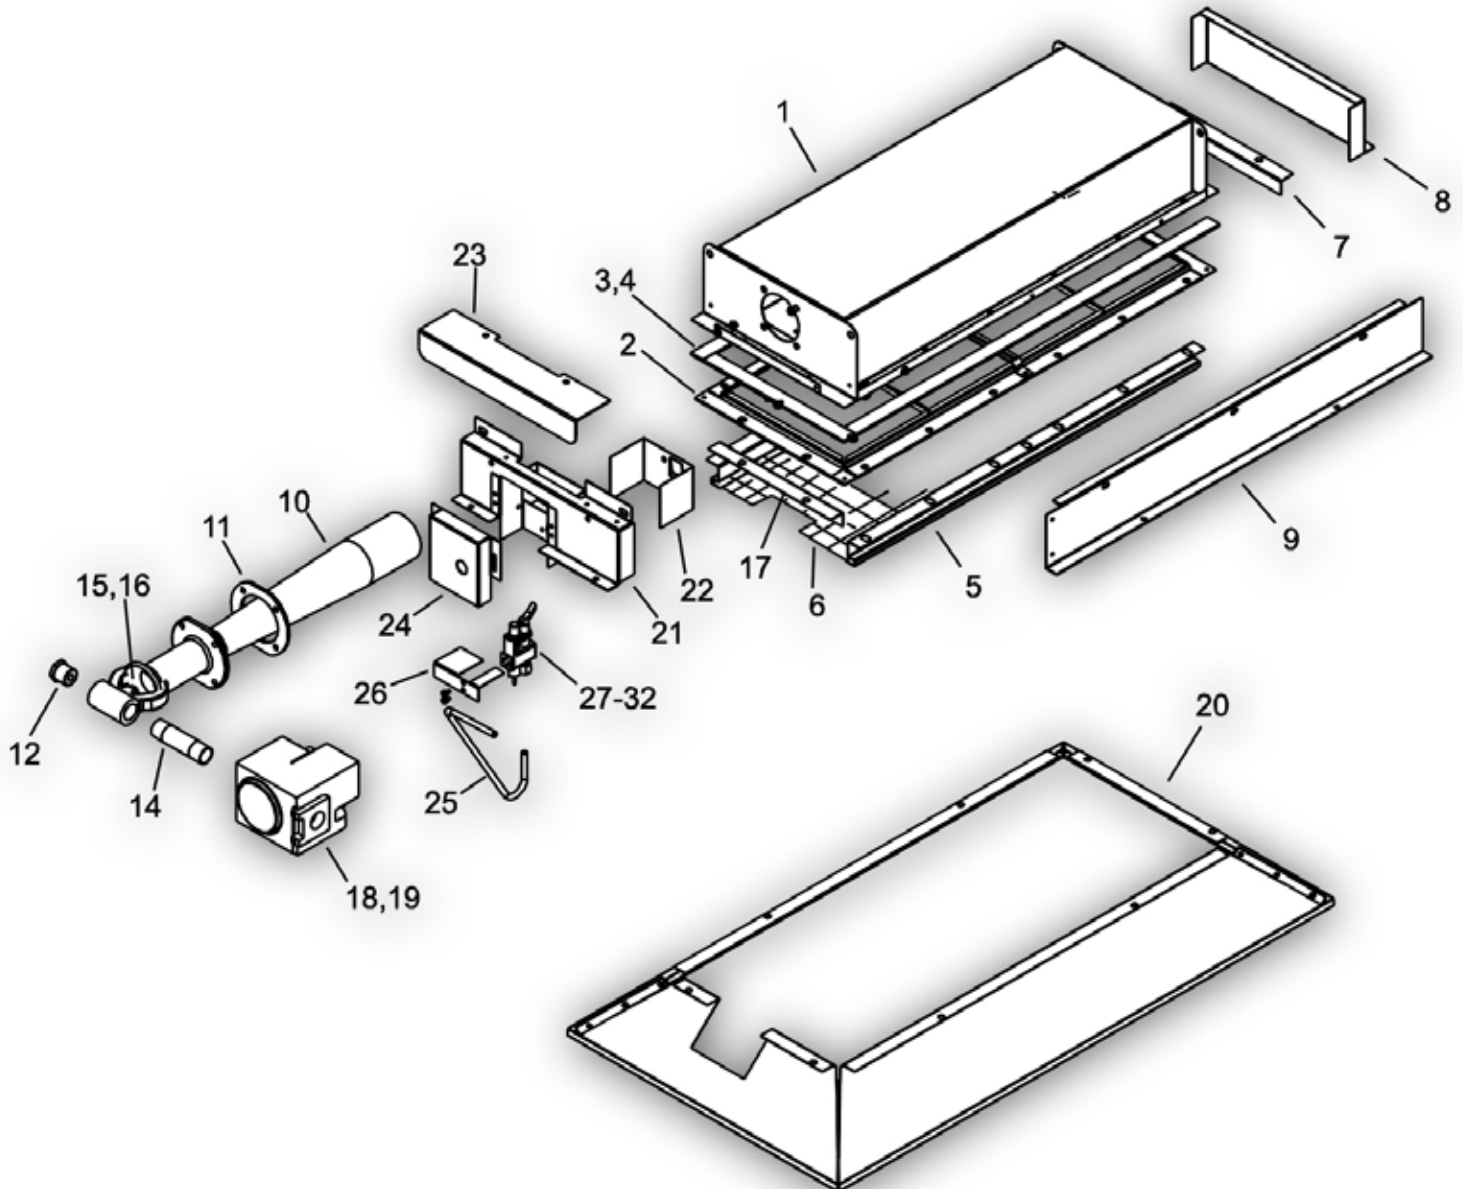

N1 & L1 Millivolt/Self Energizing
No electricity




RSCA6-N1, L1

Ceramic Heater Parts



Item	Part #	Description
1	40714000	Plenum Box Assembly
2	41218000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446090	Side Gasket (Qty. 2)
5	40608000	Screen Retainer (Qty. 2)
6	40670030	Reverb Screen (pilot)
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	40616000	Side Flue Collar
10	40726000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333100	Nipple, 1/2 x 3"
15	03624320	Main Burner Orifice (#32) Nat. Gas
16	03625450	Main Burner Orifice (#45) LP Gas
17	40710010	Reverb Baffle (notched)
18	30299020	Gas Valve @ 6"WC - VS820A-1070 Nat. Gas
19	30299030	Gas Valve @ 10"WC - VS820A-1120 LP Gas
20	40720000	Reflector Assembly (pilot)
21	42431000	Pilot Housing Assembly
22	42425000	Radiation Shield (housing)
23	42421000	Pilot Flue Baffle
24	42424000	Pilot Shield
25	42434000	Pilot Tubing
26	40706000	Radiation Shield (pilot)
27	03462130	Pilot Generator System - Nat. Gas
28	03462140	Pilot Generator System - LP Gas
29	03463000	Pilot Burner, Less Orifice (included in items #27 & #28)
30	03460030	Pilot Orifice, TL020 - Nat. Gas (included in item #27)
31	03438020	Pilot Orifice, TV011 - LP Gas (included in item #28)
32	03378060	Generator Cartridge, PG9 (included in items #27 & #28)
33	43219000	Installation Manual (not shown)
34	42849000	Label - Nameplate
35	43247010	Label - Clearances to Combustibles
36	42875000	Label - General Warnings
37	41250000	Label - Angle Mounting

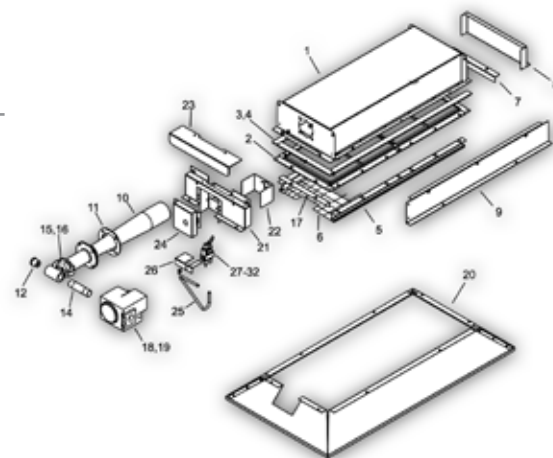

N1 & L1 Millivolt/Self Energizing
No electricity

PennRadiant.com


1-800-438-2503

U.S.A Proud



SGM6-N1, L1

Ceramic Heater Parts

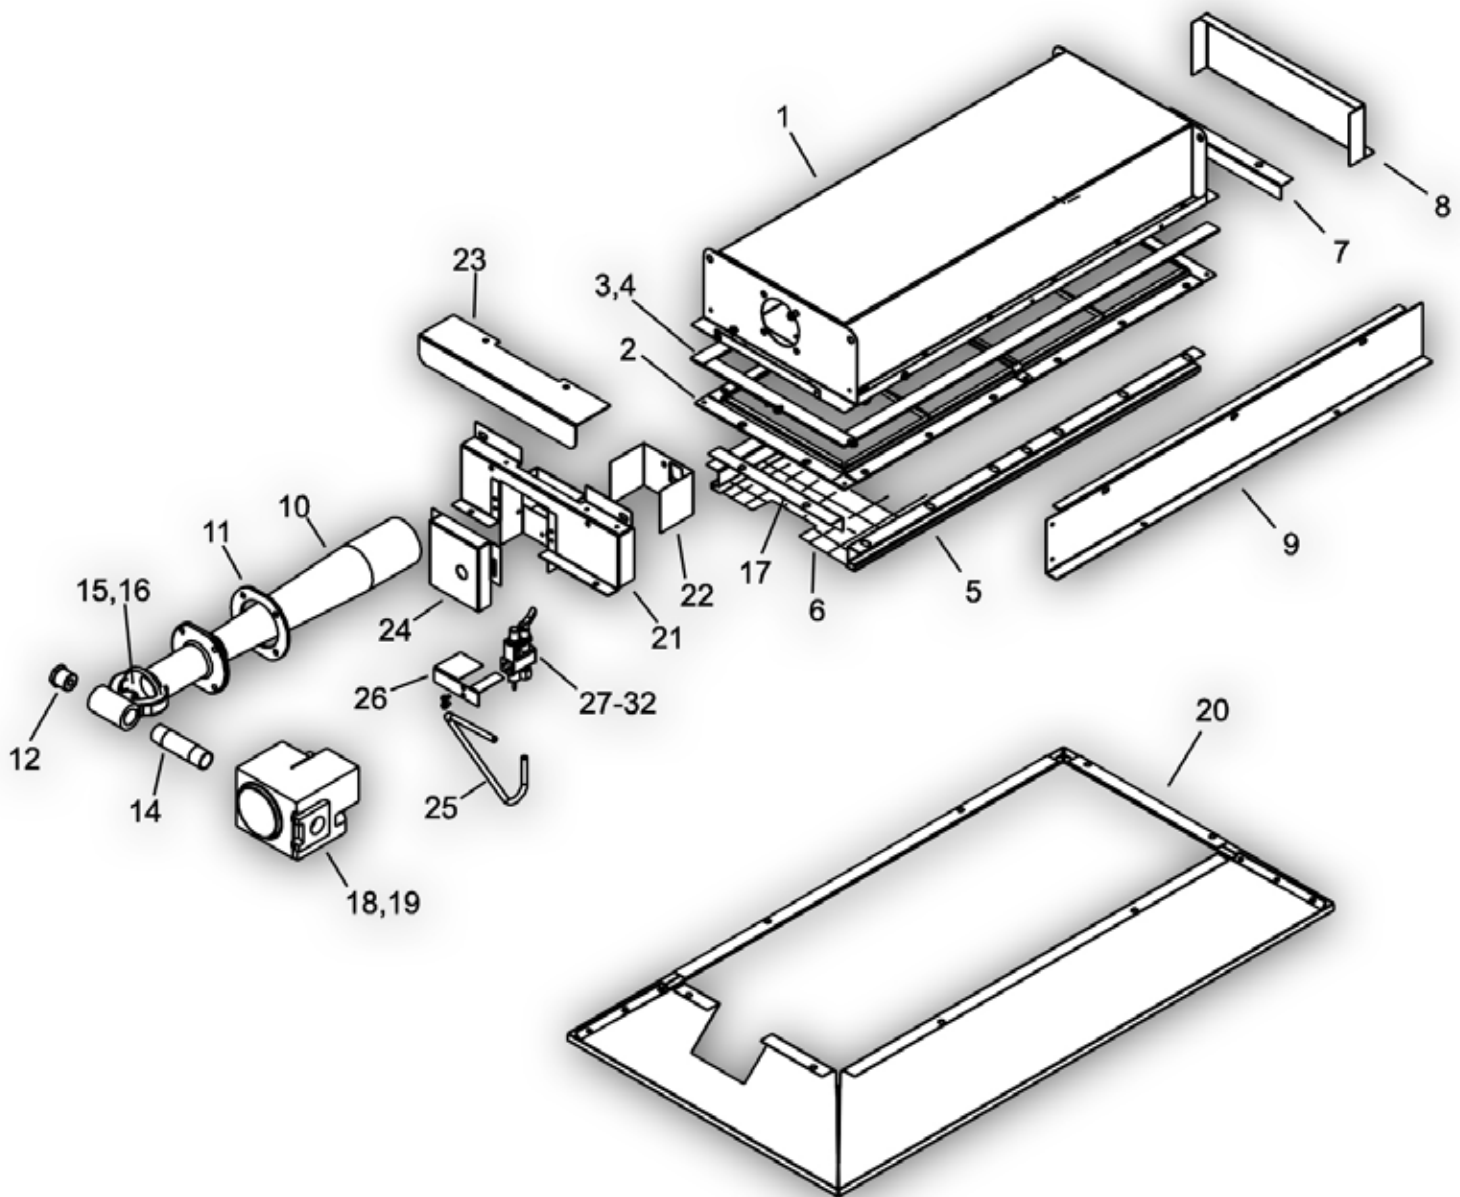

**N1 & L1 Millivolt/Self Energizing
No electricity**




SGM6-N1, L1

Ceramic Heater Parts



Item	Part #	Description
1	40714000	Plenum Box Assembly
2	41218000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446090	Side Gasket (Qty. 2)
5	40608000	Screen Retainer (Qty. 2)
6	40670030	Reverb Screen (pilot)
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	40616000	Side Flue Collar
10	40726000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333100	Nipple, 1/2 x 3"
15	03624320	Main Burner Orifice (#32) Nat. Gas
16	03625450	Main Burner Orifice (#45) LP Gas
17	40710010	Reverb Baffle (notched)
18	30299020	Gas Valve @ 6" WC - VS820A-1070 Nat. Gas
19	30299030	Gas Valve @ 10" WC - VS820A-1120 LP Gas
20	40720000	Reflector Assembly (pilot)
21	42431000	Pilot Housing Assembly
22	42425000	Radiation Shield (housing)
23	42421000	Pilot Flue Baffle
24	42424000	Pilot Shield
25	42434000	Pilot Tubing
26	40706000	Radiation Shield (pilot)
27	03462130	Pilot Generator System - Nat. Gas
28	03462140	Pilot Generator System - LP Gas
29	03463000	Pilot Burner, Less Orifice (included in items #27 & #28)
30	03460030	Pilot Orifice, TL020 - Nat. Gas (included in item #27)
31	03438020	Pilot Orifice, TV011 - LP Gas (included in item #28)
32	03378060	Generator Cartridge, PG9 (included in items #27 & #28)
33	43219000	Installation Manual (not shown)
34	42849000	Label - Nameplate
35	43247010	Label - Clearances to Combustibles
36	42875000	Label - General Warnings
37	41250000	Label - Angle Mounting

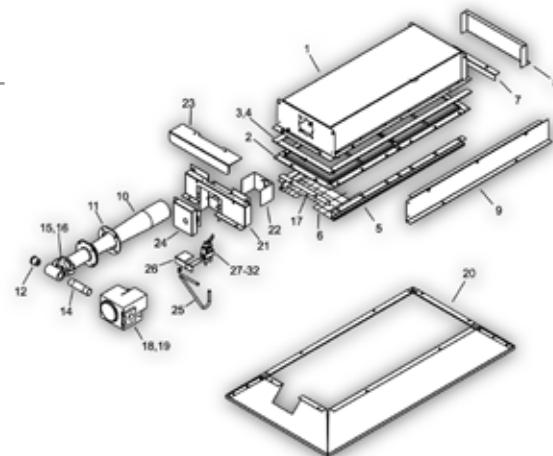

N1 & L1 Millivolt/Self Energizing
No electricity

PennRadiant.com


1-800-438-2503

U.S.A Proud



RSCA6-N5, L5

Ceramic Heater Parts

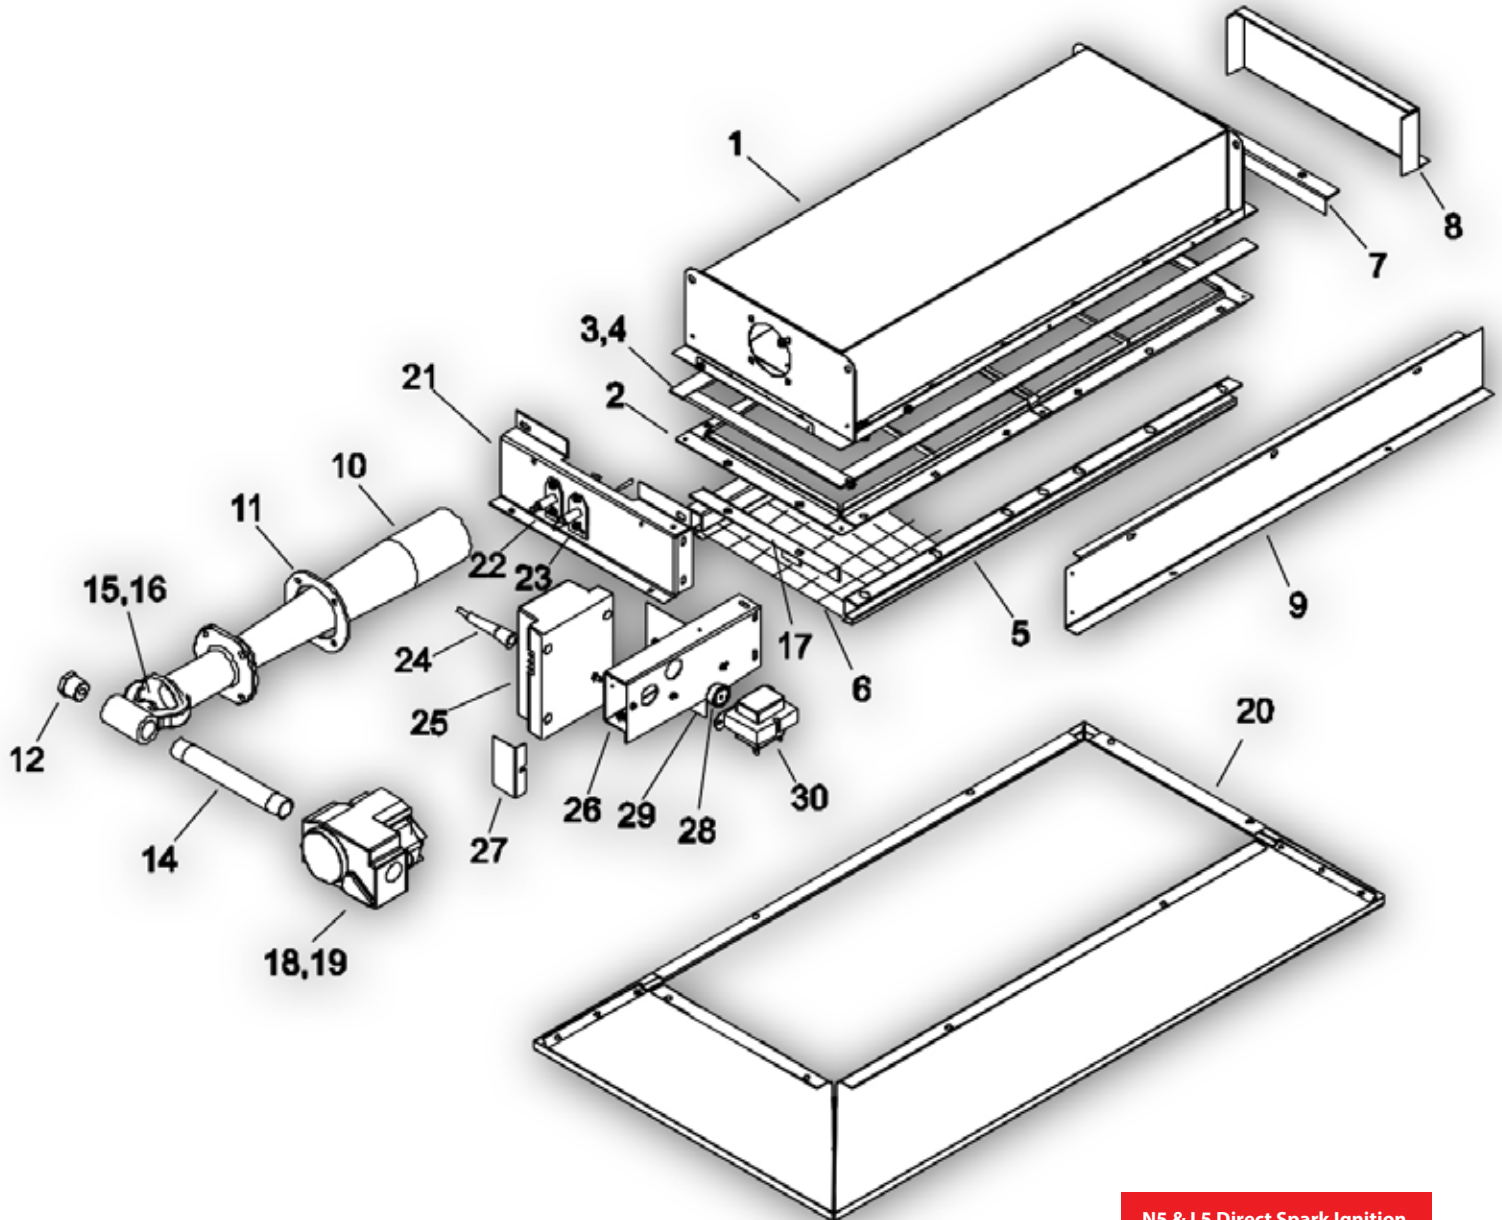

N5 & L5 Direct Spark Ignition




RSCA6-N5, L5

Ceramic Heater Parts



Item	Part #	Description
1	40714000	Plenum Box Assembly
2	41218000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446090	Side Gasket (Qty. 2)
5	40608000	Screen Retainer (Qty. 2)
6	41748010	Reverb Screen
7	40710020	End Reverb Baffle
8	40621000	End Flue Collar
9	40616000	Side Flue Collar
10	40726000	Venturi Assembly
11	40666000	Venturi Gasket
12	03339080	Plug, 1/2
14	03333220	Nipple, 1/2 x 6"
15	03624320	Main Burner Orifice (#32) Nat. Gas
16	03625450	Main Burner Orifice (#45) LP Gas
17	41156000	Reverb Baffle Assembly
18	30333120	Gas Valve @ 6" WC - VR8205M-2989 Nat. Gas
19	30333110	Gas Valve @ 10" WC - VR8205M-2971 LP Gas
20	41159000	Reflector Assembly
21	42429000	End Flue Collar (ignition end)
22	30216050	Spark Electrode #PSE-GF26
23	03763000	Flame Sensor #PSE-GF3
24	30314070	Ignition Cable - 7"
25	30198040	Spark Ignition Module #S87C-1030
26	42829000	Bracket Assembly - Module/Transformer
27	42830000	Bracket Cover Plate
28	30148000	Plastic Bushing
29	42831000	Radiation Shield
30	30279000	Transformer - 120/24V
31	43219000	Installation Manual (not shown)
32	42849000	Label - Nameplate
33	43247010	Label - Clearances to Combustibles
34	42875000	Label - General Warnings
35	41250000	Label - Angle Mounting
36	42052000	Label - Wire Connection Diagram

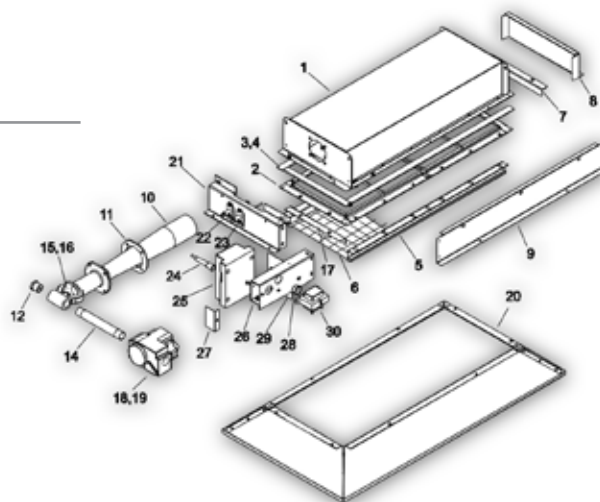

N5 & L5 Direct Spark Ignition

PennRadiant.com


1-800-438-2503

U.S.A Proud



RSCA10-N5, L5

Ceramic Heater Parts

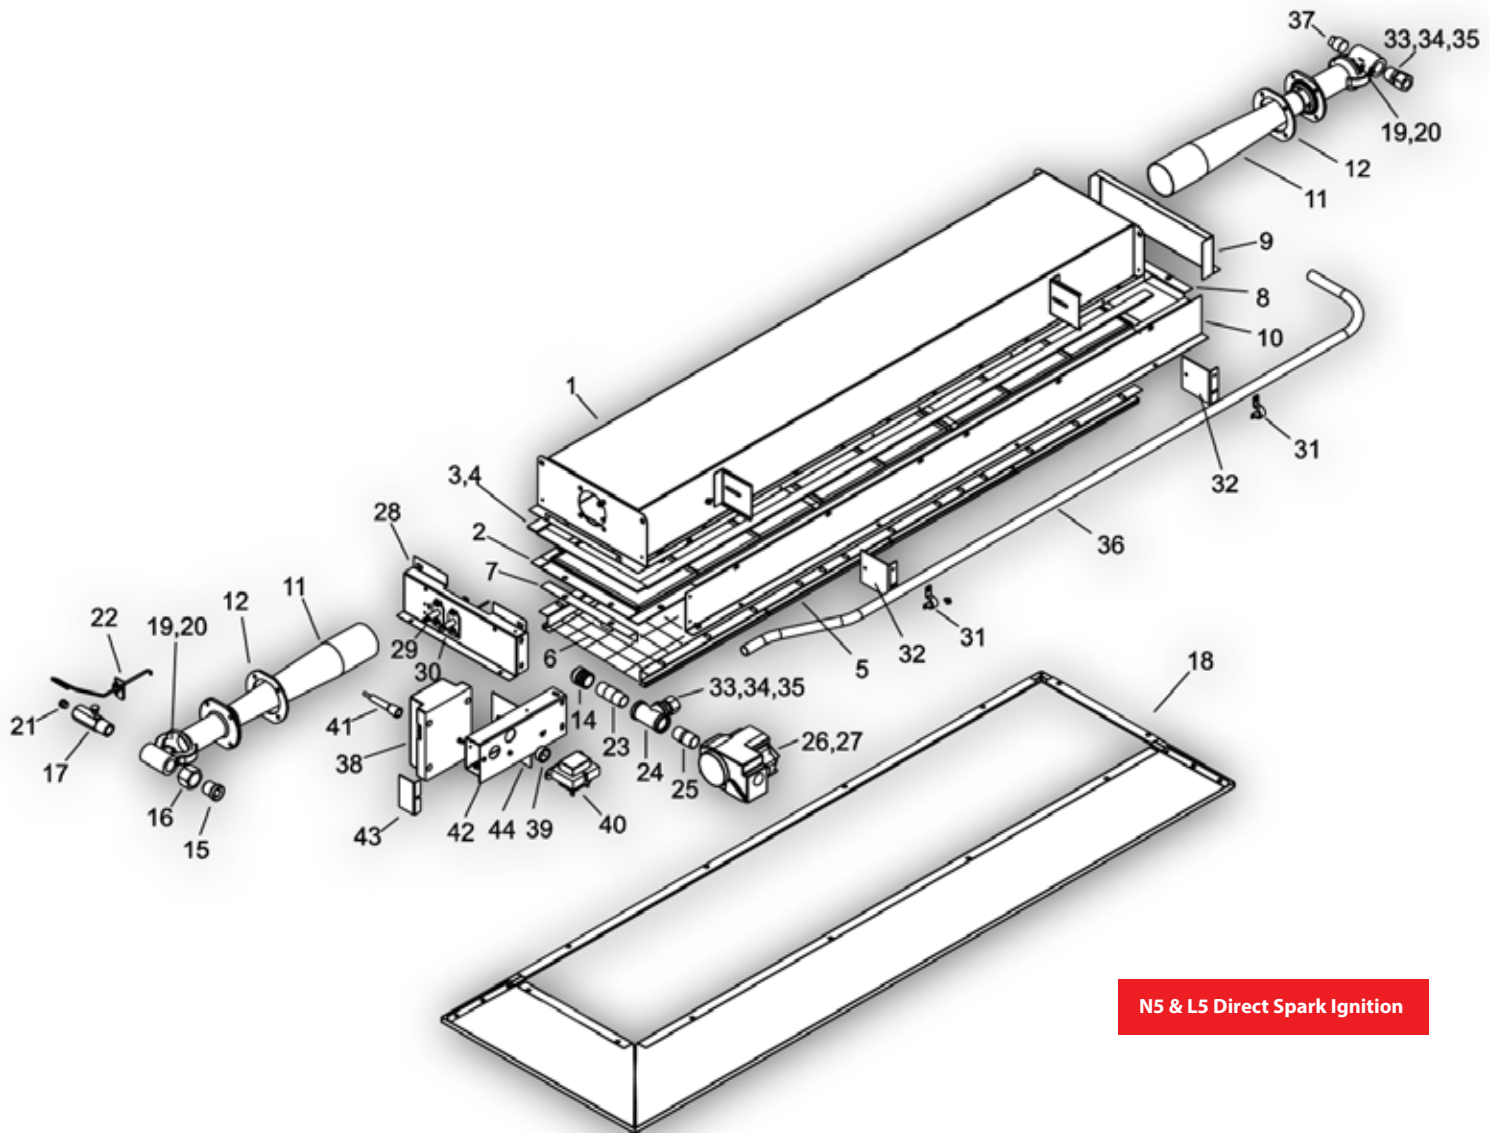

N5 & L5 Direct Spark Ignition




RSCA10-N5, L5

Ceramic Heater Parts



Item	Part #	Description
1	40742000	Plenum Box Assembly
2	41219000	Emitter Kit (includes items 3 & 4)
3	40446080	End Gasket (Qty. 2)
4	40446110	Side Gasket (Qty. 2)
5	40747000	Screen Retainer (Qty. 2)
6	41748020	Reverb Screen
7	41156000	Reverb Baffle Assembly (ignition end)
8	40710020	Reverb Baffle (back end)
9	40621000	End Flue Collar
10	40744000	Side Flue Collar
11	40726000	Venturi Assembly (Qty. 2)
12	40666000	Venturi Gasket (Qty. 2)
13	43219000	Installation Manual (not shown)
14	03068010	Union Half - Female
15	03068020	Union Half - Male
16	03068030	Union Nut - 1/2
17	42043030	Orifice Fitting Assembly - Bleed Tube
18	41157000	Reflector Assembly
19	03624320	Main Burner Orifice (#32) Nat. Gas (Qty. 2)
20	03625450	Main Burner Orifice (#45) LP Gas (Qty. 2)
21	30203000	Break-Away Fitting - 1/8"
22	42042000	Bleed Tube & Clamp Assembly
23	03333060	Nipple, 1/2 x 2"
24	03336080	Tee, 1/2
25	03333020	Nipple, 1/2 x Close
26	30333120	Gas Valve @ 6" WC - VR8205M-2989 Nat. Gas
27	30333110	Gas Valve @ 10" WC - VR8205M-2971 LP Gas
28	42468000	End Flue Collar (ignition end)
29	30216050	Spark Electrode #PSE-GF26
30	03763000	Flame Sensor #PSE-GF3
31	42420000	Manifold Clamp (Qty. 2)
32	04703000	Manifold Support Bracket (Qty. 2)
33	03600040	Compression Sleeve - 5/8 (Qty. 2)
34	03601040	Compression Nut - 5/8 (Qty. 2)
35	03602100	Compression Union - 5/8 Tube x 1/2 NPT (Qty. 2)
36	42432000	Manifold Tubing
37	03339080	Plug, 1/2
38	30198040	Spark Ignition Module #S87C-1030
39	30148000	Plastic Bushing
40	30279000	Transformer - 120/24V
41	30314070	Ignition Cable - 7"
42	42829000	Bracket Assembly - Module/Transformer
43	42830000	Bracket Cover Plate
44	42831000	Radiation Shield

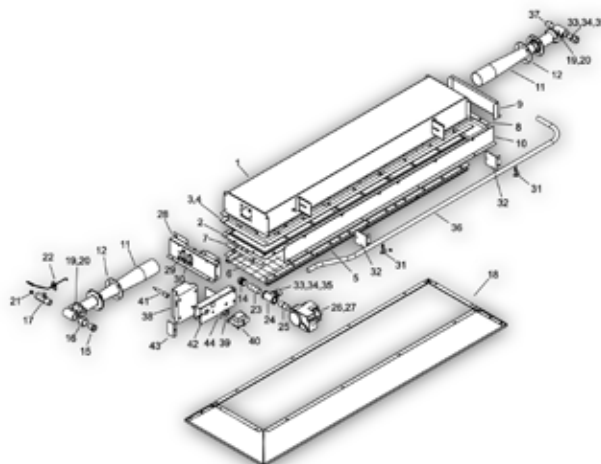

N5 & L5 Direct Spark Ignition

PennRadiant.com



1-800-438-2503

U.S.A Proud



RSTP10-N1, L1

Body Parts

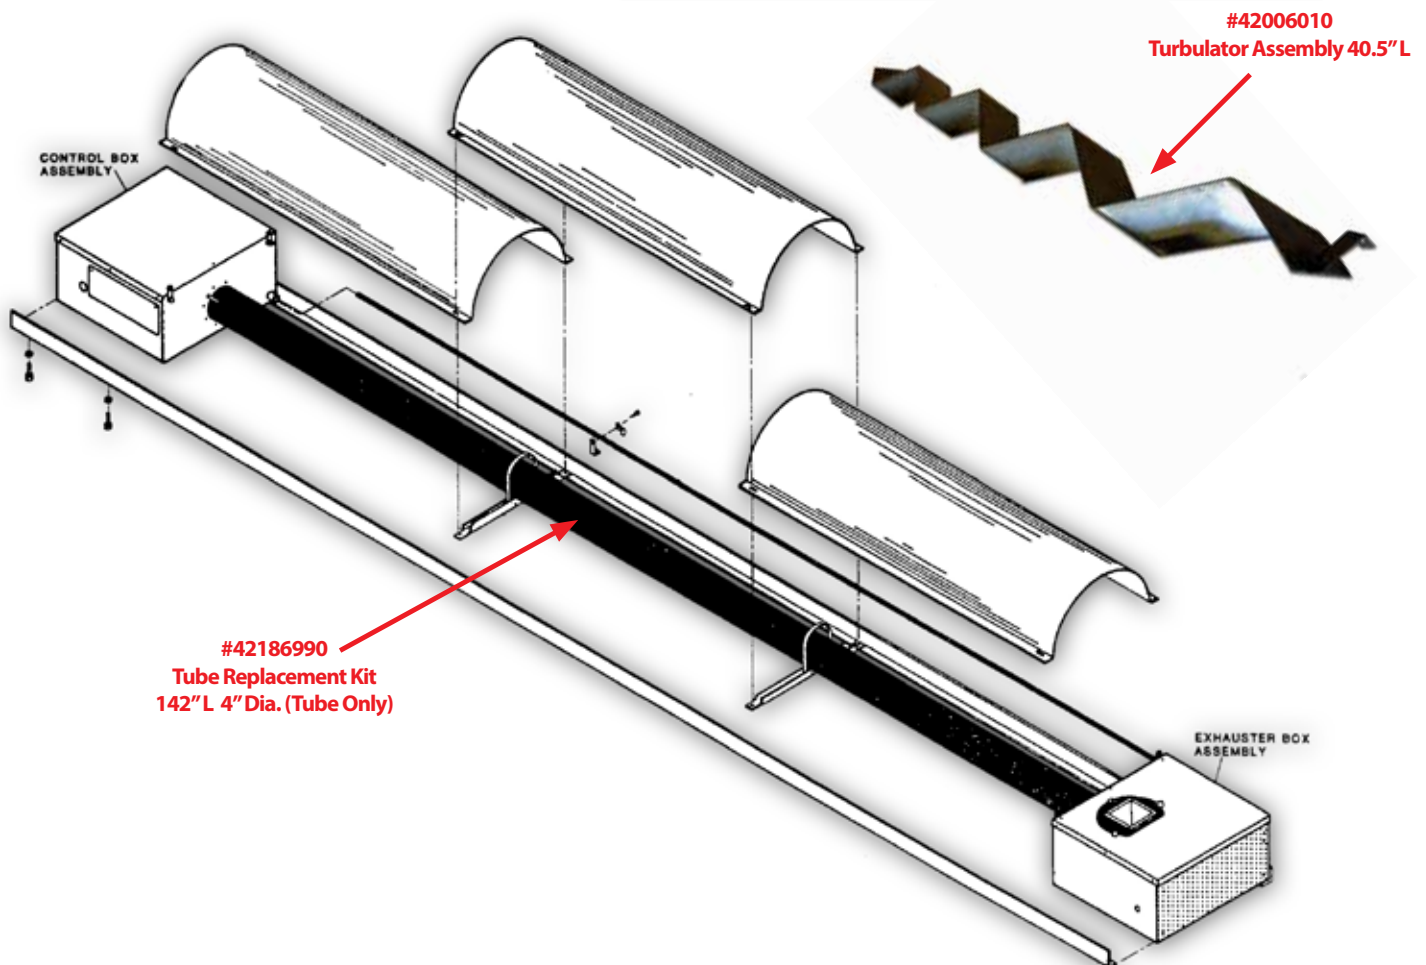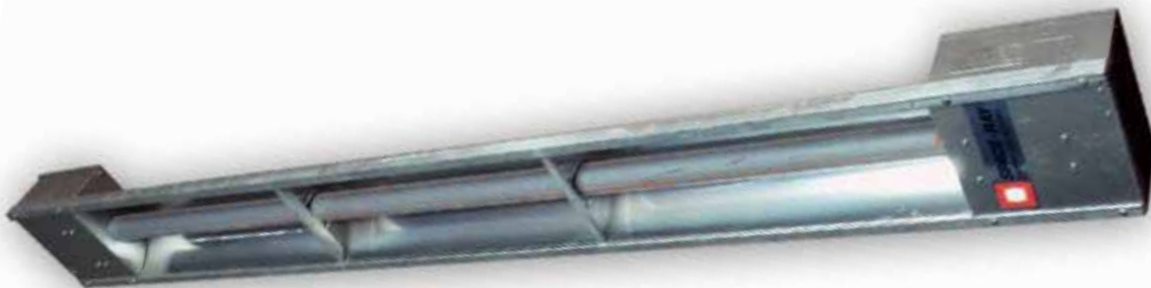

PennRadiant.com


1-800-438-2503

U.S.A Proud



SMG10-N1, L1

Ceramic Heater Parts

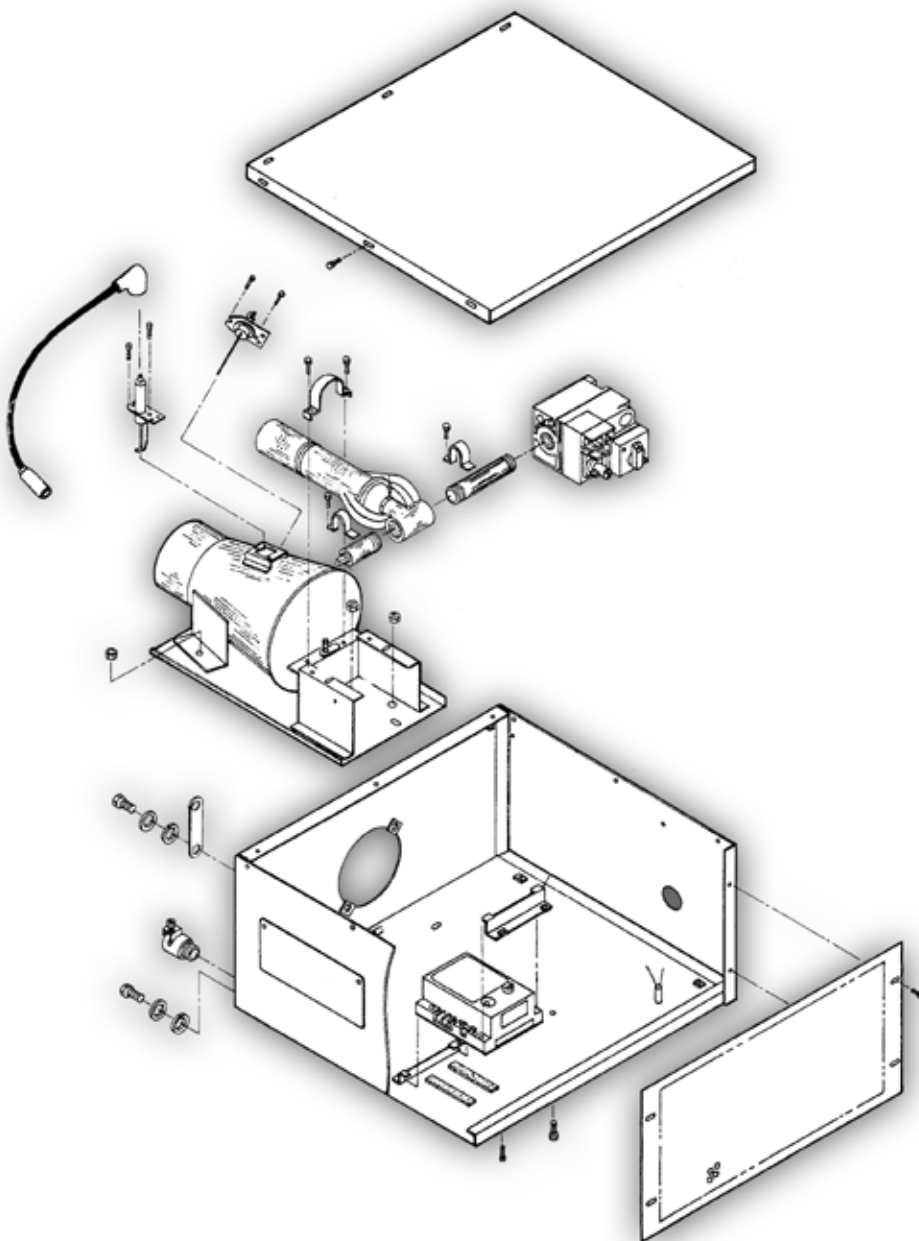

PennRadiant.com


1-800-438-2503

U.S.A Proud



SMG10-N1, L1

Ceramic Heater Parts

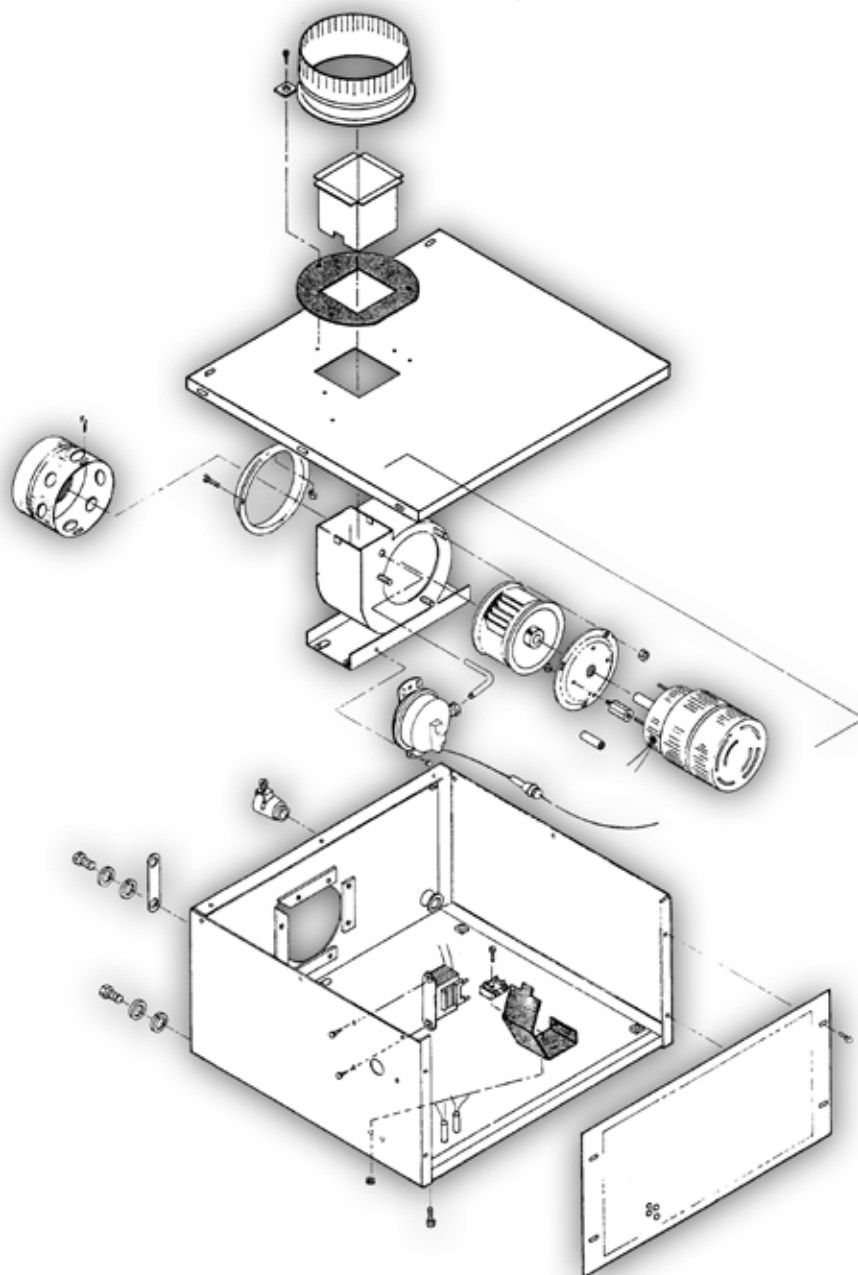




2730 Series Heater Parts



Item	Part #	Description
1	HWP HC1069B	LID/CONTROL BOX
2	HWP HC1069A	CONTROL BOX LID
3	N/S	COPPER TUB/AIR SWITCH
4	HWP HP1049	FAN BLADE
5	HWP HG1050A	FAN GUARD
6	HWP HM1056	MOTOR 1 HP
	HWP HM1066	MOTOR 3 HP
7	N/S	HEAT SHIELD
8	HWP HB2730	BODY
9	HWP HB1021B	BURNER
10	HWP HW1065	WHEEL 12" x 3" x 5/8" HUB
*	HWP HD1055	FUSED DISCONNECT (SINGLE PHASE)
*	HWP HD1057	FUSED DISCONNECT (THREE PHASE)


* Parts not shown on breakdown

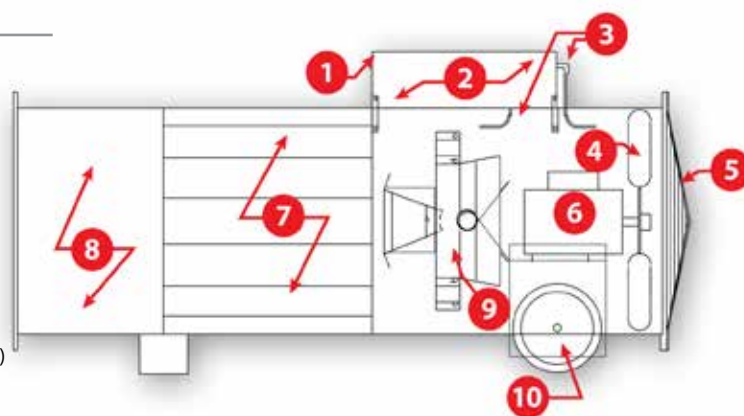

2730c Burner

Item	Part #	Description
1	HWP HG1050A	FAN GUARD SCREEN
2	HWP HP1049	PROPELLER WITH BUSHING (2730)
3	HM1056	3 HP 1 PHASE MOTOR
4	HWP HB1021B	GAS BURNER RING
5	HWP HV1040	VAPORIZER RING
6	HWP HC1004B	ELECTRODE KIT - FENWALL
*	HWP HM1066	3 PHASE MOTOR


* Parts not shown on breakdown

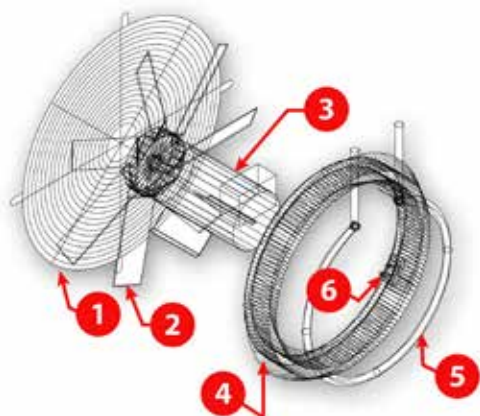

2730c Control Panel

Item	Part #	Description
1	HWP HS1044	MOTOR RELAY (3Ø)
*	HWP HS1044	MOTOR RELAY (1Ø)
2	HWP HS1043B	OVERLOAD RELAY
3	HWP HC1017	CONTROL TRANSFORMER
4	HWP HC1004B	IGNITER (FENWALL)
5	HWP HC1001C	D.S.I. CONTROL BOARD
6	HWP HC1010	AIR FLOW SWITCH
7	SFP 2453	HI-LO THERMOSTAT
8	HWP HC1072	TIME DELAY BREAKER
9	HWP HC1019B	3 AMP BREAKER
10	SFP 5989	VOLT METER (150 VOLT)
11	HWP HC1011	BURNER SWITCH
12	HWP HC1011	FAN SWITCH
*	HWP HC1012	FAN SWITCH (2730A/4200 PRIOR 1992)
13	SFP 2505	LIGHT
14	PPE 099125-03	NEUTRAL BLOCK

* Parts not shown on breakdown

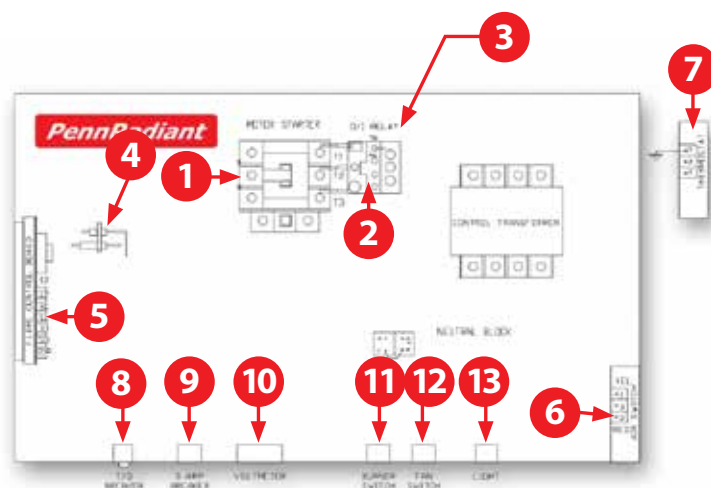




1800 Series

Heater Parts



Item	Part #	Description
1	HWP HC1069B	LID/CONTROL BOX
2	HWP HC1069A	CONTROL BOX W/LID
3	N/S	COPPER TUBE/AIR SWITCH
4	HWP HP1161	FAN BLADE
5	HWP HG1167	FAN GUARD
6	HWP HM1166	MOTOR 1 HP
7	HWP HB1177	HEAT SHIELD
8	HWP HB1800	BODY
9	HWP HB1171	BURNER
10	HWP HW1164	WHEEL 8"x 1.75" x 1/2" HUB
10	HWP HW1164B	AXLE FOR 1800
11	HWP HC1004B	ELECTRODE ASSEMBLY

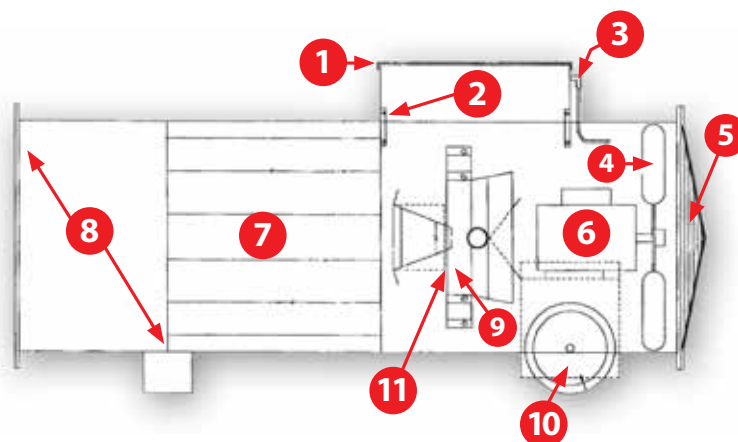


Controls Panel

Item	Part #	Description
1	SFP 5989	SUPPLY VOLTAGE METER (0-150)
2	SFP 2505	INDICATOR LIGHT
3	HWP HC1011	FAN ON/OFF SWITCH
4	HWP HC1011	BURNER ON/OFF SWITCH
5	SFP 2453	REMOTE THERMOSTAT
6	HWP HC1016	VAPORIZER RECEPTACLE
7	HWP HC1019B	3 AMP. CIRCUIT BREAKER
8	HWP HC1010	AIRFLOW SWITCH
9	SFP 4512	CONTROL RELAY
10	HWP HC1003A	FAN DELAY TIMER
11	SFP 2446	HIGH-LIMIT CONTROL
12	HWP HC1001C	IGNITOR CONTROL BOARD W/TIME DELAY
13	SFP 2436	MOTOR RELAY
14	HWP HC1115	20 AMP. FUSE (SC-20)
15	HWP HC1123	TERMINAL BLOCK

Parts Not Shown



HWP HC1122	FUSE BLOCK
HWP HC1020	POWER CORD
SFP HC1008	IGNITION / FLAME SENSOR 2 WIRE KIT

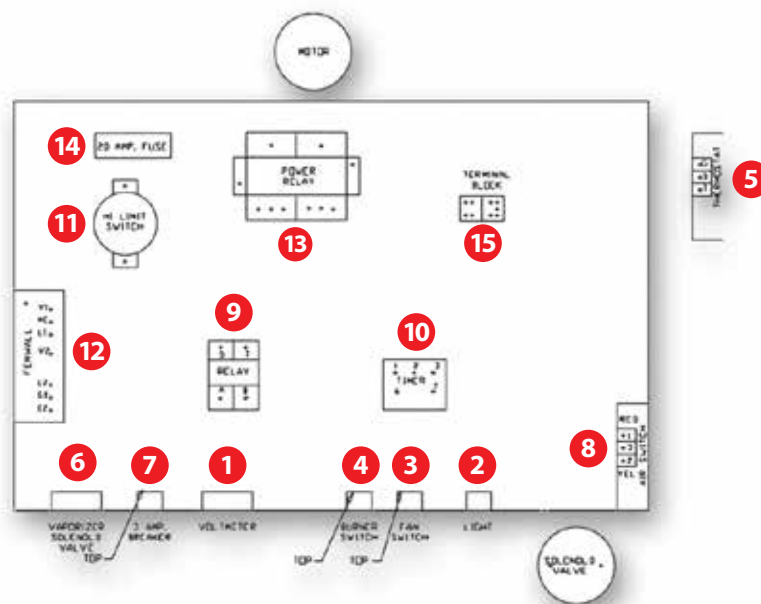



1800 Series

Vapor Pipe Train & Liquid Pipe Train

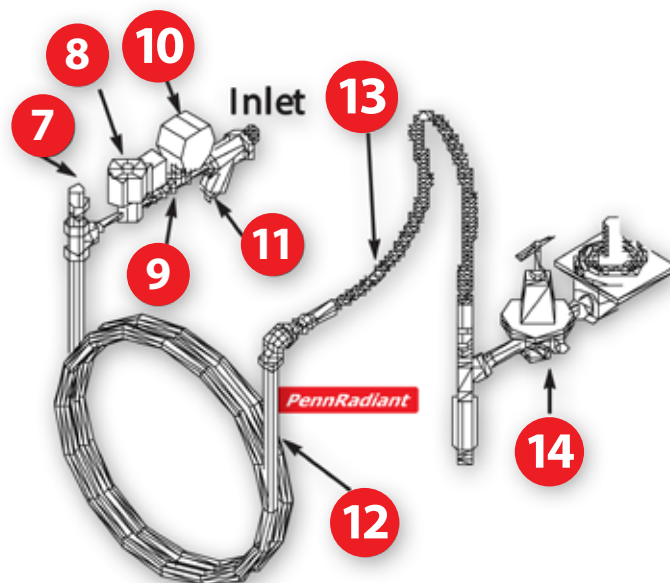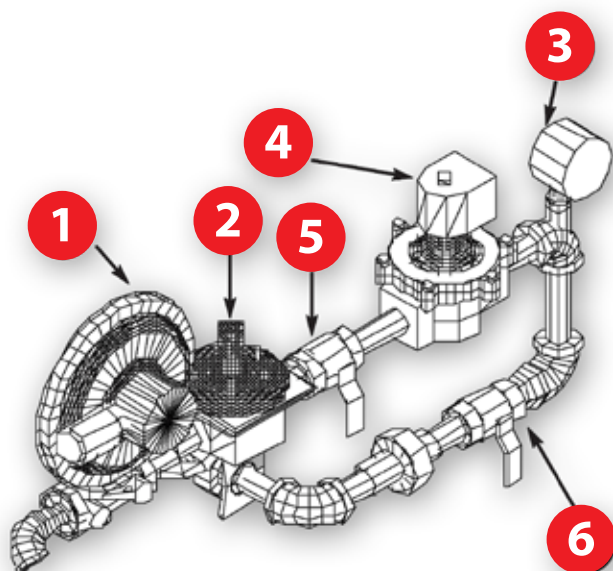

Vapor Pipe Train

Item	Part #	Description
1	HWP 40SV06	1ST STAGE REGULATOR 3/4" x 1"
2	HWP HV1162	1" LOW PRESSURE REGULATOR
3	HWP HV1169	15" W.C. LOW PRESSURE GAUGE
4	HWP HV1032	115V. GAS SOLENOID VALVE 1" DIA.
5	HWP HV1035	1" BALL VALVE
6	HWP HV1160	1" LOCKING GAS SELECTOR VALVE

Liquid Pipe Train


Item	Part #	Description
7	HWP HV1039	SAFETY RELIEF VALVE
8	HWP HV1137	LIQUID PROPANE SOLENOID VALVE
9	HWP HV1123	MANUAL SHUT-OFF VALVE
10	HWP HV1054	LIQUID PRESSURE GAUGE
11	HWP HV1129	LIQUID STRAINER
12	HWP HV1140	COIL
13	HWP HV1042B	HOSE
14	HWP HR1053	HIGH PRESSURE REGULATOR



1800B Series Heater Parts




Item	Part #	Description
1	HWP HC1082	LID/CONTROL BOX
2	HWP HC1083	CONTROL BOX WO/LID
4	HWP HP1161	FAN BLADE
5	HWP HG1167	FAN GUARD
6	SFP 9262	MOTOR 1 HP
7	HWP HB1177	HEAT SHIELD
8	HWP HB1800	B BODY
9	HWP HB1171	BURNER
10	HWP HW1164	WHEEL 8"x 1.75" x 1/2" HUB
11	HWP HW1164	B AXLE FOR 1800

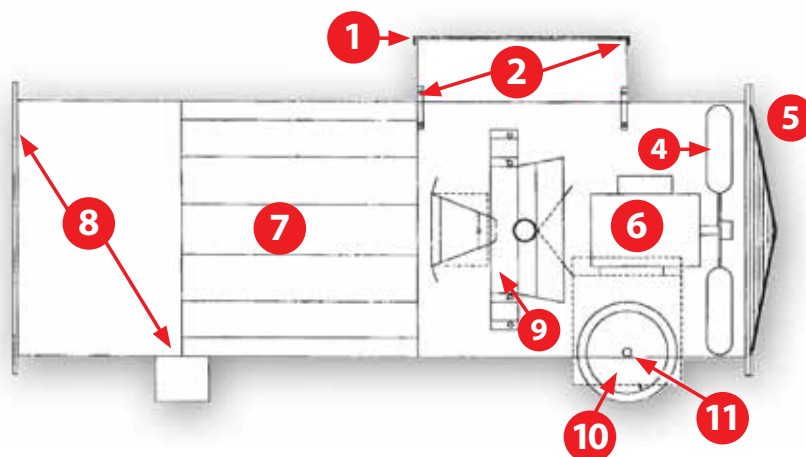

Controls Panel



Item	Part #	Description
1	SFP 9264	Control Relay
2	HWP HC1001D	DSI Control
3	SFP S1500-710	Air Switch
4	HWP HC1123	Terminal Block (A,C)
5	SFP 2446	Hi Limit Switch
6	HWP HC1123	Terminal Block (C)
7	SFP 9264	Motor Relay
8	HWP HC1122	Fuse Block
9	HWP HC1115	Fuse 20 Amp
10	HWP 44130	Light
11	HWP HC1011	Fan Only Switch
12	HWP HC1019B	3 Amp Breaker
13	HWP HC1150	Off Switch
14	HWP HC1149	On Switch
15	HWP HC1123	Terminal Block (D)
	HWP HC1120	Thermostat (w/o Cord) (Not Shown)
	HWP HC1020	Power Cord (Not Shown)
	SFP 2142	Spark Plug (Not Shown)
	SFP SL11B86	Flame Rod (Not Shown)
	SFP HC1008	Flame Sensor / Ignition Wire Kit

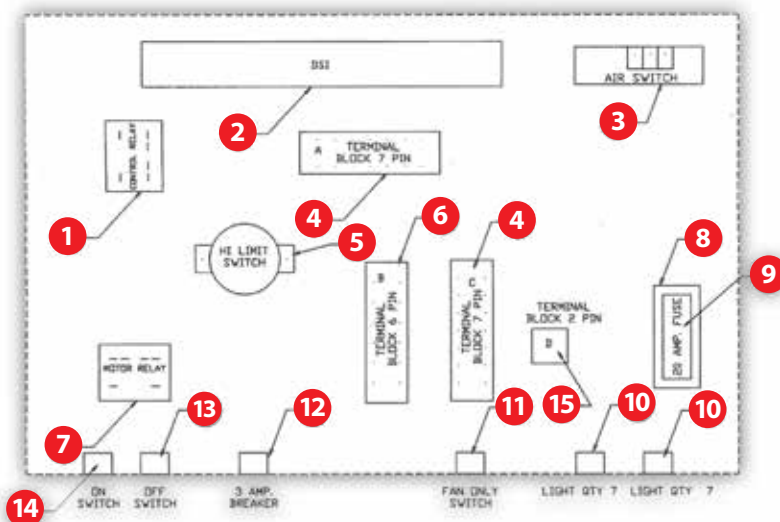



1800B Series

Vapor Pipe Train & Liquid Pipe Train

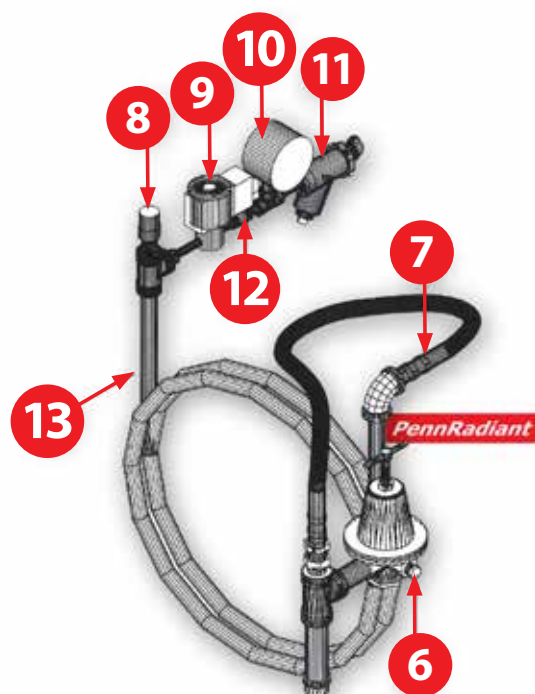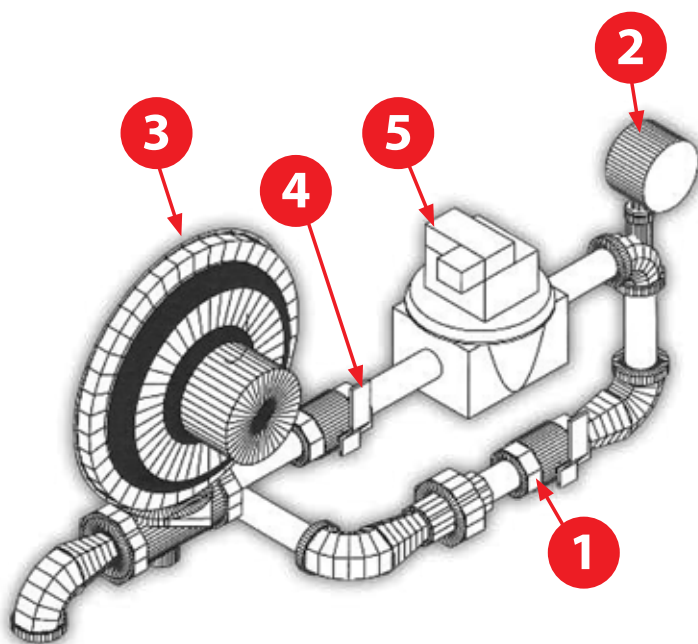

Vapor Pipe Train


Liquid Pipe Train

Item	Part #	Description
1	HWP HV1160	1" LOCKING GAS SELECTOR VALVE
2	HWP HV1169	15" W.C. LOW PRESSURE GAUGE
3	ACC 40SV06	2ND STAGE REGULATOR 3/4" X 1"
4	HWP HV1035	1" BALL VALVE
5	SFP 4490	2ND STAGE REGULATOR VALVE
6	HWP HR1053	HIGH PRESSURE REGULATOR
7	HWP HV1042B	HOSE
8	HWP HV1039	SAFETY RELIEF VALVE
9	HWP HV1137	LIQUID PROPANE SOLENOID VALVE
10	HWP HV1054	LIQUID PRESSURE GAUGE
11	HWP HV1129	LIQUID STRAINER
12	HWP HV1123	MANUAL SHUT-OFF VALVE
13	HWP HV1140	COIL



950H

Vapor Pipe Train

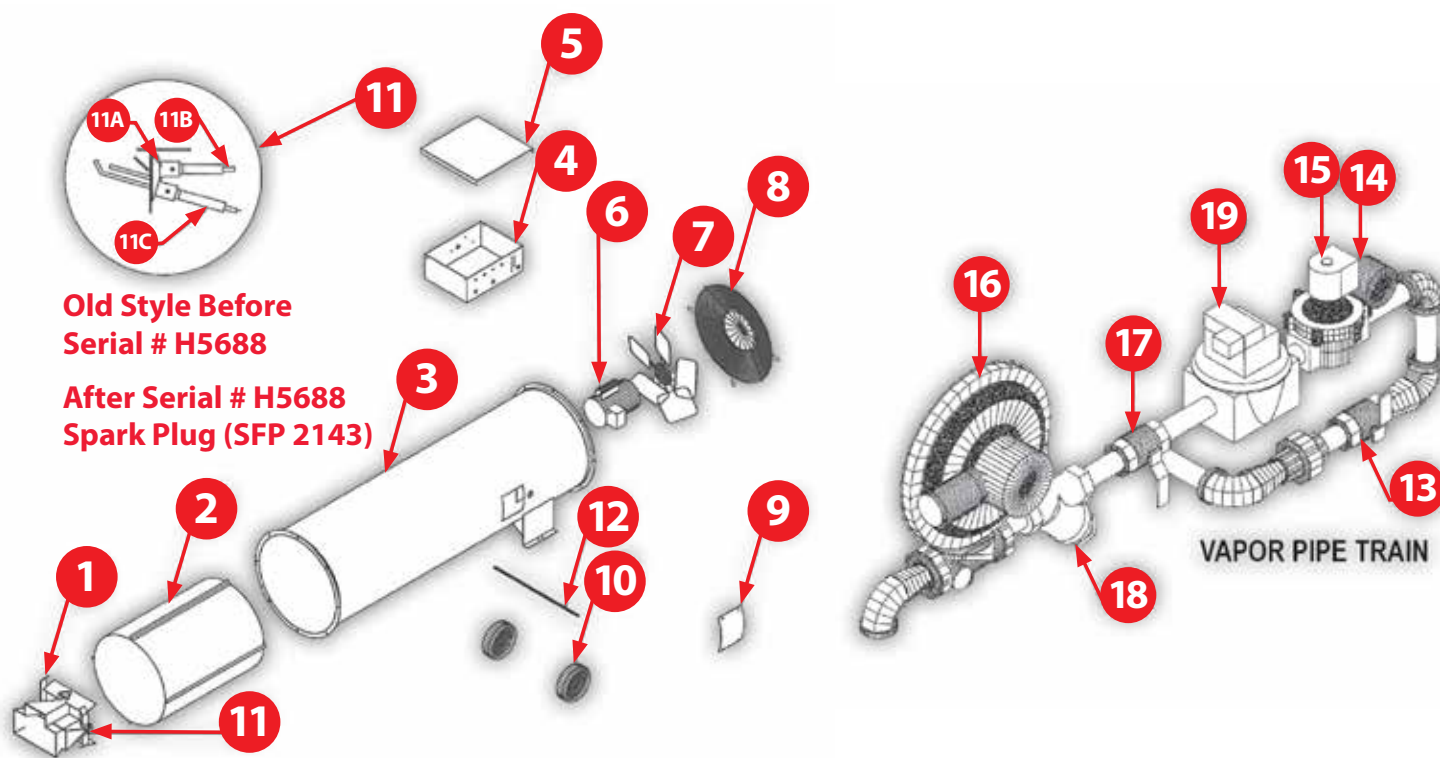


Vapor Pipe Train

Item	Part #	Description	Item	Part #	Description
1	HWP HB1171B	Burner Complete	13	HWP HV1120	Gas Selector Valve 1-1/4" Locking
2	HWP HB1177C	Heat Shield	14	HWP HV1169	Gauge 15" W.C.
3	HWP HB950A	Heater Body Shell	15	HWP HV1138	1-1/4" Solenoid Valve
4	HWP HC1083	Control Box	16	ACC 11SV08	Regulator
5	HWP HC1082	Control Box Lid	17	HWP HV1121	1-1/4" Ball Valve
6	HWP HM1050	Motor	18	HWP HV1122	1-1/4" Y Strainer
7	HWP HP1162	Fan Blade	19	SFP 4490	2 Stage Regulator Valve
8	HWP HG950A	22" Fan Guard			
9	HWP HC1064	Burner Access Door			
10	HWP HW1065	Wheel(950H - Non-Stackable)			
11	HWP 1190310	Pilot w/Spark Rod and Flame Rod			
11A	HWP 1190310BR	Pilot Assy. Bracket			
11B	HWP 134290	Igniter			
	SFP 2143	After Serial#H5688			
11C	HWP 136003	Flame Rod			
12	HWP HW1065D	Axle(950H - Non-Stackable)			



950H

Control Panel

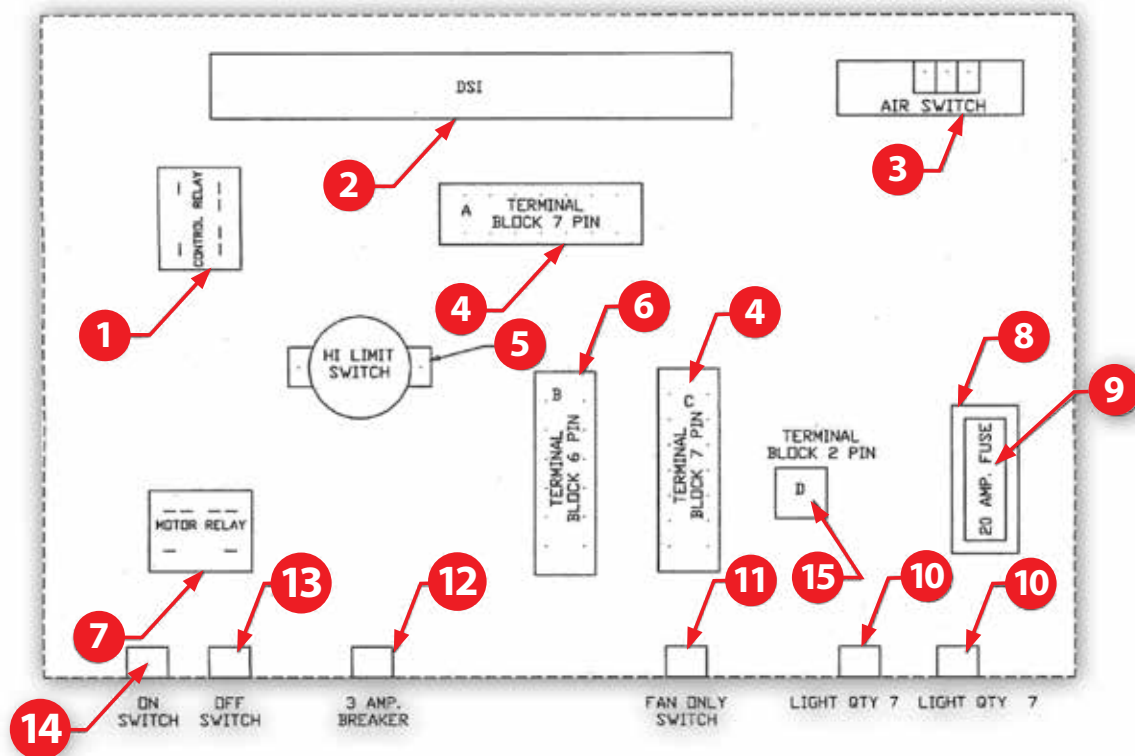


Item	Part #	Description
1	SFP 9264	Control Relay
2	HWP HC1001D	DSI Control
3	SFP S1500-710	Air Switch
4	HWP HC1123	Terminal Block (A,C)
5	SFP 2446	Hi Limit Switch
6	HWP HC1123	Terminal Block (C)
7	SFP 9264	Motor Relay
8	HWP HC1122	Fuse Block
9	HWP HC1115	Fuse 20 Amp
10	HWP 44130	Light
11	HWP HC1011	Fan Only Switch
12	HWP HC1019B	3 Amp Breaker
13	HWP HC1150	Off Switch
14	HWP HC1149	On Switch
15	HWP HC1123	Terminal Block (D)
	HWP HC1120	Thermostat (w/o Cord) (Not Shown)
	HWP HC1020	Power Cord (Not Shown)
	SFP 2142	Spark Plug (Not Shown)
	SFP SL11B86	Flame Rod (Not Shown)
	SFP HC1008	Flame Sensor / Ignition Wire Kit



P900

Heater Parts

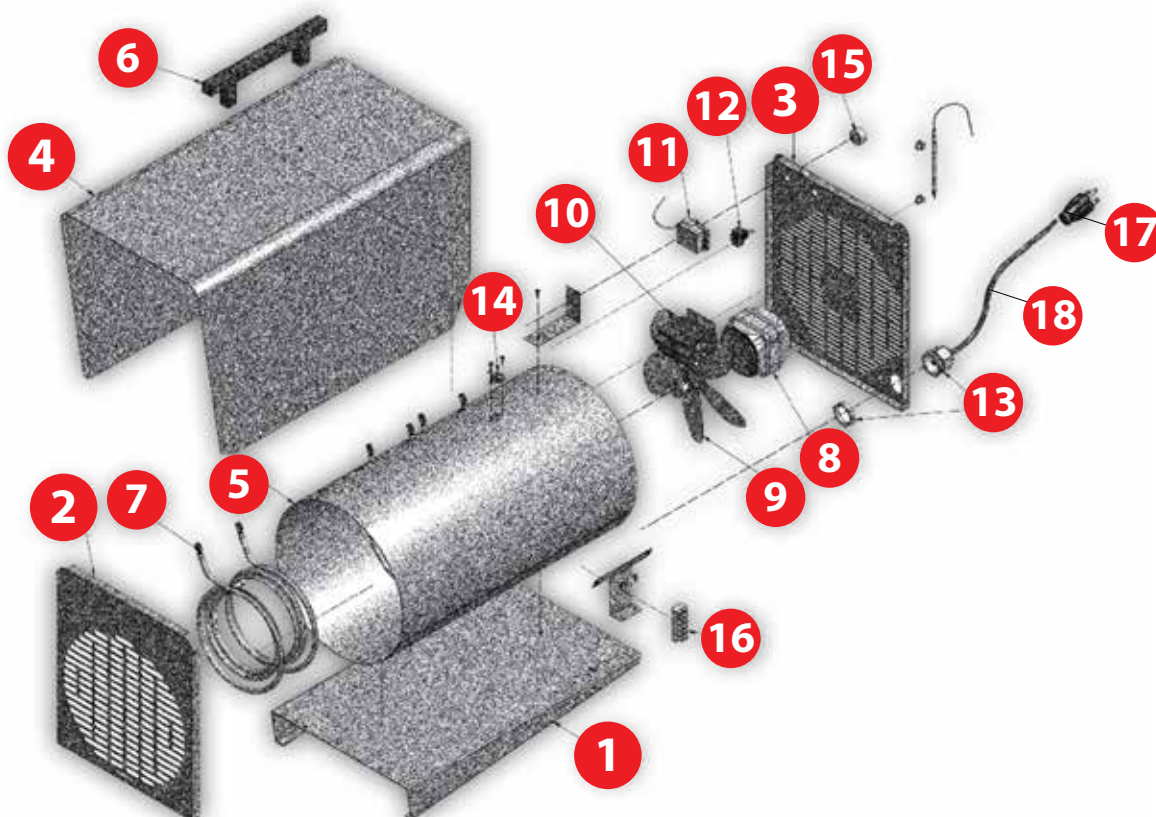


Item	Part #	Description
1	HWP 40081001	BOTTOM PLATE
2	HWP 40081003	FRONT PANEL
3	HWP 40081002	REAR PANEL
4	HWP 40081005	OUTER MANTLE
5	HWP 40081004	INNER MANTLE
6	HWP 80100	HANDLE
7	HWP 42800	HEATING ELEMENT (3PCS)
8	HWP 180014	FAN MOTOR
9	HWP 16110	FAN BLADE
10	HWP 22670	CONTACTOR
11	HWP 20220	ROOM THERMOSTAT & KNOB
12	HWP 26902	TOGGLE SWITCH
13	HWP 36922	STRAIN RELIEVER
14	HWP 180024	OVERHEAT LIMIT SWITCH
15	HWP 20577	THERMOSTAT KNOB
16	HWP 36704	TERMINAL BLOCK
17	HWP 00275-00T	PLUG
18	ACC 50A10 POWER	CORD ASSEMBLY

Parts Not Shown

HWP 40081006	BRACKET FOR INNER MANTLE
HWP 17907	FAN HUB
HWP 26901	TOGGLE SWITCH
HWP 400021	TOGGLE SWITCH



P4000 & P6000 Heater Parts

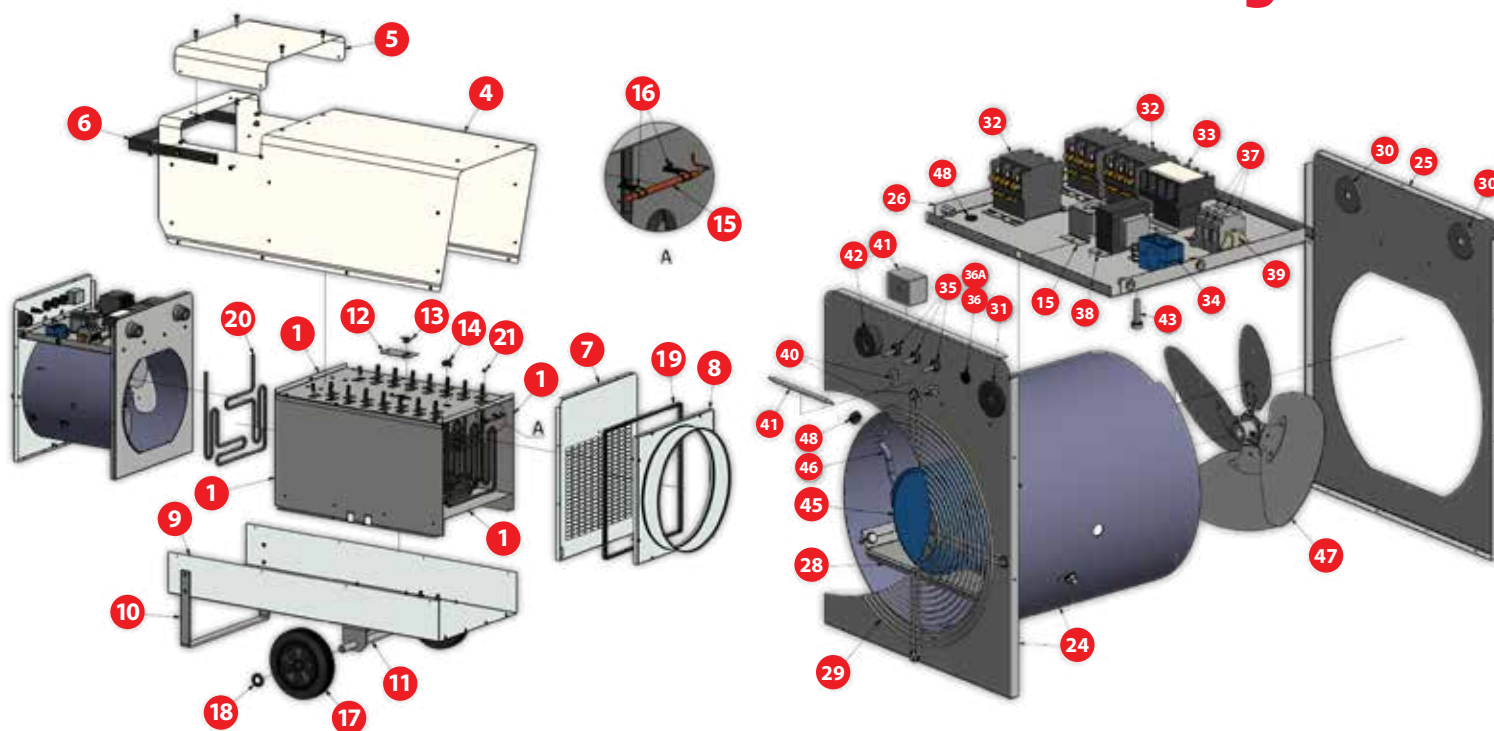

Item Part # Description

1	HWP 400003	Heat Exchanger Chamber
4	HWP 400002	Hood (Including Connection Hatch)
5	HWP 400027	Connection Hatch Only
6	HWP 400001	Handle
7	HWP 400006	Front Panel
8	HWP 400008	Duct Adapter
9	HWP 400007	Bottom Frame
10	HWP 400011	Support Leg
11	HWP 400005	Wheel Shaft
12	HWP 400012	Plate, Fan Thermostat
13	HWP 180024	Overheat Limit Switch (Inner)
14	HWP 180025	Cooldown Thermostat
15	HWP 20550	Overheat Limit Switch, Air Outlet (PETE)
16	HWP 82770	Metal Bracket, or Bulb
17	HWP 400004	Wheel
18	HWP 74600	Locking Washer
19	HWP 40019	Gasket, Rubber
20	HWP 400026	Heating Element (15 Per Heater, P4000)
	HWP 600026	Heating Element (15 Per Heater, P6000)
21	HWP 36809	Guard Ring, Rubber
24	HWP 400015	Rear Panel
25	HWP 400009	Partition Panel / Bracket
26	HWP 400010	Contactor Mounting Plate
28	HWP 40028	Mounting Plate, Fan Motor
29	HWP 400019	Fan Guard Grill
30	HWP 400020	Bushing, Medium
31	HWP 400016	Bushing, large

Item Part # Description


32	HWP 22669	Contactor (3 Per Heater)*
33	HWP 400022	Contactor (1 Per Heater)
34	HWP 180016	Strain Reliever (Qty 2)
	HWP 36904	Strain Reliever (P6000 only)
35	HWP 400021	Toggle Switch
36	HWP 38110	Fuse Holder
36A	HWP PEF1	Fuse
37	HWP 36615	Terminal Block (3 per heater)
38	HWP 28400	Transformer \$93.00
39	HWP 36616	Locking Clamp + End Plate \$7.50
40	HWP 37910	Plastic Bracket \$3.00
41	HWP 180017	Ambient Thermostat \$69.00
41	HWP 20220	Ambient Thermostat (Knob Not Included)
		For P4000, S/N 2022 & Beyond
		For P6000, S/N 0531 & Beyond
42	HWP 400018	Thermostat Knob (for 180017)
42	HWP 20577	Thermostat Knob (for 20220)
43	HWP 400043	Ground Bolt
45	HWP 400014	Fan Motor
47	HWP 400012	Fan Blade
48	HWP 36802	Bushing, Small

Not Shown

ACC WD1425	Duct for P4000, P6000 (14"x25' long)
SFP S1500-105	Bracket for Terminal Block
HWP 32116	Heating Coil Wire (sold by foot)

* For P4000 S/N prior to 2142 use 400022
For P6000 S/N prior to 0561 use 400022

SURE FLAME

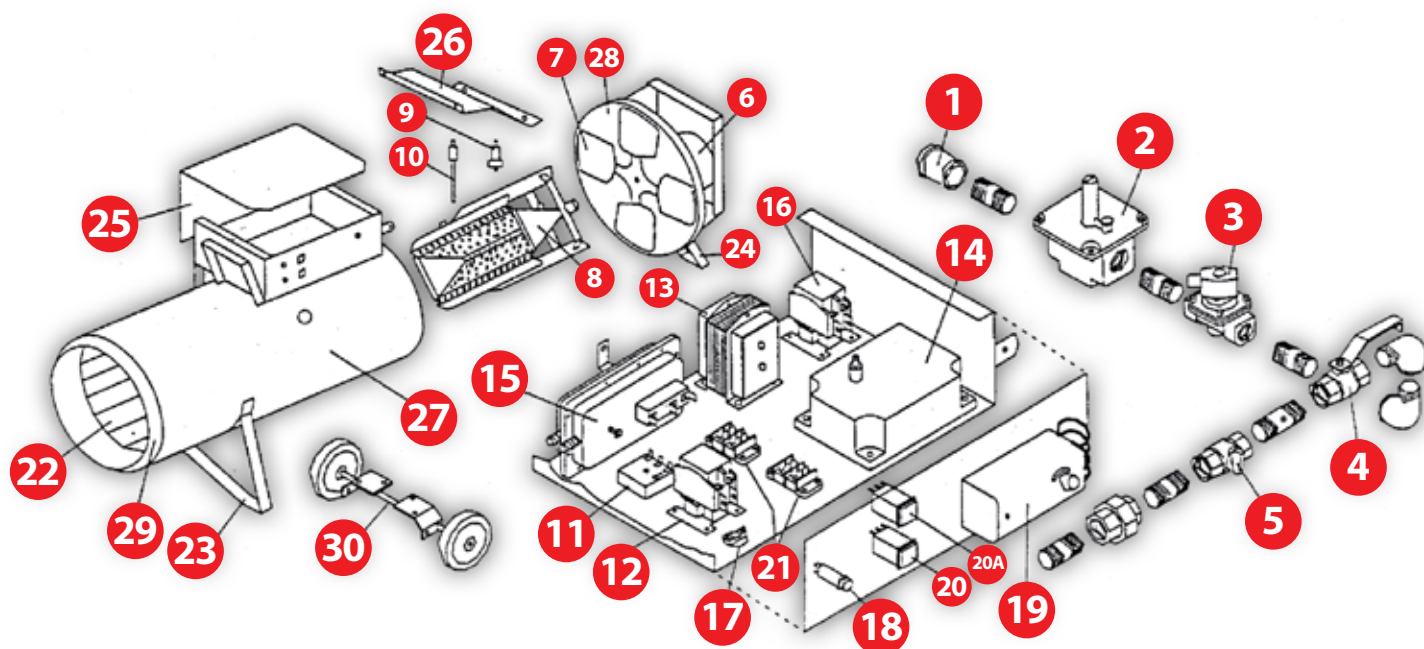


Item	Part #	Description	Item	Part #	Description
1	SFP 40SV01	Strainer (S400-80)	20	SFP 3337R	OFF Switch (Red)
2	SFP 2524	Low Pressure Regulator	20A	SFP 3337G	On Switch (Green)
3	SFP 4514	Solenoid Shut Off Valve 24V	21	SFP 9823	Terminal Block
4	SFP S400-73	Gas Selector Valve (S400-73)	22	SFP S400-2	Heat Shield
5	SFP 2538	Manual Shut Off Valve 3/4" valve	23	SFP S400-57	Front Leg Assembly
6	SFP 2430	Motor 1/4 H.P.	24	SFP S400-47	Rear Leg Assembly (less motor mount & screen)
7	SFP 2420	Fan Blade	25	SFP 4517	Control Box Lid
8	SFP BV4-50	Burner	26	SFP SC400-38	Valve Train Cover
9	SFP 2142	Spark Plug	27	SFP S400-53	Heater Body Includes 22, 23 & 29
10	SFP SL11B86	Flame Rod	28	SFP S400-502	Motor Mount (with screen & rear legs)
11	SFP 7465	24VAC 5-Second Delay-ON-Break Timer (Before Ser.#11952)	29	SFP S400-3	Nose Cone
12	SFP 4519	Control Relay 24V (Before Ser.#11952)	30	ACC-SWK1	Wheel Kit (Optional)
	SFP 9872	Control Relay 24V (After Ser.#11953)			
13	SFP 4510	Transformer 24V		Parts Not Shown	
14	SFP 5943	Direct Spark Ignition Control		ACC-40SV06*	Regulator (Optional)
	SFP 1331	After Serial #11953		HWP HC1020	Power Cord and Plug
15	SFP 5124	Air Switch (Before Ser.#11952)		SFP 40SC29W	Wiring Harness (Before Ser.#11952) (includes: sensor wiring)
16	SFP 4519	Motor Relay 24V (Before Ser.#11952)			
	SFP 9872	Motor Relay 24V (After Ser.#11953)		SFP HC1008	Ignition / Flame Sensor Wire Kit
17	SFP 2446	Hi Limit Thermoswitch			
18	SFP 4518	Indicator Light 24V			
19	SFP 2453	Thermostat			



S405

Heater Parts

Serial #11953 and Greater

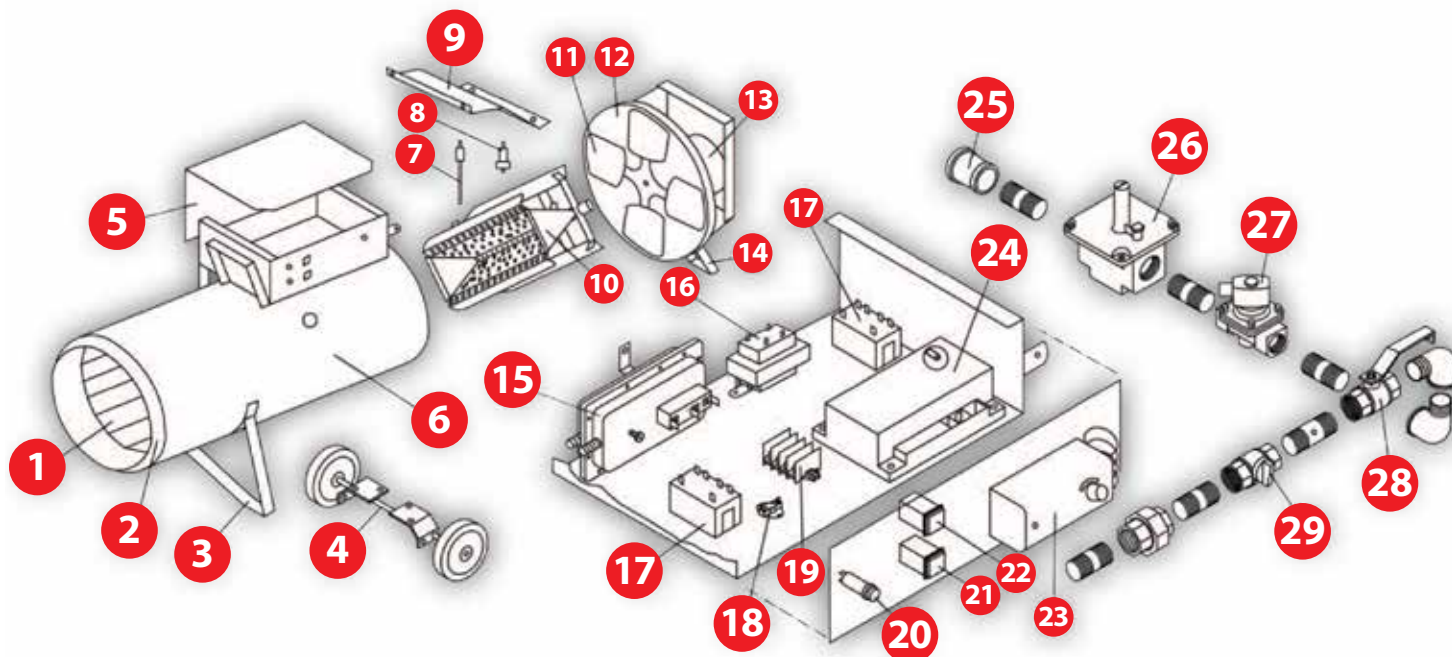SURE FLAME


Item	Part #	Description	Item	Part #	Description
1	SFP S400-2	Heat Shield	24	SFP 1331	Direct Spark Ignition Control
2	SFP S400-3	Nose Cone	25	SFP 40SV01	Strainer
3	SFP S400-57	Front Leg Assembly	26	SFP 2524	Low Pressure Regulator
4	ACC SWK1	Wheel Kit (optional)	27	SFP 4514	Solenoid Shut Off Valve 24V
5	SFP 4517	Control Box Lid	28	SFP S400-73	Changeover Valve
6	SFP S400-503	Heater Body Includes 1,2,3	29	SFP 2538	Manual Shut Off Valve
7	SFP SL11B86	Flame Rod	30	ACC-40SV06	Hi Pressure Regulator (optional)
8	SFP 2142	Spark Plug			
9	SFP S400-38	Valve Train Cover			
10	SFP BV4-50	Burner			
11	SFP 2420	Fan Blade			
12	SFP S400-502	Motor Mount (with screen & rear legs)			
13	SFP 2430	Motor 1/4 H.P.			
14	SFP S400-47	Rear Leg Assembly (less motor mount & screen)			
15	SFP 5124	Air Switch			
16	SFP 4510 24V	Transformer			
17	SFP 9872	Relay 24V (two required)			
18	SFP 2446	Hi Limit Thermoswitch			
19	SFP 9823	Terminal Block			
20	SFP 4518	Indicator Light 24V			
21	SFP 3337R	OFF Switch (Red)			
22	SFP 3337G	ON Switch (Red)			
23	SFP 2453	Thermostat			




S1505

Heater Parts

**Serial #3236 and Prior
w/Fenwall**

SURE FLAME

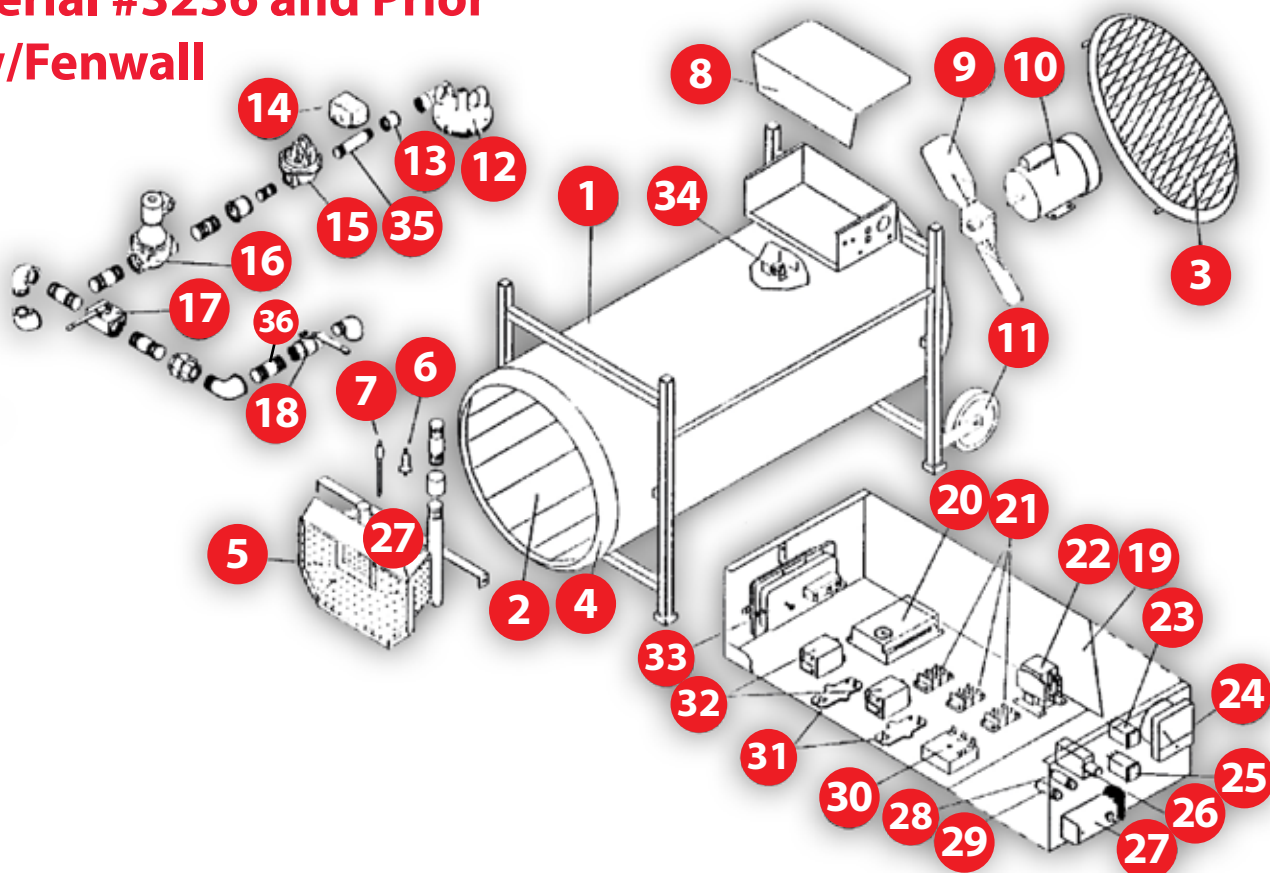

Item	Part #	Description
1	SFP SL11B-55	Heater Body Includes:2,4,5
	SFP S1505-56	Heater Body Includes:2, 4
2	SFP SL11B-2	Heat Shield
3	SFP SL11B-53	Screen
4	SFP SL11B-13	Nose Cone
5	SFP BV85-50	Burner
6	SFP 2143	Spark Plug
7	SFP SL11B-86	Flame Rod
8	SFP SL11B-35	Control Box Cover
9	SFP 2423	24" Fan Blade
10	HWP HM1166	1 HP Electric Motor
11	SFP 6119	8" Semi Pneumatic Wheel
12	SFP 11SV08	Regulator (Optional)10psi max
13	SFP S1500-83	1.25" Strainer
14	SFP 4509	Gas Pressure Switch
15	SFP 4490	1.25" 2 Stage Regulator Valve
16	SFP 2537	1.5" Solenoid Valve
17	SFP S1505-81	1.5" Gas Selector Valve
18	SFP 2539	1.5" Manual Shut-Off valve
19	SFP SL11B-58	Control Box

Item	Part #	Description
20	SFP 7462	Ignition Control Module
21	SFP 9823	Terminal Block (3)
22	SFP 2436	Motor Starting Relay
23	SFP 3337G	ON Switch (Green)
24	SFP 5989	Voltmeter
25	SFP 3337R	OFF Switch (Red)
26	HWP HC1002	Circuit Breaker for item 20
27	SFP 2453	Thermostat
28	SFP 2506	Red Light
29	SFP 2505	White Light
30	SFP 5988	10-Second delay ON break timer
31	SFP 6440	Relay Clip
32	SFP 4512	Control Relay with clip
33	SFP 5124	Airswitch (0.5"W.C.)
34	SFP 2446	Hi Limit Thermoswitch


Parts Not Shown

DEC DK1505	Decal Kit for S1505
HWP HC1020	Power Cord and Plug
SFP HC1008	Ignition/Flame Sensor Wire Kit



S1505B Heater Parts

Serial #3237 through #4276

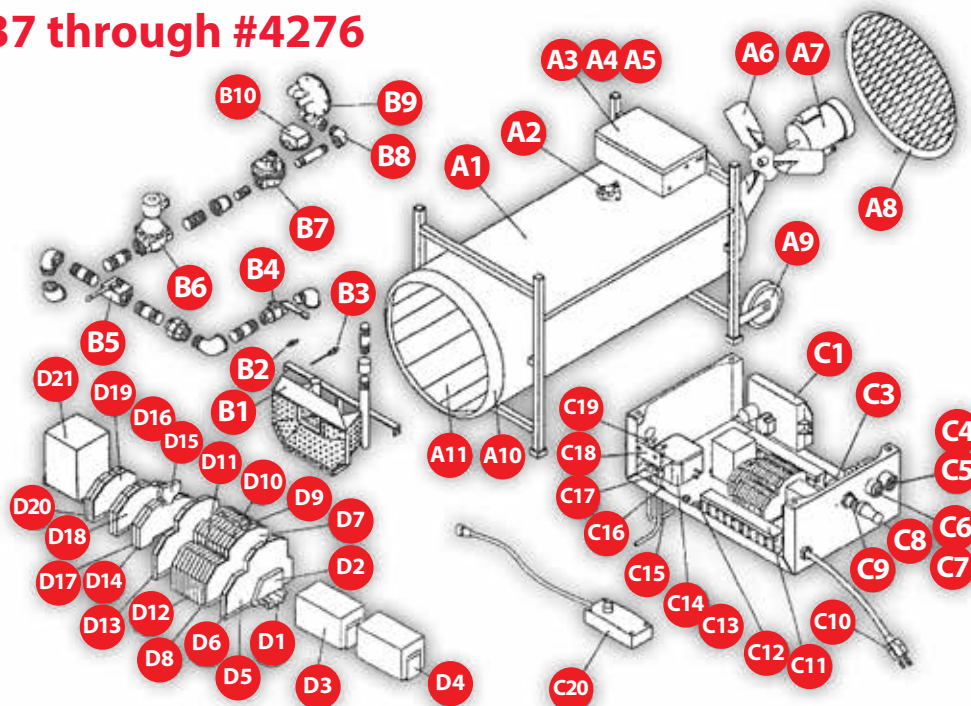SURE FLAME


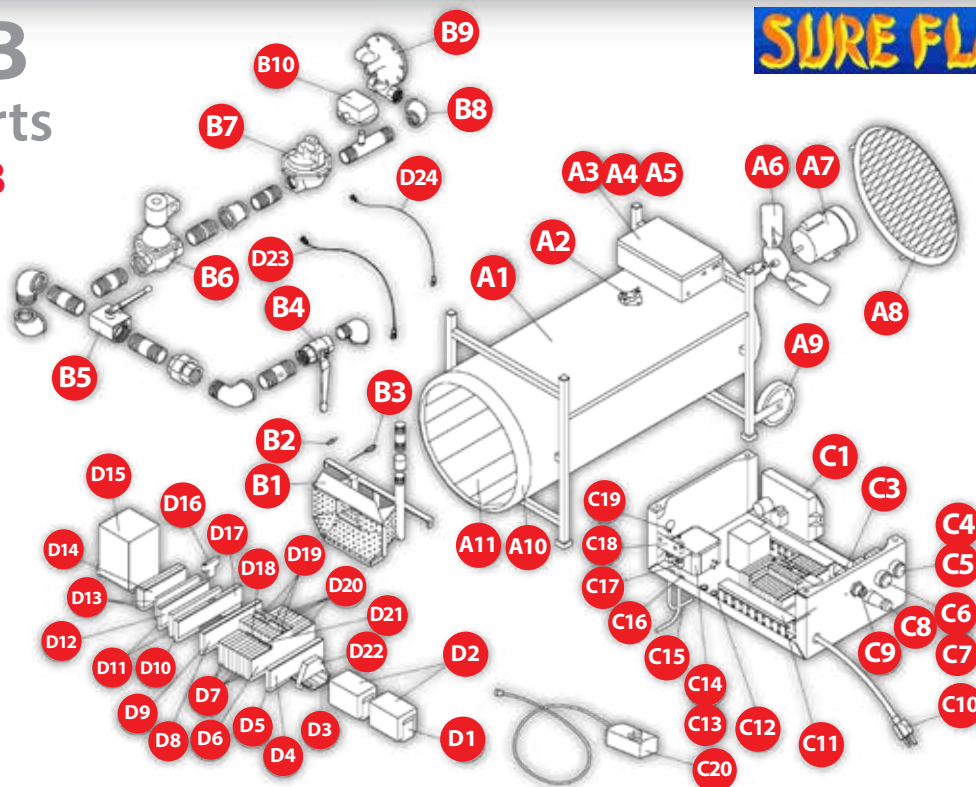
Item	Part #	Description	Item	Part #	Description
A1	SFP S1505-56	Heater Body (Includes A10 & A11)	C12	SFP 5509	Snap Bushing, 1/2"
A2	SFP 2446	Limit Switch, 180F	C13	SFP S1500-710	Adjusted Air Switch
A3	SFP S1500-104	Control Box Lid	C14	SFP 9294	Vinyl Tube, 3/16"
A4	SFP S1500-501	Control Box	C15	SFP S1500-109	Air Tube
A5	SFP 7723	Control Box Seal	C16	SFP 5515	Rubber Grommet
A6	SFP 2423	Fan Blade	C17	SFP 2554	Compression Fitting, 1/4" Tubex 1/8" MNPT
A7	SFP 9262	Motor, 1HP	C18	SFP S1500-502	Air Tube Bracket
A8	SFP SL11	B-53 Screen	C19	SFP 9293	Connector, 1/8" MNPT x .170" HB 90° Elbow
A9	SFP 6119	Wheel	C20	SFP S1500-716	Remote Thermostat Assembly W/Cable
A10	SFP SL11B-13	Nose Cone	D1	SFP S1500-105	Mounting Rail
A11	SFP SL11B-2	Heat Shield	D2	SFP 9443	Ground Terminal Block (WK 4SL/U) Green/Yellow
B1	SFP BV85-50	Burner	D3	SFP 9264	Power Relay, 120V
B2	SFP 2143	Spark Plug	D4	SFP 9264C	Relay Clip
B3	SFP SL11B-86	Flame Rod	D5	SFP 9280	End Plate (APC 1-2.5 D2/E), Green
B4	SFP 2539	Maunal Shut-Off Valve, 1-1/2"	D6	SFP 9275	Terminal Block (WKC 2.5 D2/2 SL35), Green
B5	SFP S1505-81	Gas Selector Valve, 1-1/2"	D7	SFP 9279	End Plate (APC 1-2.5 D2/E), Gray
B6	SFP 2537	Solenoid Valve, 1-1/2"	D8	SFP 9277	Terminal Block (WKC 2.5 E/35), Red
B7	SFP 4490	2-Stage Regulator, 1-1/4"	D9	SFP 9283	Gross Connector, 2 Pole
B8	SFP S1500-86B	Strainer Assembly, 1-1/4"	D10	SFP 9284	Gross Connector, 3 Pole
B9	ACC 11SV08	Regulator (optional)	D11	SFP 9285	Gross Connector, 5 Pole
B10	SFP 4509	Gas Pressure Switch	D12	SFP 9276	Terminal Block (WKC 2.5E), Gray
C1	SFP 9624	Flame Controller (Pin Connector)	D13	SFP 9274	Terminal Block (WKC 2.5 D2/2 SL35), Gray
C3	HWP HC1001D	Flame Controller (Tab 1/4")	D14	SFP 9278	Terminal Block (WKC 2.5 TKG/35), Gray
C4	SFP S1500-108	Wiring Duct	D15	SFP 9271	Fuse Holder
C5	SFP 9612 Start	Button Assembly	D16	SFP 9270	Fuse, 2A
C6	SFP S1500-718	Start Contact Block Assembly	D17	SFP 9273	Terminal Block (WKC 2.5 D1/2/3.5), Gray
C7	SFP 9611 Stop	Button Assembly	D18	SFP 9281	End Plate (APC 1-2.5 D1/TK), Gray
C8	SFP S1500-717	Stop Contact Block Assembly	D19	SFP 9282	End Plate (APC 1-2.5, Gray
C9	SFP 8686	Thermostat Jumper Assembly\	D20	SFP 9272	Terminal Block (WKC 2.5/35), Gray
C10	SFP 8682	Thermostat Receptacle	D21	SFP 8659	Utility Box
C11	SFP 3868	Power Cord, 24"			
	SFP S1500-107	Wiring Duct, 7"			
			Parts Not Shown		
				SFP HC1008	Ignition/Flame Sensor Wire Kit


SURE FLAME


S1505B

Heater Parts

Serial #4278 and Beyond



Item	Part #	Description	Item	Part #	Description
A1	SFP S1505-56	Heater Body (Includes A10 & A11)	C13	SFP S1500-710	Adjusted Air Switch
A2	SFP 2446	Limit Switch, 180F	C14	SFP 1707	Silicone Tube, 3/16"
A3	SFP S1500-104	Control Box Lid	C15	SFP S1500-109	Air Tube
A4	SFP S1500-501	Control Box	C16	SFP 5515	Rubber Grommet
A5	SFP 7723	Control Box Seal	C17	SFP 2554	Compression Fitting, 1/4" Tubex 1/8" MNPT
A6	SFP 2423	Fan Blade	C18	SFP S1500-502	Air Tube Bracket
A7	SFP 9262	Motor, 1HP	C19	SFP 9293	Connector, 1/8" MNPT x .170" HB 90° Elbow
A8	SFP SL11B-53 S	screen	C20	SFP S1500-716	Remote Thermostat Assembly W/Cable
A9	SFP 6119	Wheel	D1	SFP 9264C	Relay Holder Clip
A10	SFP SL11B-13	Nose Cone	D2	SFP 9264	Relay
A11	SFP SL11B-2	Heat Shield	D3	SFP S1500-105	DIN Mounting Rail
B1	SFP BV85-50	Burner	D4	SFP 4655	End Plate for 4668
B2	SFP 2143	Spark Plug	D5	SFP 4668	Ground Terminal Block (gray)
B3	SFP SL11B-86	Flame Rod	D6	SFP 4654	End Plate for 4528
B4	SFP 2539	Manual Shut-Off Valve, 1-1/2"	D7	SFP 4658	Terminal Block 2P+2P (gray)
B5	SFP S1505-81	Gas Selector Valve, 1-1/2"	D8	SFP 4657	End Plate for 4669
B6	SFP 2537	Solenoid Valve, 1-1/2"	D9	SFP 4669	Terminal Block 4P (gray)
B7	SFP 4490	2-Stage Regulator, 1-1/4"	D10	SFP 4527	Fused Terminal Block (gray)
B8	SFP S1500-86	Strainer Assembly, 1-1/4"	D11	SFP 4529	Terminal Block 3P (gray)
B9	ACC 11SV08*	Regulator (optional)	D12	SFP 4524	End Plate for 4529
B10	SFP 4509	Gas Pressure Switch	D13	SFP 4530	Terminal Block 2P (gray)
C1	HWP HC1001D	Flame Controller (Tab 1/4")	D14	SFP 4525	End Plate for 4530
C3	SFP S1500-108	Wiring Duct	D15	SFP 4659	Utility Box
C4	SFP 9612	Start Button Assembly	D16	SFP 9270	Fuse, 2A
C5	SFP S1500-718	Start Contact Block Assembly	D17	SFP 9271	Fuse Holder
C6	SFP 9611	Stop Button Assembly	D18	SFP 4526	End Plate for 4527
C7	SFP S1500-717	Stop Contact Block Assembly	D19	SFP 4622	Jumper 5 Pole
C8	SFP S1500-713	Thermostat Jumper Assembly	D20	SFP 4523	Jumper 2 Pole
C9	SFP 8682	Thermostat Receptacle	D21	SFP 4528	Terminal Block w/Light 2P+2P (red)
C10	SFP 3868	Power Cord, 24"	D22	SFP 4652	Jumper 3 Pole
C11	SFP S1500-107	Wiring Duct, 7"	D23	SFP 9443	Ground Terminal Block (green/yellow)
C12	SFP 5509	Snap Bushing, 1/2"	D24	WR4IEX-60	Ignition Wire
				WR7BAY-66	Flame Rod Wire

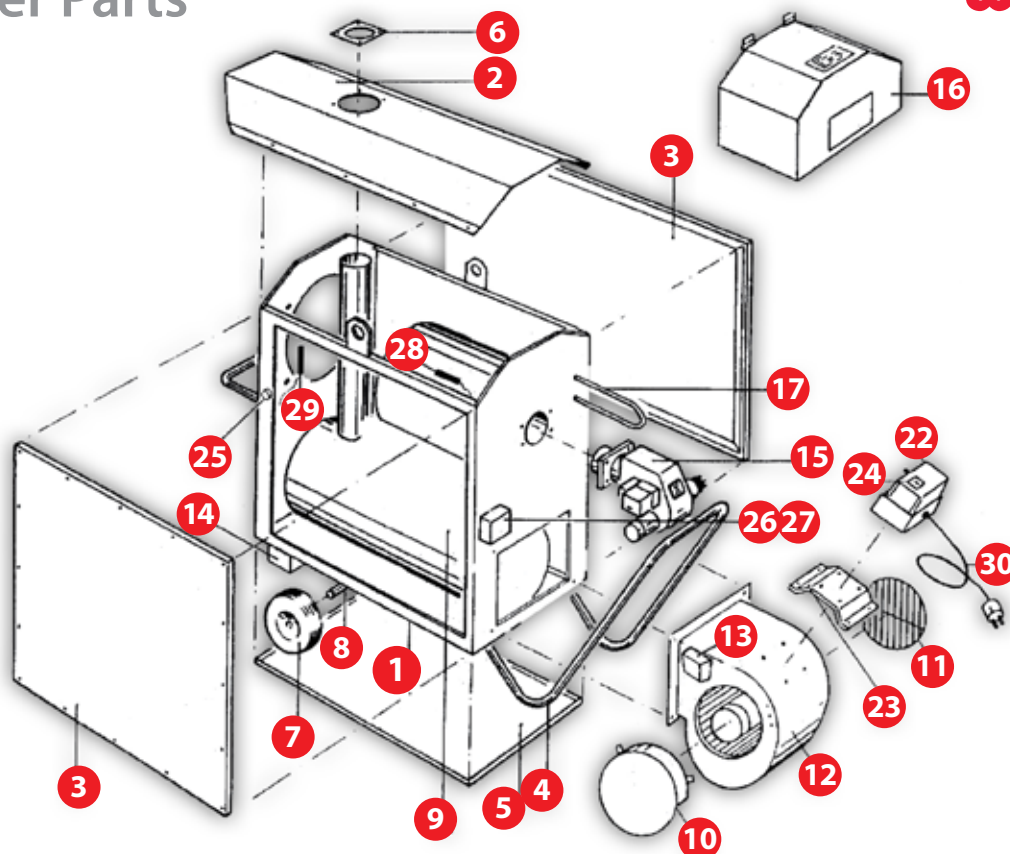
The logo for Heat Wagon, featuring the words "heat" and "wagon" in a bold, lowercase, sans-serif font, with a stylized red flame icon to the right.

Item	Part #	Description	Item	Part #	Description
1	HWP 2709001	HEATER FRAME	28	HWP 20581	FAN SENSOR (FOR POS. #27)
2	HWP 2709002	COVER PLATE	29	HWP 20582	BURNER SENSOR (POS. #27)
3	HWP 2709003	SIDE PANELS (2)	30	HWP HC1020	POWER CORD & PLUG
4	HWP 2709004	REAR HANDLE	NOT SHOWN IN DIAGRAM		
5	HWP 2709005	BOTTOM PLATE		HWP 2709031	RADIATION SHIELD (UPPER)
6	HWP 120001	FLUE COLLAR		HWP 12000	SMOKE FLUE W/RAIN CAP
7	HWP 2701065	WHEEL		HWP 2453	REMOTE THERMOSTAT
8	HWP 2709008	WHEEL SHAFT		HWP 2700428	GASKET FOR BURNER MOUNT
9	HWP 2034100	BURNER CHAMBER ASSEMBLY		HWP 2704085	SILICONE SEAL - 40850 THERM. BOX
11	HWP 2709011	FAN GUARD, RIGHT		HWP 40SV06	OPTIONAL REGULATOR FOR MORE THAN 14"W.C.
12	HWP 2701244	FAN, COMPLETE		HWP 210047	RUBBER EDGE SEAL (SOLD PER FOOT)
13	HWP 40900	FAN CONNECTION BOX			
15	HWP 63956	BURNER VG175			
16	HWP 2709016	BURNER COVER			
22	HWP 41000	MAIN CONTROL BOX			
23	HWP 1709023	BRACKET, MAIN CONTROL BOX			
24	HWP 26400	MAIN SWITCH			
25	HWP 21400	OVERHEAT LIMIT SWITCH (Capillary)			
26	HWP 40850	THERMOSTAT BOX			
27	HWP 20579	HEATER CONTROL UNIT			



VG400

Heater Parts

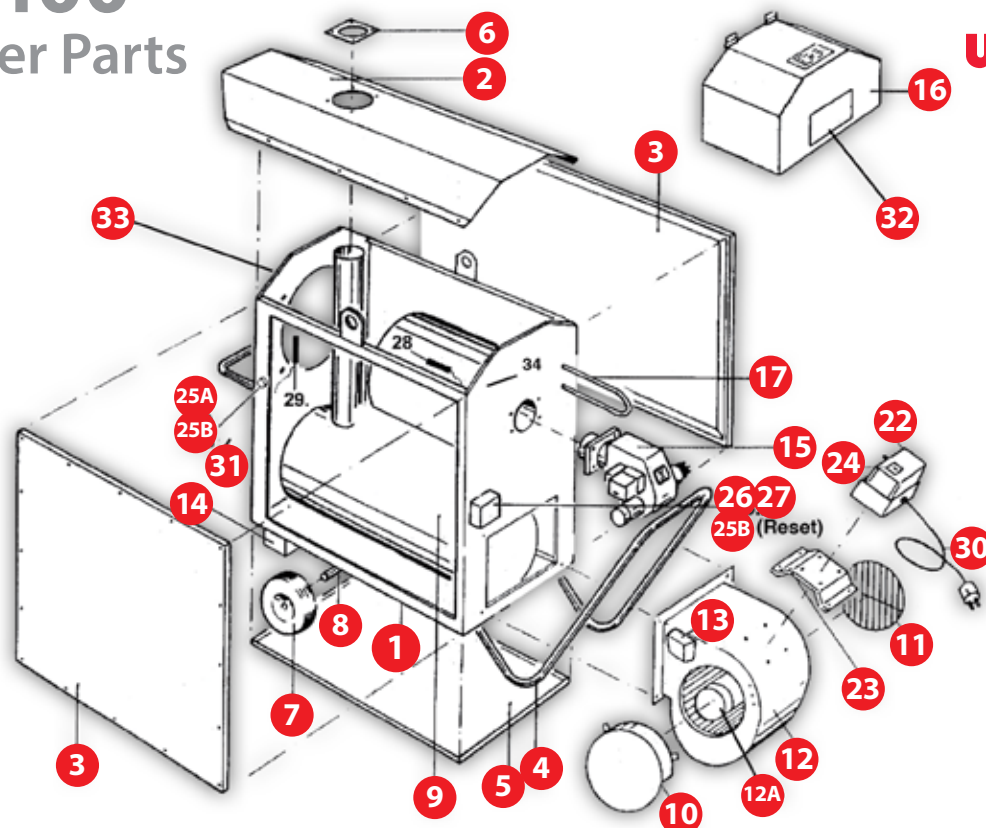

Item	Part #	Description
1	HWP 2109001	HEATER FRAME
2	HWP 2109002	COVER PLATE
3	HWP 2109003	SIDE PANELS (2)
4	HWP 2109004	REAR HANDLE
5	HWP 2109005	BOTTOM PLATE
6	HWP 2109006	FLUE COLLAR
7	HWP HW1065	WHEEL
8	HWP 2109008	WHEEL SHAFT
9	HWP 2109009	BURNER CHAMBER ASSEMBLY
10, 11	HWP 2109010	FAN GUARD
12	HWP 12440	FAN
12A	HWP SP12440	BLOWER MOTOR
13	HWP 40900	FAN CONNECTION BOX
14	HWP 2109014	FORKLIFT EYE
15	HWP 120008B	BURNER VG400
16	HWP 2109016	BURNER COVER
17	HWP 211153	OIL PREHEAT COIL
22	HWP 41000	MAIN CONTROL BOX
23	HWP 2109023	BRACKET, MAIN CONTROL BOX
24	HWP 26400	MAIN SWITCH
25A	HWP 180030	OVERHEAT LIMIT SWITCH (bimetallic) Obsolete
25B	HWP 21400**	OVERHEAT LIMIT (CAPILLARY)
26	HWP 40850	THERMOSTAT BOX
27	HWP 20579	HEATER CONTROL UNIT
28A	HWP 20581	FAN SENSOR (4" SENSOR)
28B	HWP 20583	FAN SENSOR (9" SENSOR)

Item	Part #	Description
30	HWP HC1020	POWER CORD & PLUG
31	HWP 36811	RUBBER GROMMET
32	HWP 210938	PLASTIC WINDOW W/BRACKET
33	HWP 2109037	12" BLACK OUTLET ADAPTER

NOT SHOWN IN DIAGRAM


HWP 2436	CONTACTOR
HWP 46950	CAPACITOR, FAN MOTOR
HWP 80200	BURNER COVER LATCH
HWP 2109031	RADIATION SHIELD (UPPER)
HWP 12000	SMOKE FLUE W/RAIN CAP
HPW 2109033	RADIATION SHIELD (SIDE)
HWP 2453	REMOTE THERMOSTAT (w/o cord)
HWP 100428	GASKET FOR 120008 OR 120008B
HWP 21724011	FLANGE ADJ. FOR 120008 OR 12008B
HWP 62438008	L.P. ORIFACE (.332)
HWP 62438011	NATURAL GAS ORIFACE (.468)
HWP 40850SS	SILICONE SEAL - 40850 THERM. BOX
ACC 40SV06	OPTIONAL REGULATOR FOR MORE THAN 14"W.C.
HWP 210047	RUBBER EDGE SEAL (SOLD PER FOOT) (30 FEET PER HEATER)
HWP 2109034	WIRE HARNESS
DKV400	DECAL KIT
86800	SILICONE SLEEVE (sold in 4ft. sections)

**Note: Overheat limit switch - New design (capillary tube)
S/N M2728-2746, M4769 and greater



VG400

Wayne Burner

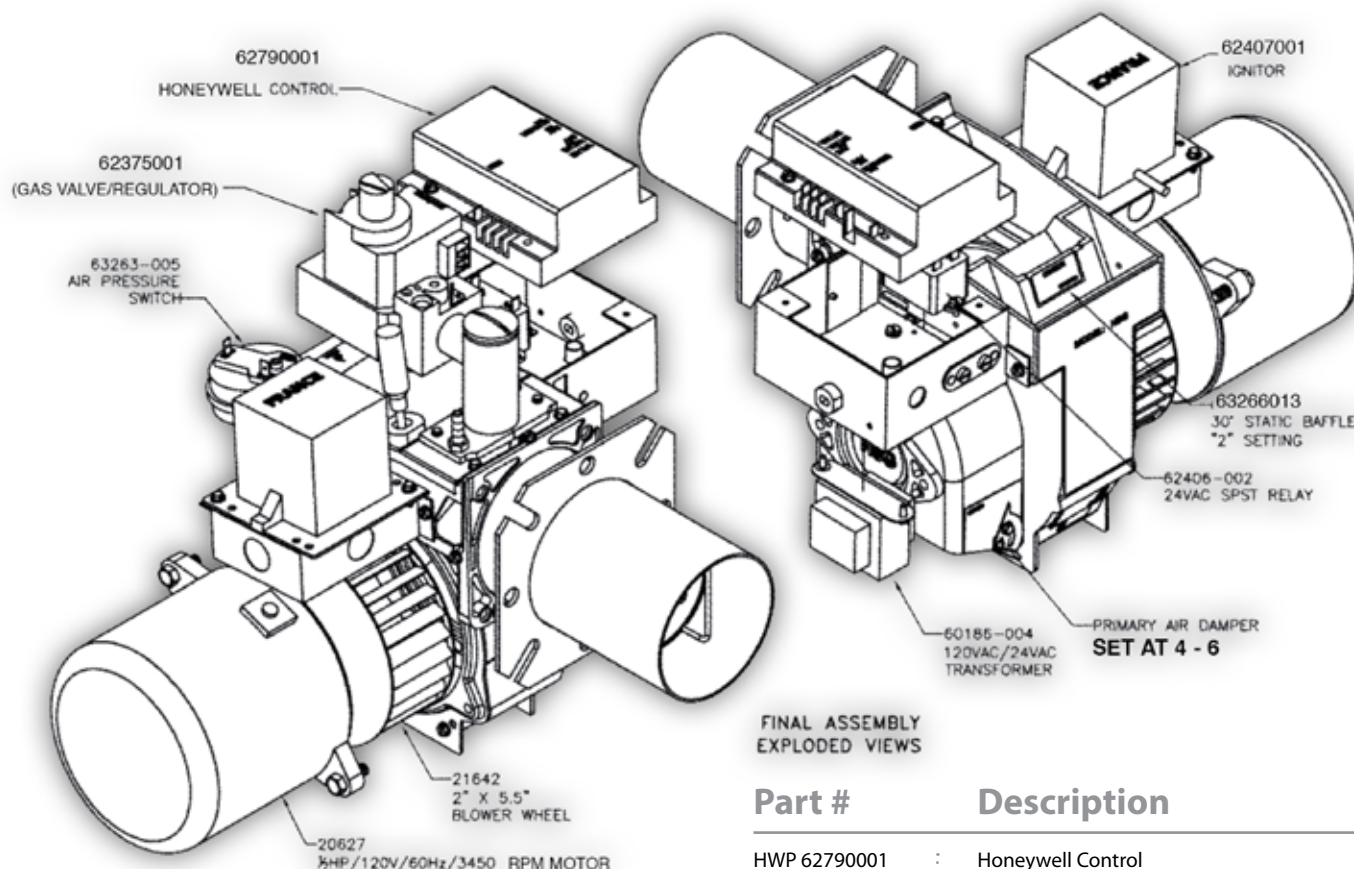

FINAL ASSEMBLY
EXPLODED VIEWS

Part



Description

HWP 62790001	Honeywell Control
HWP 62375001	Combination Valve \$210.00
HWP 63263-005	Air Pressure Switch \$35.00
HWP 21642	2" x 5.5" Blower Wheel \$51.00
HWP 20627	1/7 HP, 3450 RPM Motor \$180.00
HWP 62407001	Igniter \$180.00
HWP 63266013	30" Static Baffle, "2" Setting \$4.34
HWP 62406001	24 VAC SPST Relay \$40.00
HWP 60186-004	120 VAC/24VAC Transformer \$30.00
HWP 62391002	Electrode \$20.00
HWP 62387001	Electrode Sleeves (Qty 2) \$3.50
HWP 62390002	Flame Sensor \$25.00
HWP 62402001	Orifice Housing \$70.00
HWP 6257500	Burner Manifold \$200.00
HWP 624385001	Orifice Cap \$14.45
HWP 62401001	Orifice Cap Gasket \$2.00
HWP 62410001	Orifice Spring \$2.00
HWP 62438008	.332 Propane Orifice \$6.00
HWP 62438011	.468 Nat Gas Orifice \$6.00
HWP 62404002	Top Plate Housing Cover \$30.00
HWP 62909001	Ignition Wire \$14.74
HWP HC1006	Flame Sensor Wire \$10.00
HWP 100968-002	Barb Hose Fitting for Air Switch \$10.00



VG400

Gas Train Assembly

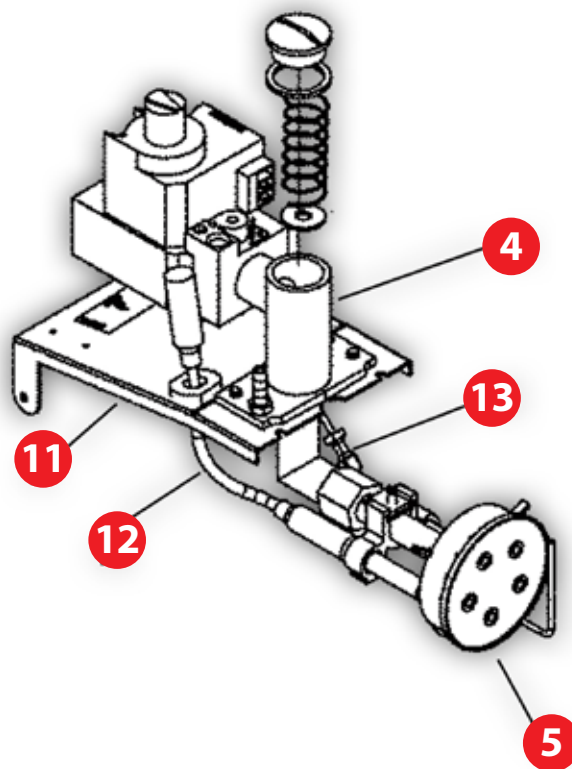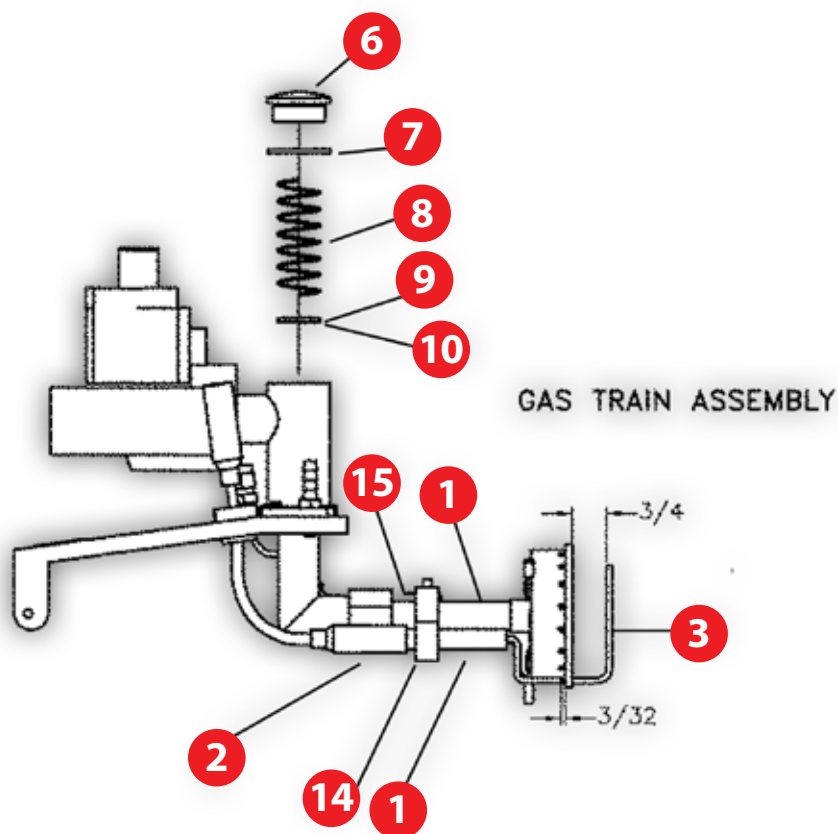


Item	Part #	Description
1	HWP 62391002	ELECTRODE
2	HWP 62387001	ELECTRODE SLEEVES (QTY 2)
3	HWP 62390002	FLAME SENSOR
4	HWP 62402001	ORIFICE HOUSING
5	HWP 62575001	BURNER MANIFOLD
6	HWP 624385001	ORIFICE CAP
7	HWP 62401001	ORIFICE CAP GASKET
8	HWP 62410001	ORIFICE SPRING
9	HWP 62438008	.332 PROPANE ORIFICE
10	HWP 62438011	.468 NAT GAS ORIFICE
11	HWP 62404002	TOP PLATE HOUSING COVER
12	HWP 62909001	IGNITION WIRE
13	HWP HC1006	FLAME SENSOR WIRE
14	HWP 61951001	ELECTRODE BRACKET
15	HWP 62419001	CLIP (Included w/bracket)



VG500

Heater Parts

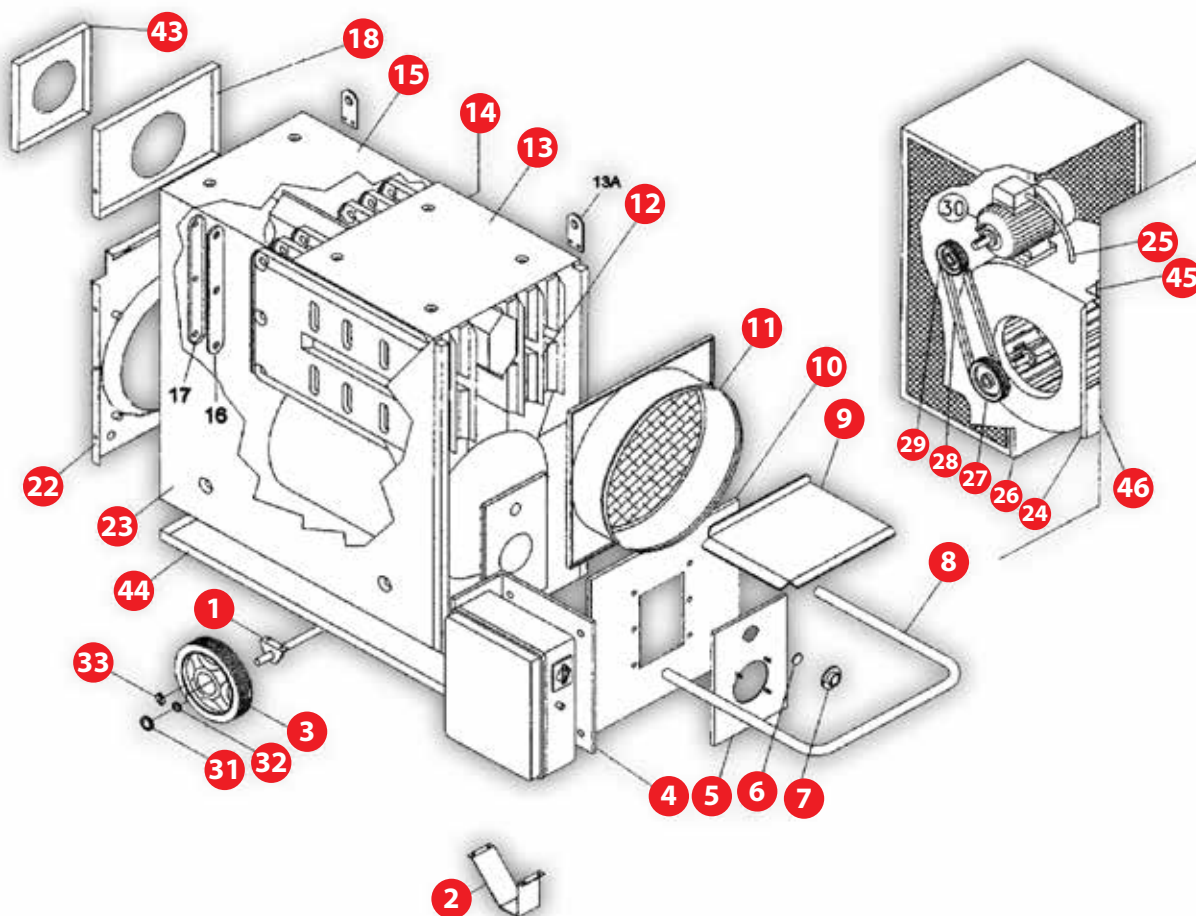


Item	Part #	Description	Item	Part #	Description
1	ASSALEG#HELM3	AXLE	25	1039044800	MOTOR SUPPLY CABLE
2	PIEGEG#HELG1	FOOT	26	1094177035	CAGE
3	1004001680	WHEEL	27	1099003235	DRIVING PULLEY
4	1094148035	SUPPORT PANEL	28	20020016	BELT \$36.00
5	PANNELLO#FBR40236	BURNER PANEL	29	1099001035	DRIVEN PULLEY
6	D001806011	INSPECTION GLASS	30	1040014535	MOTOR \$875.00
7	-	BURNER	31	1005002280	WHEEL CAP \$2.00
8	MANT#HELM120	HANDLE	32	1022000200	SEEGER RING \$1.50
9	PANNELLO#RBR40220	BURNER COVER	43	PANNELLO#COC10536	FLUE PANEL
10	PANEST#FIN14536	FRONT LOWER PANEL	44	PANINF#143	LOWER BASE PANEL
11	1094096135	AIR OUTLET PANEL	45	1094036835	CORNER PLATE
12	CAMERHE#145	HEAT EXCHANGER ASMY.	46	1099002235	FLANGE
13	PANEST#SAN14536	UPPER FRONT PANEL			
14	PANEST#LSX14336	LEFT SIDE PANEL			
15	PANEST#SPO14536	UPPER REAR PANEL			
16	1051001735	GASKET			
17	1094018435	INSPECTION COVER			
18	PANEST#USF14536	EXHAUST PANEL			
23	PANEST#LDX14336	RIGHT SIDE PANEL			
24	1087003035	CENTRIFUGAL FAN			




VG500


Electric Box

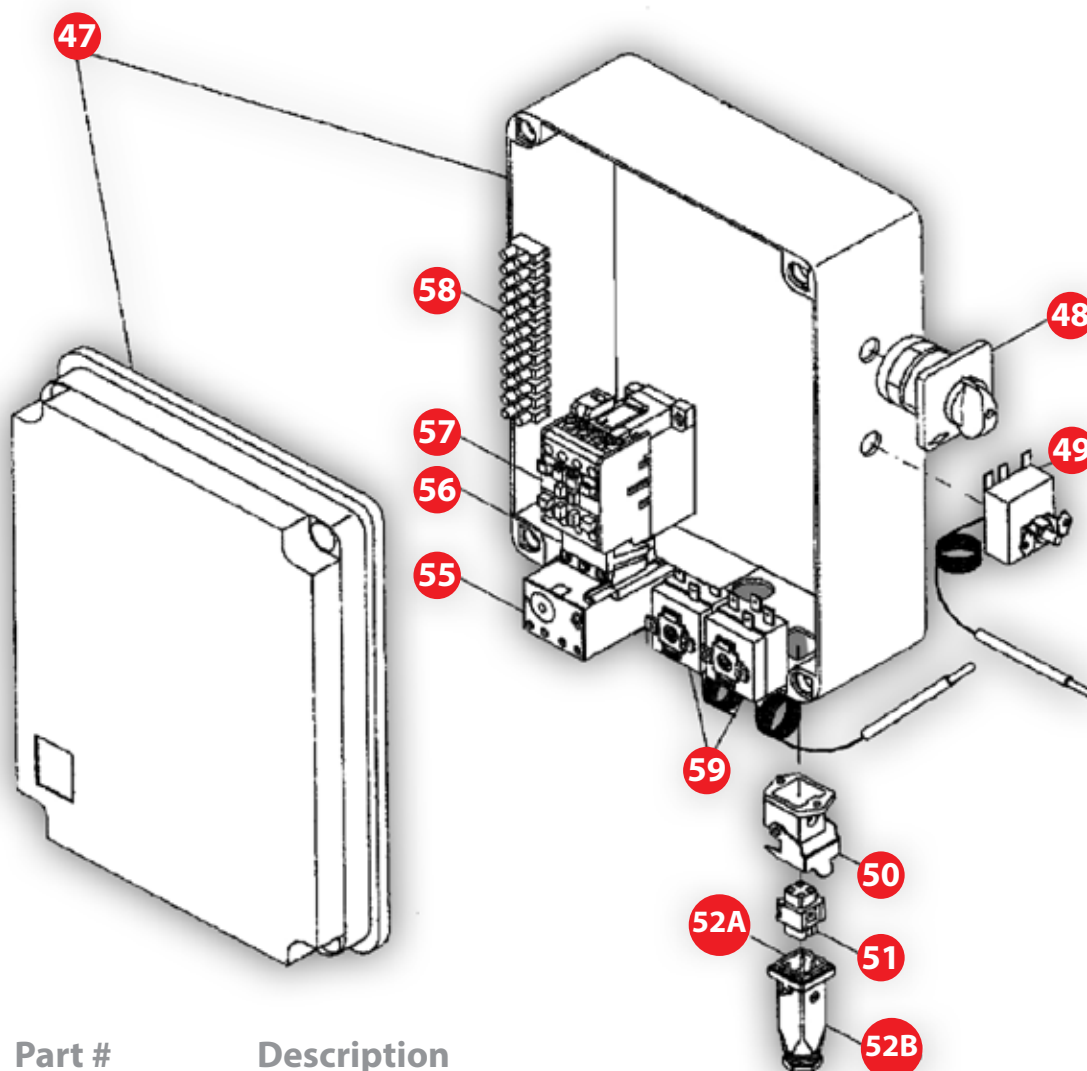

Item	Part #	Description
47	1048001035	ELECTRICAL BOX
48	1032003035	3-POSITION SWITCH
49	1036001500	OVERHEAT LIMIT SWITCH
50	1043000600	THERMOSTAT SOCKET
51	1043000400	THERMOSTAT SOCKET
52A	1043000500	THERMOSTAT PLUG
52B	1043000700	THERMOSTAT PLUG
55	1032006135	THERMAL OVERLOAD RELAY
56	1052007400	CONNECTOR
57	20370005	MOTOR RELAY
58	20340002	TERMINAL BOARD
59	1036001335	FAN/LIMIT SWITCH
	1105015355	RESET BUTTON LABEL
	1105121000	HOT SURFACE LABEL
	1105055955	FAN ROTATION LABEL

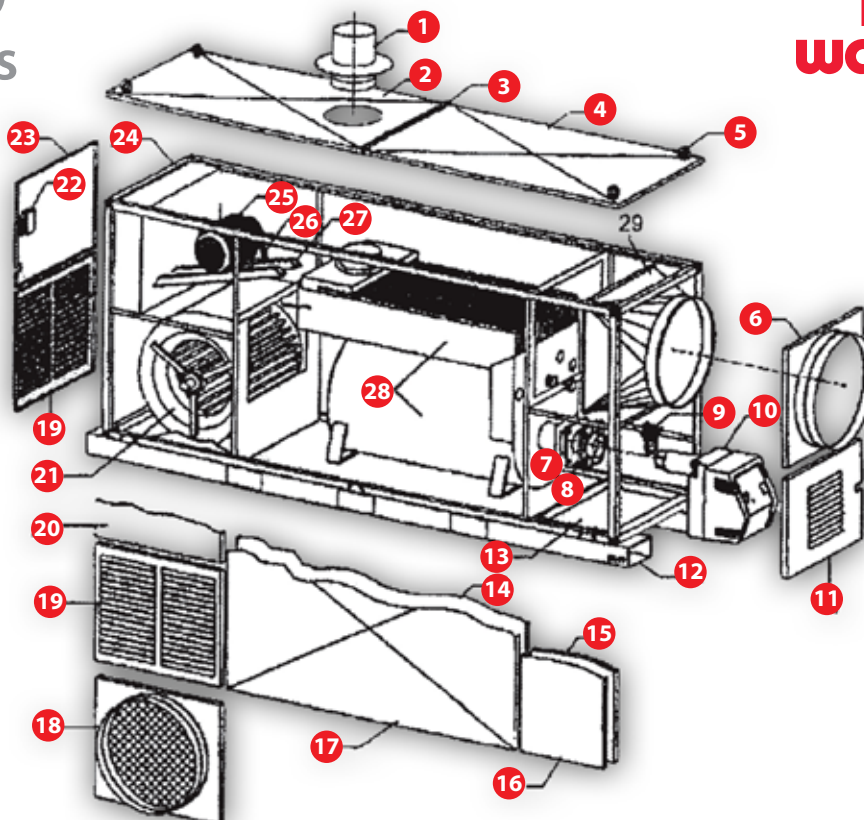The logo for Heat Wagon, featuring the words "heat" and "wagon" in a bold, lowercase, sans-serif font, with a stylized red flame icon to the right.

Item	Part #	Description	Item	Part #	Description
1	HWP 214401	Flue Gas Adapter	23	HWP 214423	Control Compartment Door
2	HWP 214402	Cover Plate, Rear	24	HWP 214424	Main Control Box
3	HWP 214403	Connecting Profile	25	HWP SM6162	Fan Motor
4	HWP 214404	Cover Plate, Front	26	HWP A68	V-Belt (2 Required)
5	HWP 214405	Crane Eye (4)	27	HWP 214427	Guide Rail (2 Required)
6	HWP 214406	Air Outlet Adapter	28	HWP 214428	Combustion Chamber &
7	HWP 20529	Flange Seal			Heat Exchanger
8	HWP 20471	Oil Burner Flange	29	HWP 214429	Air Outlet Cone
9	HWP 110121	Fuel Filter	Not Shown		
10	HWP 110008	Oil Burner			
	HWP 110008B	Gas Burner		HWP 214430	Top Radiation Shield
11	HWP 214411	Burner Compartment Door(Wayne)		HWP 214432	Revision Cover
12	HWP 214412	Base		HWP 86250F	Gasket for Revision Cover
13	HWP 214413	Oil Collector		HWP 214434	Flue Gas Suppressors
14	HWP 214414	Insulation, Center (left/right)		HWP 214435	Drive Pulley, Fan
15	HWP 214415	Insulation, Burner End (left/right)		HWP 214500	Centrifical Clutch/Motor Sheave Kit \$
16	HWP 214416	Side Panel, Burner End		HWP 214501	11-3/8" Fan Sheave
		(2, with louvres)		HWP 214502	Sheave Bushing Fan
17	HWP 214417	Side Panel, Center (left/right)	HWP 3070	Heat Wagon Logo Decal	
18	HWP 214418	Air Inlet Adapter	HWP 214490	Smoke Flue w/Raincap	
		(1, left/right/right options)	HWP 842920	Cover for Honeywell Flame	
19	HWP 214419	Louvre Panel, Fan End		Safeguard Control	
		(2, left/right/right options)	HWP 86250F	Fiberglass Gasket Material (7.5')	
20	HWP 214420	Upper Side Panel, Fan End (2)	HWP 20529	Burner Gasket	
21	HWP 214421	Radial Fan			
22	HWP 214422	Door Belt			

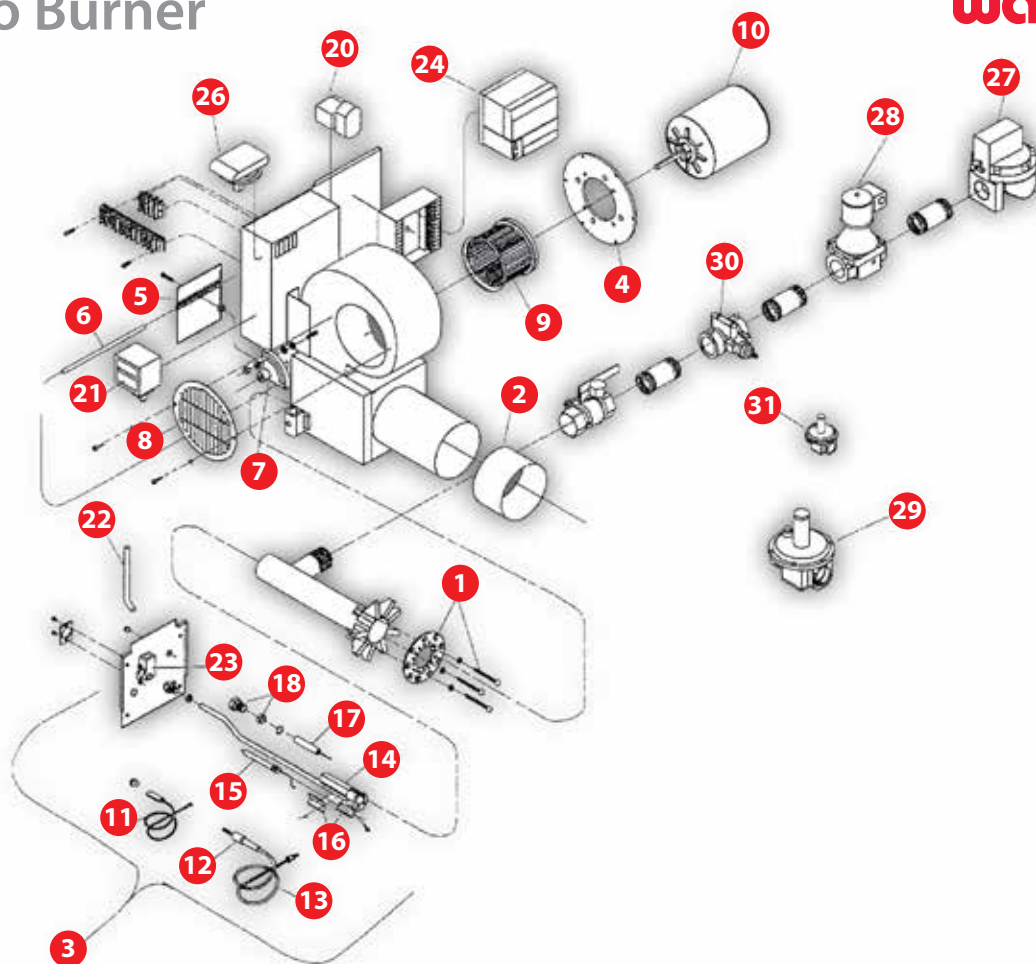
The logo for Heat Wagon, featuring the words "heat" and "wagon" in a bold, lowercase, sans-serif font, with a stylized red flame icon to the right.

Item	Part #	Description	Item	Part #	Description
1	HWP 6712-05	Flame retention plate with mounting	19	HWP 8432-07	Spark rod retainer O-ring
2	HWP 6736-00	Adj. alloy sleeve	20	HWP 8402-00	Gas safety shut-off valve - 1/8" NPT
3	HWP 6755-10	Drawer assembly with pilot and vent tube	21	HWP 8447-22	Ignition trans 120/1/60
4	HWP 3197-50	Motor mounting plate	22	HWP 6729-91	Pilot air tube blower housing
5	HWP 3246-08	Air shutter	23	HWP 6772-08	Nat. G58 gas #55 Dr. (.052), air #26 Dr. (.147)
6	HWP 6734-00	Air shutter shaft		HWP 6772-09	Prop G58 gas #56 Dr. (.046), air #26 Dr. (.147)
7	HWP 3152-01	Quadrant - for air shutter adjustment	24	HWP 842919	RM7895A Controller
8	HWP 6724-10	Blower inlet screen	25	HWP 842916	O7800 sub-base
9	HWP 3627-50	G58 & G69-7" diameter x 3-1/2" wide	26	HWP 8425-19	Blower air switch
10	HWP 8437-15	G58-1/2 HP 115/230/1/60	27	HWP 841821	1" diaphragm valve
11	HWP 6717-90	Flamerod wire replacement kit	28	HWP 8418-03	1-1/4" safety valve
12	HWP 8409-10	Silicone boot	29	HWP 8416-02	RV61 1-1/4" Maxitrol gas pressure regulator
13	HWP 8502-05	Spark cable	30	HWP 2933-50	On/off butterfly valve
14	HWP 6725-90	Pilot with flamerod and spark rod	31	HWP 8400-10	Pilot pressure regulator
15	HWP 671700	Flamerod and insulator assembly			
16	HWP 6720-90	Mounting clamp for flamerod assembly		Not Shown	
17	HWP 672550	Spark rod and insulator assembly		HWP HV1169	Gauge 15"W.C. Low Pressure (2)
18	HWP 676400	Spark rod retainer assembly w/O-ring seal		HWP 5616-90	Strain relief bushing for spark cable



VG1000

Wayne Burner

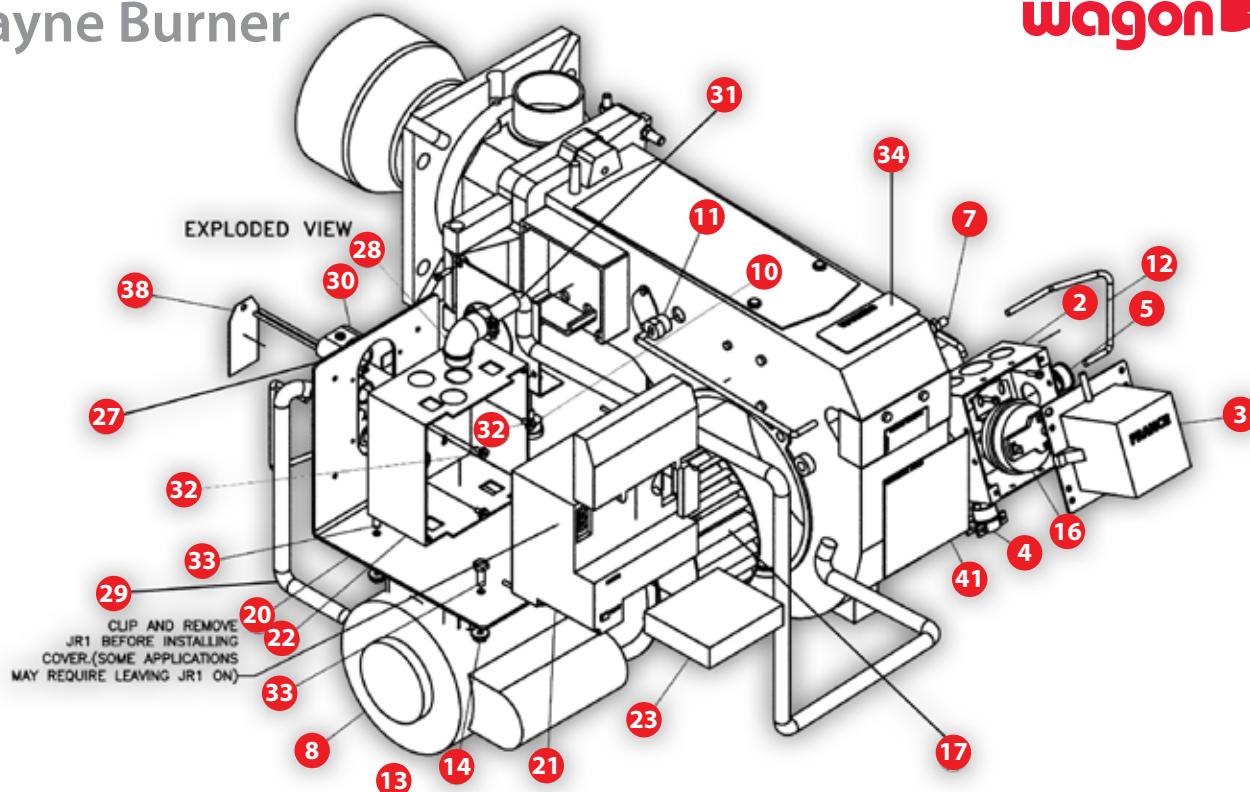


Item	Part #	Description	Item	Part #	Description
1	HWP 63587-001	Housing LC1000 Base Burner	29	HWP 100196-019	Conduit, Flex 3/8" x 12
2	HWP 20370-004	Box, Junction Deep Mach	30	HWP 14429	Connector, Conduit Duplex
3	HWP 62407001	Igniter, Transformer 120V	31	HWP 100196-016	Conduit, Flex 3/8" x 19.50
4	HWP 13801	Fitting, Conduit 3/8	32	HWP 15731	Screw, 6-32 Hexslt
5	HWP 13034	Bushing, Snap	33	HWP 18001	Screw, 1/4-20 x .75
6	HWP 63747-001	Fitting, Adapter	34	HWP 62960-001	Decal, Carbon Dioxide Warning
7	HWP 550052	Fitting, Hose	35	HWP 63538-001	Decal, Pressure Regulator
8	HWP 63599-001	Motor, 1/2HP 120V	36	HWP 100010	Decal, Wayne Logo
9	HWP 63593-001	Plate, Sense Bushing	37	HWP 101267-001	Decal, Wayne Logo
10	HWP 62389-002	Bushing, Terminal	38	HWP 61756-002	Tag, Wiring Supply
11	HWP 13026	Bushing, Strain Relief	39	HWP 63528-003	Decal, Connect To Gas Train
12	HWP 100985-003	Tube, Clear Vinyl 1/4 x 9.5	40	HWP 63528-004	Decal, Connect to 120V
13	HWP 62909-004	Wire, Ignition	41	HWP 63748-XXX	Decal, Rating
14	HWP 100408-002	Nut, Lock 1/4 - 20 HXSR	42	HWP 63749-001	Decal, Nighthawk
15	HWP HC1006	Wire, Sense Electrode (not shown)			
16	HWP 63263-005	Switch, Air Sensing		Not Shown	
17	HWP 63800001	Blower Wheel		HWP HV1169	Gauge 15"W.C. Low Pressure (2)
20	HWP 63769-001	Bracket, Control Mounting "L"		HWP 63804	Electrode
21	HWP 842919	Primary Control		HWP 63805	Flame Sensor
22	HWP 63771-001	Wiring Subbase		HWP 63262004	Regulator, Gas Pressure
23	HWP 842927	Amplifier, Flame		HWP 63513001A	Switch, Gas Pressure Low \$
24	HWP 74689	Timer, Purge		HWP 63513002A	Switch, Gas Pressure High
25	HWP 63497-003	Wire, Control Sense		HWP 63756-001	Valve, Manual Ball 1-1/4"
26	HWP 31954-001	Strain Relief, Low Profile		HWP 63759-001	Valve, Gas Safety Sutoff 1-1/4"
27	HWP 13801-002	Fitting, Conduit			
28	HWP 15323	Connector, Conduit			



VG1000

Control Box

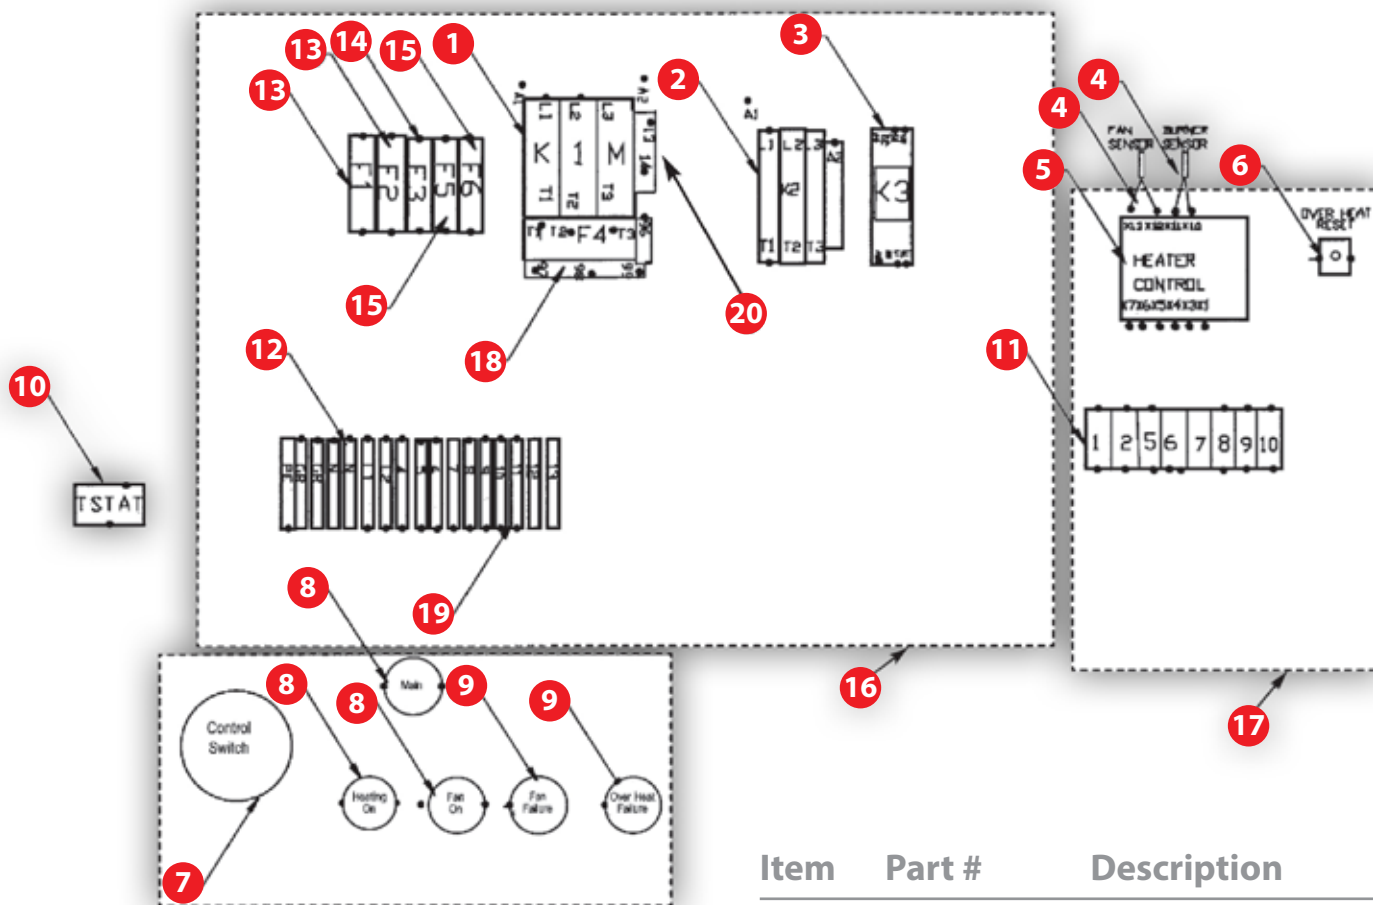


Item	Part #	Description
1	HWP 23000	Motor Contactor (K1M)
2	HWP 22700	Burner Contactor (K2)
3	HWP 25700	Control Relay (K3)
4	HWP 20581	Fan and Burner Sensor
5	HWP 20579	Heater Control Unit
6	HWP 21400	Over Heat Reset
7	HWP 120021	Control Switch
8	HWP 44120	Light Green
9	HWP 44110	Light Red
10	HWP 2453	Thermostat
11	HWP 180023	Terminal Block (Heater Control)
12	HWP 36609	Terminal Block (Control Box) 6mm
13	HWP 38107	Circuit Breaker 32 Amp (F1 - F2)
14	HWP 38105	Circuit Breaker 20 Amp (F3)
15	HWP 38090	Circuit Breaker 6 Amp (F5-F6)
16	HWP 40500	Main Control Box (Box Only)
17	HWP 210080	Thermostat Box (Box Only)
18	HWP 38209	Thermal Relay (F4)
19	HWP 36610	Terminal Block (Control Box 4mm)
20	HWP 22211	Aux Contact



S1500 & SL11B

Heater Parts (6-95)

SURE FLAME

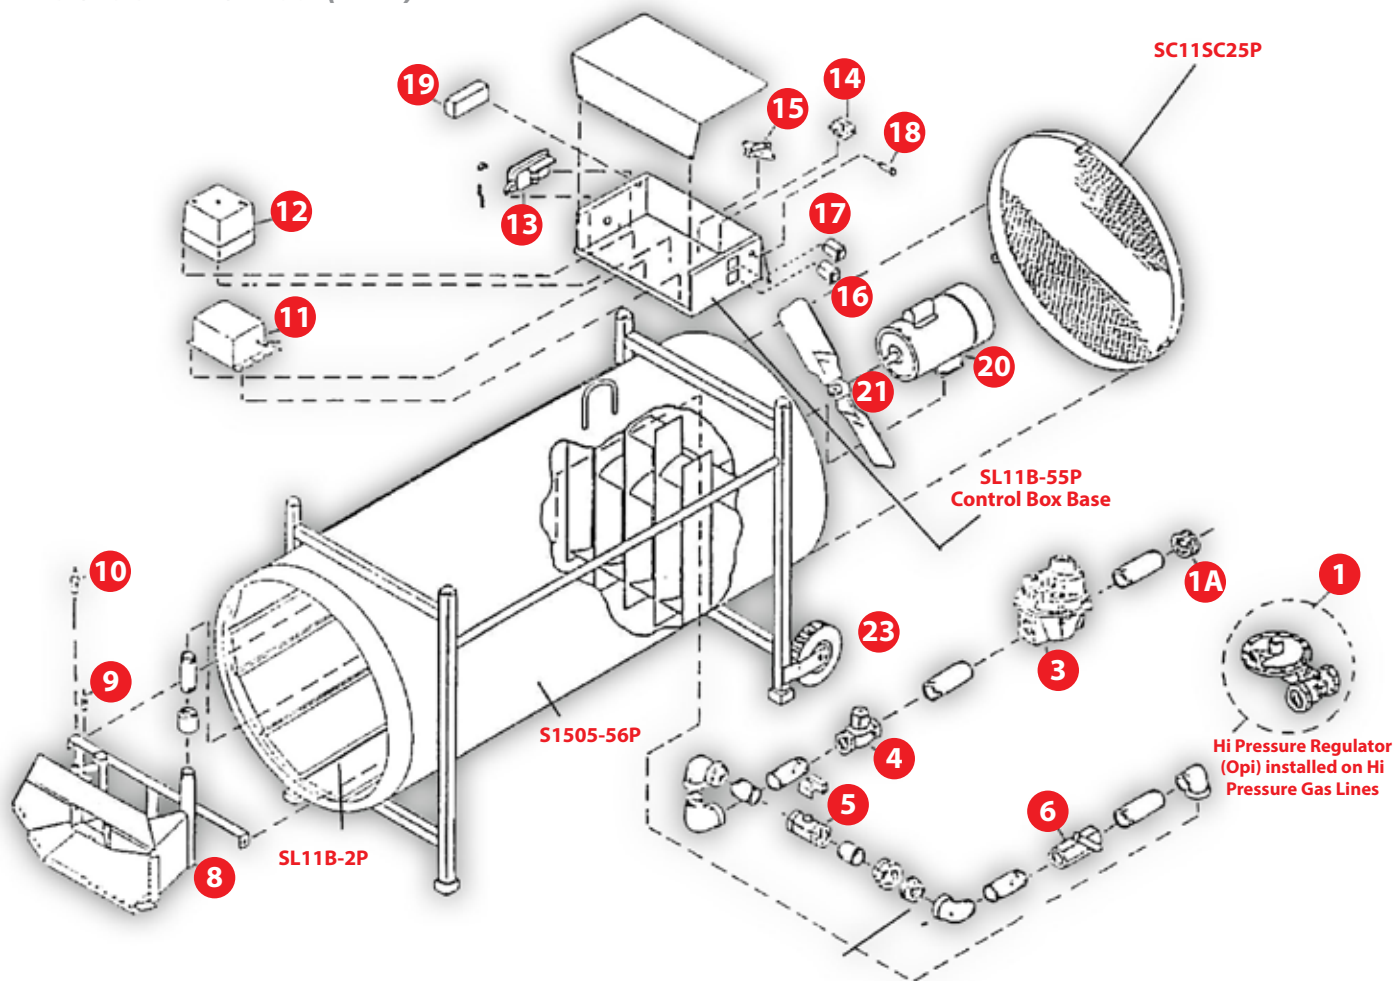

Valve Train

Item	Part #	Description
1	11SV08	1# Press Regulator (Optional)
1A	S1500-83	1.25" Strainer
	20SV03	Hi-Low Solenoid Valve (S1500)
3	2526	Low Pressure Regulator
4	2537	Solenoid Valve (Both)
5	11SV06	Gas Selector Valve
6	2539	Manual Shut-off Valve

Burner Section

Item	Part #	Description
8	11SV08	1# Press Regulator (Optional)
9	S1500-83	1.25" Strainer
10	20SV03	Hi-Low Solenoid Valve (S1500)

Control Box

Item	Part #	Description
11	2501	Ignition Transformer
12	2438	Flame Safeguard Control
13	5124	Air Switch
14	2436	Motor Relay
15	2446	Hi Limit Theroswitch
16	3337G	Start Switch (Green)
17	3337R	Stop Switch (Red)
18	2505	Indicator Light


Blower

Item	Part #	Description
20	HM1166	1 HP Electric Motor
21	2423	Fan Blade
23	HW1164	Wheel



S100

Heater Parts

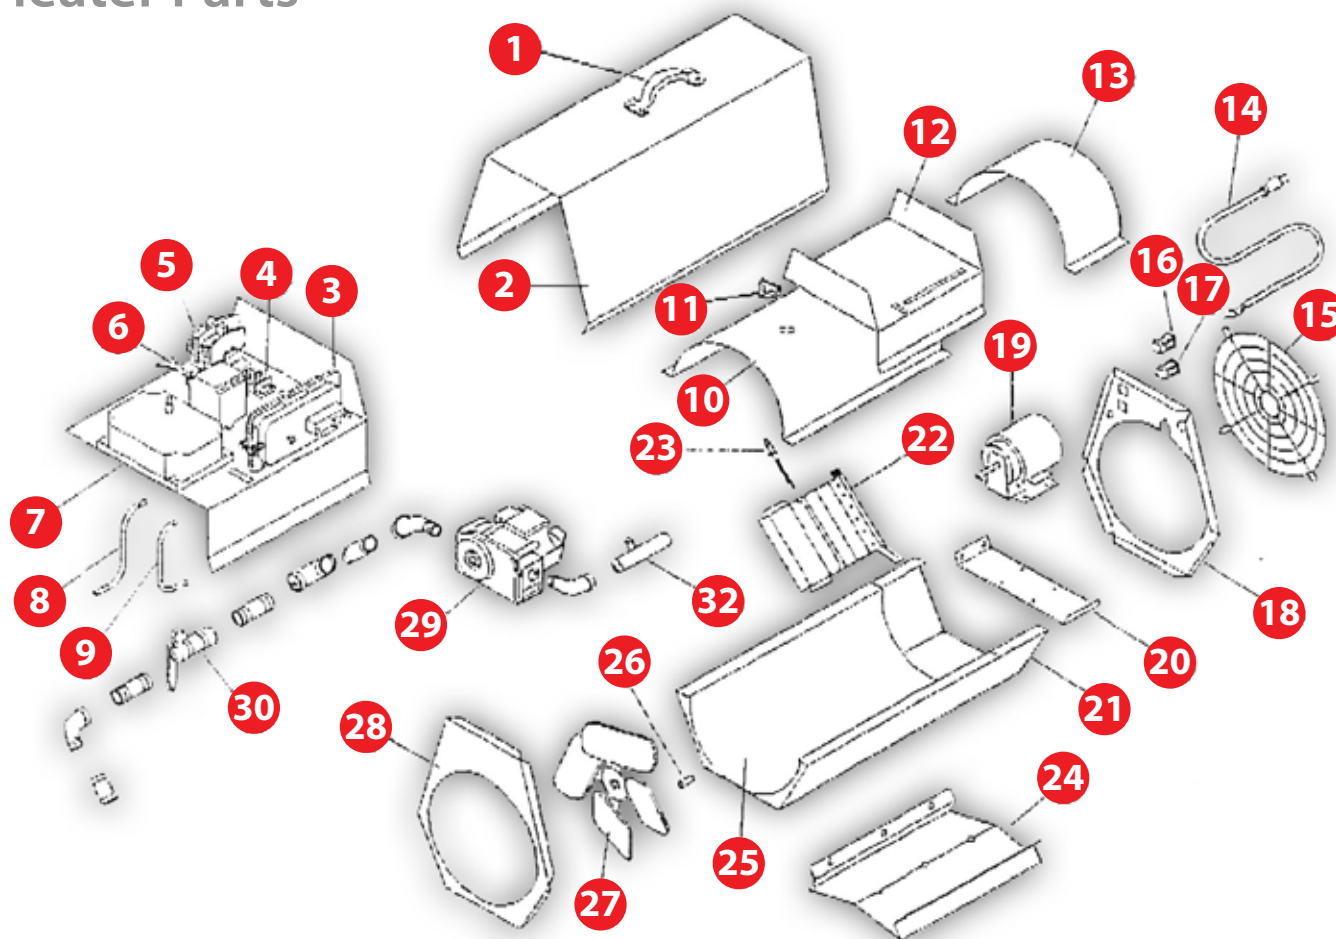SURE FLAME

S100

Item	Part #	Description
1	SFP 6897	HANDLE
2	SFP S100-101	Top Shell
3	SFP 5124	Air Switch (0.2" W.C.)
4	SFP 5768	Terminal Block
5	SFP 4519	Motor Relay 24V
6	SFP 4511	Transformer 24V
7	SFP 8264	Direct Spark ignition control
8	SFP S100-716	Downstream Airtube "S"
9	SFP S100-715	Upstream Airtube "C"
10	SFP S100-115	Front Top Heat Shield
11	SFP 2446	Hi Limit Thermoswitch
12	SFP S100-110	Control Box
13	SFP S100-116	Top Rear Heat Shield
14	SFP 3868	24" Power Cord
15	SFP S100-717	S100 Fan Guard



Item	Part #	Description
16	SFP 3337/8	Off switch (red)
17	SFP 3337/9	On switch (green)
18	SFP S100-106	Rear End Panel
19	SFP 6892	1/8 HP motor
20	SFP S100-107	Motor Mount
21	SFP S100-102	Bottom Shell
22	SFP BV2-502	BURNER
23	SFP 6894	Triple Electrode
24	SFP S100-109	Base
25	SFP S100-103	Bottom Heat Shield
26	SFP 6901	Shaft Adapter
27	SFP 2419	Fan Blade
28	SFP S100-105	Front End Panel
29	SFP 6895	Gas Valve
30	SFP S100-707	Changeover Valve



SE405

Heater Parts

SURE FLAME

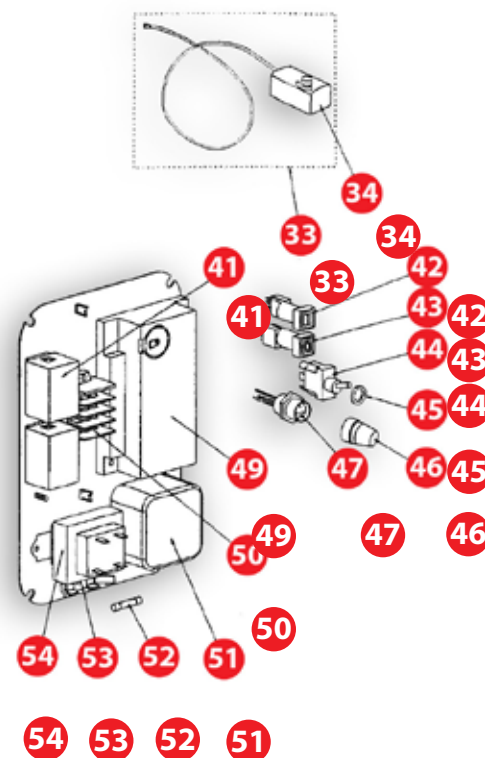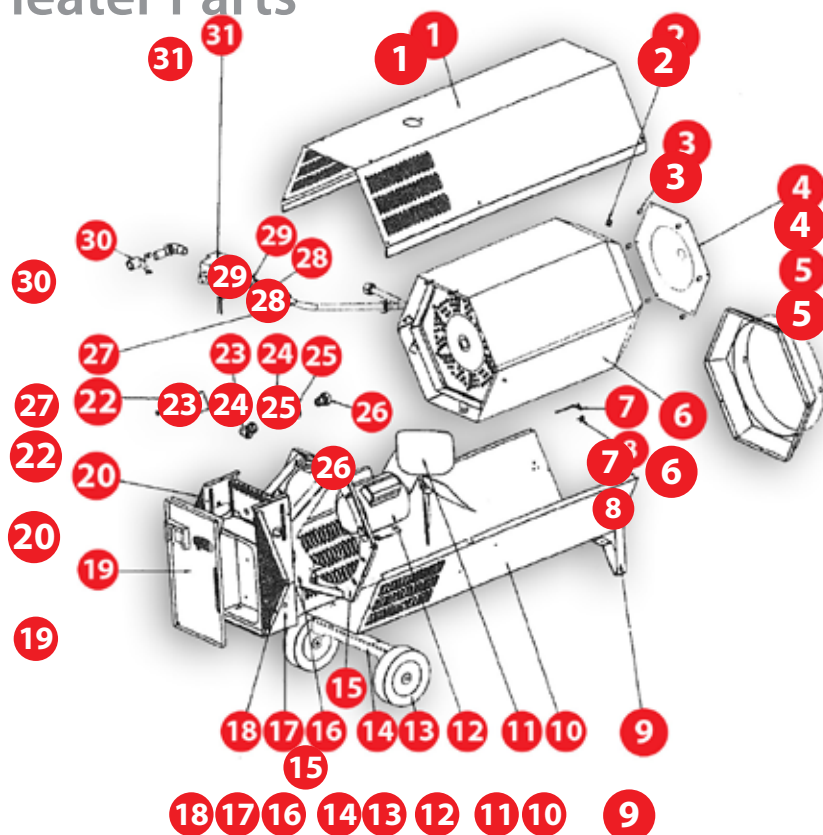

SE405


Item	Part #	Description
1	SFP SE-4091	Top Cover
2	SFP 9843	Limit Switch
3	SFP 7780	Nose Cone Spacer
4	SFP SE-4018	Nose Cone
5	SFP SE-4506	Duct Adapter
6	SFP SE-4507	Cumbustion Chamber
7	SFP SE-4109	Copper Air Tube
8	SFP 7379	Tubing Clamp
9	SFP SE-4027	Front Leg
10	SFP SE-4090	Bottom Panel
11	SFP 2421	Fan Blade
12	SFP 9827	MOTOR
13	SFP 6119	Semi-Pneumatic Wheel
14	SFP SE-4511	Wheel Bracket
15	SFP SE-4093	Semi-Pneumatic Wheel
16	SFP SE-4509	Motor Mount
17	SFP SE-4508	Control Box
18	SFP SE-4076	Right Inlet Panel
19	SFP SE-4512	Control Box Lid
20	SFP SE-4070	Left Inlet Panel
22	SFP 9829	Electrode Assembly
23	SFP 9833	Flare Elbow

Item	Part #	Description
24	SFP 9832	Bowed Snap Ring
25	SFP SE-4078	Burner Washer
26	SFP 9831	Burner Head
27	SFP SE-4712	Gas Line Assembly
28	SFP 9834	Flare Adapter
29	SFP SE-4718	Gas Selector Valve with Handle
30	SFP SE-4510	Inlet Coupling
31	SFP 9830	Gas Valve
33	SFP SE-4715	Thermostat Assembly w/cord
34	SFP 2453	Thermostat
41	SFP 9872	Relay
42	SFP 9879	Start Switch
43	SFP 9880	Stop Switch
44	SFP 9881	Heat/ Fan Switch
45	SFP 9882	Switch Gasket
46	SFP SE-4716	Thermostat Jumper Plug
47	SFP WRS-163	Thermostat Receptacle
49	SFP 9828	Flame Control
50	SFP 9823	Terminal Block
51	SFP SE-4719	Airi Switch
52	SFP 9884	Fuse, 2A/250V, Fast Acting 3AG
53	SFP 9883	Fuse Holder
54	SFP 4510	24V/ 40VA transformer



i36 Air Mover

Heater Parts

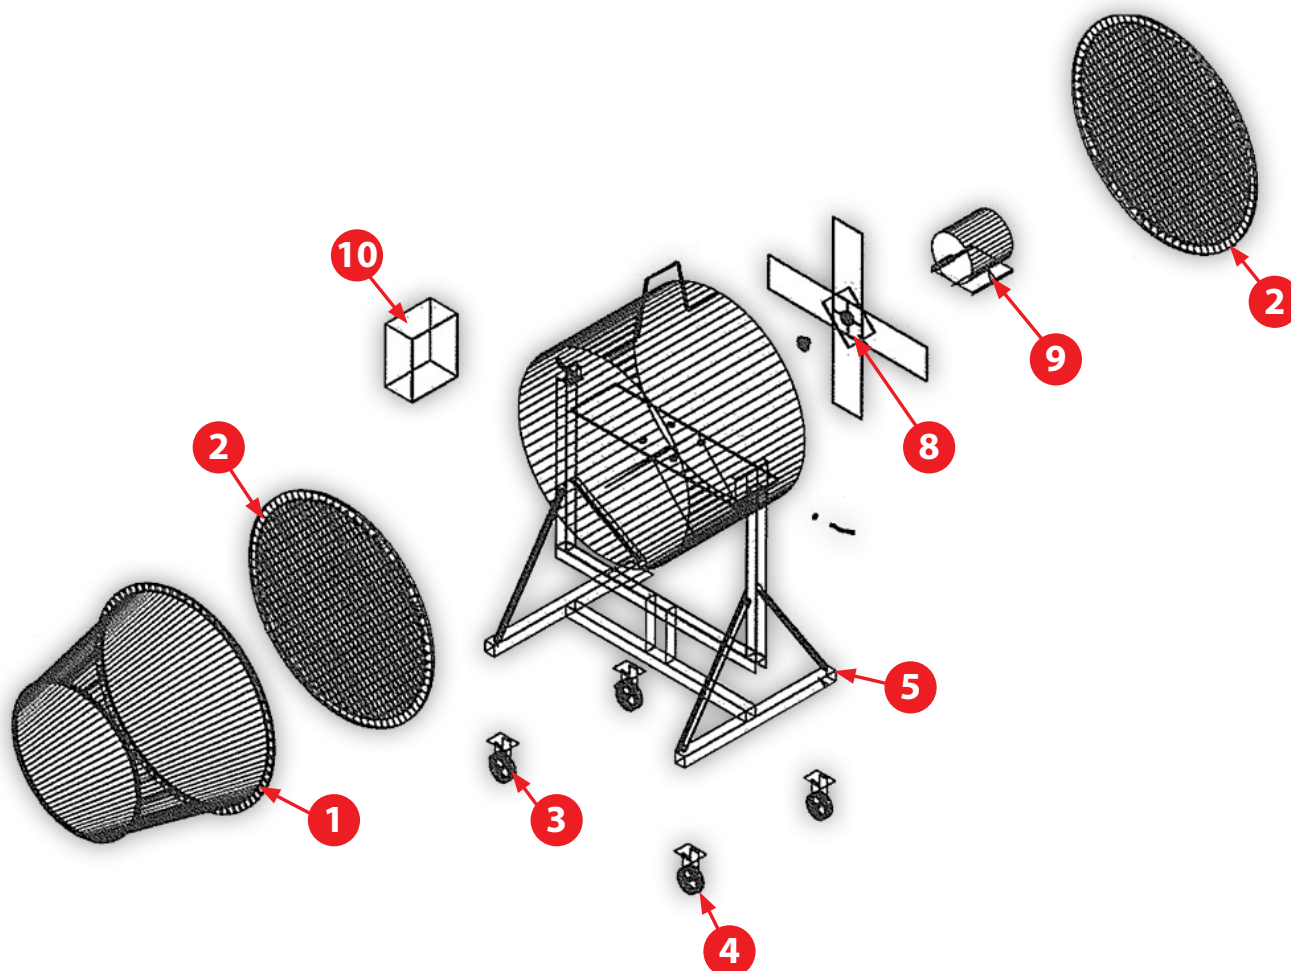


Item	Part #	Description
1	SFP FN2051	Fan Guard
2	SFP FN2054	Fan Housing
3	SFP FS2422	20" Fan Blade
4	SFP FS2431	1/2 HP 115V 1725 RPM Electric Motor
5	SFP FS5665	Rubber Motor Mount
6	SFP FS5962	Motor Mount Base Clamp Kit
7	SFP FS5844	3/4 Strain Relief Connector
8	HWP HC1020	Power Cord 24 inch
10		



FN42 Air Mover

Heater Parts

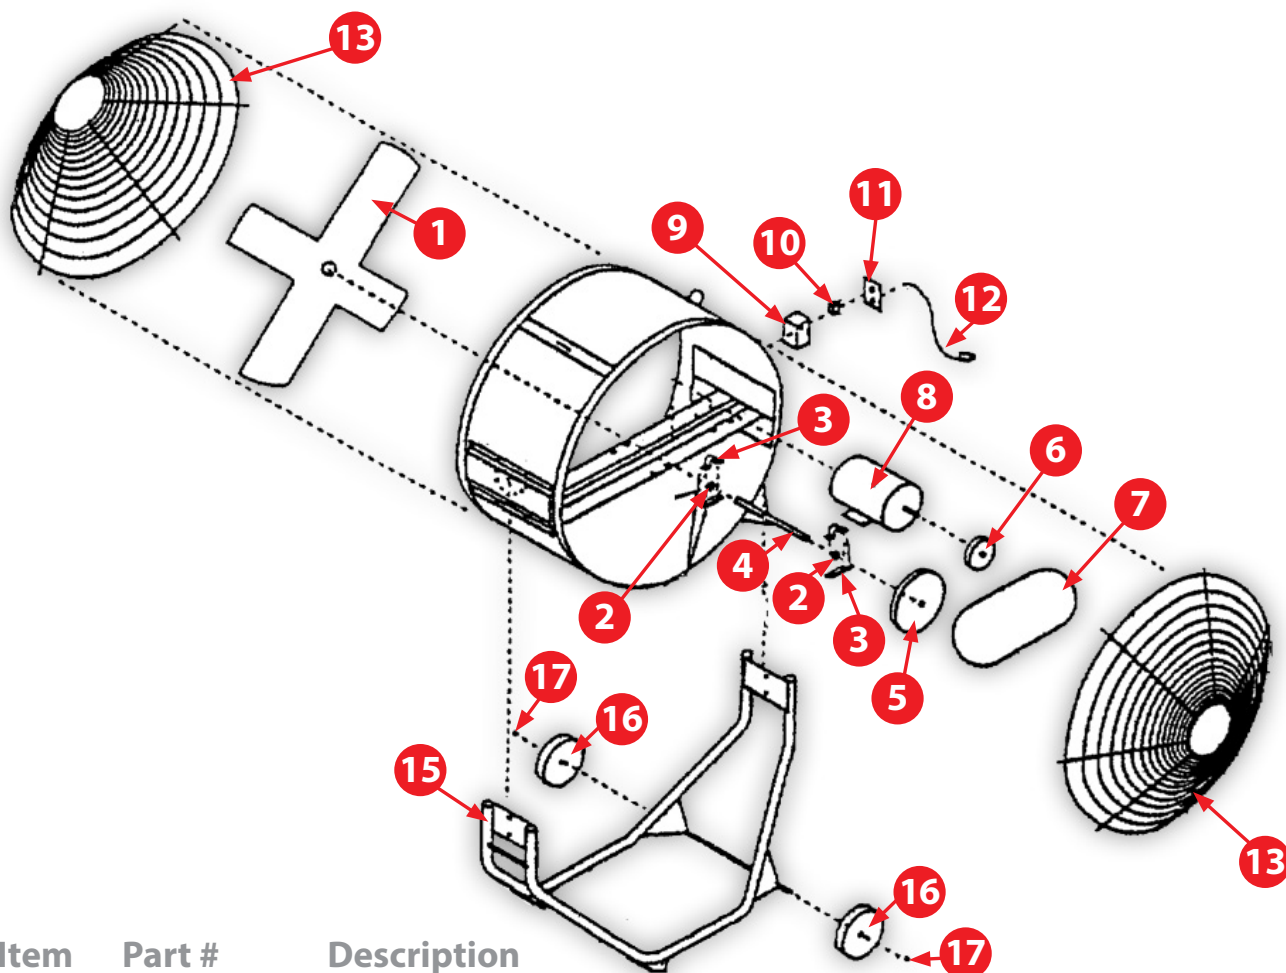SURE FLAME


Item	Part #	Description
1	SFP FS5932	42" Fan Blade
2	SFP FS5607	1" Bearing Insert
3	SFP FS5961	1" Pillow Block
4	SFP FN42116	1" Shaft
5	SFP FS5958	10" Sheave
6	SFP FS5960	3.0" Sheave
7	SFP FS5983	46" V-Belt
8	SFP 9262	1HP, 115V, 1725 RPM Motor
9	SFP FS5957	Switch Box
10	HWP HC1011	20 Amp Toggle Switch
11	SFP FN42125	Switch Cover
12	HWP HC1020	Power Cord
13	SFP FS5990	42" Fan Guard
14	SFP FN42702	Fan Housing
15	SFP FN42511	Tubular Frame
16	HWP HW1164	Semi Pneumatic Wheel 8"
17	SFP FS6330	Push Nut 1/2"
*	SFP FN42512	Latch Handle w/Pin

*Item not shown


PennRadiant.com

1-800-438-2503

U.S.A Proud



Retro-fit Heater (Model LTU 110)

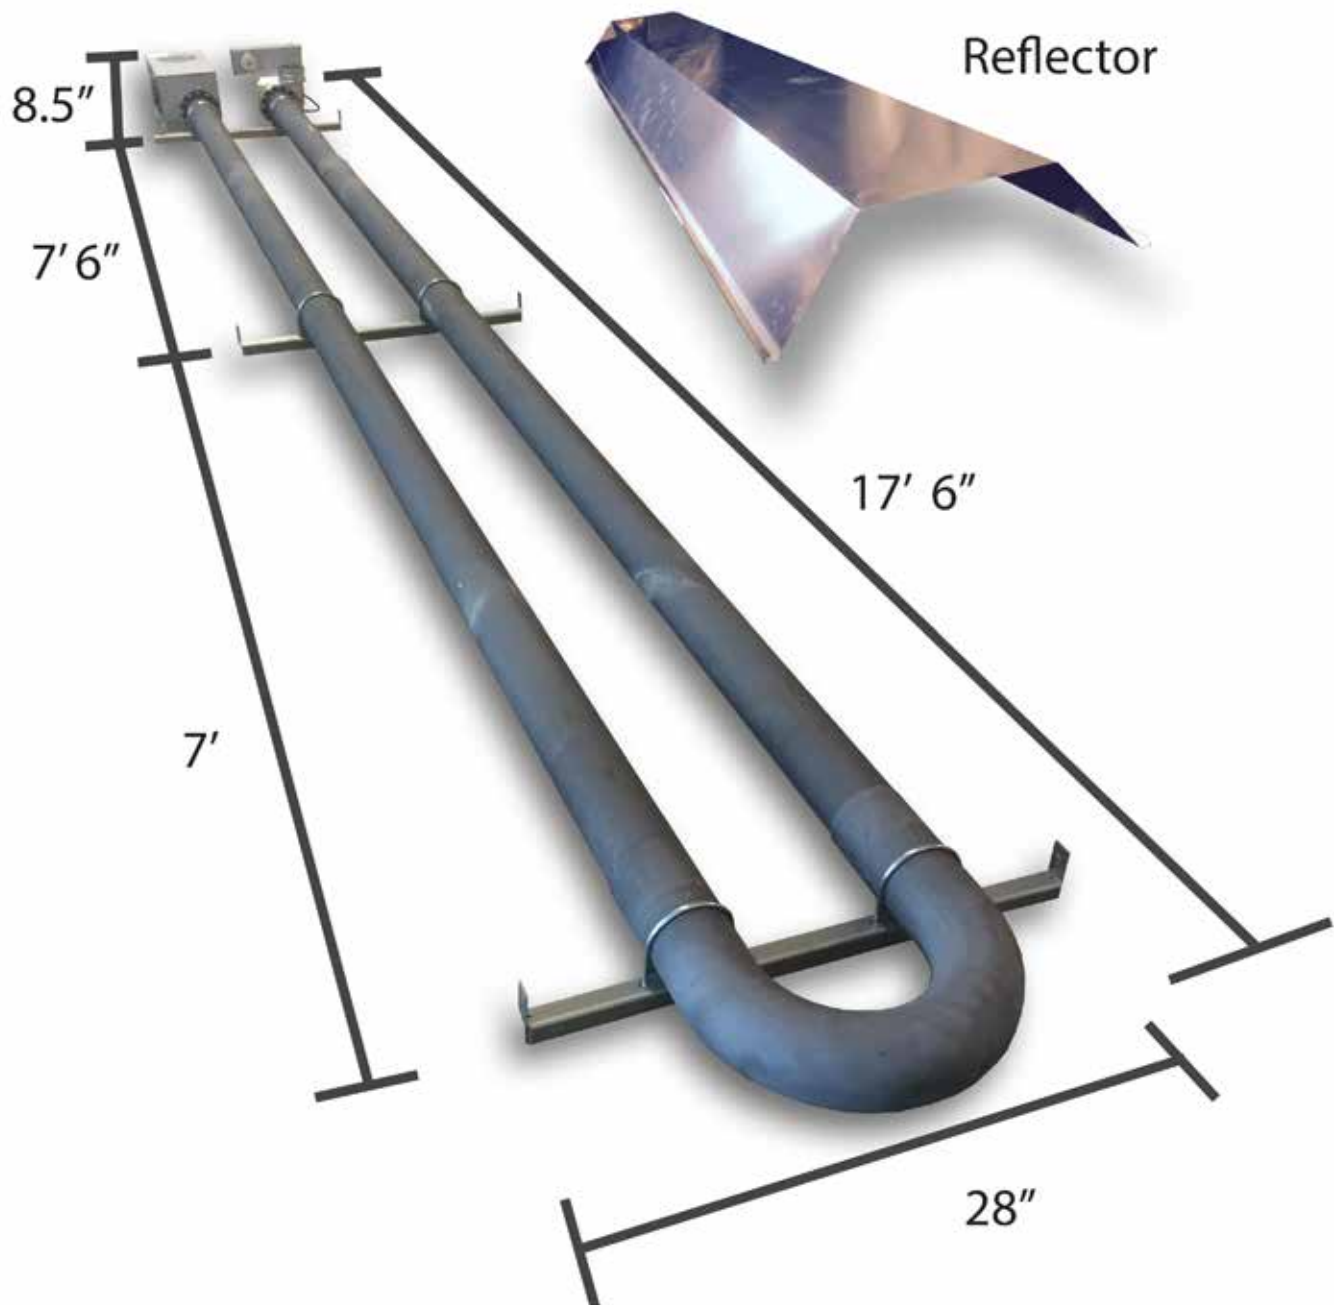

PennRadiant.com

1-800-438-2503

U.S.A Proud



LTU Control Box & Draft Inducer



PennRadiant.com

1-800-438-2503

U.S.A Proud




Existing Heater

PennRadiant.com

GLOB ENERGY

**Retro-fit Heater
(Model LTU 110)**


 **SPACE-RAY®**

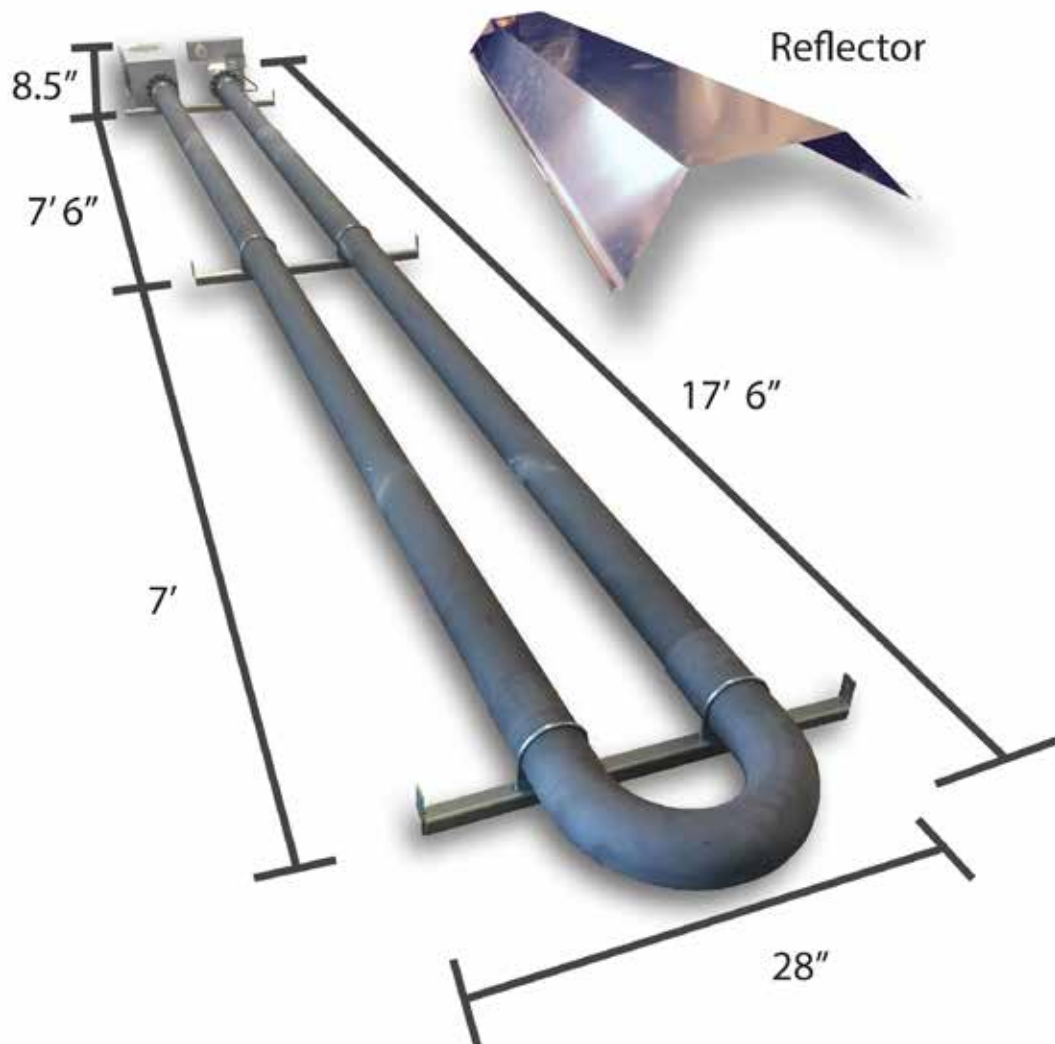



DG250

241,000 BTU (Serial#43300141 to Current)

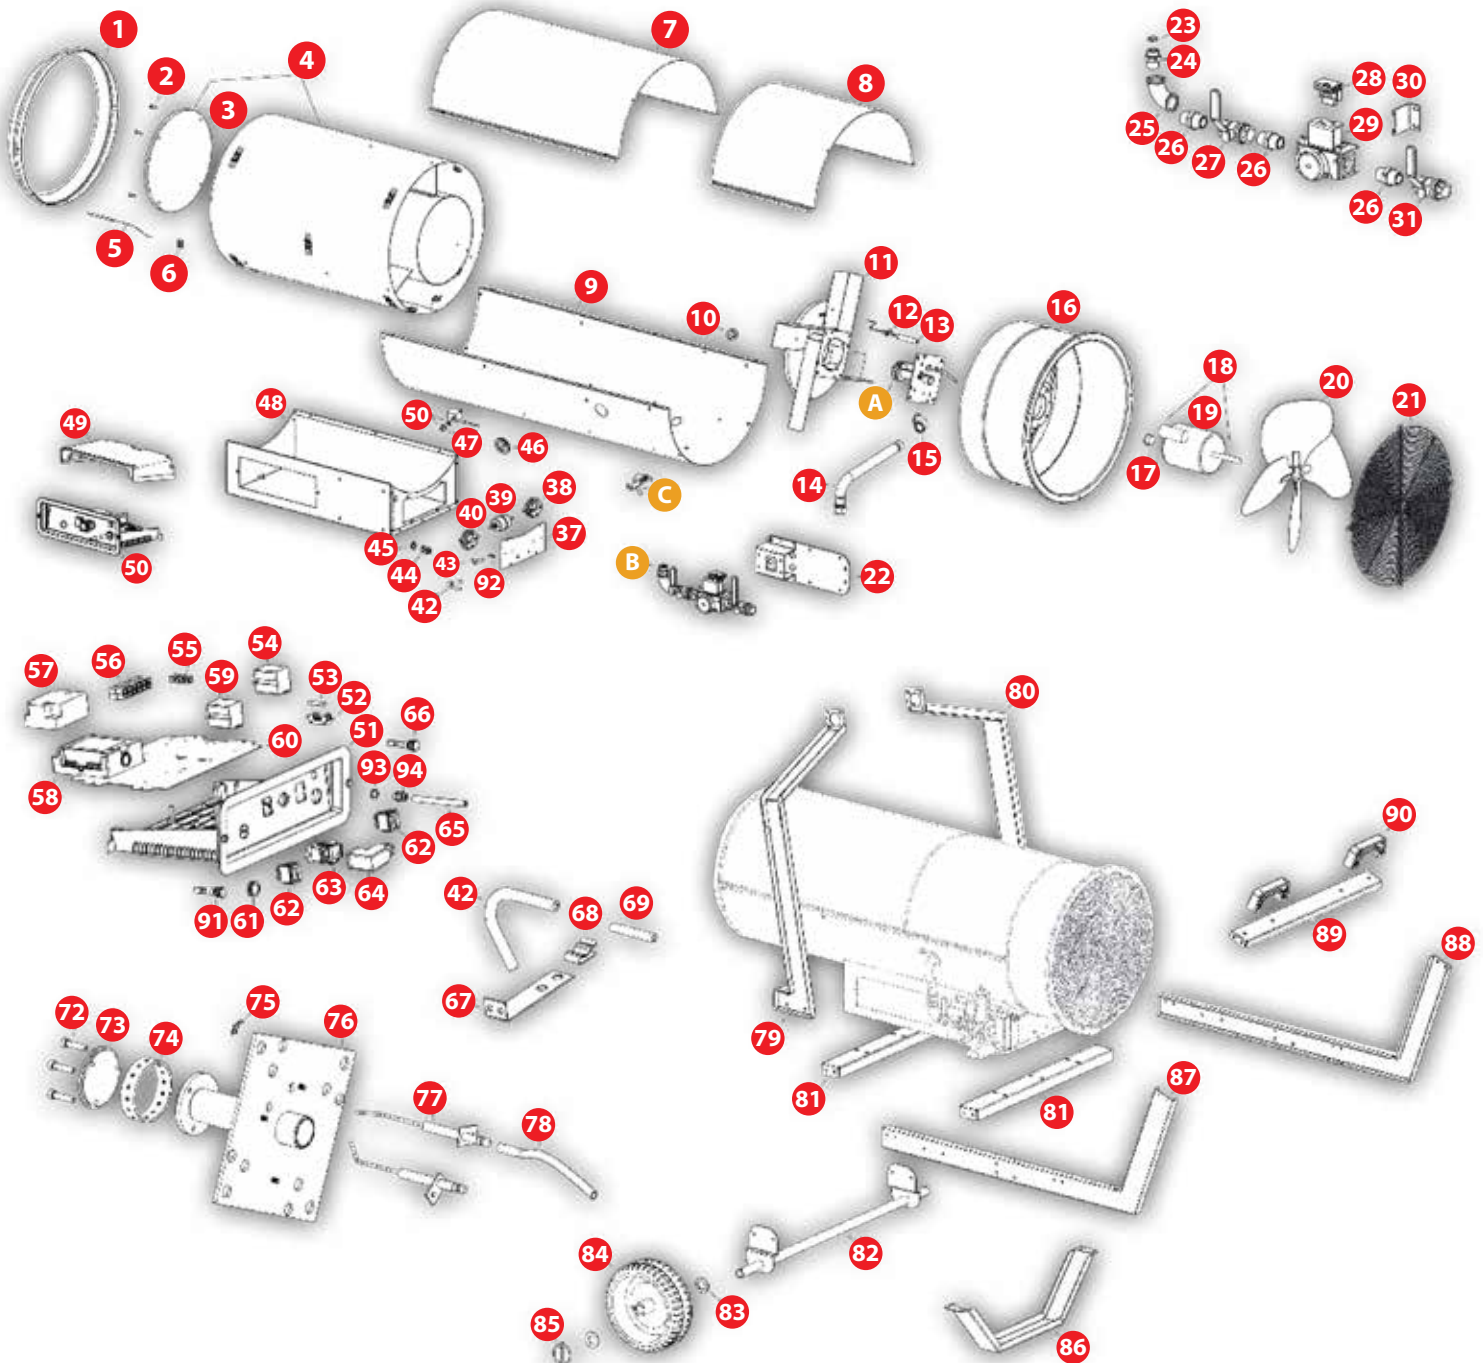



DG250

241,000 BTU (Serial#43300141 to Current)

Item	Part #	Description	Item	Part #	Description
1	BIE G03146-9005	Outlet cone	61	BIE E20418	Stop button protection
2	BIE M10203/1/B	Screw	62	BIE E10110-1-P	Switch
3	BIE G03113	Front disc	63	BIE E20639	Plug housing - 5 pin, female
4	BIE G03148	Combustion chamber		BIE E20640	Plug housing - 4 pin, female
5	BIE E50745	Safety thermostat	64	BIE E20966	Plug with jumper - 5 pin
6	BIE M20413	Hose bracket		BIE E20675	Plug with jumper - 4 pin
7	BIE G03149-9010	Upper body	65	BIE E30443	Power cord
8	BIE G03151-9010	Inspection panel		BIE E30443-1	Power cord (used with cable nut)
9	BIE G03153-9010	Lower body	66	BIE E11030	Lamp
10	BIE C30372	Cable protection	67	BIE G03144-X	Stirrup
11	BIE G03155	Rear disc	68	BIE M20413	Hose bracket
12	BIE E10245	Ionisation electrode	69	BIE I40303	Pipe
13	BIE I40332	Silicone pipe	72	BIE M10323/1	Screw
14	BIE I39106	Flex gas pipe	73	BIE GA.0010208	Burner disc
15	BIE I20326	Fitting	74	BIE GA.0110205	Diffuser ring
16	BIE G06125-9005	Air conveyor	75	BIE E20679	Terminal board
17	BIE C30374	Pipe cap	76	BIE G03129	Burner support plate
18	BIE E10678-110	Motor - AACO Obsolete	77	BIE E10215	Ignition electrode
	BIE E10771	Motor - Simel	78	BIE G02078	H.T. Cable connect.
19	BIE E11230	Capacitor - For AACO motor (40mf)	79	BIE G03160-9005	Lifting bracket
	BIE E10771-1	Capacitor - For Simel motor (30mf)	80	BIE G03161-9005	Lifting bracket
20	BIE T10260	Fan	81	BIE G03162-9005	Frame
21	BIE P30169	Inlet grill	82	BIE G03163-9005	Wheel axle
22	BIE G03414-9005	Valve support plate	83	BIE M20111	Washer
23	BIE I39102	Seal	84	BIE C10556	Wheel - Air filled
24	BIE I31205-1	Fitting		BIE C10510	Wheel - Hard rubber
25	BIE I20327	Fitting	85	BIE M20505	Latched pin
26	BIE I31209-1	Fitting	86	BIE G03164-9005	Support
27	BIE T30330-3	Gas selector valve	87	BIE G03165-9005	Frame
31	BIE T30349	Gas manual valve	88	BIE G03166-9005	Frame
37	BIE G03156-9010	Pressure switch support bracket	89	BIE G03167-9005	Handle plate
38	BIE E50444	Pressure switch 260 Pa	90	BIE C10203	Handle
39	BIE I30414	Filter	91	BIE E11021	Lamp
40	BIE E50440	Pressure switch 100Pa	92	BIE I31131	Brass hose connection
42	BIE I40335	Silicone pipe 39" 1	93	BIE I31132	Brass hose connection
43	BIE I20669	Hose connection	94	BIE T30119	Regulator
44	BIE E20952	Cable fastener	95	BIE T30118	Gas valve unit
45	BIE E20955	Cable fastener nut	96	BIE I20335	Fitting
46	BIE C30376	Cable protection	97	BIE E20950	Fastener nut
47	BIE E50750	Safety thermostat plastic profile	98	BIE E20949	Cable fastener
48	BIE G03158-9010	Base	99	BIE E20965	Cable nut
49	BIE P50127	Control box cover	100	BIE E20964	Cable fastener
50	BIE G00375-5P	El. control box-w/5 pin T-stat recep.			
	BIE G00287	El. control box-w/4 pin T-stat recep.			
51	BIE G03176	El. control box panel			
52	BIE E20508	Fuse holder			
53	BIE E10323	Fuse			
54	BIE E11153	Relay			
55	BIE E20319	Ground terminal board			
56	BIE E20305	Terminal board			
57	BIE E10931	H.T. Transformer			
58	BIE E40229	Flame control box			
59	BIE E11125	Relay			
60	BIE G06073	Support plate			

NOTE: Not Shown

BIE E10325

Fuse for Flame Control Box

Optional Thermostat (5 Pin)

HWP DIGTHIDF-5

HWP 7979K24

HWP 7979K32

Optional thermostat with 50' cord

5 pin plug insert

5 pin plug cover

PennRadiant.com


1-800-438-2503

U.S.A Proud



DG400

394,000 BTU

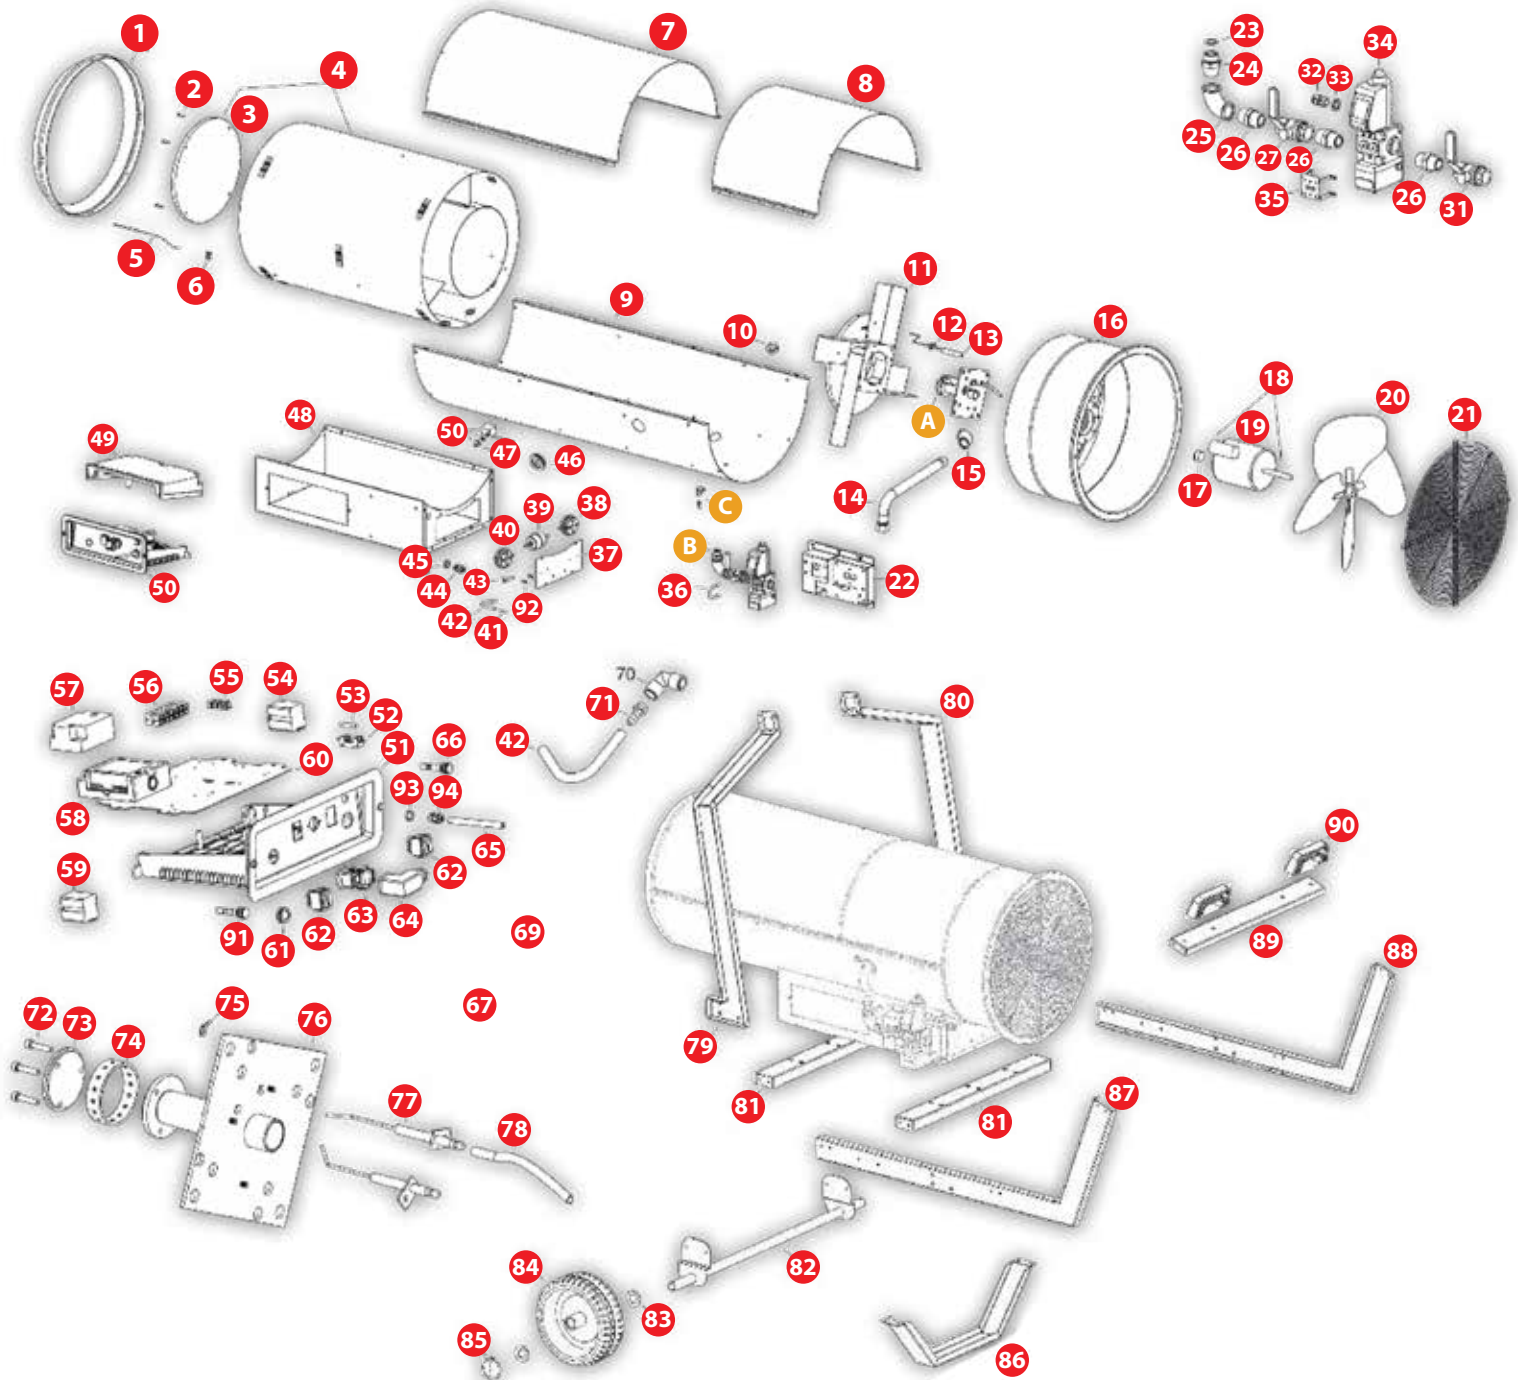



DG400

394,000 BTU

Item	Part #	Description
1	BIE G06139-9005	Outlet cone
2	BIE M10203/1/B	Screw
3	BIE G03114	Front disc
4	BIE G03147	Combustion chamber
5	BIE E50745	Safety thermostat
6	BIE M20413	Hose bracket
7	BIE G03150-9010	Lower body
8	BIE G03152-9010	Inspection panel
9	BIE G03154-9010	Lower body
10	BIE C30372 Cable	protection \$
11	BIE G03126	Rear disc
12	BIE GA.0100206	Ionisation electrode
13	BIE I40332	Silicone pipe
14	BIE I39106	Flex gas pipe
15	BIE I20326	Fitting
16	BIE G06239-9010	Air conveyor
17	BIE C30374	Pipe cap
18	BIE E10704-110	Motor
19	BIE E11249	Capacitor
20	BIE T10261	Fan
21	BIE P30129	Inlet grill
22	BIE G06330-9005	Valve support plate
23	BIE I39102	Seal
24	BIE I31205-1	Fitting
25	BIE I20326	Fitting
26	BIE I31204	Fitting
27	BIE T30330-2	Gas selector valve
31	BIE T30333	Gas manual valve
32	BIE E20943	Cable fastener
33	BIE E20932	Cable fastener nut
34	BIE T30111	Gas valve unit
35	BIE G06332-9005	Gas valve support bracket
36	BIE M20907	Stirrup
37	BIE G03157-9010	Pressure switch support bracket
38	BIE E50443	Pressure switch
39	BIE I30414	Filter
40	BIE E50441	Pressure switch
41	BIE I40336	Rilsan pipe
42	BIE I40335	Silicone pipe
43	BIE I20669	Hose connection
44	BIE E20952	Cable fastener
45	BIE E20955	Cable fastener nut
46	BIE C30376	Cable protection
47	BIE E50750	Safety thermostat plastic profile
48	BIE G03159-9010	Base
49	BIE P50127	Control box cover
50	BIE G00286-5P	El. control box
51	BIE G03176	El. control box panel
52	BIE E20508	Fuse holder
53	BIE E10313	Fuse
54	BIE E11153	Relay
55	BIE E20319	Ground terminal board
56	BIE E20305	Terminal board

Item	Part #	Description
57	BIE E10931	H.T. Transformer
58	BIE E40229	Flame control box
59	BIE E11125	Relay
60	BIE G06073	Support plate
61	BIE E20418	Stop button protection
62	BIE E10110-1-P	Switch
63	BIE E20639	Thermostat plug (5 pin)
64	BIE E20966	Plug with jumper (5 pin)
65	BIE E30443	Power cord
66	BIE E11030	Lamp
70	BIE I20325	Fitting
71	BIE I31130	Brass hose connection
72	BIE M10323/1	Screw
73	BIE GA.0010208	Burner disc
74	BIE GA.0100204	Diffuser ring
75	BIE E20679	Terminal board
76	BIE G03129	Burner support plate
77	BIE E10215	Ignition electrode
78	BIE G02078	H.T. Cable connection
79	BIE G03168-9005	Lifting bracket
80	BIE G03169-9005	Lifting bracket
81	BIE G03170-9005	Frame
82	BIE G03171-9005	Wheel axle
83	BIE M20111	Washer
84	BIE C10556	Wheel
85	BIE M20505	Latched pin
86	BIE G03172-9005	Support
87	BIE G03173-9005	Frame
88	BIE G03174-9005	Frame
89	BIE G03175-9005	Handle
90	BIE C10203	Handle
91	BIE E11021	Lamp
92	BIE I31131	Brass hose connection

NOTE:

For units prior to SN 43403001

50	BIE G00286	El. comp. drawer
63	BIE E20640	Thermostat plug 4P (4 pin)
64	BIE E20675	Plate plug 3P+T(4 pin)

NOTE:

For units SN 43400232 and beyond


18	BIE E10772	Motor
19	BIE E10772-1	Capacitor
65	BIE E30443-1	Cord only
93	BIE E20965	Cable nut
94	BIE E20964	Cable fastener

Not shown

Fuse for Flame Control Box - E10325




P600 Heater Parts

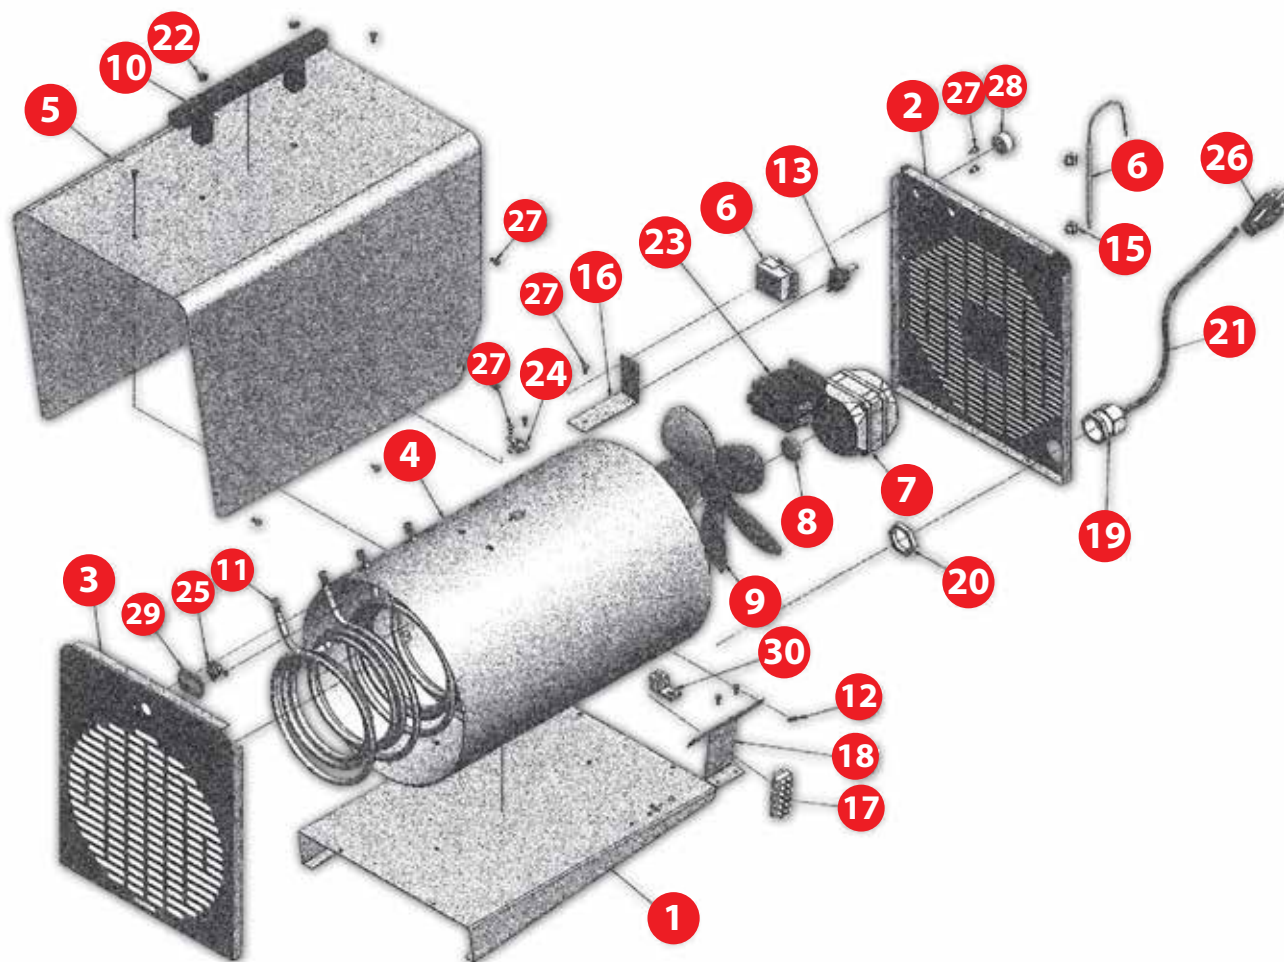

Item	Part #	Description	Item	Part #	Description
1	HWP 4027013	BOTTOM PLATE	15	HWP 37910	PLASTIC BRACKET FOR BULB
2	HWP 4027011	REAR PANEL	16	HWP 4027015	BRACKET FOR INNER MANTLE
3	HWP 4027012	FRONT PANEL	17	HWP 36704	TERMINAL BLOCK \$12.00
4	HWP 4027014	INNER MANTLE	18	HWP 4027016	BRACKET FOR TERMINAL BLOCK
	HWP 4027020	AIR GUIDE RING, INNER MANTLE	19	HWP 36922	STRAIN RELIEVER
5	HWP 4027010	OUTER MANTLE	20	HWP 36923	LOCKING NUT, STRAIN RELIEVER
6	HWP 20220	ROOM THERMOSTAT (Knob Not Included)	21	ACC 30A10	POWER CORD
7	HWP 14145	FAN MOTOR	22	HWP 80110	PLUG, HANDLE (2 PC.)
8	HWP 17907	HUB, FAN MOTOR	23	HWP 22670	CONTACTOR
9	HWP 16109	FAN BLADE	24	HWP 21201	OVERHEAT LIMIT SWITCH
10	HWP 80100	HANDLE	25	HWP 21206	LIMITER, AIR OUTLET
11	HWP 42800	HEATING ELEMENT (2)	26	HWP 00275-00T	PLUG
12	HWP 36809	WIRE BUSHING (GUARD RING)	28	HWP 20577	KNOB, ROOM THERMOSTAT
13	HWP 26900	TOGGLE SWITCH	29	HWP 4027017	BRACKET FOR LIMITER



P1800 Heater Parts

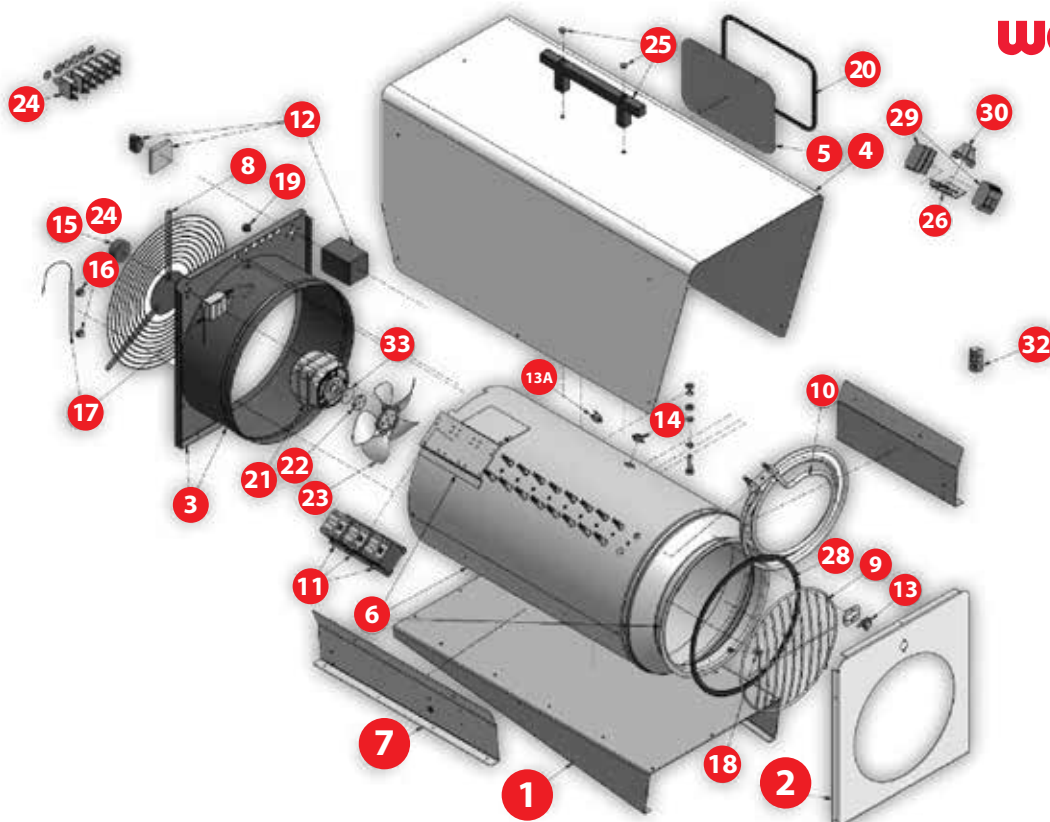

Item Part # Description

1	HWP 180007	Bottom Plate
2	HWP 180006	Front Panel (P1800D - HWP 1800037)
3	HWP 180015	Rear Panel
4	HWP 180002	Hood* (No Hatch)
	HWP 180032	Hood with Connection Hatch*
5	HWP 180032A	Connection Hatch*
6	HWP 180003	Inner Mantle (Including Air Cone)
7	HWP 180009	Bracket
8	HWP 180019	Rear Grill (P1800D - HWP 1800035)
9	HWP 180005	Front Grill
10	HWP 180026	Heating Element (9 per Heater)
11	HWP 180022	Contactors
12	HWP 180021	Main Switch Assembly
13A	HWP 180024	Overheat Limit Switch (Inner)
13	HWP 180008	Overheat Limit Switch (Outer)
14	HWP 180025	Unit Cooledown Switch
15	HWP 400018	Thermostat Knob
15	HWP 20577	Thermostat Knob
		For P1800-1, S/N 1036 & Beyond
		For P1800-3, S/N 3509 & Beyond
		For P1800D, S/N 0031 & Beyond
16	HWP 37910	Plastic Bracket
17	HWP 180017	Ambient Thermostat
17	HWP 20220	Ambient Thermostat
		(Knob Not Included)
		For P1800-1, S/N 1036 & Beyond
		For P1800-3, S/N 3509 & Beyond
		For P1800D, S/N 0031 & Beyond

Item Part # Description

18	HWP 82760	Plate Nut
19	HWP 36809	Guard Ring
20	HWP 401604	Gasket for Connection Hatch*
21	HWP 180014	Fan Motor
	HWP 14350	(P1800D - Includes Blade)
22	HWP 180033	Fan Hub (7mm Shaft) P1800-1, P1800-3 only
23	HWP 180012	Fan Blade P1800-1, P1800-3 only
24	HWP 180027	Circuit Breakers (P1800-1 Only)
25	HWP 180001	Handle
26	SFP S1500-105	Bracket for Terminal Block (P1800-1 Only)
28	HWP 180004	Gasket
29	HWP 36615	Terminal Block (P1800-1 Only) (Qty. 3)
30	HWP 36630	Locking Clamp (P1800-1 Only) (Qty. 2)
32	HWP 36704	Terminal Block (P1800-3 Only)
33	HWP 180011	Fan Hub Cap & Boltkl


*Similar Equipped Models Only

Parts Not Shown

ACC WD1225	Duct for P1800D (12"x25' long)
HWP 1800036	Capacitor for #21, P1800D
HWP 1800038	Capacitor Holder
HWP 37910	Plastic Bracket for TA Bulb
HWP 32116	Heating Coil Wire (sold by ft.)
HWP 180016	Strain Relief
HWP 86800	Silicone Sleeve (4' section)
HWP 1800037	P1800D Outlet



P1500 Heater Parts

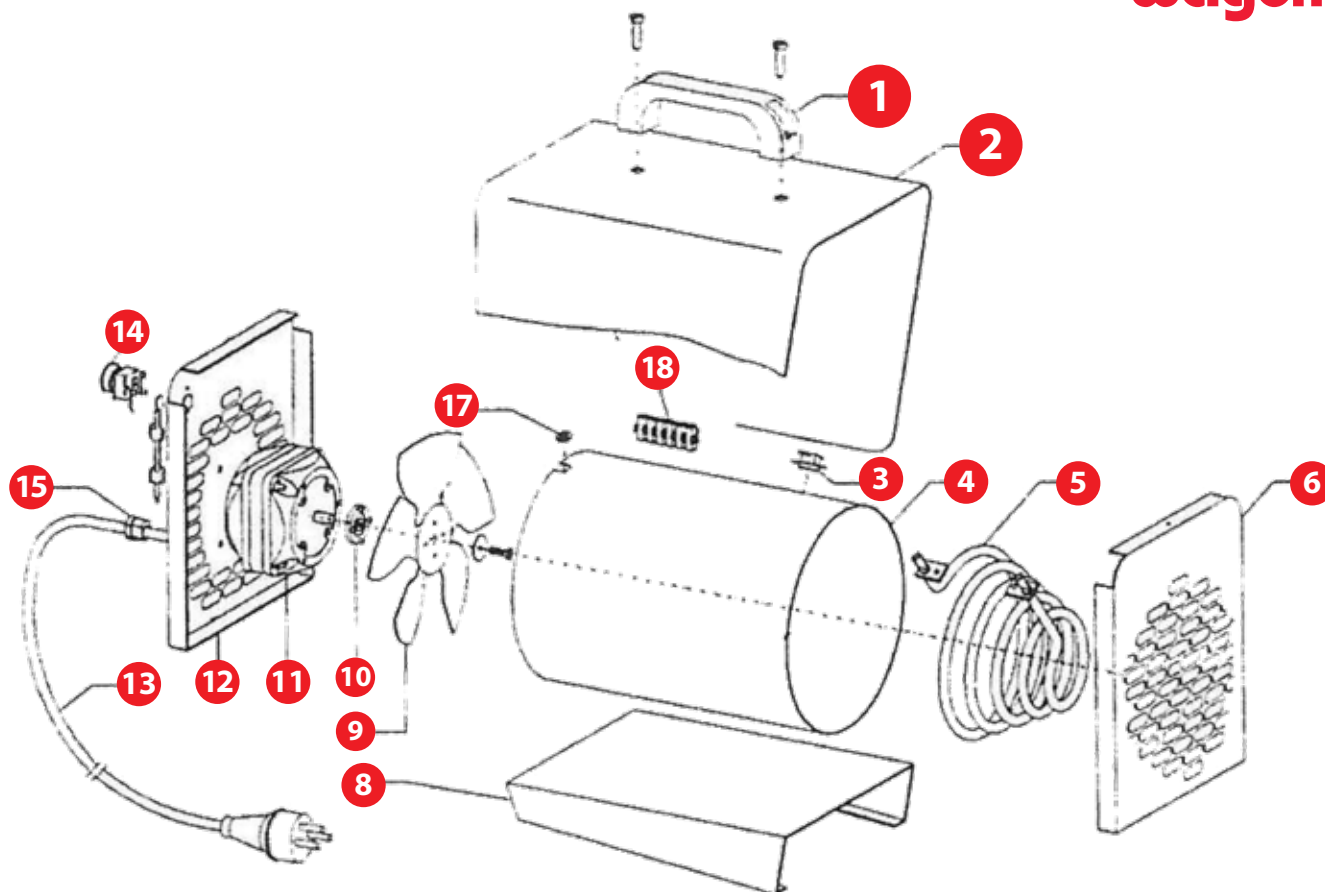


Item	Part #	Description
1	HWP 80102	HANDLE (shown in exp. view)
	HWP 80100	HANDLE - old version
2	HWP 4001115	OUTER MANTLE
3	HWP 21200	OVERHEAT LIMIT SWITCH
4	HWP 40015	INNER MANTLE
5	HWP 42256	HEATING ELEMENT
6	HWP 40014	FRONT PANEL
8	HWP 40012	BOTTOM PLATE
9	HWP 16040	FAN BLADE
10	HWP 17907	HUB
11	HWP 14040	FAN MOTOR
12	HWP 4001100	REAR PANEL
13	HWP 30330	POWER CORD & PLUG
14	HWP 20220	ROOM THERMOSTAT
	HWP 20577	THERMOSTAT KNOB
15	HWP 36910	STRAIN RELIEVER & NUT
17	HWP 36809	WIRE BUSHING
18	HWP 36701	TERMINAL BLOCK





VF400

Wayne Burner

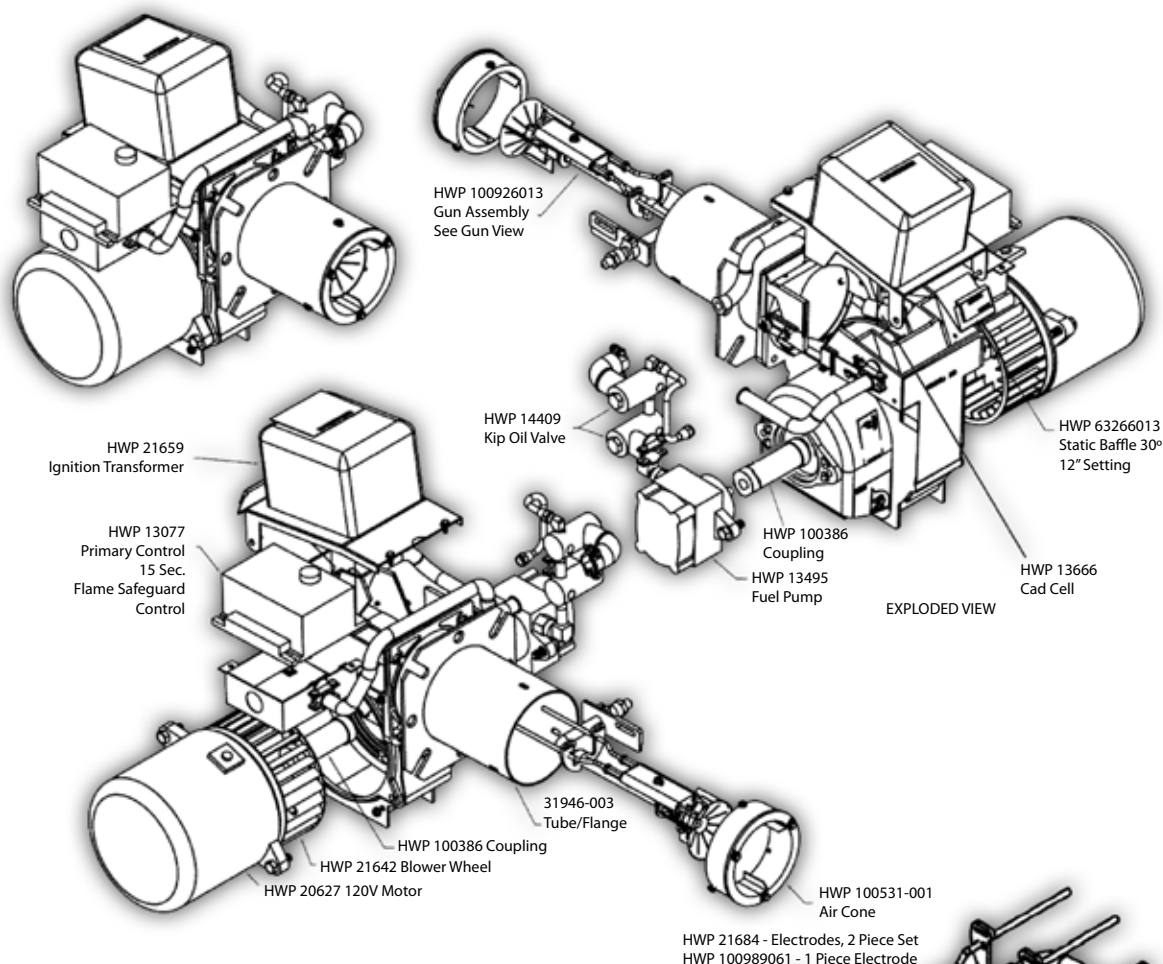

Part # Description

HWP 100926013	Gun Assembly
HWP 21659	Ignition Transformer
HWP 13077	Primary Control
HWP 14409	Kip Oil Valve
HWP 13495	Fuel Pump
HWP 100386	Coupling
HWP 13666	Cad Cell
HWP 63266013	Static Baffle
HWP 20627	120V Motor
HWP 21642	Blower Wheel
HWP 100386	Coupling
HWP 31946-003	Tube/Flange
HWP 100531-001	Air Cone
HWP 32101	Nozzle
HWP 21684	Electrodes, 2 Pc.
HWP 100989061	Electrode 1 Pc.
HWP 32101	Nozzle
HWP 12362	Nozzle Adapter

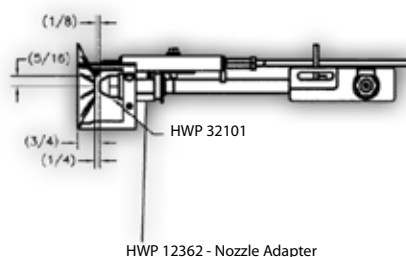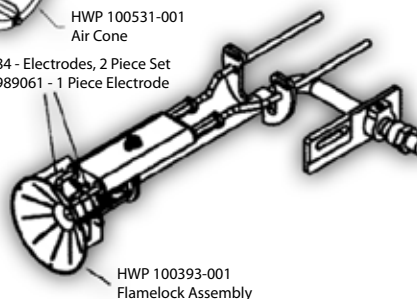



SG Series Replacement Parts

