





Clip the excess leads
C3, IC2, C2, IC1, C1

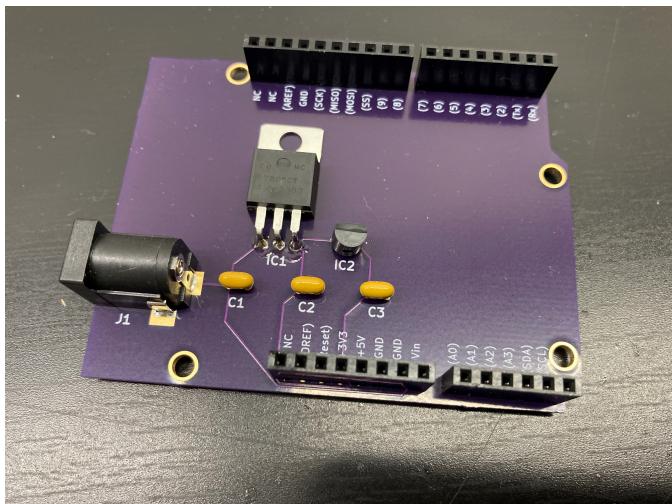

Your board is complete!


Ardustack Power Board Assembly

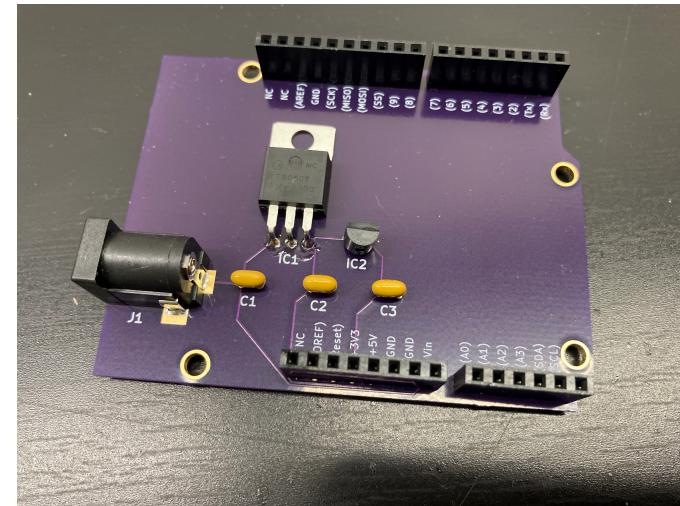


Completed top view



Completed bottom view

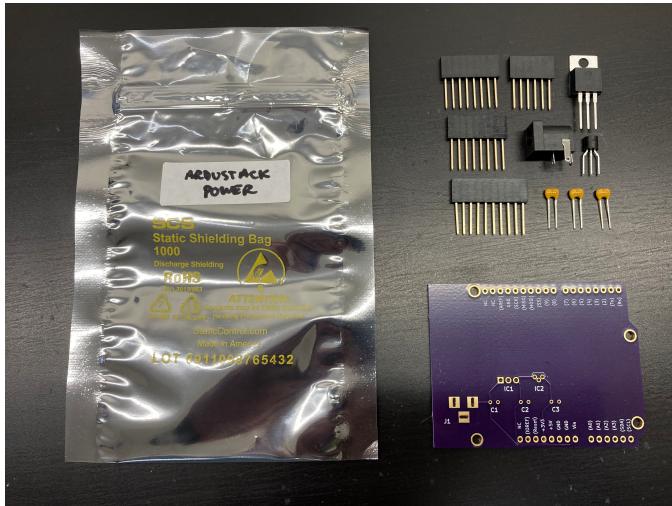

Check that all parts are present

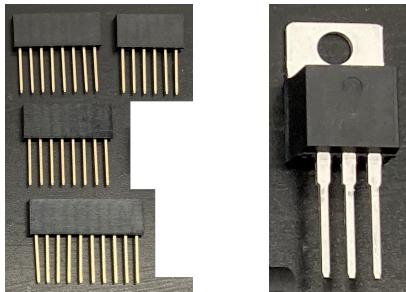

Headers

IC1


IC2




Jack



C1 C2 C3

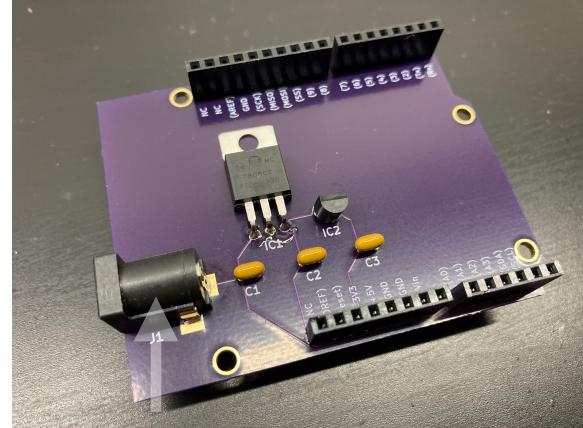


Insert barrel jack

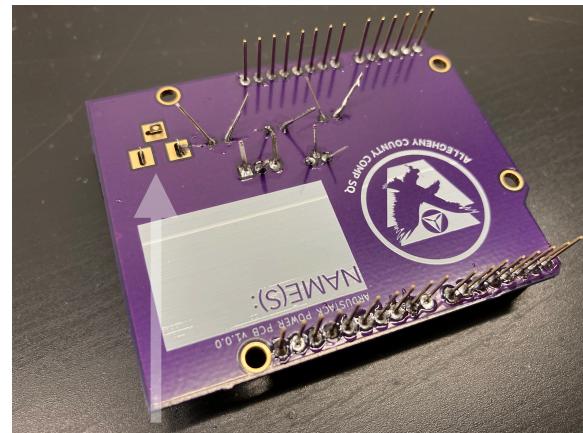


Flip board over and solder



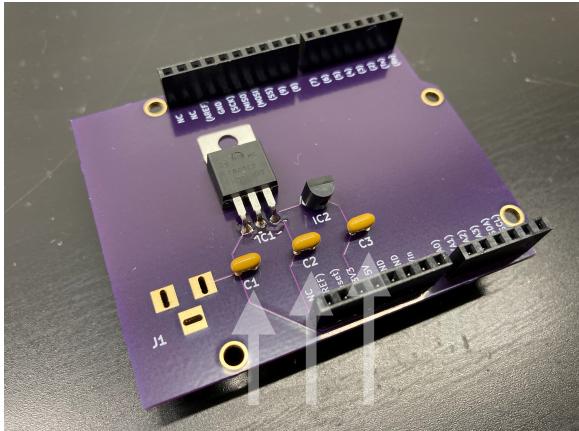

Insert C1, C2, and C3

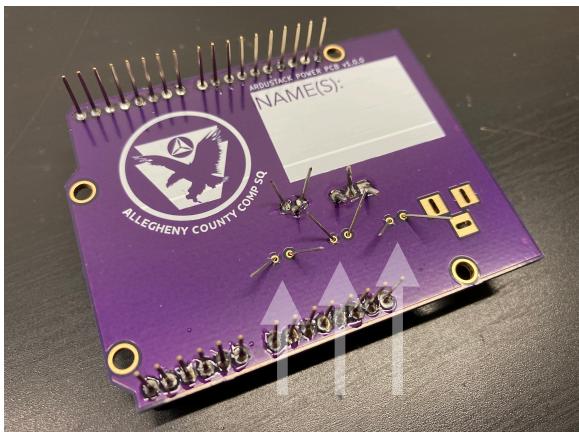


Flip board over and solder




Insert headers




Solder headers

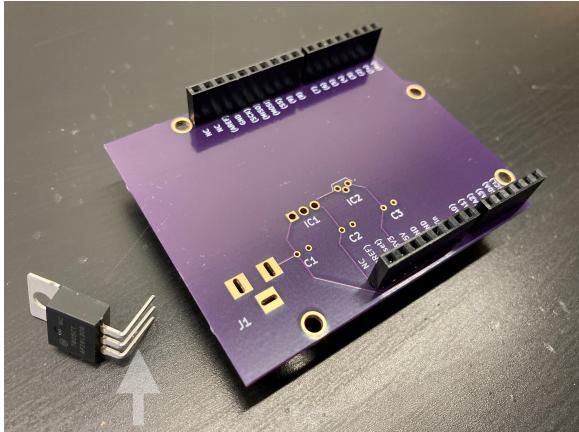


Bend IC1 leads 90° with pliers

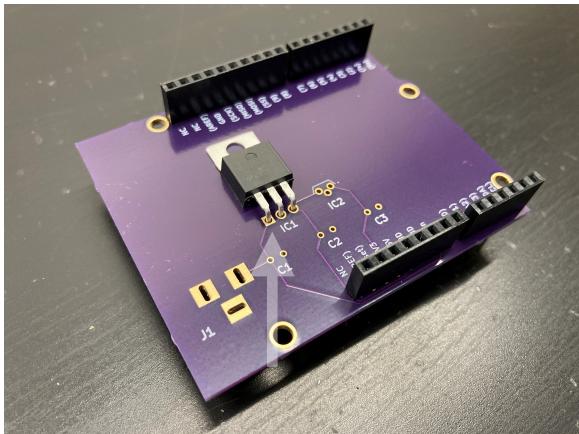

Insert IC1, flip board over, and solder

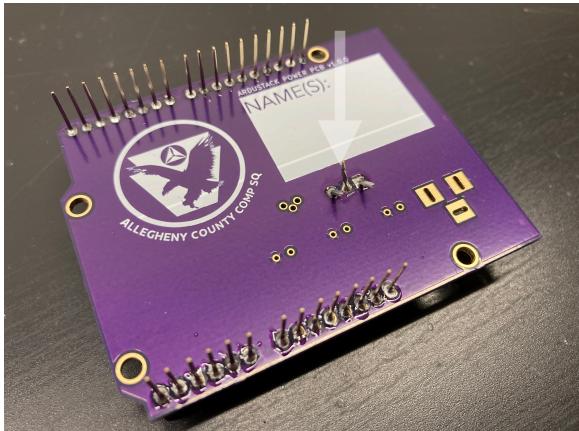

3

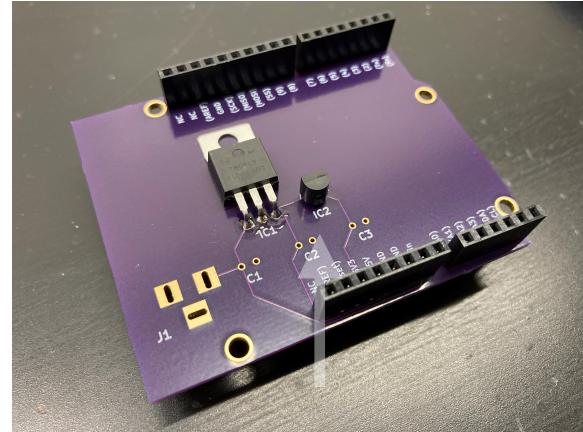

Insert IC2



Flip board over and solder



4