
TYPE D STRAINER AND CHECK VALVE

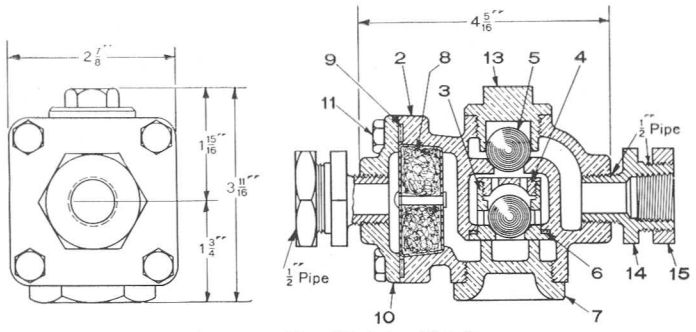

Approx. Net Weight 5¼ lbs.


Piece No. 99477 D-1 Strainer and Check Valve, Complete (½" Pipe)

Piece No. 509149 D-1 Strainer and Check Valve, Complete (⅜" Pipe) (without Support Fittings)

Pc. No.	Ref. No.	
99643	2	Body
99712		Ball Check Valve and Bush, complete (includes 3, 4 and 5)
99645	3	Ball Check Valve Bush
99646	4	Ball Check Valve Bush Cap Nut
66647	5	Ball Check Valve (2 Req'd)
99655	6	Ball Check Valve Bush Gasket
99647	7	Cap Nut
99648	8	Strainer
93316	9	Strainer Cover Gasket
99651	10	Strainer Cover
68232	11	Strainer Cover Bolt (4 Req'd)
99644	13	Ball Check Cap Nut
99652		Support Fitting, complete (includes 14 and 15) (2 Req'd for Pc. 99477)
99653	14	Support Fitting (2 Req'd for Pc. 99477)
99654	15	Jam Nut (2 Req'd for Pc. 99477) ½" to ⅜" Reducer (2 Req'd for Pc. 509149)

SPRING IDENTIFICATION

The following table is shown to enable railroad men, storekeepers and all Air Brake men to identify the various springs used in the Check Valves cataloged herein. The actual springs will vary somewhat, due to small differences in wire diameter, coil diameter, number of turns, etc. This tabulation is intended for identification only and should not be used for any other purpose. It does not represent a specification for the springs mentioned.



SPRING IDENTIFICATION

Pc. No.	Approx. Out. Dia. "A"	Approx. Dia. Wire "B"	Approx. Free Ht. "C"	*Approx. No. Turns	Material	Name of Spring	Where Used
10175	5/16"	.051"	1 5/16"	14	Brass	25 # Valve Spring	⅜" Check Valve
12827	13/32"	.064"	2"	12	Phosphor Bronze	Piston Valve Spring	No. 8 Double Check Valve
21085	5/16"	.04"	1¼"	16½	Phosphor Bronze	10 # Valve Spring	⅜" Check Valve
21235	5/16"	.032"	1 31/64"	20	Phosphor Bronze	5 # Valve Spring	⅜" Check Valve
25920	31/64"	.072"	1 7/32"	8½	Phosphor Bronze	Valve Spring	½" Check Valve (10 #); C-1 Strainer and Check Valve (20 #)
25921	15/32"	.0403"	1¾"	15	Phosphor Bronze	3 # Valve Spring	C-1 Strainer and Check Valve
28955	½"	.040"	1½"	12½	Phosphor Bronze	2.5 # Valve Spring	½" Check Valve
31488	31/64"	.045"	1.77"	14	Phosphor Bronze	5 # Valve Spring	
31810	55/64"	.091"	2 5/16"	12	Phosphor Bronze	Double Piston Spring	No. 14 Double Check Valve
39432	½"	.081"	1 17/32"	10	Phosphor Bronze	8 # Valve Spring	1" Check Valve
47198	5/8"	.065"	1½"	9	Brass	5 # Valve Spring	½" Check Valve
51551	29/64"	.064"	31/32"	8	Phosphor Bronze	Aux. Res. C.V. Spring	No. 14 Double Check Valve
56164	1/16"	.064"	1 11/32"	11½	Phosphor Bronze	10 # Valve Spring	C-1 Strainer and Check Valve
56217	½"	.072"	1⅛"	9½	Phosphor Bronze	15 # Valve Spring	C-1 Strainer and Check Valve
70575	11/32"	.041"	1⅛"	12½	Steel	30 # Valve Spring	⅜" Check Valve
87806	½"	.032"	1¾"	14	Phosphor Bronze	Valve Spring	½" Check Valve with WABCO Seal
95618	½"	.080"	1¼"	6½	Steel	40 # Valve Spring	C-1 Strainer and Check Valve
501034	43/64"	.050"	1½"	12	Phosphor Bronze	Valve Spring	¾" Disc Check Valve
501493	11/16"	.057"	2 1/32"	10	Phosphor Bronze	5 # Valve Spring	¾" Check Valve
508440	43/64"	.080"	2½"	10	Phosphor Bronze	15 # Valve Spring	¾" Disc Check Valve
510682	11/16"	.057"	2 1/32"	8½	Phosphor Bronze	Valve Spring	No. 15-C Dbl. Ch. Valve
517338	5/16"	.045"	1 7/32"	14¼	Phosphor Bronze	15 # Valve Spring	⅜" Check Valve
9694	7/16"	.022"	1⅝"	11½	Brass	Valve Spring	No. 22 Double Check Valve
526253	1 5/16"	.072"	3"	5¼	Phosphor Bronze	3 # Valve Spring	1¼" Check Valve
106416	51/64"	.047"	2"	12	Steel	Valve Spring	1" Disc Check Valve
182775	9/16"	.047"	1¾"	13	Stainless St.	Valve Spring	½" Disc Check Valve
182776	51/64"	.047"	2"	12	Stainless St.	Valve Spring	1" Disc Check Valve
185923	29/64"	.047"	2¼"	19	Steel	3 # Valve Spring	1" Check Valve

*NOTE—Number of turns for each spring, counted between extreme ends of the wire.

Prices will be quoted upon application

Orders should give PIECE NUMBER and NAME of part wanted