
Dashboard


Replacement -

- To remove the dashboard, first slide the seats back fully and remove the:
 - Dashboard lower panel (page 14-46).
 - Front consoles (page 14-44).
- Disconnect the wire harnesses from the connector holder, and fuse box.
- 3. Disconnect the speedometer cable.

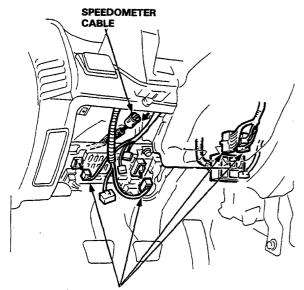


Disconnect the connectors


- Remove the 6 screws and radio panel, then disconnect the wire connectors and antenna cable.
- 5. Remove the radio assembly.

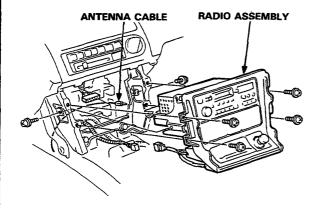

- 6. Disconnect the heater control cable.
- Disconnect the shift position switch connectors (AT).

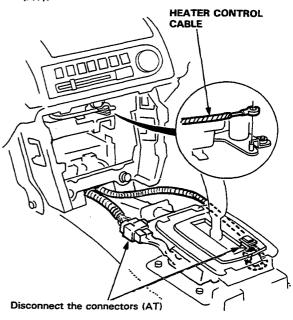

8. Disconnect the connector and wire harnesses from heater control unit.

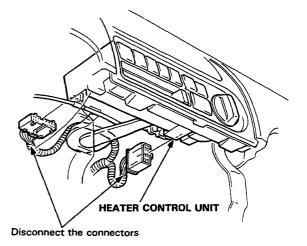



- 9. Remove the clock from the top of the dashboard (page 14-47).
- 10. Lower the steering column.
- 11. Remove the dashboard mounting bolts.
- 12. Lift the dashboard as you pull, so it will slide up and off the guide pin in the middle. Hold the dashboard from underneath so it won't fall when it comes off the pin.

Reassembly NOTE:

- Make sure the dashboard fits onto the guide pin correctly.
- Before tightening the dashboard bolts, make sure the dashboard wires are not pinched, and that the dashboard is not interfering with the heater control cable.
- For ease of installation, remove gauge assembly from dash.

