

Sunroof

Cable Replacement -

With the sunroof out of the car, remove the guide rail mounting nuts, lift off the guide rails, and remove the cables with the rear mount brackets attached.

NOTE: Fill the groove in each grommet with sealant and apply molybdenum grease to the inner cable.

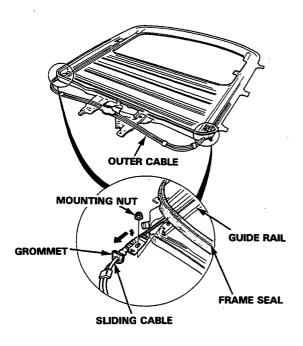

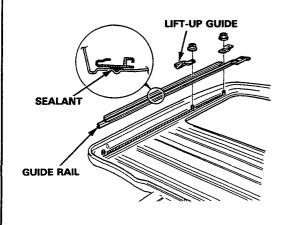


Rear Mount Bracket Disassembly

 Remove the side guides from the rear mount brackets.

NOTE: Replace the guides with new ones whenever they are disassembled.

2. Pry the E-clip off the pin, and remove the rear mount bracket from the cable.

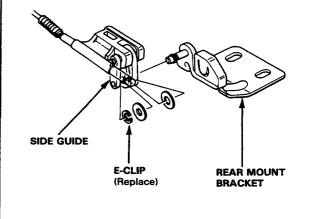

Drag Check (Motor Removed) -

Before installing the sunroof motor, measure effort required to close the glass using a spring scale as shown.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop rag.

If load is over 98 N (10 kg, 22 lb), check side clearance and glass height adjustment.

