
2nd Accumulator Body


Disassembly/Inspection/ -Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- Coat all parts with ATF before reassembly.



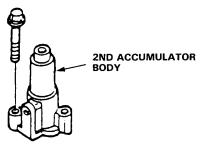







SPRING SPECIFICATION

2nd accumulator spring		
Wire Dia.	mm (in)	2.8 (0.110)
O.D.	mm (in)	16.5 (0.650)
Free Length	mm (in)	85.0 (3.346)
No. of Coils		15.3

ATV Pulser Rotor

Disassembly/Inspection/ Reassembly

NOTE: Clean all parts with solvent and dry with compressed air.

