


## Motor, Drain Tube, and Frame Replacement -

CAUTION: Be careful not to damage the seats or other interior trim.

- 1. Remove the glass (page 14-32) and the headliner (page 14-37).
- 2. Disconnect the motor wire harness. Remove the clips securing the dome light wire harness.
- 3. Remove the sunroof motor by removing the two bolts and three nuts.
- 4. Disconnect the drain tubes.
- 5. Remove the ten 6 x 16 mm mounting bolts from the frame, and remove the frame from the car.

NOTE: You may require assistance when removing the frame.

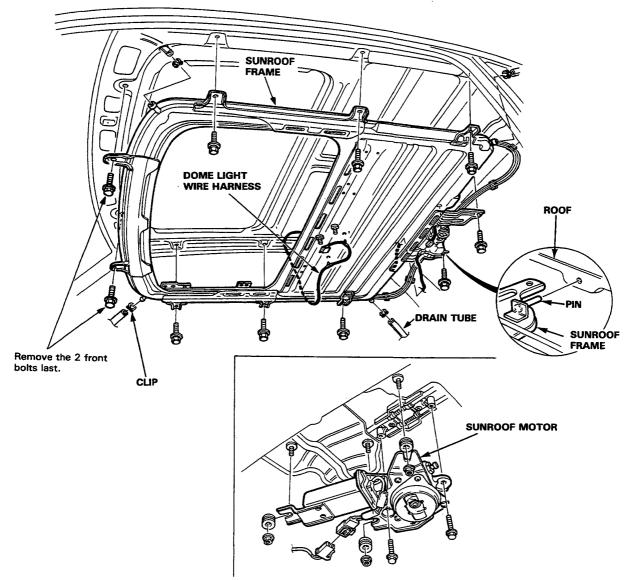

5. To install, insert the frame's rear pins into the body holes, then install parts in the reverse order of removal.

## NOTE:

- Insert over 10 mm of the drain tube onto the nozzle.
- Install the tube clips with the ends facing the side to ease installation of the headliner.