



Neutral Positioning Off-car

 Remove the cap bolt from the gearbox using a "TORX® T40 BIT".

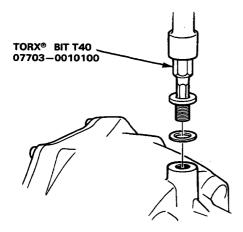

- Position the offset shaft so the cutout faces the underside of the gearbox and the flat area faces the top.
- 3. Install the special tool in the gearbox.

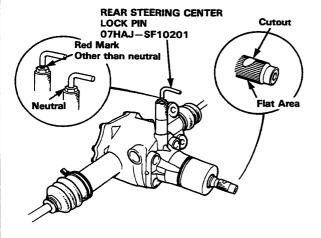

4. Turn the offset shaft by hand to be certain that the steering gear box is in the neutral position.

	Red Mark	Offset Shaft
Other than Neutral	Visible	Movable
Neutral	Not visible	Locked

Slide the tie-rod boots away from the housing to make sure the stroke rod is centered in the gearbox housing.