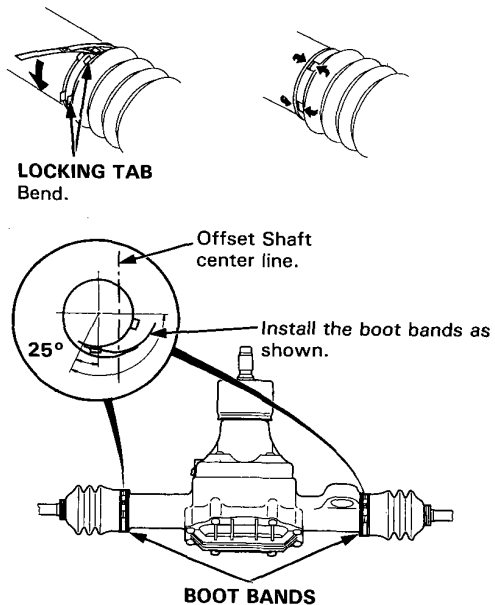## Tie-rod Replacement

Boot installation:

1. Install new boot bands on the boot and bend both sets of locking tabs.

2. Lightly tap on the doubled-over portions to reduce their height.

LOCKING TAB
Bend.

Offset Shaft center line.

Install the boot bands as shown.

25°

BOOT BANDS

NOTE: After installing the boot band, check that the boots are not twisted or distorted.