


## Rear Edge Closing Adjustment ——


Open the glass about a foot, then close it to check where the rear edge begins to rise, if it rises too soon and seats too tightly against the roof molding, or too late and does not seat tightly enough, adjust it.

- 1. Open the glass fully.
- 2. Remove the rail covers from both sides, and loosen lift-up guide nuts.

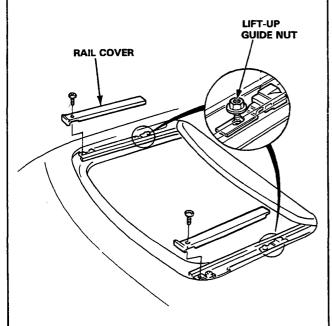

Move the guides forward or back, then tighten the nuts and recheck roof closing.

The guides have pitches of 1.5 mm (0.06 in.) each and can be adjusted 2 pitches forward or back.

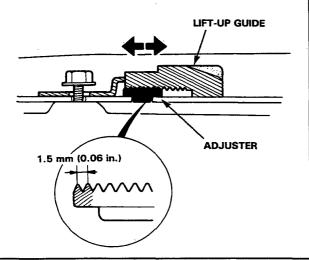

## ¬ ┌ Glass Height Adjustment

Roof panel should be even with the glass weatherstrip, to within  $1 \pm 1.5$  mm (0.04  $\pm$  0.06 in). all the way around. If not, slide the sunshade back, and:

- Pry the plug out of the glass mount bracket cover, remove screw, then slide the cover off to the rear.
- Loosen the mount bracket nuts and install shims between the glass frame and bracket as shown.
- 3. Repeat on opposite side if necessary.

