
Doors


24. Remove the door protector by removing the nut and clips from the inside.

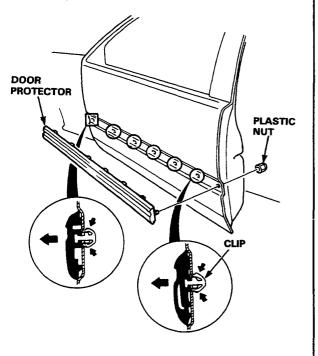


Assembly -

Assemble the door in the reverse order of disassembly, and also:

 Grease all the sliding surfaces of the window regulator where shown.

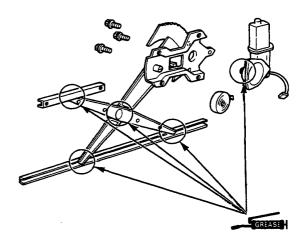


To adjust window fit in the door, raise the window as far up as possible and hold it against the door sash. Then, tighten the roller guide bolts or motor mount bolts.

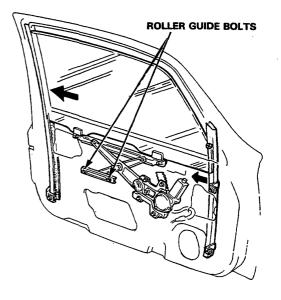

Doors


Assembly (cont'd) -

3. Fix the wire harness correctly on the door.

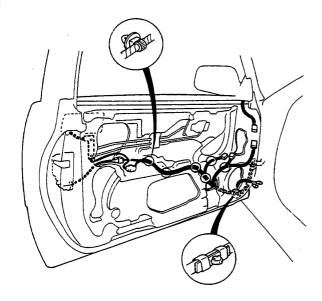

 When reinstalling the plastic cover, apply adhesive along the edge where necessary to maintain a continuous seal and prevent air/water leaks.

NOTE: Repair any torn sections of the plastic cover.

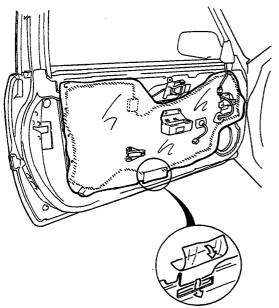

Install the regulator handle so it points backward, and up at a 45 degree angle with the window closed.

