
Power Door Mirror


Removal -

- Remove the door panel and disconnect the power mirror connector.
- Pry out the cap with a flat-tip screwdriver and remove the screw, then remove the cover panel.
- Remove the two clips and turn over the lower weatherstrip until the mirror mounting screws are visible.
- 4. Remove the mirror mounting screws while holding the mirror.

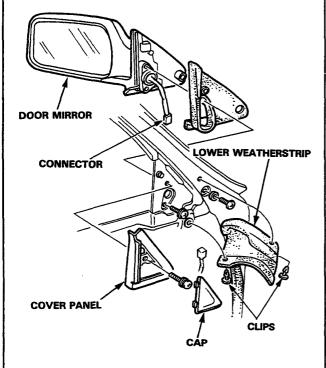

Mirror Glass Replacement -

 Heat the edge of the glass with a low powered heat gun for several minutes, then remove the glass.

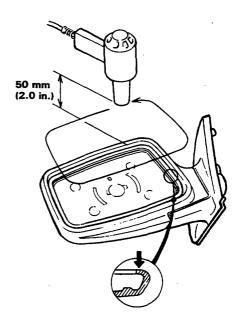

2. Install the glass in the mirror case, narrow end first.

