
## **Manual Door Mirror**




## Removal -

- 1. Remove the door panel.
- Remove the knob cap and screw, then remove the control knob.
- Pry out the cap with a flat-tip screwdriver and remove the screw, then remove the cover panel.
- Remove the two clips and turn over the lower weatherstrip until the mirror mounting screws are visible.
- Remove the mirror mounting screws while holding the mirror.

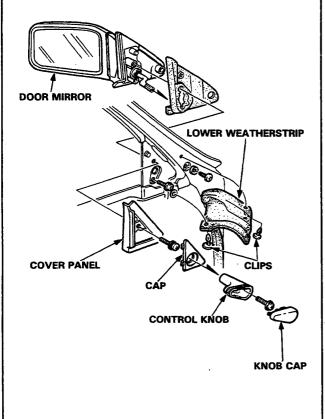


## Mirror Glass Replacement

Insert a screwdriver in the mirror through the service hole, and loosen the glass retaining screw.

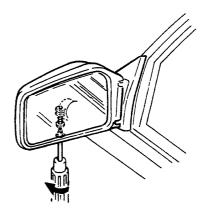

Carefully pry out the mirror with a screwdriver as shown.

CAUTION: To prevent damage to the mirror, wrap the end of the screwdriver with a rag or shop towel.

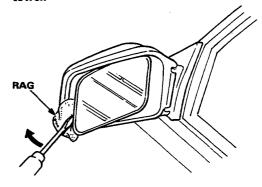

Install the mirror in the reverse order of removal, and also apply grease to the location shown.

