

**date** 07/18/2014

page 1 of 8

# SERIES: AMT10 | DESCRIPTION: MODULAR INCREMENTAL ENCODER

#### **FEATURES**

- patented capacitive ASIC technology
- low power consumption
- CMOS outputs
- 16 DIP switch selectable resolutions
- index pulse
- modular package design
- straight (radial) and right-angle (axial) versions
- 9 mounting hole options for radial version
- 8 mounting hole options for axial version
- -40~100°C operating temperature





## **ELECTRICAL**

parameter	conditions/description	min	typ	max	units
·			сур		units
power supply	VDD	3.6	5	5.5	V
current consumption	with unloaded output		6		mA
output high level		VDD-0.8			V
output low level				0.4	V
output current	CMOS sink/source per channel			2	mA
rise/fall time			30		ns

## **INCREMENTAL CHARACTERISTICS**

parameter	conditions/description	min	typ	max	units
channels	quadrature A, B, and X index				
waveform	CMOS voltage square wave				
phase difference	A leads B for CCW rotation (viewed from front)		90		degrees
quadrature resolutions <sup>1</sup>	48, 96, 100, 125, 192, 200, 250, 256, 385, 400, 500, 512, 800, 1000, 1024, 2048				PPR
index <sup>2</sup>	one pulse per 360 degree rotation				
accuracy			0.25		degrees
quadrature duty cycle (at each resolution)	256, 512, 1024, 2048 48, 96, 100, 125, 192, 200, 250, 384, 400, 500 800, 1000	49 47 43	50 50 50	51 53 56	% % %

Notes: 1. Resolution selected via adjustable DIP switch

<sup>2.</sup> Some stepper motors may leak a magnetic field causing the AMT index pulse to not function properly (non-magnetic version available with 8 pulses per revolution).

# **MECHANICAL**


parameter	conditions/description	min	typ	max	units
motor shaft length		9			mm
weight	AMT102 AMT103		20.5 14.0		g g
axial play				±0.3	mm
rotational speed (at each	192, 384, 400, 500, 800, 1000, 1024, 2048			7500	RPM
resolution)	48, 96, 100, 125, 200, 250, 256, 512			15000	RPM

# **ENVIRONMENTAL**

parameter	conditions/description	min	typ	max	units
operating temperature		-40		100	°C
humidity	non-condensing			95	%
vibration	20~500 Hz, 1 hour on each XYZ			10	G
shock	11 ms, ±XYZ direction			50	G
RoHS	2011/65/EU				

# **WAVEFORMS**

Figure 1 Quadrature signals with index showing counter-clockwise rotation

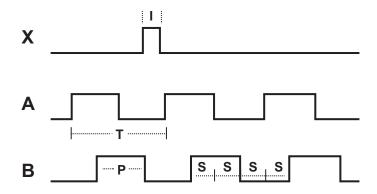


The following parameters are defined by the resolution selected for each encoder, where  $R = \mbox{resolution}.$ 

Parameter	Description	Expression	Units
Т	period	360/R	mechanical degrees
Р	pulse width	T/2	mechanical degrees
I	index width	P/2	mechanical degrees
S	A/B state width	P/2	mechanical degrees

### **PART NUMBER KEY**

For customers that prefer a specific AMT10 configuration, please reference the custom configuration key below.

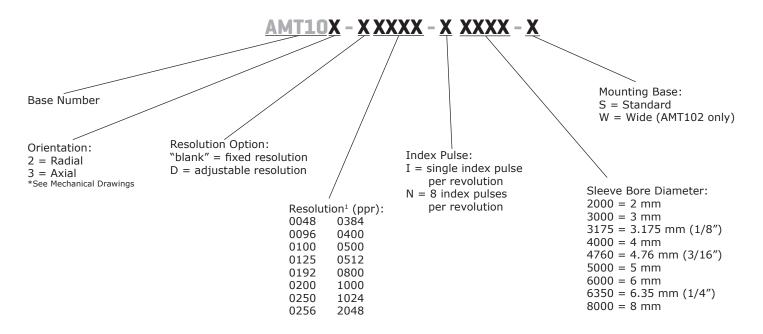


Note:

1. Fixed resolutions are permanently set at this value; adjustable resolutions are preset via DIP switch to this value upon shipment.

#### **AMT10-V KITS**

In order to provide maximum flexibility for our customers, the AMT10 series is provided in kit form standard. This allows the user to implement the encoder into a range of applications using one sku#, reducing engineering and inventory costs.

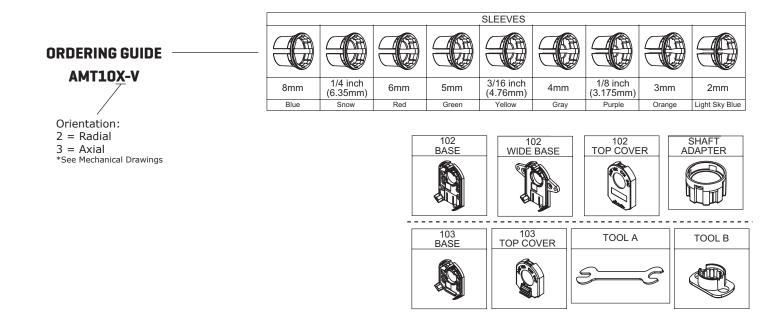


# **RESOLUTION SETTINGS**

1 = 0n, 0 = 0ff

Resolution (PPR)	Maximum RPM	1	2	3	4
2048	7500	0	0	0	0
1024	7500	0	0	1	0
1000	7500	1	0	0	0
800	7500	0	1	0	0
512	15000	0	0	0	1
500	7500	1	0	1	0
400	7500	0	1	1	0
384	7500	1	1	0	0
256	15000	0	0	1	1
250	15000	1	0	0	1
200	15000	0	1	0	1
192	7500	1	1	1	0
125	15000	1	0	1	1
100	15000	0	1	1	1
96	15000	1	1	0	1
48	15000	1	1	1	1

#### **DIP** switch:

Example setting: 500 PPR




## **ENCODER INTERFACE**

PINOUT CONNECTOR					
	Function				
#	AMT102	AMT103			
В	B CHANNEL	B CHANNEL			
5V	+5 V	+5 V			
Α	A CHANNEL	A CHANNEL			
Χ	INDEX CHANNEL	INDEX CHANNEL			
G	GND	GND			
Т	UNUSED	N/A			

# AMT102

# AMT102

# **AMT103**

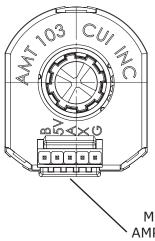


Mating Connector: Molex 50-57-9405 Housing Molex 16-02-0086 Terminals Mating Connector: AMP 3-640440-5 (tin) AMP 3-641237-5 (gold)

# **MECHANICAL DRAWING**


#### **AMT102**

units: mm[inch] tolerance: ±0.1mm

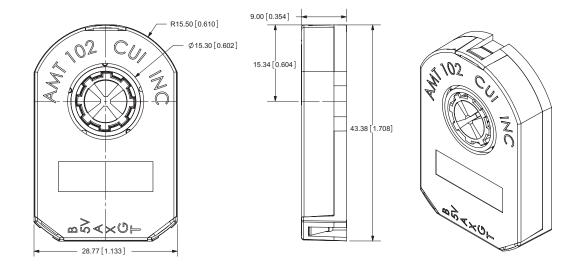


#### **AMT102 WIDE BASE**

units: mm[inch] tolerance: ±0.1mm

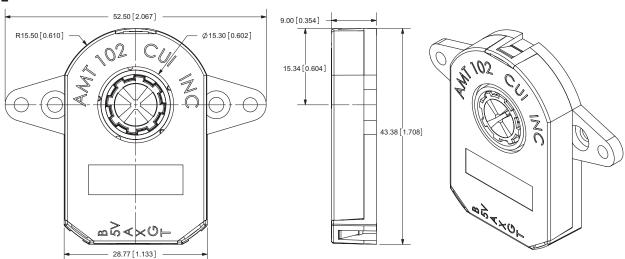

### **AMT103**

units: mm[inch] tolerance: ±0.1mm

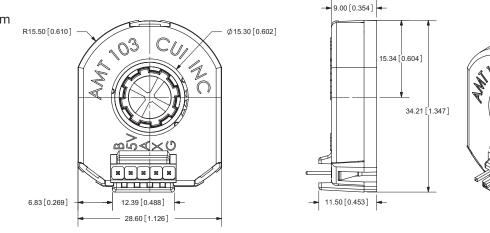


# **MECHANICAL DRAWING (CONTINUED)**

#### **MOUNTING HOLE PATTERNS**


#### **AMT102**

units: mm[inch] tolerance: ±0.1mm

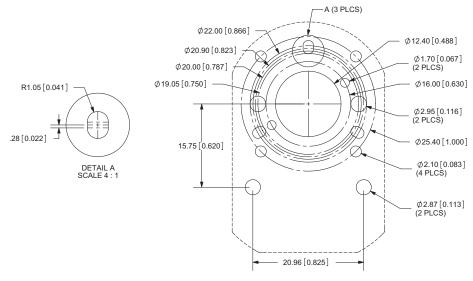


#### **AMT102 WIDE BASE**

units: mm[inch] tolerance: ±0.1mm

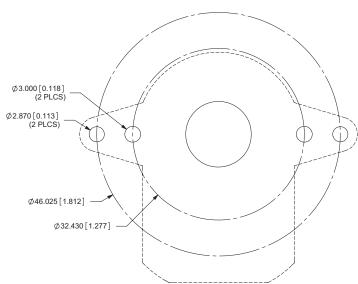


#### **AMT103**


units: mm[inch] tolerance: ±0.1mm

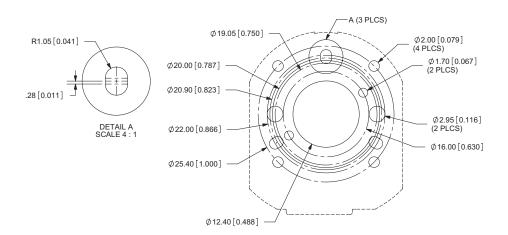


## **ASSEMBLY PROCEDURE**

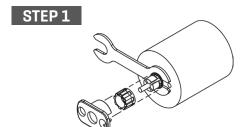


- 1. Insert Tool A as a spacer that defines the distance to the mounting surface.
- 2. Slide appropriate sized Sleeve over shaft all the way down to Tool A.
- 3. Slide Shaft Adaptor over Sleeve.
- **4**. Use Tool B to press Shaft Adaptor over Sleeve until flush with Tool A.

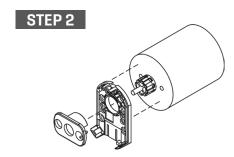


- 1. Remove Tools A and B.
- 2. Place Base on motor, with Tool B used as a centering tool.

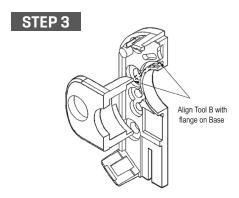

- 1. Align Tool B with flange on Base.
- 2. Slide Base and Tool B onto motor, centering onto the Shaft Adapter.

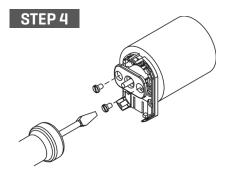


- 1. Fasten the Base on the motor.
- 2. Remove Tool B.

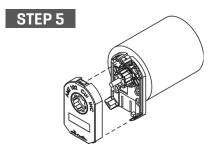

- 1. Slide the Top Cover onto the Base, carefully observing that the teeth of the Shaft Adaptor align with the grooves in the hub.\*
- \* We recommend no more than three cycles of mounting and removal of the AMT top cover base. Multiple cycles of mounting and removing the top cover can cause base fatigue over time and affect encoder performance.





- 1. Make sure the snaps are fully engaged and the Top Cover is flush with the Base.
- 2. When assembly is finished, the Shaft Adaptor should be about flush with the front of the Encoder and the Motor Shaft should rotate freely.

# **REVISION HISTORY**

rev.	description	date
1.0	initial release	05/04/2011
1.01	updated electrical specifications	07/11/2011
1.02	updated electrical specifications	09/16/2011
1.03	updated resolution table and electrical specifications	10/18/2012
1.04	updated part number key	11/20/2012
1.05	updated spec, updated DIP switch table	07/26/2013
1.06	updated spec	01/03/2014
1.07	updated part number key	04/14/2014
1.08	updated spec	07/18/2014

The revision history provided is for informational purposes only and is believed to be accurate.



Headquarters 20050 SW 112th Ave. Tualatin, OR 97062 800.275.4899

Fax 503.612.2383 cui.com techsupport@cui.com

CUI offers a one (1) year limited warranty. Complete warranty information is listed on our website.

CUI reserves the right to make changes to the product at any time without notice. Information provided by CUI is believed to be accurate and reliable. However, no responsibility is assumed by CUI for its use, nor for any infringements of patents or other rights of third parties which may result from its use.