

If something's off

PROBLEM	TRY THIS
Won't pair	Unplug/replug the sensor (fresh 15-minute pairing window), delete any half-added entry in Google Home, retry and wait the full 5 minutes.
Shows "offline"	Check your Nest hub/router is online, then power-cycle the sensor — it rejoins in seconds.
Occupied when empty	A fan, curtain, or big plant is moving in the beam — re-aim the sensor away from it.
Start over	Pop the sensor out of the mount and hold the tiny BOOT button for 3+ seconds while powered: full factory reset, then pair again.


Before your first pairing: this is a small-batch device using Matter test IDs. The Gmail account you use with Google Home must be on the maker's developer project first — send it over before you start, or the app will refuse the device.

Questions or weird behavior? Tell Corbin — each report makes the next batch better.

DIY MATTER · WORKS WITH GOOGLE HOME

mmWave Presence Sensor

Sees people — even sitting perfectly still
— and turns that into an occupancy
signal your home can act on.

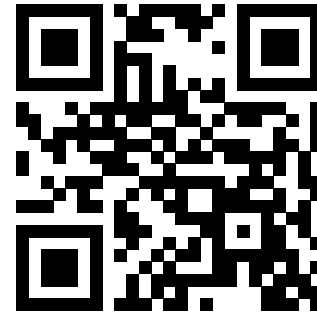

Scan with the Google Home app to add it

or enter the setup code manually:

0109-114-9528


UNIT 001 · THIS CODE IS UNIQUE TO THIS DEVICE

1 Check what you need

- **A Thread border router** on your Wi-Fi: Nest Hub (2nd gen), Nest Hub Max, Nest Wifi Pro, or Google TV Streamer. Without one it can't join.
- **Google Home app**, Bluetooth on, and **USB-C power** near the spot (any phone charger).
- Your Gmail added to the maker's developer project — see the back cover.


2 Snap the sensor into the mount

1. One layer of **foam tape flat on the pocket floor**.
2. Radar side (white board) **faces out**; USB-C toward the open slot.
3. Slide one edge **under the wide lip**, press the other until it **clicks past the tabs**.
4. Remove by lifting the tab edge with a fingernail.

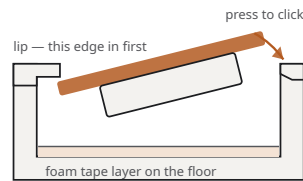


3 Pick the spot

- **Wedge mount:** flat wall, ~2.2-2.7 m up, facing the room. It aims the radar 45° down.
- **Corner mount:** top corner of the room, near the ceiling.
- Wide beam ($\pm 60^\circ$), ~5 m reach walking, less when still — point it at where people actually are.
- Avoid fans, swaying plants, and thin shared walls (radar sees through them a little).
- **Cable slot faces the floor.**

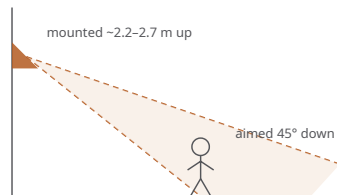

4 Stick it to the wall

- Wipe the wall (isopropyl is best), let it dry.
- Foam tape **only on the raised strips**: the two back rails (wedge) or the pad at each wing end (corner). The rest of the back is recessed on purpose.
- Press **30 seconds right over the taped areas** — corner mount: press the wing ends, not the middle.

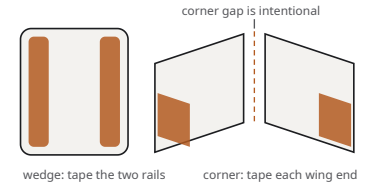

5 Power it & pair

1. Cable out of the bottom slot, into any USB-C charger. A slow-blinking light means it's running; each power-up opens a fresh 15-minute pairing window.
2. Google Home app: **Devices** → **Add** → **Matter-enabled device**.
3. **Scan the QR on the front of this pamphlet** (or type **0109-114-9528**).
4. Accept the "device isn't certified" notice, pick your Thread network, give it a room.
5. **Don't cancel** — slow attempts finish late rather than fail. Give it up to 5 minutes.

6 Make it do things

It shows up as an **occupancy sensor**. In Google Home automations use the starter *"Occupancy → Occupied / Unoccupied"*: lights on when someone walks in, off a little after the room empties. It trips within a second or two and clears several seconds after the room is truly empty — no flickering while you sit still. That's the whole point.