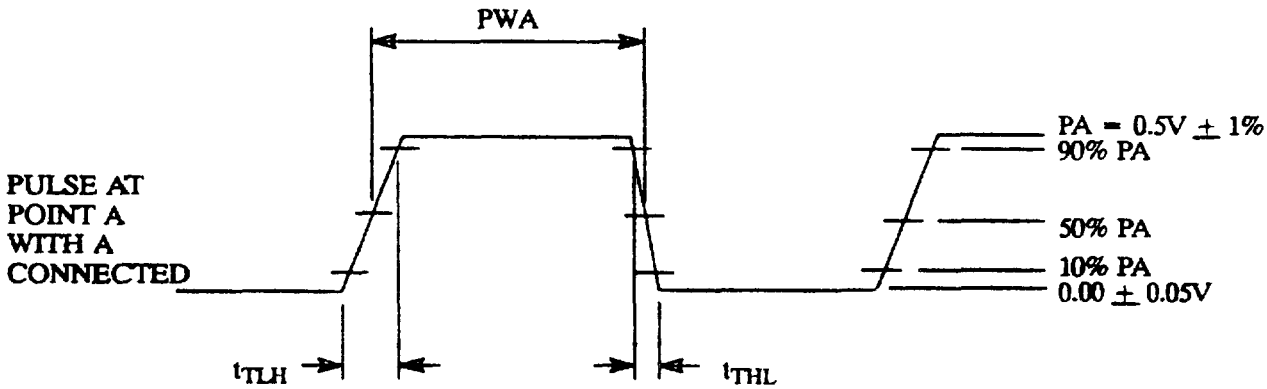

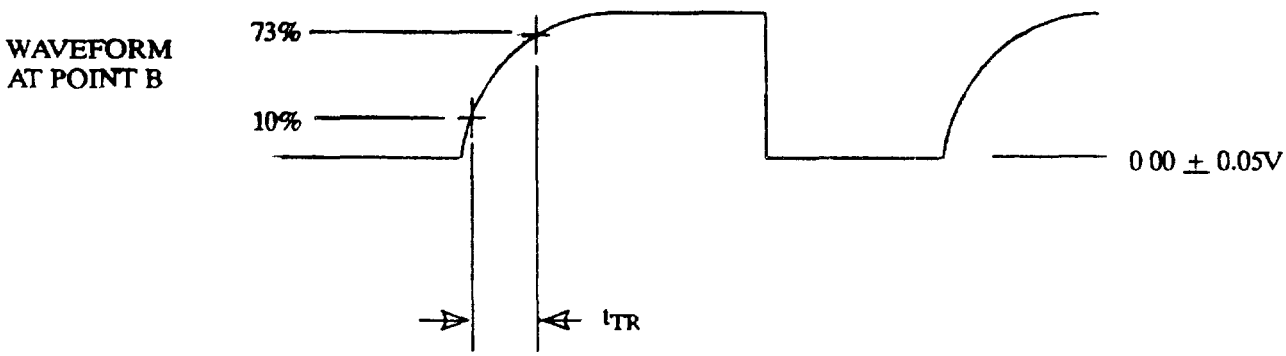

NOTES:
1. Input pulse parameters
   PWA = 30us ± 10%
   $t_{TLH} = t_{THL}$ = 50ns ± 10%
   PRP = 60us ± 10%
2. Measure t_{TR} at point B

FIGURE 15 Power supply transient rise time test circuit waveforms at table XI.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T15:23Z
Check the source to verify that this is the current version before use.