INCH-POUND


MIL-DTL-16377/76 (SH)
27 September 2004

DETAIL SPECIFICATION SHEET

FIXTURES, LIGHTING; FLUORESCENT, EMERGENCY LIGHTING 60 AND 80 WATTS, 120 VOLTS, 60 HERTZ, DRIP-PROOF, SYMBOLS 348EM AND 349EM

This specification is approved for use by the Naval Sea Systems Command and is available for use by all Departments and Agencies of the Department of Defense.

The requirements for acquiring the product described herein shall consist of this document and the latest issue of MIL-DTL-16377.

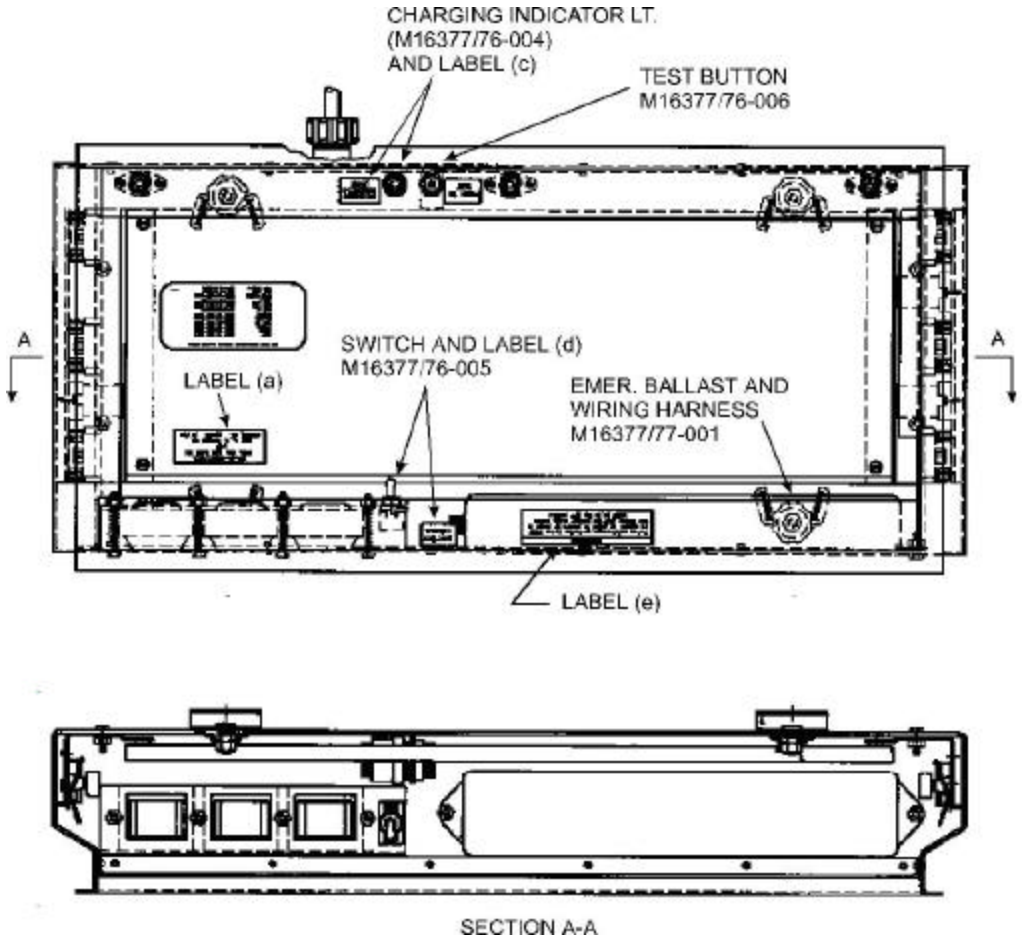


SECTION A-A

NOTES:

1. For dimensional data, see Figures 2 and 3 of MIL-DTL-16377/57.
2. For tolerances, other than specified herein, see 3.5.2 of MIL-DTL-16377.

FIGURE 1. Typical view of symbol 348EM.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.

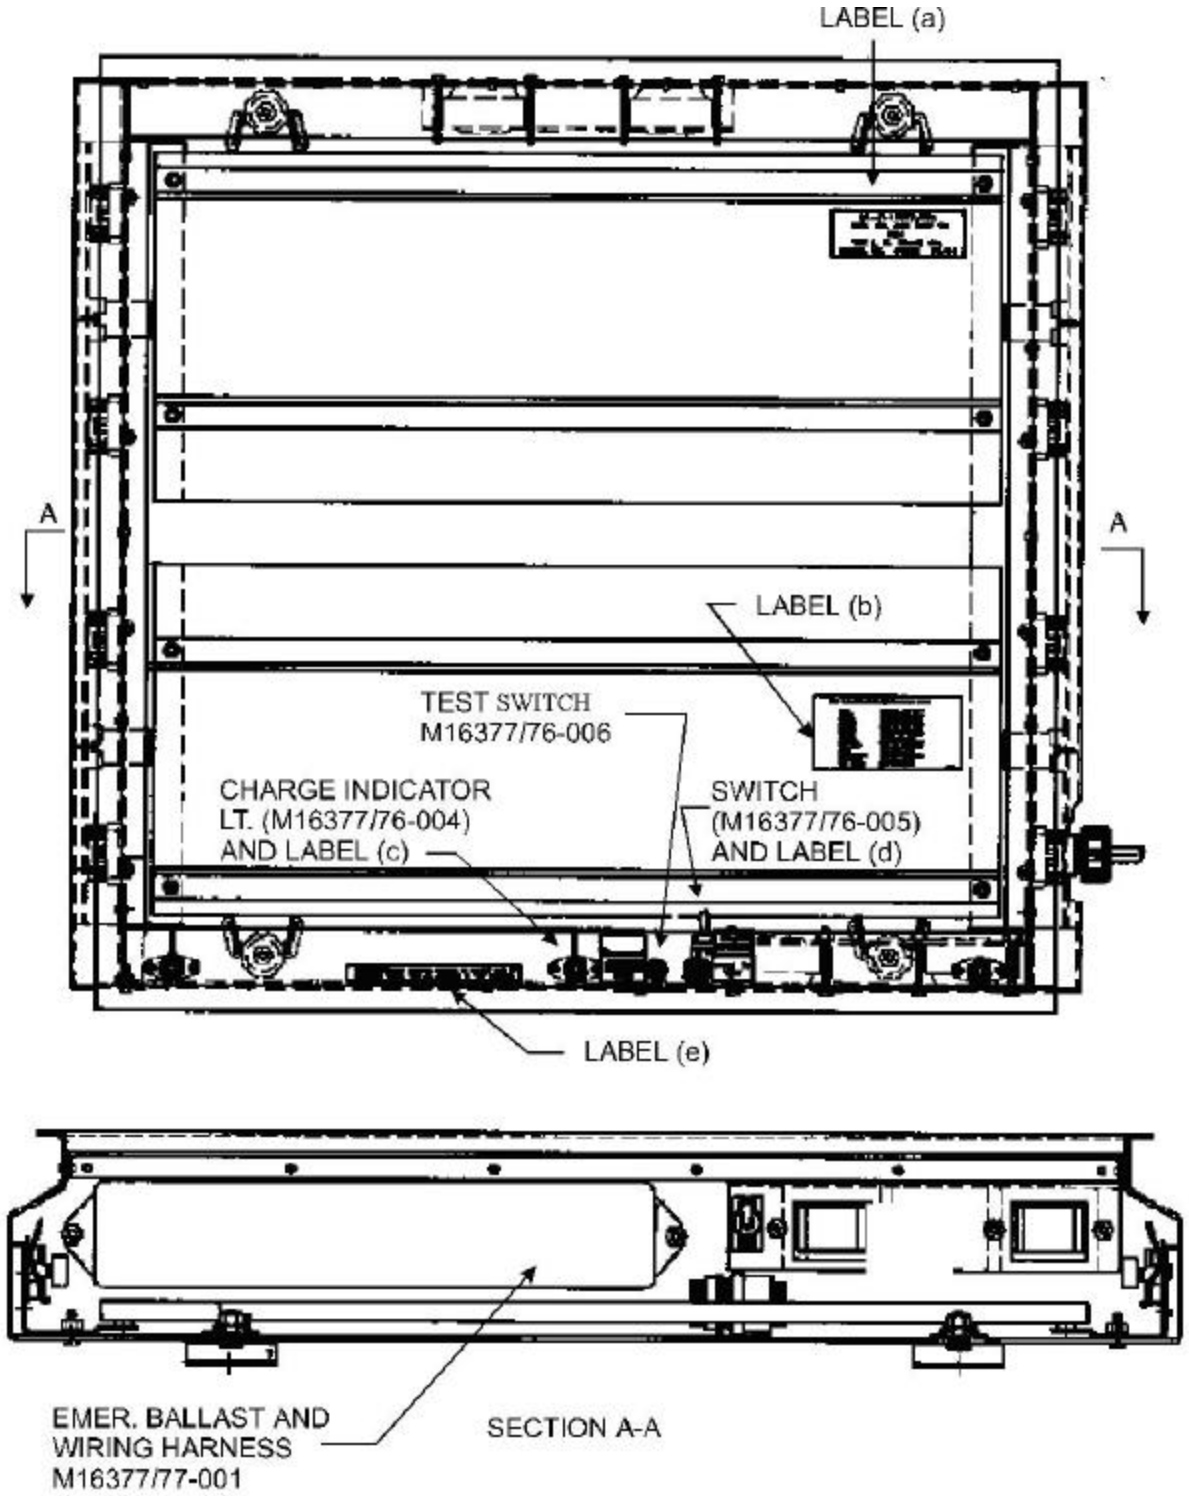


NOTES:

1. For dimensional data, see Figures 2 and 4 of MIL-DTL-16377/57.
2. For tolerances, other than specified herein, see 3.5.2 of MIL-DTL-16377.

FIGURE 2. Typical view of symbol 349EM.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.

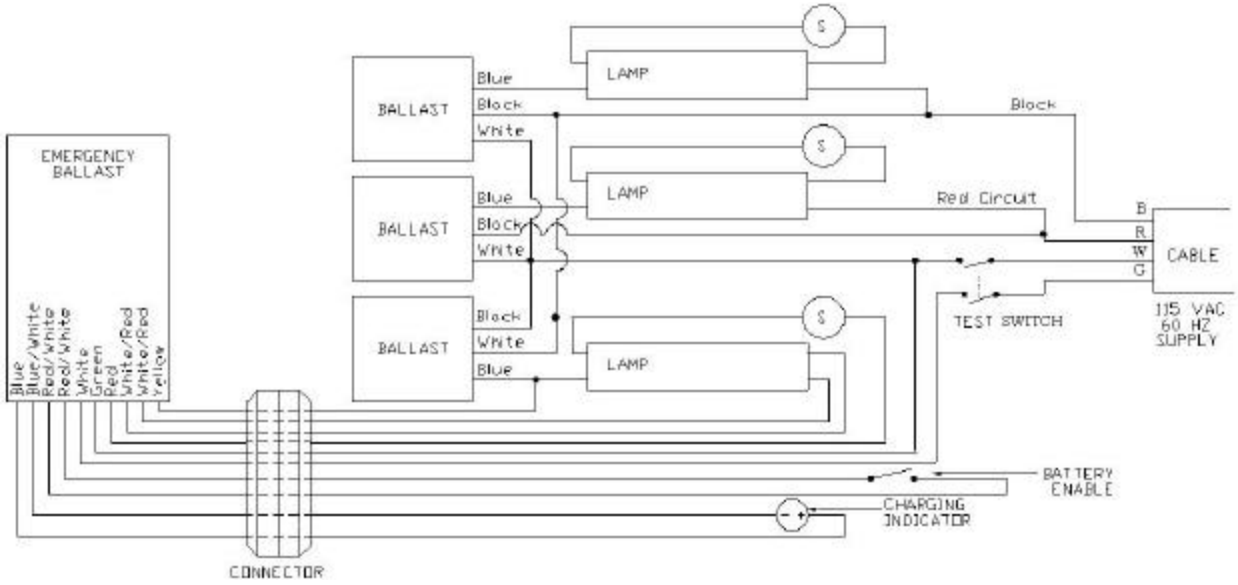


NOTES:

1. Ballast black & white wiring not color coded with input cable black & white, emergency lamp only.
2. Emergency ballast white & green wiring not color coded with input cable white & green.

FIGURE 3. Wiring diagram for symbol 348EM.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.

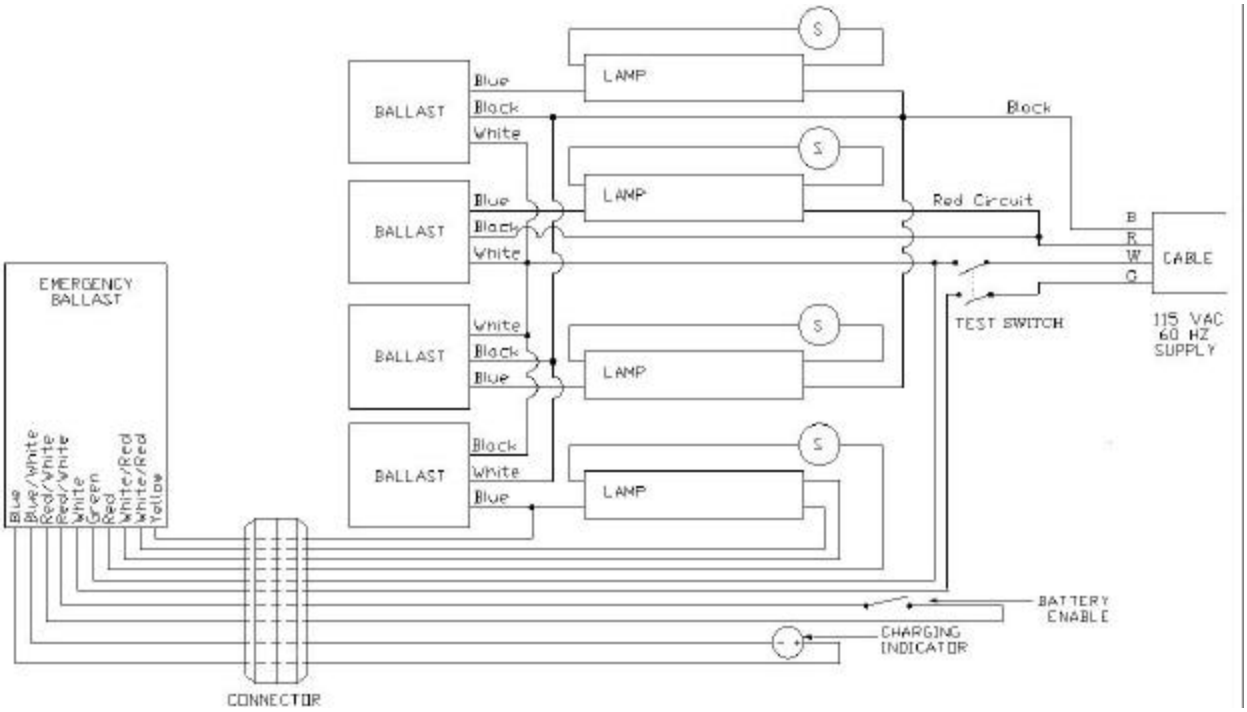

NOTES:

1. Ballast black & white wiring not color coded with input cable black & white, emergency lamp only.
2. Emergency ballast white & green wiring not color coded with input cable white & green.

FIGURE 4. Wiring diagram for symbol 349EM.

REQUIREMENTS:

CLASSIFICATION:

Type: I
Class: 2

SYMBOL NUMBERS:

348EM: Complete lighting fixture assembly, flush mounting with three 20-watt cool white fluorescent lamps, clear prismatic window and fluorescent emergency ballast.

349EM: Complete lighting fixture assembly, flush mounting with four 20-watt cool white fluorescent lamps, clear prismatic window and fluorescent emergency ballast.

DESIGN:

Electrical rating: 60 and 80 watts, 120 volts, 60 hertz.
Dimension and configurations: See Figures 1, 2, 3 and Figure 4 of MIL-DTL-16377/57.
Photometric data: See Figures 11 and 12 of MIL-DTL-16377/57.
Lampholder spacing: See Figure 21 of MIL-DTL-16377
Wiring diagram: See Figure 3 for Symbol 348EM or Figure 4 for Symbol 349EM.
Mounting dimensions:
Symbol 348EM and 349EM: See Figure 10 of MIL-DTL-16377/57.
Enclosure: Drip-proof 15 degrees.
Cable: 10 feet of type LSFHOF-3 in accordance with MIL-DTL-24643/3.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.

Weight:
Symbol 348EM: 21 lbs. maximum
Symbol 349EM: 28 lbs. maximum

Designation and marking: The following labels shall be furnished in accordance with MIL-DTL-16377. Labels (a) and (b) in accordance with MIL-DTL-16377/57. Labels (c), (d), and (e) as shown on Figures 1 and 2:

(a) Two Type I labels.
(b) One type IV label. One type IV label shall be applied as shown on Figures 1 and 2. The information to be shown on the type IV label shall be "USE THE FOLLOWING REPAIR PARTS ONLY". List all standard parts shown in Table I by name and stock number only.
(c) One type IV label. The information to be shown on the type IV label shall be "CHARGING INDICATOR LIGHT".
(d) One type IV label. The information to be shown on the type IV label shall be "BATTERY ENABLE".
(e) One type V label. The information to be shown on the type V label shall be "DURING MAINTENANCE, PROTECTIVE DEVICE MUST BE OPENED OR PULLED TO SECURE AC POWER TO THIS FIXTURE AND THE BATTERY ENABLE SWITCH MUST BE IN THE OFF POSITION".

Standard Parts: The standard parts and their respective part numbers shown in Table I shall be used in the construction of the fixtures specified herein.

TABLE I. Standard parts.

Part Number	Description	Specification/Material	Remarks
M16377/76-001	Lighting assembly	M16377/57-348	For use with Symbol 348EM
M16377/76-002	Lighting assembly	M16377/57-349	For use with Symbol 349EM
M16377/76-003	Mating harness	AMP part No. 206043-1 or equal	Mates with M16377/77-001
M16377/76-004	Indicator light	Commercial	LED type
M16377/76-005	Switch (DPST)	MS16569	
M16377/76-006	Test Switch	Commercial	Double pole, Test Switch with rubber boot
M16377/77-001	Emergency ballast with wiring harness	AMP part No. 206043 or equal	Mates with M16377/76-003

NOTE: Switch shall normally be left in the "Battery Enable" Position.

EXAMINATION AND TESTS: Examination and tests shall be as specified in MIL-DTL-16377 ands as follows:
First article inspection:
Complete fixtures: See Table II.
Conformance:
Comparison inspection: Same as the first article inspection.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.

TABLE II. First article and comparison inspection for complete fixtures.

Test	Requirement	Test Method	Remarks
Examination	3.13	4.5	
Operation	3.13	4.8.1	
Dielectric withstanding voltage	3.6.15	4.8.2	
Insulation resistance	3.6.16	4.8.3	
Enclosure effectiveness	3.5.11	4.8.14.4	Drip-proof
Shock	3.5.12	4.8.7	
Vibration	3.5.13	4.8.8	
Enclosure effectiveness	3.5.11	4.8.14.4	Drip-proof
Dielectric withstanding voltage	3.6.15	4.8.2	
Insulation resistance	3.6.16	4.8.3	
Noise	3.5.14	4.8.9	
Continuity of grounding	3.6.13.4	4.8.12	
Light output	3.7.1	4.8.6.1	Candlepower
Optical uniformity	3.7.4.1.1	4.8.4	
Stress relief	3.8.5.3	4.8.5	
Magnetic permeability	3.4.8	4.8.18	

Custodians:
Navy - SH
DLA - IS

Preparing activity:
Navy - SH
(Project 6210-N004)

NOTE: The activities listed above were interested in this document as of the date of this document. Since organizations and responsibilities can change, you should verify the currency of the information above using the ASSIST Online database at www.dodssp.daps.mil.

Source: https://assist.dla.mil -- Downloaded: 2026-10-18T08:54Z
Check the source to verify that this is the current version before use.