MIL-G-45980(WC)

2 March 1976

MILITARY SPECIFICATION

GUN, AIR DEFENSE ARTILLERY, 20MM: SELF-PROPELLED, M163A1

This specification is approved for use by the Rock Island Arsenal, Department of the Army, and is available for use by all Departments and Agencies of the Department of Defense.

1. SCOPE

1.1 This specification covers one type of Air Defense Weapon System which consists of an electrically powered, six-barrel, 20 millimeter (mm) gun with linkless feed and ammunition system, radar range, lead computing sight and fire control system mounted in a full-tracked personnel carrier. The M163A1 Self-Propelled, 20MM, Air Defense Artillery Gun is hereafter referred to as the weapon system.

2. APPLICABLE DOCUMENTS

2.1 Issues of documents. The following documents of the issue in effect on the date of invitation for bids or request for proposal, form a part of this specification to the extent specified herein.

SPECIFICATIONS

Military

MIL-W-13855	-	Weapons: Small Arms and Aircraft Armament Subsystems, General Specification for
MIL-P-14232	-	Parts, Equipment and Tools for Army Materiel, Packaging and Packing of
MIL-G-45500/3	-	Gun, Automatic, 20MM: M168
MIL-I-45607	-	Inspection Equipment, Acquisition Maintenance and Disposition of
MIL-R-50651	-	Radar Set, AN/VPS-2: 10549058 (Range Only Radar)
MIL-S-60661	-	Sight, Lead-Computing, M61 for Gun, Anti-Aircraft Artillery, Self-Propelled, 20mm, XM163 and Towed, 20mm, XM167
MIL-G-60662	-	Generator, Sight Current

FSC 2350

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

MIL-F-60664 - Fire Control for Gun, Anti-Aircraft Artillery, Towed, 20mm, XM167 and Gun, Anti-Aircraft Artillery, Self-Propelled, 20mm, XM163

STANDARDS

Federal

Fed. Std. No. 356 - Commercial Packaging of Supplies and Equipment

Military

MIL-STD-109 - Quality Assurance Terms and Definitions
MIL-STD-461 - Electromagnetic Interference Characteristics Requirements for Equipment
MIL-STD-810 - Environmental Test Methods

DRAWINGS

Rock Island Arsenal

F8437388 - Interface Control, XM163, SP Gun, 20MM,AA
F12007502 - Gun, Air Defense Artillery, SP, 20MM; M163A1

(Product drawings referenced in this specification form a part of Drawing F12007502.)

PUBLICATIONS

Rock Island Arsenal

P12007500 - Packaging Data Sheet for Gun, Air Defense Artillery, Self-Propelled, 20MM: M163A1, W/E
QE-G-DL12007502 - Quality Engineering Data List

(Copies of specifications, standards, drawings and publications required by suppliers in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

3. REQUIREMENTS

3.1 First article. Requirements for submission of first article shall be as specified in the contract (see 6.2). Unless otherwise specified (see 6.2), the first article shall include the pilot pack (see 5.1).

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.2 Material, construction and design. The weapon system shall conform to the material, construction and design requirement specified herein, on Drawing F12007502 and in MIL-W-13855.

3.2.1 Gun, M168. The 20mm automatic M168 gun shall be in accordance with MIL-G-45500/3.

3.2.2 Range radar AN/VPS-2. The AN/VPS-2 range radar shall be in accordance with MIL-R-50651 and MIL-F-60664.

3.2.3 Lead computing sight, M61. The M61 lead computing sight shall be in accordance with MIL-S-60661 and MIL-F-60664.

3.2.4 Sight current generator. The sight current generator shall be in accordance with MIL-G-60662 and MIL-F-60664.

3.2.5 Weapon chassis, full-tracked, M741. The weapon shall assemble to an M741 full-tracked armored personnel carrier. The weapon and the weapon chassis shall meet the interface requirements in accordance with Drawing F8437388.

3.3 Performance characteristics.

3.3.1 Warm-up. The weapon system shall require no more than one hour to warm up from -40°F, and no more than four minutes at +60°F or above, to become operable in the test, radar, manual, external and ground mode. Testing shall be as specified in 4.5.2.2.

3.3.1.1 Test mode. The weapon system, when placed in the TEST MODE, shall indicate that the weapon system is operational by the illumination of test completed light. Testing shall be as specified in 4.5.2.2.

3.3.1.2 Radar mode. The weapon system, when placed in the RADAR MODE, shall permit the following functions when actuating either or both of the action switches located in the hand grips: Testing shall be as specified in 4.5.2.2.

a. Slew the gun and gun mount to acquire the target in the reticle of the lead-computing sight.
b. Cause the radar to radiate by depressing and holding the radar-radiate foot switch while continuing to track the target. The ready-to-fire indicator shall be energized when the target is acquired.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

c. Fire the gun by depressing the right hand trigger switch.
d. Return the system to the standby condition by releasing the trigger switch, the action switches, and the radar-radiate foot switch.

3.3.1.3 Manual mode. The weapon system, when placed in the MANUAL MODE, shall permit the following functions: Testing shall be as specified in 4.5.2.2.

a. The sight reticle shall have correct directional response to each potentiometer setting.
b. Slew the gun and gun mount to acquire the target in the sight reticle after actuating either or both of the action switches located in the hand grips.
c. Complete the firing circuit by depressing the right hand trigger switch and actuating either or both of the action switches located in the hand grip.

3.3.1.4 External mode. When the weapon system is placed in the EXTERNAL MODE and the remote control assembly installed, the remote operator shall provide the range setting and energize the ready-to-fire indicator lamp in the sight. Corresponding settings in the external mode shall result in the same directional response obtained in the manual mode. Testing shall be as specified in 4.5.2.2.

3.3.1.5 Ground mode. The weapon system, when placed in the GROUND MODE of operation, shall not require functioning of the inverter or the radar. The ground mode shall permit the following functions: Testing shall be as specified in 4.5.2.2.

a. The sight to be mechanically caged at a superelevation of -7 ± 2 milliradians.
b. Illumination of the sight reticle.
c. An operator to slew, elevate, and aim the gun after actuating either or both of the action switches located in the hand grips.
d. An operator to fire the gun by depressing the right hand trigger switch and activiting either or both of the action switches located in the hand grips.

3.3.2 Design functions. The weapon system controls and indicators shall sequentially function by manual and automatic means to accomplish the events in each mode of operation as specified on Figure 1. Functional requirements shall be in accordance with 3.3.2.1 through 3.3.2.4 and MIL-F-60664. Testing shall be as specified in 4.5.2.2.

3.3.2.1 Sight caging.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.2.1.1 Mechanical caging of a sight. When the caging knob is positioned in full clockwise position the sight shall be caged mechanically to lock the sight gyro in a position corresponding to 0 + 2 milliradians in azimuth and -7 + 2 milliradians in elevation with respect to the electrical cage position.

3.3.2.1.2 Electrical caging of sight. The sight shall be caged electrically in a zero lead angle position, as specified in MIL-S-60661, when activated by depressing the control button in the left hand grip assembly.

3.3.2.1.3 Electromechanical interlock. The sight shall include an electromechanical switch which shall prevent electrical power being applied to the system while the gyro is in uncaged position. A bypass circuit, using a shorting plug, shall be part of the interlock circuit.

3.3.2.2 Ready-to-fire indicator. The ready-to-fire indicator, located on the lead-computing sight, shall energize:

a. When all of the following conditions are present in the radar mode:

(1) Radar lock-on signal shall be present
(2) Target range is between 220 meters and 2200 meters incoming, and between 200 meters and 1600 meters outgoing
(3) Lead angle shall be less than 25 degrees as defined in MIL-S-60661
(4) The acquisition time delay is completed as defined in MIL-S-60661
(5) Gun elevation angle is less than 80 degrees

b. When turned on by the remote control switch (external mode).
c. At all times in manual mode.

3.3.2.3 Radar operational indicator. The radar operational indicator shall be energized when the system is in the test, radar or manual mode of operation and the radar is warmed up and ready to radiate. The ready-to-radiate status of the radar shall be achieved in not more than two minutes after selection of the radar, test or manual mode.

3.3.2.4 Radar radiate foot switch. The radar radiate foot switch shall cause the radar to radiate when depressed and the radar shall return to standby when pressure is released. CAUTION: Permanent injury may occur if subjected to direct radiation within two feet of the radar antenna feed horn. During the radiate period, operators shall not direct the antenna toward any personnel within twenty feet.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.3 System reaction time. With the following two conditions present, the weapon system shall slew 180 degrees and acquire, track, and fire on the target in not more than 10.5 seconds. Testing shall be as specified in 4.5.2.2.

a. Target velocity and lead angle equivalent to a sight sensitivity, as defined in MIL-S-60661, of less than three seconds.
b. Target within range and of a size that is sufficient for radar lock-on.

3.3.4 System fire control. The weapon system fire control operation shall be in accordance with MIL-F-60664. Testing shall be as specified in 4.5.2.2.

3.3.5 Rates of fire. The weapon system shall permit two rates of fire which shall be selectable by rotating the FIRING RATE switch on the control panel. The rates of fire at 70°F ± 30° ambient shall be as follows: Testing shall be as specified in 4.5.2.2.

a. Low rate of fire: 400 - 1300 shots per minute.
b. High rate of fire: 3000 - 4000 shots per minute.

3.3.6 Acceleration to firing rate. The weapon system shall attain a rate of 2700 shots per minute within 0.35 seconds from initial gun barrel cluster rotation. Testing shall be as specified in 4.5.2.2.

3.3.7 Burst limiting. The weapon system shall permit preselection for the minimum and maximum rounds to be fired while operating in the high rate of fire. The number of rounds to be fired shall be capable of adjustment and be selected by a high-burst limit position on the firing rate switch, located on the control panel, as follows: Testing shall be as specified in 4.5.2.2.

a. Hi-Burst Limit 10: 8 to 12 rounds.
b. Hi-Burst Limit 30: 27 to 33 rounds.
c. Hi-Burst Limit 60: 54 to 66 rounds.
d. Hi-Burst Limit 100: 90 to 110 rounds.

3.3.8 Field of fire. The weapon system shall have a field of fire defined for both azimuth and elevation as follows: Testing shall be as specified in 4.5.2.2.

a. Azimuth: 360° in either direction.
b. Elevation: from 5 ± 1 degrees below to 80 + 1 degrees above the horizontal reference line of the vehicle.

3.3.9 Slewing rate. The weapon system shall have a gun mount slewing rate of at least 70 degrees per second in azimuth and at least 60 degrees per second in elevation. The azimuth velocity shall be measured during the fourth revolution of the gun mount. The gun mount shall make 6 revolutions total. Testing shall be as specified in 4.5.2.2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.10 Gun mount acceleration. With maximum hand control signal, the initial gun mount acceleration shall be at least 160 degrees per second squared (second^2) in azimuth, and 160 degrees per second squared (second^2) in elevation; when measured from the start of gun mount movement. Initial acceleration is defined as the slope of a line through a point tangent to the velocity curve normalized for a 0.2 second increment. Testing shall be as specified in 4.5.2.2.

3.3.11 Weapon system interfaces.

3.3.11.1 Mechanical interface. The gun mount shall interface with the radar (3.2.2) and the weapon chassis (3.2.5) without interference and without decreasing vehicle maneuverability within tactical conditions. The mechanical assembly of the weapon system shall be in accordance with Drawing F12007502, F8437388 and F8437869. Testing shall be as specified in 4.5.2.2.

3.3.11.2 Electrical interface. The weapon system subassemblies and components shall have an electrical interface as shown on Drawing F8439106, F8437388, F8437869, D12007527 and F12007528. Testing shall be as specified in 4.5.2.2.

3.3.12 Rounds counters. The weapon system shall have three separate methods of counting rounds as follows: Testing shall be as specified in 4.5.2.2.

a. Rounds remaining counter: The resettable rounds remaining counter located on the control panel shall count down from a full load of ammunition to empty, in increments of ten rounds, as each ten-round group is fired. It shall be powered by electrical pulses from the rounds expended counter.
b. Rounds expended counter: The nonresettable rounds expended counter, located on drum drive assembly, shall count every ten round group cycled.
c. Rounds-remaining-to-fire windows: The drum assembly shall visually indicate approximate remaining rounds as shown (200, 400, 600 and 1000) within a tolerance of $\pm$ 10 percent.

3.3.13 No-damage stall and stop. The weapon system shall incur no damage when not firing and operated under the following conditions: Testing shall be as specified in 4.5.2.2.

a. When the gun mount is caused to stall as a result of any external interference, such as contact with stationary objects.
b. When the gun is run into the elevation stops at the slewing rate specified in 3.3.9.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.14 Elevation limit switch and stops. Elevation limit switches and mechanical stops shall assure conformance to requirements specified in 3.3.8.b and 3.3.23. Testing shall be as specified in 4.5.2.2.

3.3.15 Operation capability. The weapon system shall permit operation at both the high and low firing rates specified in 3.3.5 at any ambient temperature from -40°F to +125°F. The permissible degradation of the performance specified in 3.3.5 and 3.3.6 shall be 5, 10 and 15 percent respectively at 0°F, -20°F and -40°F. Testing shall be as specified in 4.5.2.2.

3.3.16 Declutching feeder. The declutching feeder shall not permit reverse flow of ammunition. The feeder shall not feed any rounds into the cannon during manual clearing. The declutching feeder shall completely disengage the weapon system ammunition feed system at the end of each firing cycle for a period to permit clearing of rounds from the gun assembly. Testing shall be as specified in 4.5.2.2.

3.3.17 Fire-out capability. The controlled conveyor system shall be capable of firing out all ammunition in the feed system. The feed system shall be capable of being loaded and fired with empty conveyor elements (containing no ammunition) and to function with all empty conveyor elements, without jamming. Testing shall be as specified in 4.5.2.2.

3.3.18 Loading bellmouth. A loading bellmouth shall permit loading of ammunition without causing the overload clutch to slip. Testing shall be as specified in 4.5.2.2.

3.3.19 Drum full switch. The drum full switch shall interrupt the electrical circuit to the drum drive motor of the drum (during loading) two to ten rounds before the drum is full. Testing shall be as specified in 4.5.2.2.

3.3.20 Link disposal system. Link disposal system shall be capable of disposing used ammunition links to the outside of the vehicle during loading or reloading of the ammunition drum without jamming. Testing shall be as specified in 4.5.2.2.

3.3.21 Azimuth indicator. The azimuth indicator shall be free to be positioned manually and shall retain its manually preset position with respect to the turret during the firing of the weapon system. The lower pointer of the azimuth indicator shall be in zero degrees position when the gun barrel cluster is oriented 26 degrees 30 minutes ± 2 degrees to the left of the travel lock position. Testing shall be as specified in 4.5.2.2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.22 Clearing.

3.3.22.1 Gun clearing switch (Power). When the GUN CLEAR switch is set in the AUTO position, the weapon system shall operate automatically to clear the gun. When the GUN CLEAR switch is held in the OPERATOR position, the gunner shall be capable of clearing the gun by depressing the action switch in the elevation handle. Testing shall be as specified in 4.5.2.2.

3.3.22.2 Brake-clear and brake switch (Manual). The BRAKE-CLEAR AND BRAKE switch is a three position switch which is spring loaded to the OFF (center) position. The BRAKE switch, when held in BRAKE position, shall release the gun drive motor brake and allow rounds to be cycled through the gun by manually rotating the gun barrel cluster. The BRAKE-CLEAR switch, when held in the BRAKE-CLEAR position, shall release the gun drive motor and energize the declutching feeder solenoid which shall prevent rounds from being fed into the gun. The spring loaded OFF position (center position) shall prevent the gun barrel cluster from being manually rotated. Testing shall be as specified in 4.5.2.2.

3.3.23 Safety sector interlock. The safety sector interlock shall stop gun barrel depression at 18 $\pm$ 3 degrees elevation over open personnel hatches. The interlock shall stop the gun from traversing across the open hatches when the gun is from minimum elevation to 10 degrees. When the gun is elevated at 17 degrees, the interlock shall not restrict traversing. A full field of fire (see 3.3.8) shall be permitted when the hatches are closed. Testing shall be as specified in 4.5.2.2.

3.3.24 Safety travel lock. The positive safety travel lock when engaged shall prevent unintentional slewing of the mount and barrel assembly rotation. Testing shall be as specified in 4.5.2.2.

3.3.25 Remote safe switch. A remote safe switch (when attached) shall prevent unintentional firing of the gun by replacing the firing circuit arming connector with a manually controlled switch. This switch shall permit remote control of the ability to fire the gun. Testing shall be as specified in 4.5.2.2.

3.3.26 Sustained use. When operated within an ambient temperature of 32° to 125°F with battery power only and the firing rate switch in the high position, the weapon system shall fire three 60 round bursts at 7 minute intervals. The system battery power shall remain ON during the intervals between bursts. Degradation of the third burst shall not exceed 15 percent of the performance as recorded for the system in meeting 3.3.5, 3.3.6 and 3.3.7. Testing shall be as specified in 4.5.2.2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.27 Low voltage warning indicator and interrupting circuit. The low voltage warning indicator shall be energized during periods of low system voltage. When the voltage drops below 22 vdc minus .22 vdc, the indicator light shall flash. When the voltage drops below 20.5 vdc ± .21 vdc the indicator light shall be constantly illuminated and shall interrupt power to the sight current generator, radar, inverter, and sight gyro. Testing shall be as specified in 4.5.2.2.

3.3.28 Low voltage test/override switch. The low voltage test/override switch shall perform as indicated in the following positions: Testing shall be as specified in 4.5.2.2.

a. NORMAL position: The switch shall permit the actions noted in 3.3.27.
b. OVERRIDE position: The interrupted normal circuit shall be by-passed and the available system power shall be restored to the sight current generator and the radar inverter when the following sequence is performed:

(1) System switch turned from ON to OFF to ON;
(2) Low voltage switch is moved to override position while warning light is flashing.

c. TEST position: A simulated low voltage circuit shall be activated. The warning indicator light shall flash for approximately four seconds then become constantly illuminated.

3.3.29 Tracking rate. The weapon system shall be capable of tracking targets with an angular velocity of velocity-range $(\frac{V}{R})$ greater than one. Testing shall be as specified in 4.5.2.2.

a. The weapon system shall move smoothly during tracking operations that will require gun movements in either elevation, azimuth or a combination of each at rates as low as 0.1 degrees per second.
b. The gun drift in any vertical direction shall be no greater than 5.0 milliradians during a 100 round burst while slewing in azimuth at a rate of 5.0 ± 0.1 degrees per second.

3.3.30 Antenna protection system. The antenna protection system shall assemble to the antenna guard position without interference to the radar antenna. Clearance to the radar antenna shall be maintained during impact loadings equal to loads that would be imposed on the guard while striking overhanging tree limbs approximately three inches in diameter and ten feet long while the vehicle is moving at a speed of twenty-five miles per hour. These obstacle impacts on the antenna guard shall not result in damage to other radar antenna components. Testing shall be as specified in 4.5.2.2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.3.31 Boresighting. The weapon system shall be boresighted by utilizing a distant aiming point of at least 2500 meters. Testing shall be as specified in 4.5.2.2.

3.4 Environmental. The weapon system shall meet the performance requirements of this specification as specified in 3.3 during exposure to or after exposure to, environmental conditions specified in 3.4.1 through 3.4.9. Testing shall be as specified in 4.4.

3.4.1 Altitude. The weapon system shall operate without failure at altitudes from sea level to 10,000 feet and shall be transportable at altitudes up to 40,000 feet.

3.4.2 Temperature. The weapon system shall operate without failure in temperatures ranging from -40° to +125°F. The weapon system shall function as specified herein after storage in a temperature of +155°F for a minimum of four hours.

3.4.3 Rain. The weapon system, with no protective cover, shall show no degradation of performance or evidence of corrosion which would prevent the weapon system from performing its intended function when exposed to rain and wind conditions specified in Procedure I, Method 506 of MIL-STD-810.

3.4.4 Humidity. The weapon system shall show no degradation of performance when:

a. Exposed to relative humidity of 100 percent at 85°F.
b. Stored in a relative humidity of 100 percent at 85°F for a minimum of 48 hours.

3.4.5 Fungus. The weapon system shall be resistant to micro-organisms specified in Method 508 of MIL-STD-810.

3.4.6 Salt fog. The weapon systems shall show no degradation of performance or evidence of corrosion which would prevent the weapon system from performing its intended function when exposed to the effects of a salt atmosphere as defined herein.

a. Temperature, 95°F.
b. Atomization of approximately 3 quarts of salt solution per 10 cubic feet of test chamber volume per 24 hours.
c. The weapon system shall be exposed to the salt fog atmosphere for a period of 48 hours.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

3.4.7 Dust. The weapon system shall operate while being subjected to blowing dust with particle size of 0.0001 to 0.0100 mm at wind speeds of 15 knots.

3.4.8 Shock. The weapon system shall withstand, without damage, shock forces encountered during installation and service.

3.4.9 Sand. The weapon systems shall operate while being subjected to blowing sand of particle size from 0.01 to 1.00 mm at a wind speed of 35 knots.

3.5 Interchangeability. Unless otherwise specified on the drawings all parts of the same part number shall be interchangeable. Testing shall be as specified in 4.5.2.3.

3.6 Electromagnetic interference characteristics. The weapon system shall meet the applicable electromagnetic interference characteristics requirements of MIL-STD-461 as specified in the contract (see 6.2). Testing shall be as specified in 4.4.

3.6.1 System and radar compatibility. The gun mount (turret) drive electrical noise generated during traversing and stopping the gun mount shall not produce a false radar "lock-on". (The ready-to-fire light shall remain off. The vehicle engine shall not be running).

3.6.1.1 The gun mount (turret) drive electrical noise with the mount traversing drive motors locked, the vehicle engine running, and the systems in radar mode, the decibel (DB) difference while operating before ambient DB, and after revolving hand controls with action switch depressed maximum right and maximum left position, shall not exceed 4 DB. Distribution box switch shall be in "test" position. The electrical noise shall not produce a false radar "lock-on".

3.7 Marking. The weapon system shall be marked in accordance with MIL-W-13855. Each weapon system shall be identified by a serial number assigned by the procuring activity (see 6.3).

3.8 Workmanship. The workmanship shall be in accordance with MIL-W-13855.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract, the contractor is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract, the contractor may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.2 Quality assurance terms and definitions. Quality assurance terms and definitions used herein are in accordance with MIL-STD-109.

4.3 Classification of inspection. The inspection requirements specified herein are classified as follows:

a. First article inspection (see 4.4).
b. Quality conformance inspection (see 4.5).

4.4 First article inspection. The first article (initial production unit(s)) shall be submitted for inspection in accordance with the contract (see 6.2). The first article shall be representative of the production processes to be used during quantity production. The first article shall be subjected to the Quality conformance inspection (see 4.5), Environmental test (see 4.6.35), Electromagnetic interference test (see 4.6.36) and such other inspection as necessary to determine that all requirements of the contract have been met.

4.5 Quality conformance inspection.

4.5.1 Examination.

4.5.1.1 Component parts and concurrent repair parts. Examination of component parts and concurrent repair parts shall be performed in accordance with the criteria specified in the contract (see 6.2). The examination of these parts shall be accomplished prior to their assembly into the end item or submission for acceptance as repair parts.

4.5.1.2 Material and construction examination. Each weapon system shall be visually examined to determine compliance with 3.2, utilizing Government approved inspection procedures.

4.5.1.3 System components examination. Each weapon system shall be visually examined to determine compliance with 3.2.1 through 3.2.5. For Government furnished components, contractor responsibility shall be as prescribed in 4.5.4.

4.5.1.4 Marking examination. Each weapon system shall be visually examined to determine compliance with 3.7.

4.5.1.5 Workmanship examination. Each weapon system shall be examined for proper cleaning, protective coatings, and to determine general quality, completeness of manufacture, assembly and workmanship in compliance with 3.8.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.5.2 Testing.

4.5.2.1 Failure data. Unless otherwise specified herein, all tests shall be conducted on a complete weapon system exclusive of Government furnished property. If test requirements cited herein are not met, acceptance of the weapon system shall be deferred and the contractor shall accomplish, as applicable, the following actions:

a. Conduct a failure analysis study performing a dimensional, physical and visual examination of the components which are suspected to be the cause of failure or malfunction.
b. Evaluate and correct the applicable production processes and procedures to prevent recurrence of the same defect(s) in future production.
c. Examine weapon systems, partially assembled weapon systems and components (including components and subassemblies at in process or final assembly) to insure that material containing the same defect is purged from the inventory and not presented to the Government for acceptance.
d. Submit the results of the failure analysis and the corrective actions taken to the Government for review and approval prior to submitting a reconditioned lot or reconditioned weapon system for retest.

4.5.2.2 Weapon system testing. Unless otherwise specified (see 6.2), each weapon system shall be subjected to the test methods specified in 4.6.1 through 4.6.33, except only one weapon system randomly selected from each 20 systems produced shall be subjected to the -40°F warm up temperature (see 3.3.1) using the test method specified in 4.6.1. Failure of any system to meet the requirements of 3.3.1 through 3.3.31 shall be cause for rejection.

4.5.2.3 Interchangeability testing. A sample of three weapon systems selected at random by the Government representative from each 20 systems produced shall be tested for interchangeability (see 3.5), using the test method specified in 4.6.34. After completion of the test and the weapon systems are reassembled, each system shall be subjected to the testing specified in 4.5.2.2. Failure of any reassembled system to meet the requirements (see 3.5) shall be cause for rejection.

4.5.3 Packaging examination and testing. Unless otherwise specified (see 6.2), the packaging examination and testing shall be in accordance with MIL-P-14232.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.5.4 Inspection equipment.

4.5.4.1 Acquisition, maintenance and disposition. Unless otherwise specified in the contract (see 6.2), responsibility for acquisition, calibration, maintenance and disposition of acceptance inspection and test equipment prescribed on QE-G-DL12007502, and for all other inspection equipment required by applicable specifications, shall be in accordance with MIL-I-45607.

4.5.4.2 Accuracy of standard measuring equipment. When commercial and modified commercial inspection and test equipment is used it must be capable of repetitive measurements to an accuracy of 10% of the total tolerance of the characteristics being inspected.

4.6 Test methods.

4.6.1 Warm-up test. The weapon system shall warm-up to permit operation in the test, radar, manual, external and ground modes to determine compliance with 3.3.1.

4.6.2 Test mode test. The weapon system shall be operated in the test mode. A simulated problem shall be presented to the sight generator and correctly solved, as indicated by the lighting of the GOOD TEST light to determine compliance with 3.3.1.1.

4.6.3 Radar mode test. The weapon system shall be operated in the radar mode. The radar and lead computing feature of the sight shall be operating; the radar shall be supplying range data to the weapon system; and the gun mount shall rotate and track the target. The READY-TO-FIRE indicator lamp (located on the sight) shall light, to determine compliance with 3.3.1.2. After release of the foot switch, the weapon system shall return to the standby condition.

4.6.4 Manual mode test. The weapon system shall be operated in the manual mode. The RANGE and TARGET SPEED controls shall be set at estimated values. The sight gyro shall be electrically caged in accordance with MIL-S-60661 by depressing the sight cage button during high speed turret slew. When the target is acquired in the sight reticle, the sight cage button shall be released, but tracking shall continue until the firing engagement is complete. The READY-TO-FIRE indicator lamp shall remain lit, to determine compliance with 3.3.1.3 and 3.3.2.1.2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.5 External mode test. The weapon system shall be operated in the external mode. The weapon system shall receive and use range data supplied by the External Range Control. The READY-TO-FIRE indicator lamp shall light when the external READY-TO-FIRE button is depressed to determine compliance with 3.3.1.4.

4.6.6 Ground mode test. The weapon system shall be operated in the ground mode. The sight shall be mechanically caged in accordance with MIL-S-60661 and the reticle lamp on the sight shall light to determine compliance with 3.3.1.5 and 3.3.2.1.1.

4.6.7 Design function test. The weapon system shall be cycled through each mode of operation, both manually and automatic, as specified on Figure 1 to determine compliance with 3.3.2.

4.6.7.1 Sight caging test. The sight shall be caged to determine compliance with 3.3.2.1 through 3.3.2.1.3.

4.6.7.2 Sight caging interlock test. The weapon system shall be tested for sight caging interlock and by-pass circuit to determine compliance with 3.3.2.1.3.

4.6.7.3 Ready-to-fire indicator test. The ready-to-fire indicator shall be tested in the radar, external and manual modes to determine compliance with 3.3.2.2.

4.6.7.4 Radar operational indicator test. The indicator shall be tested to determine compliance with 3.3.2.3.

4.6.7.5 Radar radiate foot switch test. The foot switch shall be tested to determine compliance with 3.3.2.4.

4.6.8 Reaction time test. When subjected to the conditions of 3.3.3, the time required for the weapon system to slew 180°, acquire, track and open fire on the target, using dummy ammo, shall be measured and shall not exceed 10.5 seconds, under the stipulation that operating personnel have demonstratable proficiency in the weapon system, to determine compliance with 3.3.3.

4.6.9 System fire control test. The system fire control operation test shall be as specified in MIL-F-60664, to determine compliance with 3.3.4.

4.6.10 Firing rate test. The FIRING RATE switch on the control panel shall be rotated to the HIGH or LOW rate of fire and the weapon system fired. The rates of fire shall be tested for compliance with 3.3.5 and 3.3.6. Interpolation of rate requirements for systems tested below 40°F is acceptable.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.11 Burst limiting test. The weapon system shall be fired at the high rate in four burst limits to determine compliance 3.3.7.

4.6.12 Field of fire test. The mount and gun shall be operated through all ranges of elevation and azimuth to determine compliance with 3.3.8. The elevation electrical limit switches shall prevent the weapon system from being driven into the mechanical stops.

4.6.13 Slewing rate and acceleration test. The mount and gun shall be slewed in all operational modes. The slew rate and acceleration shall be as specified in 3.3.9 and 3.3.10.

4.6.14 Weapon system interface test. The weapon system shall be tested to determine compliance with 3.3.11. The vehicle voltage regulator shall be adjusted in accordance with F8437388.

4.6.15 Rounds counters test. The rounds counters shall be tested for accurate counting of rounds as specified in 3.3.12. The weapon system shall be fired in bursts as specified in 3.3.7a through 3.3.7d.

4.6.16 Stall and stop test. The weapon system shall be operated through ranges of elevation and azimuth rotation to determine compliance with 3.3.8, 3.3.13 and 3.3.14. The gun mount shall be driven into the limit switch and mechanical stops at maximum slew rate. The mount shall not be damaged.

4.6.17 Operational capability test. The weapon system shall be operated as described in 3.3.1, 3.3.5 and 3.3.6 to determine compliance with the operational capability of the weapon system as specified in 3.3.15.

4.6.18 Declutching feeder test. The weapon system shall be fired. The ammunition shall be fed to the cannon in compliance with 3.3.16.

4.6.19 Fire-out capability test. The weapon system shall be loaded with approximately 300 rounds of ammunition with ten empty spaces following each fiftieth round to determine compliance with 3.3.17. The feed system shall pass all ammunition without jamming and shall operate without binding when all ammunition has been cycled through the feed system. This test may be performed using either dummy cartridges or live ammunition and in conjunction with other test requirements.

4.6.20 Loading Bellmouth test. The time to reload on board 800 rounds by two men shall not exceed seven minutes, under normal operating conditions, to determine compliance with 3.3.18.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.21 Drum full switch test. The weapon system shall be tested to determine compliance with 3.3.19.

4.6.22 Link disposal test. The link disposal system shall be used during loading or reloading of the weapon system to test for compliance with 3.3.20. No jamming of links shall occur during the loading or reloading operation.

4.6.23 Azimuth indicator test. The azimuth indicator assembly shall be visually and manually inspected for secure and correct mounting, for free rotation of the dial from 0 through 64 in a clockwise direction and free rotation in a counter-clockwise direction to determine compliance with 3.3.21. Using system power and hand controls, position the turret to a definite reference point and set the azimuth indicator to 64 on the dial. Slew turret and position at 90° from reference. Continue rotation and reposition on reference point. Compare turret position and indicator readings for accuracy of one half sector on the dial. Repeat the test by rotating turret in opposite direction.

4.6.24 Clearing test.

4.6.24.1 Gun clear switch test. The weapon system shall be fired. The gun shall automatically clear when the GUN CLEAR switch on the control assembly is placed in the AUTO position. When the GUN CLEAR switch is placed in the OPERATOR position, the gun shall clear by pressing the action switch and actuating the feeder declutching solenoid to determine compliance with 3.3.22.1.

4.6.24.2 Brake-clear and brake switch test. The weapon system shall be checked for proper operation with the BRAKE-CLEAR and BRAKE switch in each position to determine compliance with 3.3.22.2. Dummy cartridges shall be used to check for proper gun and declutching feeder operation while the power system is on. Placing the switch in BRAKE position shall allow the gun drive motor to release and dummy rounds to be cycled through the gun by manually rotating the gun barrel cluster. Placing the switch in the BRAKE-CLEAR position shall allow the gun drive motor brake to release and energize the declutching feeder solenoid, preventing the rounds from being fed through the gun. When the switch is in center OFF position, the brake shall prevent the gun barrel cluster from being manually rotated.

4.6.25 Safety sector interlock test. The gun shall be traversed and elevated over and toward closed and open hatches. The gun shall stop depressing over an open hatch as specified in 3.3.23. Azimuth travel shall be interrupted over an open hatch if the gun is slewing at the lower zone specified in 3.3.23. No interruption in gun traverse shall occur over a closed hatch.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.26 Safety travel lock test. The mount shall be tested for compliance with 3.3.24.

4.6.27 Remote safety switch test. The arming connector shall be disconnected at the distribution box and an attempt shall be made to fire the gun. The gun shall not fire. The remote safety switch shall be connected to the distribution box and an attempt shall be made to fire the gun. The gun shall not fire with the remote safety switch open, but shall fire with it closed in compliance with 3.3.25.

4.6.28 Sustained use test. The weapon system shall be tested for compliance with 3.3.26. Degradation in excess of that specified, or other indications of excessive power loss in the weapon system, shall be cause for rejection.

4.6.29 Low voltage warning indicator and interrupting circuit test. The weapon system shall be tested to determine compliance with 3.3.27.

4.6.30 Low voltage test/override switch test. The weapon system shall be tested to determine compliance with 3.3.28.

4.6.31 Tracking rate test. The weapon system shall be tested to determine compliance with 3.3.29.

4.6.32 Antenna protection test. The weapon system shall be tested to determine compliance with 3.3.30 using an equivalent static load of 1000 pounds.

4.6.33 Boresighting test. The weapon system shall be subjected to the following boresighting procedure to determine compliance with 3.3.31.

a. Check that the GUN POWER switch is OFF.
b. Set the SYSTEM POWER switch to the ON position and set MODE switch to the RADAR position.
c. Check that the gun is clear. To clear gun, position the BRAKE-CLEAR AND BRAKE switch in the CLEAR AND BRAKE position and rotate the barrels two complete revolutions. Remove any rounds in the case chute.
d. Time the gun in the No. 1 firing position. Hold the BRAKE-CLEAR AND BRAKE switch in the CLEAR AND BRAKE position, depress the gun index pin, and locate the No. 1 barrel (marked on the muzzle clamp) in the firing position which is at the 4 o'clock position when viewed from the muzzle end. Release the BRAKE-CLEAR AND BRAKE switch and index pin. Check that the index pin has returned to normal.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

e. Unstow the radar antenna, if stowed. Set MAINT switch to OFF, set the MODE switch to NORMAL, and depress either action switch until the antenna drives out of stow and is positioned on the gun axis. Set MAINT switch to ON.
f. If the radar antenna was unstowed, check to see that the MODE switch is set to NORMAL and the MAINT switch is ON.
g. Select a distant aiming point (at least 2500 meters away) and depress an action switch and train the gun to the approximate position for boresighting.
h. Pull out the shift pin handle on the drum drive assembly and shift to N position. This places the drum drive in neutral. It also interrupts electrical circuits to prevent the elevation, traversing and firing of the gun.
i. Insert the muzzle adapter from the boresight kit into the muzzle of the No. 1 barrel.
j. Install the boresight telescope in the mandrel assembly and secure with socket head screws on the mandrel assembly.
k. Insert the mandrel assembly into the muzzle adapter with the eyepiece of the telescope in the horizontal position and press to tighten the adapter and mandrel assembly in the barrel.
l. Release the two azimuth drive motor brakes and the elevation drive motor brake by positioning the brake release levers perpendicular to the motor axis.
m. Sight through the boresight telescope on a distant point. Rotate the mandrel assembly and boresight telescope 90 degrees to the horizontal position on the opposite side of the barrel. Sight through the boresight telescope to determine that the point sighted on initially is still at the cross hairs. If the point is not on the cross hairs, the boresight kit is defective, improperly assembled or improperly mounted.
n. Manually position the gun so the cross hairs of the boresight telescope are level with and 3.5 mils to the right of the distant aiming point.
o. Lock the azimuth and elevation drive motor brakes and check that the gun is still properly aimed.
p. Manually uncage the sight.
q. Adjust the LAMP control assembly for a clear reticle in the sight.
r. Remove only the front and right caps on top of the M61 sight.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

s. Adjust the socket head bolts on top of the sight to center the inner reticle of the M61 sight on the distant aiming point. The front adjustment is for elevation and the right adjustment is for azimuth. Move the eye up and down and right and left to check for parallax. If excessive parallax is experienced, refer the sight to organizational maintenance. Note: A second crew member must check through the boresight telescope while the adjustments are being made to assure that the gun does not move.

t. Install the caps on the sight. Note: When boresighting the M134 sight, it is necessary to release the clamping screws in front and rear end of left wall of the M164 Mount.

u. View through the M134 sight and adjust the AZ boresight adjusting screw to bring the cross of the reticle into horizontal alignment with the distant aiming point.

v. View through the M134 sight and adjust the EL boresight adjusting screw to bring the cross of the reticle into verticle alignment with the distant aiming point.

w. Tighten clamping screws.

x. Remove the boresight telescope, mandrel assembly, and install the boresight telescope in the mount provided in the antenna. Remove muzzle adapter from No. 1 barrel.

y. Loosen the elevation coupling clamp screw which is located on the gun elevation input shaft coupling to the radar antenna. Rotate the radar input shaft to move the horizontal cross hair of the telescope reticle on the distant aiming point. Tighten the screw. Note: A second crew member must check that the sight remains centered on the distant aiming point.

z. Remove the access cover from the traverse boresight adjustment which is located on the reflector and feed housing assembly. Loosen the lock and turn the adjustment screw until the vertical cross hair on the telescope reticle intersects the distant aiming point; then tighten the lock. Note: A second crew member must check that the sight remains centered on the distant aiming point.

aa. Repeat steps (y) and (z) if necessary to center the reticle cross hairs.

bb. At the antenna stow control, place the MODE toggle switch to STOW.

cc. Using the TRAV toggle switch, drive the antenna to the left approximately 10 degrees.

dd. Place the MODE toggle switch to NORMAL.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

ee. At the boresight telescope mounted on the antenna, observe that the cross hairs within the reticle are positioned on the distant aiming point.
ff. Repeat steps (bb) through (ee) except in step (cc) drive the antenna to the right.
gg. At the stow control, place the MODE toggle switch to STOW.
hh. Using the ELEV toggle switch drive the antenna up approximately 10 degrees.
ii. Place the MODE toggle switch to NORMAL.
jj. At the boresight telescope mounted on the antenna, observe that the cross hairs within the reticle are positioned on the distant aiming point.
kk. Repeat steps (gg) through (jj) except in step (hh), drive antenna down approximately 10 degrees.
ll. Replace the access cover on the traverse boresight adjustment and the gun elevation input shaft protective cover.
mm. On the antenna stow control, set the MAINT switch to OFF.
nn. Remove the boresight telescope from the antenna reflector. Caution: Assure that the sun is not shining directly into the AN/VPS-2B sight. Do not remove the AN/VPS lens cover during daylight hours.
oo. Open the small aperture of the AN/VPS-2B lens cover.
pp. View through the AN/VPS-2B night sight and adjust the azimuth and elevation boresight adjusting screws of the AN/VPS-2B until the distant aiming point is centered on the top center dot of the AN/VPS-2B sight reticle.
qq. Cage the M61 sight.
rr. Set the SYSTEM POWER switch to the OFF position.
ss. On the drum drive assembly, pull out the shift pin handle and place the drum drive in the fire position (shift to F position).
tt. Recheck that there is nothing in the muzzle.

4.6.34 Interchangeability test (see 3.5).

4.6.34.1 Weapon system. Interchangeability test procedures shall provide for three weapon systems, from each twenty systems produced, to be disassembled and reassembled in a prearranged pattern from the parts of each weapon system, divided into three groups of nonmating parts distributed in three dirrerent trays, each containing a complete weapon system. The exchange of parts and assemblies shall result in the maximum exchange in mating parts. The interchangeability test shall include major subassemblies and repair parts for major subassemblies as specified in Table I. The weapon system shall be functionally tested after reassembly. Any failure of the interchangeability test shall be cause for rejection of the represented lot. Upon authorization from HQ, U.S. ARMCOM, ATTN: DRSAR-QA, Rock Island, IL 61201, an interchangeability retest may be allowed without reconditioning of the lot of weapon systems.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.34.2 Repair parts. Two component parts from each inspection lot of repair parts that are produced specifically for this system shall be tested for interchangeability in accordance with a Contractor submitted, Government reviewed plan. This plan shall be submitted to the Government no later than 10 calender days prior to scheduled delivery of initial lot of repair parts. Any failure to demonstrate interchangeability shall cause rejection of the lot of parts. No hand refinements will be allowed for retest. Four parts shall be selected from the reconditioned lots for interchangeability testing.

TABLE I

Interchangeable Items

Equipment	Part Number
Mount assembly, M157A1	12007508
Saddle gun	8436946
Support sight assembly	8437941
Linkage assembly	8436834
Brake and clear switch assembly	8437323
Drive assembly azimuth	8437053
Drive assembly elevation	8436847
Shield saddle aft assembly	8437185
Shield assembly gun	8439060
Shield forward	8437149
Azimuth indicator assembly	8437917
Gun, Automatic, 20mm, M168	8436805
Recoil adapter assembly	8436802
Muzzle clamp assembly	8436804
Drive assembly, gun	8436841
Housing gear drive	8436977
Drum assembly	8439066
Exit unit assembly	8436956
Internal drum assembly	8439063
Drum drive end	8436955
Bracket mounting	8436922
Housing matched	8436835
Conveyor system	8438969

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

TABLE I (continued)

Equipment	Part Number
Feeder assembly, declutching	8439021
Drive assembly feeder, end	8436899
Servo amplifier assembly	12000006
Distribution box assembly	8438325
Control assembly	12000245
Sight current generator	12000239
Cover, cannon and mount	8437623
Inverter	10545536
Slip ring	84377092
Sight, M61	11747062

4.6.35 Environmental test. The weapon system shall be tested as specified in 4.6.35.1 through 4.6.35.9 to determine compliance with 3.4.1 through 3.4.9. Where advantageous, naturally occurring environments may be used in lieu of laboratory produced conditions. There shall be no evidence of corrosion, degradation of performance, or damage that would prevent the weapon system from performing its intended function.

4.6.35.1 Altitude test. The weapon system shall be tested to determine air transportability to 40,000 feet and operability to 10,000 feet in accordance with Procedure I, Method 500 of MIL-STD-810.

4.6.35.2 Temperature tests.

4.6.35.2.1 High temperature test. The weapon system shall be tested when stabilized at 125° after four hours in a storage temperature at 155° in accordance with Procedure I, Method 501 of MIL-STD-810. The weapon system shall be tested for operation at 120°F in accordance with Procedure II, Method 501 of MIL-STD-810.

4.6.35.2.2 Low temperature test. The weapon system shall be tested for a low temperature storage condition of -40°F for 12 hours without solar radiation in accordance with Procedure I, Method 502 of MIL-STD-810. At 0°, -20° and -40°F, the degradation in performance shall be not more than 5, 10 and 15 percent, respectively.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

4.6.35.3 Rain test. The weapon system shall be exposed to rain and wind conditions in accordance with Procedure I, Method 506, of MIL-STD-810.

4.6.35.4 Humidity test. The weapon system shall be subjected to humidity conditions for seven cycles of 12 hours each in accordance with Procedure I, Method 507 of MIL-STD-810. The weapon system shall withstand storage at 100 percent relative humidity at a temperature of 85°F.

4.6.35.5 Fungus test. The weapon system shall be subjected to fungus testing in accordance with Procedure I, Method 508 of MIL-STD-810, unless documentary evidence is supplied as proof that only non-nutrient materials were used or that all parts were suitably treated to resist micro-organisms.

4.6.35.6 Salt fog test. The weapon system shall be subjected to a salt fog test in accordance with Procedure I, Method 509 of MIL-STD-810.

4.6.35.7 Dust test. The weapon system shall be subjected to blowing dust, with particle size from 0.0001 to 0.0100 mm and wind speeds of 15 knots, in accordance with Procedure I, Method 510 of MIL-STD-810.

4.6.35.8 Shock test. The weapon system shall be shock tested in accordance with Figure 516-1 of Procedure I, Basic Design Test for Ground Equipment, shock parameters b and d, Method 516 of MIL-STD-810.

4.6.35.9 Sand test. The weapon system shall be operated at speeds up to 30 miles per hour in sandy terrain with wind speeds of 35 knots. The weapon system shall be operated, with the vehicle both stationary and moving, in blowing sand having a particle size from 0.01 to 1.00 mm, and with wind speeds of 15 knots or greater. Laboratory produced conditions shall be permitted for this test.

4.6.36 Electromagnetic interference characteristics test. The weapon system shall be tested in accordance with the requirements of MIL-STD-461 (see 3.6). The following shall be performed in the radar mode with the distribution box switched to test position.

a. With the vehicle engine not running, the ready-to-fire light shall remain OFF during traversing and stopping the mount for compliance with 3.6.1.
b. With the weapon system energized and vehicle engine running, but not traversing the mount, the generated noise level shall be recorded. With traversing drive motors locked and the controls activated for maximum right and left positions of the mounts, the generated noise level shall not exceed 4 decibel (DB). The ready-to-fire light shall remain OFF for compliance with 3.6.1 and 3.6.1.1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

c. If the DB increase is less than 4 DB while traversing to the maximum limits and the radar locks-on, the radar sensitivity shall be readjusted. This adjustment shall be performed only by a qualified technical representative of the Government and shall not exceed 2 DB.

5. PACKAGING

5.1 Pilot pack. A pilot pack shall consist of a complete weapon system preserved in accordance with Packaging Data Sheet P12007500 for the level of protection specified in the contract (see 6.2), packed Level B and forwarded as specified in 3.1.

5.2 Levels A and B. Preservation, packing and marking shall be in accordance with Packaging Data Sheet P12007500 for the level of protection specified in the contract (see 6.2).

5.3 Commercial packaging. Preservation, packing and marking shall be in accordance with Fed. Std. No. 356.

5.4 Repair parts. Repair parts shall be preserved, packed and marked in accordance with the Packaging Data Sheet or other packaging requirements, as specified in the contract (see 6.2).

6. NOTES

6.1 Intended use. The M163A1 self-propelled gun, 20mm air-defense artillery is intended for, but not limited to, close range anti-aircraft cover or strafing operation.

6.2 Ordering data. Procurement documents should specify the following:

a. Title, number and date of this specification.
b. List of drawings, specifications and publications pertinent to the weapon system showing applicable revision dates.
c. Shipping instructions for first article and pilot pack (see 3.1, 4.4 and 5.1).
d. Applicable electromagnetic interference characteristics requirements (see 3.6).
e. Quality conformance inspection, if other than as specified (see 4.5).
f. Examination criteria for component and concurrent repair parts (see 4.5.1.1 and 4.5.1.3).
g. Weapon system testing, if different (see 4.5.2.2).

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

h. Packaging examination and testing, if different (see 4.5.3).
i. Responsibility for acquisition, maintenance, and disposition of inspection equipment, if other than as specified (see 4.5.4.1).
j. Selection of applicable level of protection (A or B), or commercial packaging (see 5.1, 5.2 and 5.3).
k. Packaging instructions for repair parts (see 5.4).

6.3 Serial numbers. The contractor should be furnished a block of serial numbers by the contracting office to be used for marking the weapon system identification plate.


Custodian:
Army - WC

Preparing activity:
Army - WC

Project No.
2350-A249

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil - Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

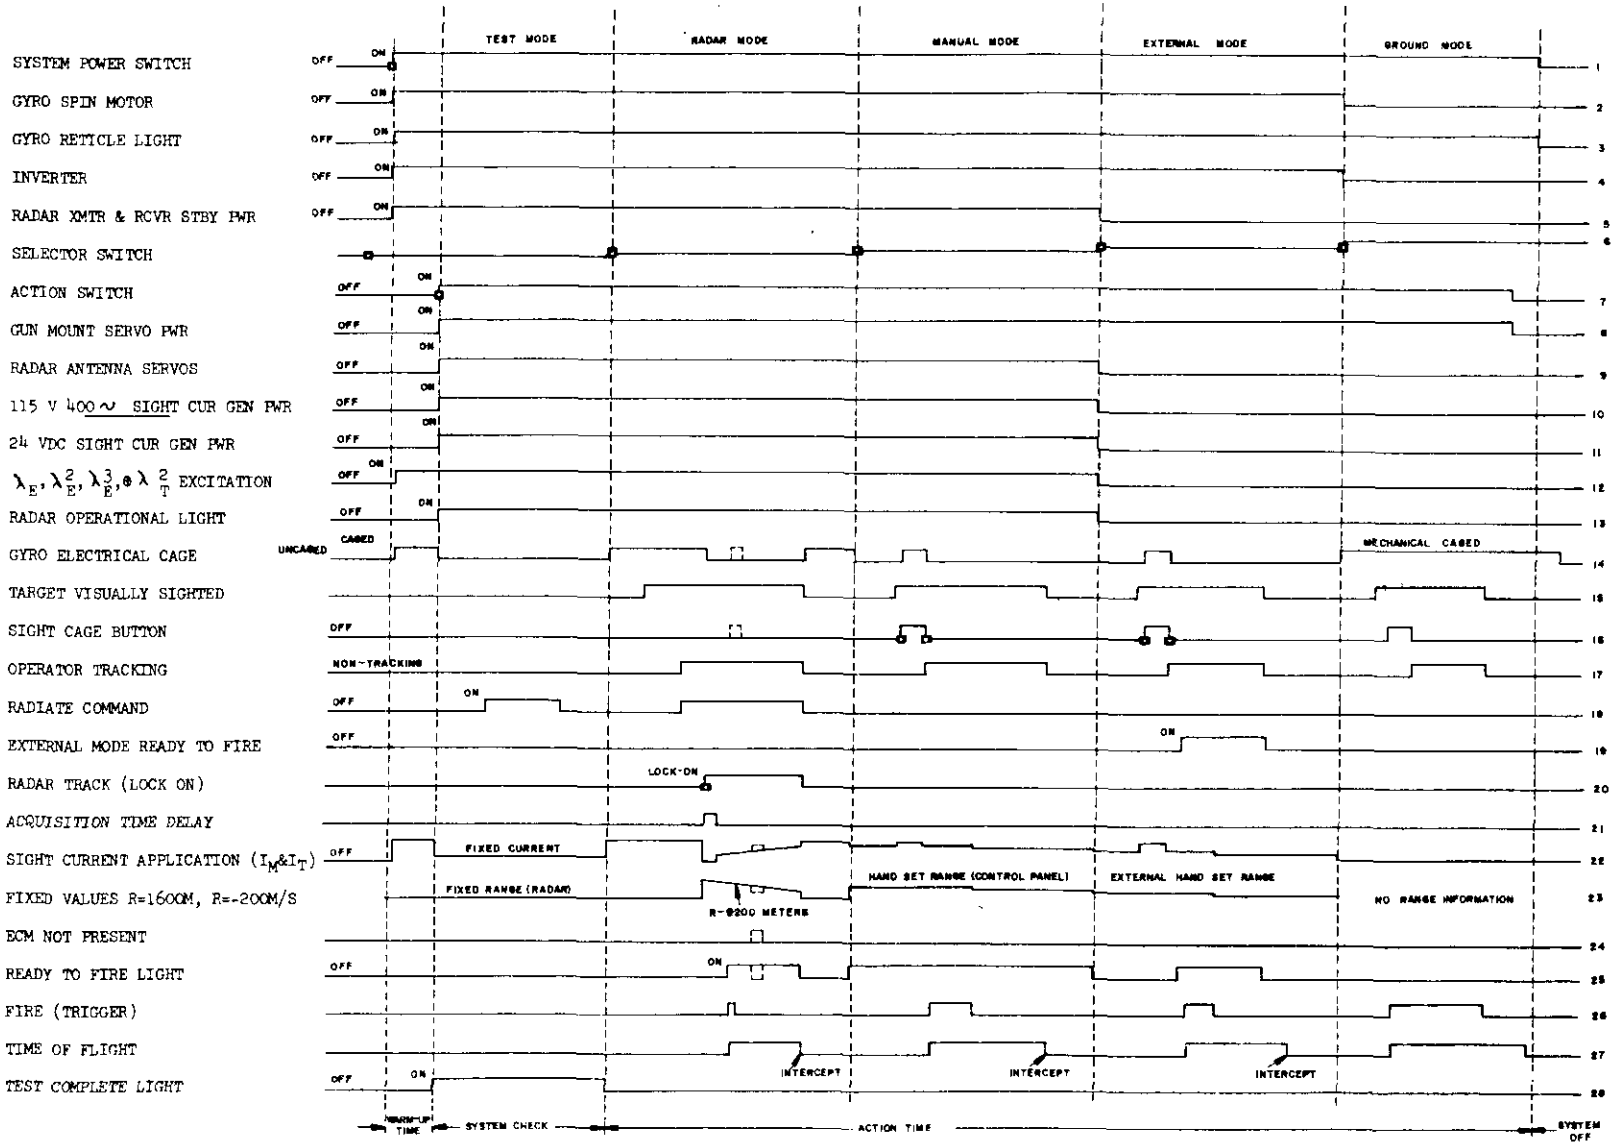

LEGEND

● = SYSTEMS SOURCE

FIGURE 1. SEQUENCE OF EVENTS DIAGRAM

FOLD

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD – 314

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
Rock Island Arsenal
ATTN: SARRI-LE-S
Rock Island, Illinois 61201

FOLD

Source: https://assist.dla.mil --Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

OMB Approval
No. 22-R255

INSTRUCTIONS: The purpose of this form is to solicit beneficial comments which will help achieve procurement of suitable products at reasonable cost and minimum delay, or will otherwise enhance use of the document. DoD contractors, government activities, or manufacturers/ vendors who are prospective suppliers of the product are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity.

DOCUMENT IDENTIFIER AND TITLE

MIL G 45980(WC) Gun, Air Defense Artillery, 20MM: Self Propelled, M163A1

NAME OF ORGANIZATION AND ADDRESS

CONTRACT NUMBER

MATERIAL PROCURED UNDER A

☐ DIRECT GOVERNMENT CONTRACT ☐ SUBCONTRACT

1. HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE?

A. GIVE PARAGRAPH NUMBER AND WORDING.

B. RECOMMENDATIONS FOR CORRECTING THE DEFICIENCIES

2. COMMENTS ON ANY DOCUMENT REQUIREMENT CONSIDERED TOO RIGID

3. IS THE DOCUMENT RESTRICTIVE?

☐ YES ☐ NO *(If "Yes", in what way?)*

4. REMARKS

SUBMITTED BY *(Printed or typed name and address - Optional)*

TELEPHONE NO.

DATE

DD FORM 1 JAN 72 1426

REPLACES EDITION OF 1 JAN 66 WHICH MAY BE USED

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T04:33Z
Check the source to verify that this is the current version before use.