MIL-O-83203A(USAF)
7 December 1972
SUPERSEDING
MIL-O-83203 (USAF)
22 November 1968

MILITARY SPECIFICATION

OVERCOAT, WOMAN'S, POLYESTER-WOOL, 13-OUNCE, BLUE 1549, WITH REMOVABLE LINER

1. SCOPE

* 1.1 This specification covers one type of woman's overcoat and a detachable wool liner furnished in the following sizes as specified (see 6.2):

6 Short	10 Regular	14 Long
6 Regular	10 Long	16 Short
6 Long	12 Short	16 Regular
8 Short	12 Regular	16 Long
8 Regular	12 Long	18 Regular
8 Long	14 Short	18 Long
10 Short	14 Regular	20 Regular.

2. APPLICABLE DOCUMENTS

* 2.1 The following documents, of the issue in effect on date of invitation for bids or request for proposal, form a part of this specification to the extent specified herein.

SPECIFICATIONS

Federal

V-B-871	Button, Sewing Hole, and Button, Staple, (Plastic)
V-F-106	Fasteners, Slide, Interlocking
V-T-276	Thread, Cotton
V-T-280	Thread, Cotton Gimp, Buttonhole
V-T-301	Thread, Silk
CCC-C-438	Cloth, Buckram, Cotton
DDD-L-20	Label; for Clothing, Equipage, and Tentage, (General Use)
DDD-T-86	Tape, Textile; Cotton, General Purpose (Unbleached, Bleached, or Dyed)
PPP-B-636	Boxes, Shipping, Fiberboard

Military

MIL-C-297	Cloth, Interlining, Cotton Warp, and Spun Hair-Wool Filling
MIL-C-326	Cloth, Silesia, Cotton
MIL-C-368	Cloth, Satin, Rayon and Cloth, Twill, Rayon
MIL-C-3191	Cloth, Flannel Wool, Lining, 12 Ounce

FSC 8410

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

MIL-T-5237	Tape, Textile; Webbing, Textile, Rayon
MIL-C-15062	Cloth, Flannel, Wool, Undercollar Cloth
MIL-P-15064	Pads, Shoulder and Sleeve-Head
MIL-C-16375	Cloth, Wigan, Cotton
MIL-C-83048	Cloth, Serge, Polyester/Wool

STANDARDS

Federal

FED-STD-191	Textile Test Methods
FED-STD-751	Stitches, Seams, and Stitchings

Military

MIL-STD-105	Sampling Procedures and Tables for Inspection by Attributes
MIL-STD-129	Marking for Shipment and Storage
MIL-STD-1392	Provisions for Evaluating Quality of Overcoats, Women's

(Copies of specifications, standards, drawings, and publications required by suppliers in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

* 2.2 Other publications. The following documents, form a part of this specification to the extent specified herein. Unless otherwise indicated, the issues in effect on date of invitation for bids or request for proposal shall apply.

The Color Association of the United States, Inc.

Department of Defense (DOD) Standard Shades for Buttons 1966

DOD Standard Color Card of Official Standardized Shades for Sewing Thread 1968

(Copies of these publications may be obtained from The Color Association of the United States, Inc., 200 Madison Avenue, New York, New York 10016.)

3. REQUIREMENTS

3.1 Materials

3.1.1 Basic material. The basic material for the overcoat shall be USAF color shade No. 1549 (see 6.3) and shall conform to MIL-C-83048. The basic material for the liner shall conform to MIL-C-3191, except that the color shall be blue, USAF color shade No. 1532 (see 6.3).

3.1.2 Lining and binding. The material (overcoat) for the lining and for binding the facings and the bottom edge of the neck yokes shall be blue, USAF

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

color shade No. 1086 (see 6.3) and shall conform to class 3 of MIL-C-368. The material (liner) for the lining and for binding the outer edges, the vent edges, the side seams, and the armhole openings shall be blue, USAF color shade No. 1086 (see 6.3) and shall conform to class 3 of MIL-C-368.

* 3.1.3 Silesia. The material for the stay pieces for the front interlining and the chest pieces, the pockets, the shoulder seams, the armhole seams, the top of the vent, and the interlining for the shoulder loops and the pocket welts shall be black and shall conform to type I of MIL-C-326, except that the nonfibrous materials, seam efficiency, and colorfastness requirements to perspiration and crocking shall not apply.

3.1.4 Pocketing. The cloth for the hanging pockets shall be a soft filled cotton sheeting, having a snooth suede finish on one side, dyed grey or tan, and shall conform to the requirements specified in table I. Sulfur dyes and dyes containing elementary sulfur or sulfur compounds capable of oxidation to sulfuric acid shall not be used. The finished material shall show good colorfastness to wet dry cleaning and crocking.

TABLE I. Pocketing

Characteristic	Requirement 1/
Weight, ounces per square yard	6
Threads per inch	
Warp	44
Filling	40
Breaking strength, pounds	
Warp	60
Filling	35

1/ Each requirement is expressed in terms of the minimum acceptable for the characteristic.

* 3.1.5 Wigan for interlining sleeve terminals. The wigan for interlining the sleeve terminals shall be natural or grey color. The wigan shall conform to type I of MIL-C-16375 except that the stiffness in the direction of the warp shall be not less than 0.005 inch-pound and not more than 0.015 inch-pound.

3.1.6 Tape

* 3.1.6.1 Armhole, gorge, and vent. The tape used for reinforcing the armhole seam, the gorge seam, and the left side of the back vent shall be 1/4-inch-wide tape conforming to type I, class 1 or 2 of DDD-T-86.

Source: https://assist.dla.mil -- Downloaded: 202640-26T04:42Z
Check the source to verify that this is the currentversion before use.

3.1.6.2 Bridle. The tape used on the break line of the lapels shall be 5/8-inch-wide tape conforming to type I, class 1 or 2 of DDD-T-86.

3.1.6.3 Bottom hem. The material used for hemming the bottom of the overcoat shall be 9/16-inch-wide, 50-pound-breaking-strength tape conforming to type I of MIL-T-5237 except the requirement and testing for acidity and chloroform soluble material shall not apply. The color of the tape shall match the color of the basic material of the overcoat and shall show fair colorfastness to crocking and good colorfastness to wet dry cleaning.

3.1.6.4 Front edge. The tape for the left and right front edges of the coat front shall be 1/2-inch-wide tape conforming to type I, class 1 or 2 of DDD-T-86.

3.1.7 Undercollar. The material for the undercollar shall conform to MIL-C-15062 except that the colorfastness requirements for perspiration and crocking shall not apply. The color shall approximate USAF color shade No. 1549 (see 6.3).

* 3.1.8 Braid. The braid for the overcoat hanger shall be flat tubular cotton or rayon braid, 1/8- to 3/16-inch-wide, and shall have a breaking strength in the warp direction of not less than 50 pounds. The braid shall be black and shall have good colorfastness to crocking, perspiration, and wet dry cleaning.

3.1.9 Thread

* 3.1.9.1 Overcoat. The colored thread used on the overcoat for seaming, stitching, sewing on buttons, buttonholes, blindstitching lapels and undercollar, overedge stitching, and felling shall match DOD Thread Shade Navy Blue AT, Cable No. 66060 (see DOD Standard Color Card of Official Standardized Shades for Sewing Thread 1968). Except where the use of silk thread is specified herein, the thread for the overcoat shall conform to table II. Where silk thread is specified in table III for felling, tacking, and buttonholes, the thread shall be type I; ticket No. A, B, or C of V-T-301 for machine sewing and type III; ticket No. C of V-T-301 for hand sewing. Unless otherwise specified, the top and the lower threads shall be the same. The colored silk thread for the overcoat shall have good colorfastness to wet dry cleaning, perspiration, and light. The colored cotton thread for the overcoat shall have good colorfastness to wet dry cleaning and perspiration.

* 3.1.9.2 Liner. The thread for seaming and stitching the liner shall conform to type LA3, 3 ply, ticket No. 50 of V-T-276, except that the thread shall be vat dyed DOD Thread Shade Blue M, Cable No. 66027 (see DOD Standard Color Card of Official Standardized Shades for Sewing Threads 1968). The thread for the liner shall show good colorfastness to wet dry cleaning and to perspiration.

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

* TABLE II. Cotton Thread for Overcoat

Application	Specification V-T-276		
	Type	Ticket No.	Ply
Seaming and stitching	IC2	A or B	3
Sewing on buttons by machine	IA3 or IB3	20	4
Sewing on buttons by hand	IA3 or IB3	12	4
Overedge stitching	IC2 or IA3	A or B 50-70 or 70	3 3 2
Tacking armholes	IA1 or IA2	30	3
Blindstitching and machine felling lapel and undercollar (padding), tape on front edges, bluffing of front edges, and top of bottom hem	IC2 or IA3	A or B 50-70 or 70	3 3 2
Stitching front interlining and chest pieces and machine tacking hanging pockets	IC2 or IA1 or IA2 or IA3	A or B 50-70 50-70 50-70 or 70	3 3 3 3 2

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
	1	Cutting					
*		(a) The overcoat shall be cut in strict accordance with patterns which show size and placement of pockets, directional lines, and also the notches for the proper assembling of all parts. Directional lines shall be in the warp direction of the material. The material shall be cut face to face; that is, the face of one ply of material shall be over and against the face of the next ply below. All parts cut of the basic fabric shall be cut from one piece of material. Extraordinary care shall be exercised in placing the patterns to conform with the warp markings of patterns. The cutting lays shall not exceed 80 plies high.					
*		(b) The liner wool parts shall be cut of one piece of material in strict accordance with the patterns which show directional line, size, and shape.					
*		(c) The rayon cloth lining for the body and sleeves of the overcoat and for the liner shall be cut in strict accordance with the patterns to fit each size. The rayon cloth lining for binding the edges of the liner and for binding the front facings and the inner and back edge of neck facings and the bottom edge of the neck facing of the overcoat shall be cut on the bias 1 inch to 1-1/8 inches wide. The sleeve linings for the body of the					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		overcoat may be cut from ends. Sleeve linings that are cut from ends shall match each other.					
*		(d) The cotton warp and spun hair-wool filling cloth for interlining the overcoat fronts shall be cut with the front edge on the straight, that is, in the direction of the warp. The material for the pockets, the silesia for the pocket stays, and the interlining for the welts shall be cut in the warp direction. The silesia stays for the armholes and the shoulder seams shall be cut on the bias 3/4 inch wide. The vent stay piece may be cut in the warp or filling direction. The cloth for the undercollar and the cloth for the collar interlining shall be cut on the bias. The interlining (wigan) for the sleeve bottom shall be cut on the bias.					
*		(e) Replace at the time of cutting any part containing shade bar, holes, or weakening defects such as smashes, multiple floats, or loose slubs.					
		(f) Replace any part damaged during the manufacturing process by needle chews, cuts, tears, holes, mends, burns, and exposed drill holes.					
	2	Shade marking					
*		(a) All parts shall be shade marked (see 3.3.2) to insure a uniform shade and size throughout the overcoat and the liner as					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		required. Sleeve linings that are cut from ends shall match each other but need not match the body lining.					
	3	Front of overcoat					
		(a). Stitch the bust dart with a 1/2-inch seam; taper to nothing 1 inch below the end of the cut.	A	A	301	SSa-1	12-14
*		(b) Sew a 1/4-inch-wide straight tape around armhole of the front; from the side seam line up to about 1 inch above the armhole notch. As an option, the front armhole may be taped continuously with the back armhole in No. 12(h).	A	A	301	SSaa-1	10-14
		(c) Press the bust dart seams open and flat.					
*		(d) Sew a strip of the bias-cut silesia on the armholes to extend from 1/2 inch down from the shoulder seam to the armhole notch of the front.	A	A	301	SSaa-1	10-14
*		(e) Sew a strip of bias-cut silesia on each front along the shoulder 1 inch from the gorge to within 1 inch from the armhole.	A	A	301	SSaa-1	10-14
		(f) Sew the 1/4-inch-wide tape on the gorge seam allowance from 1/2 inch behind the break line to the shoulder seam line.	A	A	301	SSaa-1	10-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
	NOTE: A tolerance of plus or minus 1/2 inch will be permitted for positioning the ends of the tapes and bias-cut strips of silesia.					
* 4	Make pocket welt. The twill line of the forepart of the overcoat and the welt shall be in the same direction when finished. The welt (catching the silesia interlining) shall be sewn with thread matching the basic material. The welts shall be uniformly made.					
	(a) Position the silesia interlining on the underside of the welt piece with one edge along the fold line indicated on the pattern and stitch 1/8 to 3/16 inch from the edge of the silesia next to the fold line. In the finished welt, the interlining stitching shall not be exposed on the top ply of the welt.	A	A	301	LSbj-1	12-16
*	(b) Fold the welt, as indicated by the notches on the pattern, and seam both ends with a 3/8-inch seam.	A	A	301	SSe-2(a)	12-16
*	(c) Trim the corners, turn, and work out the corners and the ends.					
*	(d) Baste the folded edge and the ends of welt, forcing out the edges so that the seam line is at the edge and the underside of the welt is not exposed on the top of the welt.			101 or hand		

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
	(e) Press the welt, keeping the folded edge straight.					
	(f) Mark the pocket welt, with the pocket welt marker, for width.					
5	Assemble hanging pocket and welt on fronts. The finished welt shall measure 1-1/2 inches (plus or minus 1/8 inch) wide and 7 inches (plus or minus 1/4 inch) long.					
*	(a) Mark the fronts, in accordance with the marks on the pattern, for positioning of the pocket welt.					
*	(b) Stitch the pocket welt piece to the edge of the welt and parallel to the welt edge, 1/4-inch-gage seam, securely tacking the ends.	A	A	301	SSa-1	12-16
*	(c) Position the welt on the outside of the fronts, in accordance with the marks on the pattern, with the folded edge of the welt towards the front of the foreparts. Seam the welt to the foreparts on the marked width line of the welt simultaneously securing the pocket stay on the underside of the front.	A	A	301		12-16

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(d) Stitch the pocket piece to the front with a 1/4-inch seam. The stitching shall be 3/8 to 1/2 inch from the stitching attaching the welt to the front.	A	A	301	LSbj-1	12-16
*		(e) Cut the pocket opening in the front midway between the two rows of stitching and parallel with the raw edge of the welt and the pocket welt piece. Tongue notch the fronts at the top and the bottom ends of the pocket opening. Care shall be taken not to make the notches too deep so that cuts will not be visible after the pocket welts are completed in the overcoat.					
*		(f) Turn the pocket pieces to the inside with the welt turned toward the back and the pocket joining seam allowance on the back of the opening turned against the pocket.					
		(g) Baste the welt in the finished position.			101		
*		(h) Tack invisibly the top and bottom ends of the welt to the fronts; starting at the back corner of the welt, take a stitch on the underside of the welt, insert the needle through to the underside of the front; tack across the width of the welt and back again forming crisscross stitches on the underside. The tacking shall be close to the ends of the welt with the corners of the welt securely tacked.	C silk C silk		hand hand		20 (minimum) plus tacking 4-6 per tack

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		(i) Close the pocket by seaming the top, the front, and the bottom 1/2 inch from the edge.	A	A	301	SSa-1	12-16
*		(j) Press the pockets.					
*	6	Make interlining for fronts. The interlining for the overcoat front shall consist of three pieces: a front extending to the shoulder, a side front extending from the base of the armhole to the shoulder, and a chest piece.					
*		(a) Overlap the edges of the front and the side front 1/2 inch and zigzag stitch together through the silesia stay, or the overlapped edges of the front and the side front may be zigzag stitched together and then the silesia stay stitched to the interlining on each side of the overlapped edges.	50/3 to 70/3 or 70/2	50/3 to 70/3 or 70/2	304 or 304 and 301 or 304		4-8 4-8 4-8 4-8
*		(b) Overlap the edges of the bust dart 1/2 inch on the chest piece, and zigzag stitch together through the silesia stay.	50/3 to 70/3 or 70/2	50/3 to 70/3 or 70/2	304	FSa-1	4-8
*		(c) Position the chest piece on the front interlining, and stitch with three rows of zigzag stitching along the front edge and the bottom edge.	50/3 to 70/3 or 70/2	50/3 to 70/3 or 70/2	304		4-8

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*	7	Make shoulder loops. The shoulder loops shall consist of one piece of basic material and one piece of the silesia interlining. The finished loops shall not be twisted and shall measure 2 inches at the armhole seam line. The finished shoulder loop shall extend from the top of armhole seam to 1/4 to 1/2 inch beyond the undercollar edge.					
		(a) Fold the shoulder loops lengthwise and seam.	A	A	301	SSa-1	12-14
		(b) Press the center seam open and flat.					
*		(c) Center the lengthwise seam line on the loop; center the silesia interlining on the shoulder loop with the armhole edges even, and seam to one side of the shoulder loop seam allowance and around the rounded ends.	A	A	301	LSjb-1 and SSa-1	12-14
		(d) Trim the ends; turn the loops; force out the rounded ends so that the seam line is at the edge of the underside of the loop and is not exposed on the top side.					
		(e) Baste the edges of the loops, with the lengthwise seam line centered on the underside of the shoulder loop.			101 or hand		2-4
		(f) Press the loops flat and smooth.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
	8	Make collar					
*		(a) Join the undercollar pieces at the center back with a 3/8-inch seam.	A	A	301	SSa-1	12-14
		(b) Join the undercollar interlining pieces at the center back.	A	A	301	LSa-1	12-14
*		(c) Open the undercollar seam and stitch one side of the seam allowance to the collar interlining, or press open the undercollar seam.	A	A	301	LSbj-1	6-8
*		(d) Pad (blindstitch) the interlining to the undercollar with seven to eight rows of blind-stitching.	50/3 to 70/3 or A or B or 70/2		103	SSm-7 or SSm-8	
		(e) Press the undercollar.					
		(f) Shape and trim the undercollar and the interlining, and trim the interlining 1/8 inch in from the lower neck edge of the under-collar.					
		(g) Mark the undercollar stand line.					
		(h) Stitch on the stand line through the interlining and the undercollar; the stand shall be 1-1/4 inches (plus or minus 1/8 inch) at the center back. Stitch the top (outer)	A A	A A	301 301	SSa-1 SSa-1	12-14 12-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
	and the side edges (end) of the undercollar 1/2 inch (plus or minus 1/8 inch) from the edge.					
	(i) Mark the topcollar with a pattern shaper.					
	(j) Position the top (outer) edge of the topcollar between the upper edges of the undercollar and the interlining, matching the markings indicated on the topcollar and the undercollar pattern, lapping the edge of the topcollar on the interlining 3/8 inch and stitch the edge of the topcollar to the interlining. When No. 8(n) is performed by machine, the topcollar does not need to be sewn to the interlining.	A	A	301	LSa-1	4-6
	(k) Baste the ends, the upper edge of the collar, and at the crease line.			101 or hand		
	(l) In lieu of No. 8(j) and 8(k), baste the topcollar along the stand line and the top (outer) and side (end) edge, allowing fullness in the topcollar so that the corners of the collar will not curl and to allow for the collar roll.			101 or hand		
	(m) Trim and turn the edges of the topcollar over the interlining, between the undercollar and the interlining, and baste the edges.			101 or hand		

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(n) Fell the top (outer) and the side (end) edges of the undercollar to the topcollar by hand, or the top edge only may be machine felled with simulated hand stitching; the corners and the sides shall be felled by hand. When simulated hand stitching is used for the top edge, the operation shall precede the collar basting.	A silk or C silk		hand or		8-10
			A	A	machine		6-10
*		(o) Press and crease the topcollar, the interlining, and the undercollar on the stand line holding the stand line short, shaping the collar and stretching the top (outer) edge across the shoulder area.					
*		(p) Trim the lower (neck) edge of the topcollar to allow for seaming.					
	9	Make sleeves					
*		(a) With the notches matching, join the forearm seam of the sleeves with a 1/2-inch seam.	A	A	301	SSa-1	12-14
		(b) Press the forearm seam open and flat, holding the seam short.					
*		(c) Stitch the forearm seam allowance of the topsleeve and undersleeve and the back arm seam allowance of the topsleeve and undersleeve 1/8 to 1/4 inch from the raw edge of the sleeve. The bottom edge of the wigan shall be 1/2 to 3/4 inch below the turn-up	A	A	301	LSbj-1 and SSa-1	6-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
	notches and shall measure not less than 3 inches wide.					
	(d) Mark and baste the turn-up of the bottom of the sleeve.			101 or hand		
	(e) Press the bottom of the sleeves, and pull out the basting.					
	(f) Join the back arm seam of the sleeves with a 1/2-inch seam allowance.	A	A	301	SSa-1	12-14
	(g) Press the back arm seam open and flat.					
	(h) Blindstitch the turn-up of the sleeve to the wigan.	50/3 to 70/3		103 or	EF1-1	4-6
		50/3 to 70/3	50/3 to 70/3	301 or		4-6
		50/3		hand		1-2
*	(i) Join the back arm seam and the forearm seam of the sleeve linings with a 1/2-inch seam allowance.	A	A	301	SSa-1	12-14
	(j) Tack the forearm seam allowances and the back arm seam allowances of the sleeve lining to the forearm seam allowance and the back arm seam allowance of the topsleeve, respectively. The tacking shall extend from not more than 5 inches below the top to not more than 5 inches above the creased bottom edge.	A	A	301 or hand	SSa-1	4-6 1-2

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		When tacking is done by hand, both ends of the stitching shall be securely backstitched with not less than three stitches. The sleeve linings shall extend not less than 3/4 inch nor more than 1 inch above the top of the sleeve.					
*		(k) Turn under the bottom of the sleeve lining not less than 1 inch and baste. The bottom of the sleeve lining may be felled without basting (see No. 41(b)).			hand or 101 or 301 hopper		
		(l) Turn the sleeves and assemble in pairs.					
	10	Baste front interlining to fronts					
*		(a) Position the fronts on the respective front interlinings with the interlining extending beyond the armholes and the neck edges. Baste from the outside through all plies of the material from the outside with the hanging pockets between the fronts and the interlining along the vertical center of the fronts from approximately 2 inches below the top point of the front to approximately 1-1/2 inches above the bottom edge of the front.			hand or 301 hopper		
		(b) Baste from the lapel break line across the top of the front and around the armhole approximately 2 inches from the edge, and continue basting along the back edge of the interlining to the bottom of the front.			hand or 301 hopper		

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(c) From the outside baste along the break line of the lapel, and continue basting down the front to the bottom approximately 1 inch from the edge.			hand or 301 hopper		
*		(d) Baste down the front edges of each pocket through the fronts and the interlining.			hand or 301 hopper		
*		(e) Tack the seam allowances of the front edge of the pockets to the overcoat front interlining with two rows of blindstitching, the first row on the edge and the second row adjacent thereto. If the pockets are tacked by hand, the ends of stitching shall be securely tacked, and the pockets may be tacked with one row of stitching.	A A	 A	103 or 301 or hand	SSm-2 SSm-2	4-6 4-6 2-4
*		(f) Position and baste the bridle tape along and 1/4 inch behind the break line, holding the tape taut so that the lapel roll will not bulge in the finished overcoat. The tape shall extend above the gorge seam allowance to 1 to 1-1/2 inches from the front edge at the bottom of the lapel.			hand or 301 hopper		
		(g) Trim the excess interlining at the shoulders, the armholes, and the gorge.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
	11	Pad lapels					
*		(a) Pad each interlining to the lapel with not less than seven equally spaced rows of blindstitching. Fullness in the interlining shall be distributed between the rows of stitching, allowing the lapel to roll.	50/3 to 70/3 or A or B or 70/2		103 or	SSm-7	6-8
			50/3 to 70/3 or A or B or 70/2		hand		2-4
*		(b) Blindstitch on both edges of the bridle tape.	50/3	50/3	301 or	SSm-2	6-8
			50/3		103 or hand		2-4
	12	Make back and vent					
*		(a) Stitch the 1/4-inch-wide tape to the underside of the turn-under or the left side of the vent with one edge of the tape in line with the center back seam line and the stitching 1/16 to 1/8 inch from the edge of the tape. The stitching shall not show on the outside of the finished left vent.	A	A	301		12-14
*		(b) Turn back the raw edge of the right side of vent 3/8 inch, and baste by machine or hand 1/8 inch from the edge.			101 or 301 or hand		1-2
*		(c) Join the center back seam with a 3/4-inch seam allowance, catching the silesia stay piece on the right back at the top underside of the vent and continuing the stitching across the top of the vent to 1 to 1-1/4 inches from the edge of the vent.	A	A	301	SSa-1	12-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(d) Stitch the shoulder dart with a 3/8-inch seam; taper to nothing 1 inch below the end of the cut. Press the seam open and flat.	A	A	301	SSa-1	12-14
*		(e) Clip the right center back seam allowance at the top of the vent and press the back seam open and flat, holding the seam short.					
		(f) Turn under the left vent in line with the center back seam line, and baste along the fold and inner edge of the turn-under.			101 or hand or 301 hopper		
*		(g) From the outside stitch across the top of the vent through all plies diagonally downward from the center back seam line for a distance of 1-1/4 to 1-1/2 inches.	A	A	301	SSv-1	12-14
*		(h) Stitch a 1/4-inch-wide tape, on the back of the armholes from the side seam to 3/4 to 5/8 inch from the shoulder seam, holding the tape taut.	A	A	301 or 401	SSaa-1	10-14
	13	Join back to fronts					
		(a) Join the back to the fronts at the side seam with a 3/4-inch seam allowance. The interlining on the front shall not be caught in the stitching of the side seam.	A	A	301	SSa-1	12-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		(b) Press the seam open and flat, without stretching.					
	14	Sew on identification label					
*		(a) Position the identification label on the left front facing with the top edge of the label 1/2 inch (plus or minus 1/4 inch) from the front facing-lining joining seam line and the left edge of the label 2 inches (plus or minus 1 inch) below the bottom button. Sew the label on all four sides 1/16 to 1/8 inch from the edge.	A	A	301	LSbj-1	10-14
	15	Join neck facing to front facing					
*		(a) Join the ends of the back neck facings to the shoulders of right and left facings with a 1/2-inch seam allowance.	A	A	301	SSa-1	12-14
		(b) Press the seams open.					
	16	Bind facing					
*		(a) Bind the back edge of front facings and inner and back edge of the neck facings with the raw edges of the binding turned in and caught with the binding.	A	A	301	BSc-1	12-14

Source: https://assist.dla.mil -- Downloaded: 20261O-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
17	Make body lining					
*	(a) Stitch the center back seam with a 1/2-inch gage and the side seam with a 3/4-inch gage.	A	A	301	SSa-1	12-14
*	(b) Overedge stitch the front edges of the lining.	A or B or 70/3 or 70/2	A or B or 70/3 or 70/2	503 or 504		8-12
*	(c) Stitch the shoulder darts in the back lining, as indicated by the pattern marks, with the ends of the stitching tapering 1/2 to 3/4 inch below the drill hole.	A	A	301	OSf-1	12-14
	(d) Press the side seam of the body lining and the back darts flat to one side. The raw edges of the side seams and the fold of the darts shall be toward the center back.					
18	Hem lining					
*	(a) Turn under the raw edges of the body lining 3/8 to 1/2 inch, forming a finished hem 2-1/2 inches (plus or minus 1/4 inch) wide, and fell by hand or machine.	70/3 C silk		103 or hand	EFb-1	4-6 2-4
19	Attach body lining to facing. The bottom edge of the lining shall finish approximately 1-1/4 inches above the finished bottom edge of the overcoat.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(a) Mark the underside of the facing 1 to 1-1/4 inches from the bound edge. Fold the front edge of the body lining (including the hem) 1/2 inch. Position the face side of the lining to the underside of the facing on the marking. The notch on the lining shall match the front facing-neck facing seam line. Stitch the lining to the facing 1/16 to 1/8 inch from the folded edge, leaving the shoulder end of the lining open for approximately 3/4 inch for subsequent basting of the shoulder lining. The attaching stitching of the lining shall extend to the bottom raw edge of the facing.	A	A	301		12-14
*		(b) Form the pleat in the lining at the fronts of the shoulder as indicated on the patterns, and stitch across the top, or the pleats may be formed when basting the lining in No. 28. The folded edge of the shoulder pleat for the front lining on the inside of the finished overcoat shall face the armhole.	A	A	301 or hand or 301 hopper	SSa-1	12-14
*		Note: In lieu of No. 19(a) and 19(b), the body lining may be attached to the facing as specified in No. 19(c) through 19(f).					
		OR					
*		(c) Mark the back edge of the front facing on the top side 1 to 1-1/4 inches from the bound edge. Mark the face side of the lining 1-1/2 to 1-3/4 inches inward from the front edge.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(d) Position the underside of the facing against the face side of the front lining with the back edge of the front facing aligned with the marking on the front edge of the lining. The notch on the front edge of the lining shall match the shoulder seam line joining the front and neck facings.					
*		(e) Stitch the facing on the marked line to the lining front leaving the shoulder of the lining open for approximately 3/4 inch for subsequent basting of the lining at the shoulder. The stitching of the lining shall extend to the bottom raw edge of the facing.	A	A	301	LSa-1	12-14
*		(f) Press the front lining seam allowance toward the back.					
	20	Press and shape fronts					
*		(a) Place the taped front and back of the armholes at the edge of the pressing machine, and press the edges flat. Press the right and the left fronts, the lapels, and the chest of the overcoat individually on a steam pressing machine. Position the lapel shaper at the point of the shoulder and mark; shape the lapel and trim. Trim the frayed ends from the front and bottom edges, and trim the interlining 1/2 inch away from the edge of the lapels and the fronts and the bottom on the turn-up fold line. The interlining at the bottom may be cut diagonally upward toward the back.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
21	Baste facing to fronts					
*	(a) Mark the shoulder for finished seam line. In lieu of marking the shoulder seam line, when matching the facing to the front, align the shoulder seam line joining the front and back neck facing, 1/2 inch from the raw edge of the shoulder seam allowance.					
	(b) Match and fit the facing to the fronts, placing the back neck facing seam line on the shoulder as marked; baste, placing fullness at the chest and the lapels.			hand or 301 hopper		
22	Tape and fell fronts					
	(a) Seam the tape and the facing to the edges of the overcoat with a 3/8-inch seam from the notch of the lapel across the top of the lapel and down the front. Leave the bottom of the facing open. Check the lapel steps for length. The tape shall terminate at the finished hem of the overcoat.	A	A	301	SSab-1	12-14
*	(b) Blindstitch the edge of the tape to the interlining from the lapel notch to the bottom of the tape.	50/3 to 70/3 or A or B or 70/2		103 or hand	SSm-1	3-4

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*	23	Tape bottom edge					
		(a) Sew the rayon tape to the bottom of the overcoat.	A	A	301	LSa-1	12-14
	24	Press trim, turn hem, and baste fronts and bottom					
*		(a) Trim the facing along the top and front edges of the lapel and the front edges of the fronts. Trim the corners of the lapels. Press the edges of the lapels and the fronts flat and smooth on a steam pressing machine. Remove the bastings and press the lapel and the front edge seams open and flat with a heated pressing iron.					
		(b) Turn up the bottom of the overcoat, matching the vent lengths, and baste. Continue the basting across the bottom of the facing. The turn-up shall be 3 inches (plus or minus 1/4 inch) not including the tape.			101 or hand		
		(c) Blindstitch the hem tape to the overcoat	50/3 to 70/3		103	SSm-1	4-6
*		(d) Turn the facings; work out the lapels and the fronts. Baste the edges around the lapels and down the fronts. The front shall not be exposed along the top, and front edges of the lapel and the facing shall not be exposed along the front edges of the finished overcoat.			101		2-4

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(e) Blindstitch (bluff) by machine or hand the facing to the interlining 1/2 to 3/4 inch from the facing joining seam line below the bottom buttonhole to the bottom of the overcoat.		A or B or 50/3 to 70/3 or 70/2	machine		4-6
				A or B or 50/3 to 70/3 or 70/2	hand		2-4
*		(f) Baste a second row approximately 3/4 inch from the front edge.			hand or 301 hopper		1-2 inches long
*		(g) Place a diagonal row of basting from the lapel break line to the point of the lapel.			hand or 301 hopper		1-2 inches long
*		(h) Baste the break line of the lapels, allowing proper fullness for the roll of the lapels.			hand or 301 hopper		1-2 inches long
*		(i) Baste the back edge of the facings 1-1/4 inches from the binding, putting proper fullness over the chest.			hand or 301 hopper		1-2 inches long
	25	Tacking facings to interlining.					
*		(a) Tack the seam allowance of the lining facing joining seam to the interlining and	A or B or	A or B or	301 or	SSm-1	4-8

Source: https://assist.dla.mil -- Downloaded: 20260-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		one ply of the pocket with one row of blind-stitching from 4 inches (plus or minus 1 inch) below the shoulder seam to 2 inches (plus or minus 1 inch) above the bottom of the lining.	50/3 to 70/3 or 70/2	50/3 to 70/3 or 70/2			
			A or B or 50/3 to 70/3 or 70/2		103 or		4-8
			A or B or 50/3 to 70/3 or 70/2		hand		1-2
*	26	Tack left side of vent					
		(a) Tack the back edge of the left side of the vent with one row of blindstitching.	50/3 to 70/3		103 or	Efl-1	2-4
			50/3 to 70/3	50/3 to 70/3	306		
*	27	Tack shoulder pads					
*		(a) Insert the shoulder pads between the interlining and the chest piece. Securely tack to the interlining so that the center of the shoulder pad will be 3/4 inch forward of the shoulder seam line in the finished overcoat.			hand or 301 hopper		1-2

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
	28	Baste lining					
*		(a) Fit and baste the lining, forming a pleat at the front shoulders. Continue basting around the armholes and along the side seams to approximately 6 inches from the bottom of the lining. Baste the lining to the back around the armhole and across the back and the shoulders. Baste a 1-inch (plus or minus 1/4-inch) pleat in the center of the back. The pleat shall face the left armhole. Slash the left back lining at the top of the vent sufficiently to allow the edge of the lining to be turned under 1-1/4 to 1-1/2 inches from the folded edge of the vent. Trim away the excess lining on the turn-under. Baste the folded edge of the lining turn-under in position.			hand or 301 hopper		1-1-1/2
*		(b) Slash the right lining back at the top of the vent inward from the raw edge diagonally upward to the folded edge of the center back pleat to allow the turning under of the right lining back diagonally downward covering the raw edges of the left vent lining and top of the vent in the overcoat. Turn under the lining not more than 1/16 inch from the vent edge. Insert the turn-under on the lining under the end of the hem turn-under on the overcoat; baste in position. The folded edge of the lining shall not be exposed beyond the edge of the right vent.			hand or 301 hopper		1-1-1/2

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(c) Trim the gorge, allowing seam for setting the collar to the facing. Trim the lining of the back neck even with the back neck edge of the overcoat shoulders and the armhole and the interlining of the armholes, allowing sufficient material for basting the shoulder lining and tacking the armholes.					
*		(d) Stitch the edge of the lining to the right vent edge; continue the stitching to the bottom of the vent 1/16 to 1/8 inch from the edge.	A	A	301		12-14
	29	Join and press shoulder seam					
		(a) Join the shoulder seam of the overcoat, with a 1/2-inch seam, matching the front and back dart lines at the shoulder.	B	B	301	SSa-1	12-14
		(b) Press the shoulder seams open and short.					
*	30	Set shoulder loops					
*		(a) Baste or stitch the shoulder loops to the shoulder at the armhole. Trim even with the armhole. The edge of the rounded end of each shoulder loop shall overlap the edge of the undercollar 1/4 to 1/2 inch. The back edge of the shoulder loop shall be 1/2 inch (plus or minus 1/8 inch) back of the shoulder seam at the armhole and at the neck.	A	A	301 or 101	SSa-1 SSa-1	6-8

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*	31	Baste shoulder					
		(a) Baste in from armhole up to and along the shoulder seam to the gorge. Continue basting down from the shoulder 3 inches (plus or minus 1/2 inch), catching the interlining in the basting. Fit and baste the upper part of the shoulder lining seam and the neck facing.			hand or 301 hopper		
*	32	Baste and fit lining to neck portion of facing					
		(a) Turn under the edges of the shoulder back lining. Baste the upper part of the lining to the neck portion of the facing with a 1-inch pleat formed in the lining at the center back.			hand or 301 hopper		
*	33	Set on collar					
		(a) Mark the outlet at the neck with a gorge shaper.					
		(b) Seam the topcollar to the front facings at the gorge to a point not less than 1 inch back of the lapel break line.	A	A	301	SSa-1	12-14
		(c) Tack the gorge seam open to the gorge (neck) seam of the overcoat front, catching the bridle tape in the tacking.			hand or 301		3-4 10-12

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
	(d) Seam the neck facing and the lining to the neck edge of the overcoat, catching the size label at the center back and the ends of the hanger in the stitching. The ends of the hanger loop shall be spread apart 2 inches (plus or minus 1/2 inch).	A	A	301	SSa-1	10-12
	(e) Baste the neck edge of the undercollar to the overcoat by hand, putting in proper fullness over the shoulders.			hand		2
	(f) Tack, the neck outlet and the lining across the back to the collar interlining, with a blindstitch.	50/3 C silk		103 or hand		3-4 3-4
	(g) Turn under and baste the lower edge of the topcollar at the neck.			hand		
	(h) Fell the undercollar to the overcoat, and tack the corners to the overcoat front.	C silk		hand		8-10
	(i) Fell the lower edge of the topcollar from gorge seam to gorge seam.	C silk		hand		8-10
* 34	Set in sleeve					
*	(a) Match the notch in the sleeve head of the topsleeve with the shoulder seam line, the forearm sleeve seam line to the front armhole notch, and the back arm sleeve seam line to the back armhole notch, and stitch in each sleeve, with a 3/8-inch seam, distributing the fullness and catching the end of the	B	B	301	SSa-1	12-14

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		shoulder loop in the seam. The interlining in the front shall not be caught in the seaming.					
*	35	Press armhole seams					
*		(a) Press the fullness of each sleeve flat all around the armhole, and press open the seam across the top from the back notch to not less than 4 inches forward of the shoulder seam. The portion of the shoulder loop seam allowance that extends into the sleeve shall not be pressed back. The shoulder loop shall remain smooth and flat.					
*	36	Baste armholes					
*		(a) Baste along the shoulder seam from the center of the shoulder to the armhole seam bringing the shoulder seam forward at the armhole seam and tack with three stitches at the armhole end of the shoulder seam. Baste around the outside of the armholes, positioning the lining, the interlining, the shoulder pads, and the back of the shoulder in proper place and putting fullness of the back lining in proper place. Baste the balance of the shoulder lining. The back part of the armholes may be basted from the lining side.			hand or 301 hopper		
*	37	Tack armholes					
		(a) Tack all around each armhole. The tacking shall be backstitched every other stitch			hand		3-4

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		from the front notch across the top of the armhole to the side seam.					
		(b) Tack the base of each armhole from the sleeve notch on the front to the sleeve notch on the back.	A	A	301	SSa-1	6-8
		OR					
*		(c) As an alternate to No. 37(a) and 37(b), the armholes may be tacked by machine with a loosely formed and elastic stitch and when so tacked No. 37(b) may be omitted.	30/3	30/3	301	SSa-1	6-8
		Note: The requirement for backstitching is applicable to hand tacking of armholes only.					
		(d) Trim away the excess lining and interlining.					
*		(e) Tack the sleeve head wadding to the armhole from the front armhole notch to the back seam of the sleeve. When the armhole is tacked by machine, the trimming of the armhole and the stitching of the sleeve head wadding may be performed simultaneously.			hand or 301		3-4 4-6
*	38	Press overcoat edge					
*		(a) Before making the buttonholes, press the edges of the fronts with a steam pressing machine.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*	39	Mark position of buttonholes on front					
		(a) Mark the position of the four buttonholes on the right front, as indicated on the patterns. The center of the eyelets shall be 1 inch (plus or minus 1/8 inch) from the front edge.					
*	40	Make buttonholes					
*		(a) Make four, eyelet-end, cut-first, square-bar-type buttonholes to accommodate a 45-line button, worked over gimp, with the thread ends pulled through to the underside. The thread and gimp ends shall be caught in the bartack. The bartack shall be a separate operation from the buttonhole making.	B silk A silk	C silk A silk	buttonhole		85 per buttonhole not including bartack 21 per bartack
*	41	Hand and machine felling					
*		(a) Fell the lining all around at the armholes with the sleeve edge turned under, working in the fullness evenly between the notches and with the forearm and the back arm seam lines in the sleeve lining and sleeves aligned. Backstitch the armhole at the armpits from the forearm seam of the sleeves toward the backarm seam line, for 4 inches (plus or minus 1/2 inch).	C silk		hand		6-8
		(b) Fell the sleeve lining at the turn-up.	C silk A silk	 A silk	hand or 314		6-8 6-8

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		(c) Fell shoulder.	C silk		hand		6-8
*		(d) Fell the edge of the lining to the left vent turn-under to the bottom of the lining. Continue felling the bottom of the lining to the bottom hem for 1 to 1-1/2 inches. Fell the end of the bottom hem to the folded edge of the left vent across the tape at the top of the hem. Fell the bottom edge of the lining to the right vent hem for a distance of 1 to 1-1/2 inches.	C silk		hand		6-8
*		(e) Fell the lining at the top of the vent along the edge of the center back pleat from 2-1/2 to 3 inches above the corner, along the diagonal turn-under of the right back lining at the top of the vent and down the lining turn-under to the top end of the stitching along the right vent edge, securely tacking the ends of the felling stitches.	C silk		hand		6-8
*		(f) Fell or blindstitch the neck facing to the back lining from shoulder seam to shoulder seam with the ends of the stitching securely tacked. The felling shall be 1-1/4 inches from the bound edge, or the center of the neck facing may be tacked securely to the lining, approximately 1-1/4 inches from the edge of the facing.	C silk		hand		6-8 10-12 per tack
*	42	Clean overcoat					
		(a) Pull the basting threads. Trim all ends					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		of stitching. Remove the loose threads from the overcoat. Remove all spots and stains. Remove the shade tickets.					
*	43	Press overcoat (a) Place the overcoat on a hanger after the first pressing operation in the final press until completion of pressing. (b) Press the edges and the bottom (edge pressing machine). (c) Press the fronts (front machine). (d) Press the back arm and the forearm seams of the sleeves (sleeve seam machine or back machine). (e) Press the back (back machine). (f) Press the collar and the lapels on a collar machine, creasing on the break line and shaping to obtain the contour of the collar. The crease line shall extend onto the lapel 1-1/2 to 2 inches below the gorge seam with the lower portion of the lapel roll pressed. (g) Press the upper portion of the armholes, the shoulders, and the shoulder loops on an armhole machine.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*		(h) Press the armhole solid from inside on an armhole machine, creasing the sleeve lining at the edge of the armhole seam allowance from 1/2 inch above the back arm seam line to 4 to 4-1/2 inches from the shoulder seam line in the front. The armpit and back of the armhole shall be held short.					
*		(i) Block the armholes and shrink the top of the sleeve on an armhole machine or by a hand pressing iron.					
*		(j) Roll press the lapels.					
*	44	Tack shoulder loops					
		(a) Fell the neck end of the shoulder loop to the undercollar, 1 inch on each side of the center of the rounded end.	C		hand		6-8
		Note: The pressing specified in No. 43 shall be performed before the operations in No. 45 (setting of slide fastener on overcoat). The finish pressing specified in No. 47 shall be performed after the operations specified in No. 45. In this case the sequence of the operations shall not be changed.					
	45	Set slide fastener on overcoat					
		(a) Position the slide fastener on the overcoat facings so that the ends of the slide					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		fastener are equidistance from the bottom edge of the overcoat. The separating pins of the slide fastener shall be on the right facing. (b) Position the slide fastener on the underside of the coat facings with the front edge of the chain 1/4 to 3/8 inch from the bound edge.					
*		(c) Turn in the end of the tape 1/2 to 3/4 inch. Stitch the length of the tape 1/8 to 3/16 inch from the back edge of the chain.	50/3	50/3	301		10-14
*		(d) Place a second row of stitching, the length of the tape, 1/16 to 1/8 inch from the back edge of the tape. Note: No. 45(c) and 45(d) may be performed simultaneously.	50/3	50/3	301		10-14
*	46	Tack facing					
		(a) Tack the bound back edge of the facing to bottom hem of the front, from the bottom of the overcoat to the bottom of the lining hem, with felling stitches. Tack the center of the facing hem to the overcoat hem 3/8 to 5/8 inch up from the bottom with a 3/8-inch-long tack with a minimum of four threads in the tack and the thread ends securely tacked. Tack the lining hem to the overcoat hem at the side seams 3/8 to 5/8 inch up from the bottom of the lining hem. The tack shall be a 3/4-	C		hand		6-8

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		to 1-inch-long double thread chain tack or a wrapped swing tack with a minimum of four threads in the core and the thread ends of the tack securely tacked off.					
*	47	Finish press (a) Press the overcoat at any point not pressed properly by machine. Press the overcoat lining smooth with a hand pressing iron. (b) Remove gloss, including the marking under the lapels, the collar, the pocket welt, and the shoulder loops. (c) Press the pleats in the lining. (d) Where a sleeve machine is not used, finish press to remove the creases from the sleeve fronts and backs.					
*	48	Mark for buttons (a) Mark the location of the four buttons on the left front of the overcoat 2 inches (plus or minus 1/8 inch) from the front edge. The buttons shall correspond with the respective buttonholes.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
*	49	Sew on buttons					
*		(a) The buttons shall be reinforced by 18-line stay buttons on the inside of the overcoat. The stay buttons and the outside buttons shall be sewn together. Sew four, 45-line buttons on the front of the overcoat at the marks. The buttons shall be placed so that there will be no bulging or distortion of the material when the overcoat is buttoned. The buttons shall be sewn with necks 1/8 to 1/4 inch in length. The ends of the button hand sewing shall be tacked off with three stitches. The ends shall be hidden in the hand-sewn buttons. When the buttons are attached with a one-thread button sewing machine, pull on any protruding end to see that the last stitch is locked.	12/4 20/4 20/4	 20/4	hand or 101 or 301		4 per button double thread 20-24 per button 14-16 per button
*	50	Attach identification label to liner					
*		(a) Position the identification label 1 to 1-1/4 inches from the neck at the center (plus or minus 1/2 inch) back so that it will face the overcoat in the finished liner and stitch on four sides.	50/3	50/3	301	LSbj-1	8-10
*	51	Join shoulder seams of liner					
*		(a) Join the shoulder seam with a 1/2-inch seam and with the seam allowance on the face side. (b) Press the seams open and flat.	50/3	50/3	301	SSa-1	12-16

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per inch
			Top	Lower			
*	52	Join shoulder seams of rayon yoke lining					
*		(a) Join the shoulder seams of the rayon yoke with a 1/2-inch seam. Press the seams open.	50/3	50/3	301	SSa-1	12-16
*	53	Attach lining to liner					
*		(a) Position the rayon lining to the face side of the liner, front and back, with the shoulder seams matched. Turn in the bottom raw edge of the rayon lining 1/2 inch and stitch 1/16 inch from the folded edge.	50/3	50/3	301	LSd-1	12-16
*		(b) Stitch and trim all around the raw edges of the rayon lining to correspond with the edges of the liner. The stitching shall finish 1/8 inch from the raw edges.	50/3	50/3	301	SSa-1	12-16
*	54	Bind edge of liner. The finished appearance of the bound edge shall be as follows: The binding shall be uniformly stitched with no raw edges showing. The fabric shall be caught in the stitching.					
		(a) Starting on one front side seam approximately 8 inches down from the armhole, bind the side seam, the bottom, the front, the back neck, and the vent edges continuously. The top of the size label shall be caught in the binding in the center of the back on the lining side. The ends of the binding shall overlap not less than 1/2 inch. The run-off end shall be turned to the unlined side of the	50/3	50/3	301 301 or 301 and 304	BSc-1 bartack or straight line tack bartack	12-16 12-16 28 stitches per tack

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		liner and secured with a 3/8- to 1/2-inch bartack, straight line tack, or bartack in line with the stitching on the binding. If the binding is too short to extend for the entire length of the side seam, the bottom, the front, the back neck, and the vent edges, another strip of binding may be joined to the first as described above, provided that the joining is made along one of the side seam edges and that there are not more than two joinings on a liner.					
*	55	Join side seams of liner					
		(a) Join the side seams with a 3/4-inch seam.	50/3	50/3	301	SSa-1	12-16
*		(b) Spread the side seams open. Tack the top and the bottom ends of the spread open seams with a bartack, straight line tack, or bartack 3/8 to 1/2 inch in length. The tack shall be not more than 1/4 inch from the end of the seam.	50/3 or 50/3	50/3 or 50/3	301 or 301 and 304	bartack or straight line tack	12-16 28 stitches per tack
		(c) Press the side seams open.					
*	56	Set slide fastener on liner. The ends of the slide fastener shall finish equidistance from the bottom of the liner. The retainer part of the slide fastener and the slider shall remain on the liner and shall be on the right front.					

Source: https://assist.dla.mil -- Downloaded: 20260-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

	No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
			Top	Lower			
		(a) Position the slide fastener on the underside of the liner with the back edge of the chain immediately adjacent to the bound edge of the liner.					
		(b) Turn in the raw end of the tape 1/2 to 3/4 inch and double stitch the length of the tape with one row of stitching superimposed on the binding stitch and the other row of stitching 1/16 to 1/8 inch from the back edge of the tape.	50/3	50/3	301	LSa-2	12-16
*	57	Clean liner					
*		(a) Trim all threads. Remove thread ends. Remove all spots, stains, and shade tickets.					
*	58	Press liner					
*		(a) Press liner.					
		(b) Finish press the rayon lining smooth.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE III. Sewing Operations (Cont)

No.	Description of Operation	Thread		Stitch Type	Seam and Stitch Type	Stitches Per Inch
		Top	Lower			
* 59	Attach liner to overcoat (a) Attach the liner to the overcoat by means of the slide fastener, checking the finished operation to insure free and easy manipulation of the slider. There shall be no bulging nor distortion of the overcoat or the liner when the slide fastener is engaged. The liner shall match the overcoat in size. Note: Unless otherwise specified, all pressing shall be accomplished by a heated pressing iron or machine.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

* 3.1.9.3 Temporary basting. The thread used for temporary basting shall be a good commercial cotton thread or the same thread used in seaming the overcoat. A nonfilament synthetic thread may be used for the basting operations where the thread is required to be removed, provided the overcoat is subsequently treated with a dry cleaning agent in which the synthetic thread is soluble and any residue remaining on the overcoat after dry cleaning is brushed off or removed.

* 3.1.10 Buttons. The buttons for the front closure shall be type II, class D, 45 line, style 20 or 21 of V-B-871. The buttons for reinforcing the front buttons shall be type II, class D, 18 line, style 15 of V-B-871. The color of the buttons shall be DOD Button Shade Blue BV, Cable No. 62003 (see DOD Standard Shades for Buttons 1966).

3.1.11 Interlining for fronts. The interlining for the fronts and the front chest piece shall conform to type II of MIL-C-297, shall be dyed black, and shall have good colorfastness to wet dry cleaning, perspiration, and steam pressing.

* 3.1.12 Gimp. The gimp for reinforcing the buttonholes shall approximately match the color of the basic fabric and shall conform to type I or II, size No. 8 of V-T-280. The gimp shall have good colorfastness to wet dry cleaning.

* 3.1.13 Shoulder pads. The shoulder pads and the sleeve head pads shall conform to type III, class 1 and to type IV of MIL-P-15064, respectively, except that the shoulder pad shall be 3/8 inch thick.

* 3.1.14 Collar interlining. The material for interlining the collar shall be unbleached or white cloth conforming to type I, class 2 of CCC-C-438, except that the test for shrinkage shall be in accordance with method 5580 of FED-STD-191.

3.1.15 Slide fastener. The slide fastener shall conform to type IV, style 1, size LS, with a short tab pull, aluminum or brass chain of V-F-106. The length of the slide fastener shall conform to table IV. The slide fastener tape shall be dyed blue, USAF color shade No. 1532 (see 6.3). The dyed tape shall show good colorfastness to wet dry cleaning.

3.2 Design. The overcoat shall be single breasted, fully lined with notched collar and lapel, two lower welt pockets, shoulder loops, and center back vent, lapped left over right as worn. The overcoat shall have a provision (back edge of facing extended) for a zip-in-liner and is designed so that it may be worn with or without a liner. The liner shall be sleeveless and lined to the waist with the side seams, all outside edges, and the armholes bound.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE IV. Length of Slide Fastener

Size of Overcoat	Length of Slide Fastener (Inches)
Short	
6	70
8	70
10	70
12	73
14	73
16	73
Regular	
6	73
8	73
10	73
12	77
14	77
16	77
18	80
20	80
Long	
6	77
8	77
10	77
12	80
14	80
16	80
18	80

* 3.3 Construction. The overcoat and the liner shall be constructed in accordance with table III; however, the manufacturer is not required to follow the exact sequence of operations as listed therein. Additional pressing or basting or holding stitches or stitchings to facilitate manufacturing may be used provided the basting or holding stitches will not show in the finished overcoat.

3.3.1 Stitches, seams, and stitchings. Stitch, seam, and stitching types specified in table III shall conform to FED-STD-751. Whenever two or more methods, seam types, or stitch types are specified for the same operation, any one of them may be used.

3.3.1.1 Thread breaks and ends of seams and stitchings. The ends of all seams and stitchings produced with stitch type 301, when not caught in other seams or stitchings, shall be backstitched not less than 1/4 inch. Thread breaks (all stitch types) shall be secured by stitching back of break 1/2 to 1 inch.

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

3.3.1.2 Stitches per inch. The number of stitches per inch specified in table III shall be interpreted to be the minimum and the maximum number permitted.

* 3.3.2 Shade marking. The cut parts of the liner and the overcoat shall be shade marked. Any method of marking may be used except corrosive metal fastening devices, sew-on type tickets, and adhesive-type tickets which will show discoloration or if the adhesive mass will adhere to the material when the tickets are removed. Metal devices shall not be used on the rayon linings.

* 3.4 Patterns. Standard patterns will be furnished by the procuring activity (see 6.2). The standard patterns show size, seam allowances, shape and placement of pockets, and warp directional lines and include shapers for the lapels, the undercollar, and the undercollar stand and markers for the topcollar, the gorge, and the pocket welt. The standard patterns shall not be altered in any way and are to be used only as a guide for making the manufacturer's working patterns which shall be identical to the standard patterns.

* 3.4.1 Pattern parts. The parts of the overcoat shall be cut from materials as specified in accordance with the number of parts specified in table V.

3.5 Finished measurements. The finished measurements of the overcoat shall conform to table VI. The finished measurements of the liner shall conform to table VII.

3.6 Identification of product. Each overcoat and each liner shall have an identification label and a size label and shall be marked with the wool contents.

* 3.6.1 Identification labels. The identification labels shall conform to type I, classes 1 and 10 of DDD-L-20, except that the contractor's name shall be included with the size of the characters no larger than the contract number. For colorfastness requirements, the overcoat and the liner are intended to be dry cleaned. Unless otherwise specified, the minimum size of the characters of the inscription shall be 1/8 inch. The item description for the overcoat shall be Overcoat, Woman's, Polyester-Wool, Blue 1549 with Removable Liner. The item description for the liner shall be Liner for Overcoat, Woman's, Polyester-Wool, Blue 1549. The identification label shall contain the following information:

Name_____
Rank_____Serial No._____
Organization_____

Item Description 1/
Contract No. 1/
Stock No. 1/
Contractor's Identification 1/
Wool Content 1/

1/ The manufacturer shall insert the applicable information.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

* TABLE V. Pattern Parts

Material	Pattern Nomenclature	Cut Parts
Polyester-wool serge cloth (see 3.1.1)	front parts	2
	back part	2
	topsleeve	2
	undersleeve	2
	topcollar	1
	shoulder loops	2
	front facings	2
	neck facings	2
	pocket welt	2
Wool flannel, lining cloth (see 3.1.1)	back liner	1
	front liner	2
Rayon lining cloth (see 3.1.2)	front body lining	2
	back lining	2
	topsleeve lining	2
	undersleeve lining	2
	back liner lining	1
	front liner lining	2
Cotton, silesia cloth (see 3.1.3)	shoulder loop interlining	2
	pocket welt interlining	2
	pocket stay	2
	vent reinforcement	1
Pocketing (see 3.1.4)	top pocketing	2
	under pocketing	2
Cotton, wigan cloth (see 3.1.5)	sleeve interlining	2
Wool, flannel cloth (see 3.1.7)	undercollar	2
Cotton warp and hair-wool filling cloth (see 3.1.11)	front interlining	2
	front interlining chest piece	2
	side front interlining	2
Cotton, buckram cloth (see 3.1.14)	undercollar	2

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

TABLE VI. Finished Measurements of Overcoat

Size	Measurements In Inches 1/						
	1/2 Bust 2/	Sleeve Inseam 3/			Back Length 4/		
		Short	Regular	Long	Short	Regular	Long
6	19	15	15-3/4	16-1/2	38	40	42
8	19-1/2	15-1/8	15-7/8	16-5/8	38-1/2	40-1/2	42-1/2
10	20	15-1/4	16	16-3/4	39	41	43
12	20-1/2	15-3/8	16-1/8	16-7/8	39-1/2	41-1/2	43-1/2
14	21-1/4	15-1/2	16-1/4	17	40	42	44
16	22	15-5/8	16-3/8	17-1/8	40-1/2	42-1/2	44-1/2
18	22-3/4		16-1/2	17-1/4		43	45
20	23-3/4		16-5/8			43-1/2	

1/ The tolerances shall be plus or minus 3/8 inch for the 1/2 bust, plus or minus 1/4 inch for the sleeve inseam, and plus or minus 1/2 inch for the back length.
2/ The measurement of the 1/2 bust of the overcoat shall be taken, with the overcoat buttoned, from folded edge to folded edge at the base of the armhole level.
3/ The measurement of the sleeve inseam of the overcoat shall be taken, on the inseam, from the armhole seam line to the bottom of the finished sleeve.
4/ The measurement of the back length of the overcoat shall be taken, along the center of the back, from the neck edge of the undercollar to the bottom edge.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

* TABLE VII. Finished Measurements of Liner

Size	Measurements In Inches 1/			
	1/2 Bust 2/	Side Seam Length 3/		
		Short	Regular	Long
6	15-7/8	23-1/4	24-1/4	27-1/4
8	16-1/8	23-5/8	25-5/8	27-5/8
10	16-5/8	24	26	28
12	17-1/8	24-3/8	26-3/8	28-3/8
14	17-7/8	24-3/4	26-3/4	28-3/4
16	18-1/8	25-1/8	27-1/8	29-1/8
18	18-7/8		27-1/2	29-1/2
20	19-7/8		27-7/8	

1/ The tolerance shall be plus or minus 3/8 inch.
2/ The measurement of the 1/2 bust of the liner shall be taken, with the liner laid flat, with the lining side on the inside, and with the two front edges together, at the base of the armhole from the bound front edge to the center back.
3/ The measurement of the side seam length of the liner shall be taken, along the side seam, from the armhole opening to the bottom of the liner.

* 3.6.2 Size labels. The size labels shall conform to type I, class 2 of DDD-L-20. The size shall be expressed numerically and adjectively, for example: 12R and 12S.

3.7 Workmanship. The overcoat, including the liner, shall be manufactured in a thoroughly workmanlike manner and shall be clean and well pressed.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract or purchase order, the supplier is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract or order, the supplier may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.2 Inspection for acceptance. Unless otherwise specified herein, inspection shall be in accordance with MIL-STD-105.

* 4.2.1 Materials and components. Unless otherwise specified herein, the quality assurance provisions for the materials and the components shall be in accordance with the applicable documents referenced herein. In addition, tests shall be performed on the materials and the components listed in table VIII for the characteristics specified therein.

* 4.2.1.1 Sampling for testing. Unless otherwise specified in the applicable subsidiary document, the unit for expressing the lot size and the sample unit for testing the materials and the components shall be as specified in table IX. Unless otherwise specified in the applicable subsidiary document, the sample size for testing the materials and the components shall be as specified in table X. The lot shall be unacceptable if one or more sample units fail to meet any requirements specified herein.

* 4.2.2 End item inspection

* 4.2.2.1 Individual inspection. As a final step in the supplier's production control plan and before formation of a lot, each overcoat shall be buttoned on a model form and examined for the selected defects listed in MIL-STD-1392. Selected defects are those defects listed as asterisk (*) defects in MIL-STD-1392. The occurrence of defects shall not exceed the applicable point value or defect limit specified in MIL-STD-1392. Any overcoat that contains a selected defect shall not be included in an end item lot.

* 4.2.2.2 Sampling inspection. After the end items have been subjected to the individual examination specified in 4.2.2.1, the end items shall be subjected to sampling inspection. The sampling inspection shall consist of the end item examination and the dimensional examination specified in MIL-STD-1392. The occurrence of defects during the sampling inspection shall not exceed the applicable point value or defect limit specified in MIL-STD-1392.

* 4.2.3 Examination of preparation for delivery. Shipping containers fully prepared for delivery except for closure shall be subjected to the examination of preparation for delivery specified in MIL-STD-1392. The occurrence of defects shall not exceed the applicable point value or defect limit specified in MIL-STD-1392.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

* TABLE VIII. Testing of Materials and Components

Material or Component and Characteristic	Test Method of FED-STD-191
Pocketing (see 3.1.4 and table I)	
Material identification 1/	1200
Weight	5041
Texture (threads per inch)	5050
Breaking strength	5100
Colorfastness to wet dry cleaning	5622
Colorfastness to crocking	5651
Sulfur dye	2020
Tape (see 3.1.6.3)	
Colorfastness to crocking	5651
Colorfastness to wet dry cleaning	5622
Braid (see 3.1.8)	
Material identification 1/	1200 or 1500
Breaking strength 2/	5100
Colorfastness to wet dry cleaning	5622
Colorfastness to crocking	5651
Colorfastness to perspiration	5680
Interlining for fronts (see 3.1.11)	
Colorfastness to wet dry cleaning	5622
Colorfastness to perspiration	5680
Colorfastness to steam pressing	5640

1/ A certificate of compliance will be acceptable for this requirement.
2/ Breaking strength shall be determined on the full width of the tape, and the jaw width shall be greater than the width of the tape.

* TABLE IX. Expression Of Lot Size And Sample Unit

Component	Lot Size Expressed As	Sampling Unit for Testing
Pocketing	yards	1 continuous yard full width
Braid	yards	1-1/2 continuous yards
Interlining	yards	1 yard full width

TABLE X. Sample Size

Lot Sizes (Units)	Sample Size
800 or less	2
801 to 22,000 inclusive	3
22,001 or more	5

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

* 5. PREPARATION FOR DELIVERY

* 5.1 Preservation and packaging. Preservation and packaging shall be level A or C as specified (see 6.2).

*

* 5.1.1 Level A. Each full buttoned overcoat with liner attached shall be neatly folded to approximate length of 24 inches and width of 20 inches and in a manner to form a compact package. Each folded overcoat with liner shall be uniformly dusted with naphthalene flakes (see 6.5) and inserted in a snug-fitting, heat-sealable polyethylene bag. The bag shall be of 0.003-inch-gage polyethylene. The bag closure shall be effected by heat sealing with heat seal as close as possible to the open end. A 1/4-inch-diameter hole shall be made at one corner of each bag to allow excess air to escape.

* 5.1.2 Level C. The overcoat with liner shall be packaged to afford adequate protection against deterioration and physical damage during shipment from supply source to the first receiving activity for immediate use. This level may conform to the supplier's commercial practice provided the latter meets the requirements of this level.

* 5.2 Packing. Packing shall be level A, B, or C as specified (see 6.2).

* 5.2.1 Level A. Five overcoats of one size only, packaged as specified, shall be packed in a box conforming to type CF, class weather-resistant, grade V3c, style RSC-1 of PPP-B-636. The inside dimensions of the box shall be approximately 24 inches long, 20 inches wide, and 7 inches deep. The waterproofing requirements specified in the appendix of PPP-B-636 shall be required. Toward the end of the contract or order or if the quantity of overcoats of the same size is less than the quantity required per box, mixed sizes (see 5.3.1) may be packed within the same box.

* 5.2.2 Level B. Level B packing shall be the same as specified in 5.2.1 except that the box shall conform to class domestic, grade 275, style RSC-1 of PPP-B-636. Closure of the box shall be in accordance with method II of the appendix of the box specification.

* 5.2.3 Level C. The overcoat with liner shall be packed to afford adequate protection at the lowest rate against damage during direct shipment from the supply source to the first receiving activity for immediate use. The container shall conform to applicable rules of carriers and regulations applicable to the mode of transportation.

* 5.3 Marking. In addition to any special markings required by the contract or order, interior and shipping containers shall be marked in accordance with MIL-STD-129.

Source: https://assist.dla.mil -- Downloaded: 202640-26T04:42Z
Check the source to verify that this is the current version before use.

* 5.3.1 Mixed sizes. Each shipping container packed with mixed sizes (see 5.2.1) shall have securely attached to the end and side, directly under the printing or stenciling, a white paper label, 5 by 4 inches, with the words "mixed sizes" plainly stamped or printed thereon. Under these words shall be legibly stamped or printed the quantities of each size contained therein.

6. NOTES

* 6.1 Intended use. The overcoat covered by this specification is intended to be worn as a component of the winter uniform by female personnel of the Department of the Air Force.

* 6.2 Ordering data. Procurement documents should specify the following:

(a) Title, number, and date of this specification

(b) Size required (see 1.1.)

(c) Pattern requirements (see 3.4)

(d) Selection of applicable levels of preservation and packaging and packing (see 5.1 and 5.2).

6.3 Samples. Samples of color shades may be obtained from the procuring activity or as directed by the contracting officer.

6.4 Figures. Figure 1, 2, and 3 indicate general appearance and are for information only.

6.5 Naphthalene flakes. If Government furnished material of wool or part wool content has been mothproof treated, the requirement for napthalene flakes will not be applicable.

6.6 Annotation of changes. The margins of this specification are marked with asterisks to indicate where changes (additions, modifications, corrections, or deletions) from the previous issue were made. This was done as a convenience only and the Government assumes no liability whatsoever for any inaccuracies in these notations. Bidders and contractors are cautioned to evaluate the requirements of this document based on the entire content irrespective of the marginal notations and relationship to the last previous issue.

Custodian:
Air Force - 11

Reviewer:
Air Force - 82

Preparing activity:
Air Force - 11

Project No. 8410-F213

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

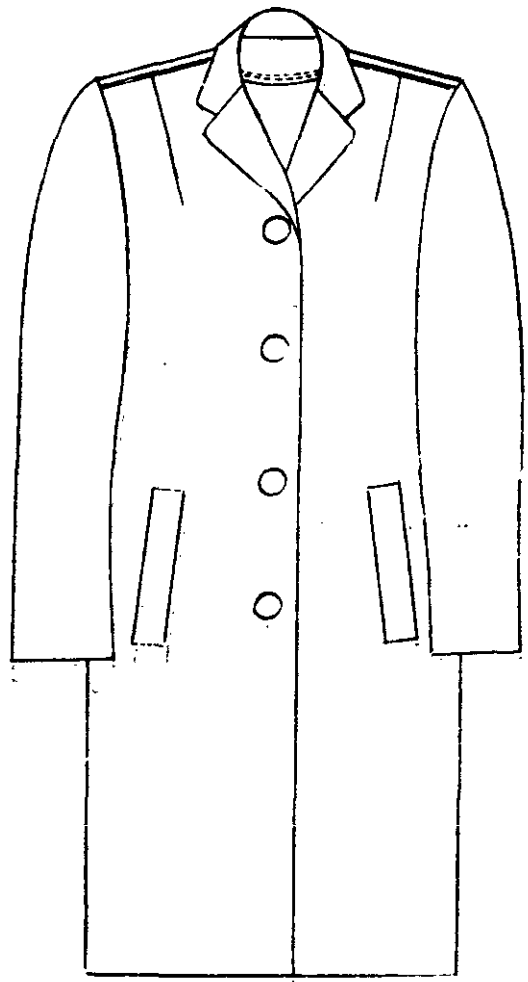


FIGURE 1. Overcoat (Front View)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

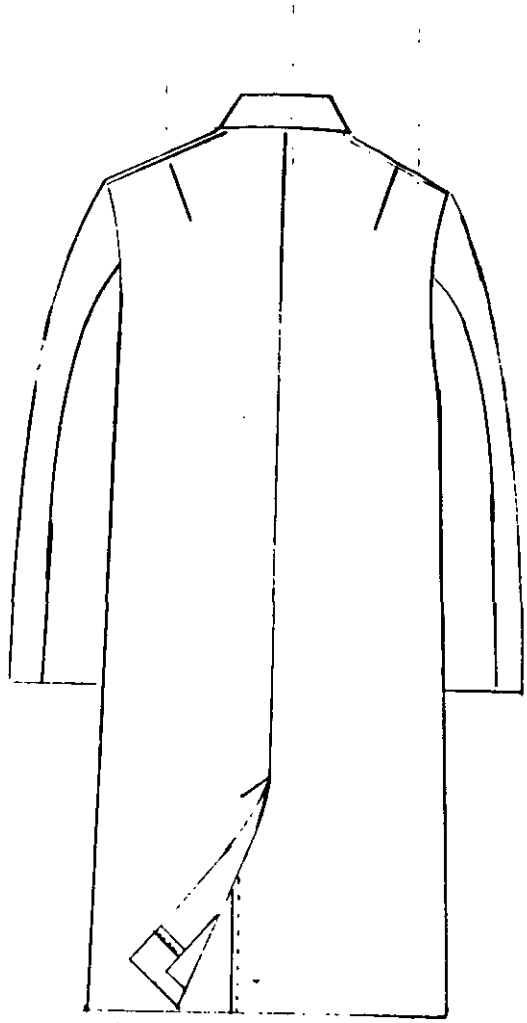


FIGURE 2. Overcoat (Back View)

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:42Z
Check the source to verify that this is the current version before use.

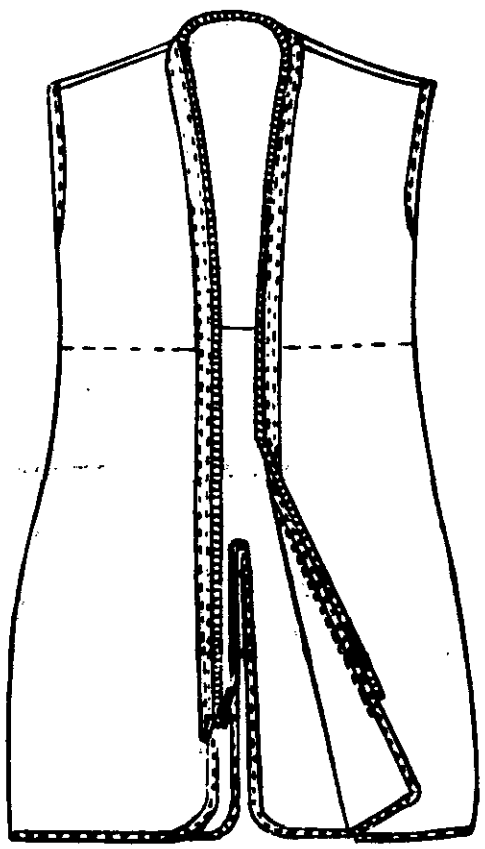


FIGURE 3. Liner for Overcoat

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

FOLD

4950/TZS
Wright-Patterson AFB, O 45433
OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE AIR FORCE
DoD-318

U.S. MAIL

4950/TZS
Wright-Patterson AFB, Ohio 45433

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

OMB Approval
No. 22-R255

INSTRUCTIONS: The purpose of this form is to solicit beneficial comments which will help achieve procurement of suitable products at reasonable cost and minimum delay, or will otherwise enhance use of the document. DoD contractors, government activities, or manufacturers/vendors who are prospective suppliers of the product are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity.

DOCUMENT IDENTIFIER AND TITLE

NAME OF ORGANIZATION AND ADDRESS

CONTRACT NUMBER

MATERIAL PROCURED UNDER A

☐ DIRECT GOVERNMENT CONTRACT ☐ SUBCONTRACT

1. HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE?
   A. GIVE PARAGRAPH NUMBER AND WORDING.

   B. RECOMMENDATIONS FOR CORRECTING THE DEFICIENCIES

2. COMMENTS ON ANY DOCUMENT REQUIREMENT CONSIDERED TOO RIGID

3. IS THE DOCUMENT RESTRICTIVE?

   ☐ YES ☐ NO *(If "Yes", in what way?)*

4. REMARKS

SUBMITTED BY *(Printed or typed name and address - Optional)*

TELEPHONE NO.

DATE

DD FORM 1 JAN 72 1426

REPLACES EDITION OF 1 JAN 66 WHICH MAY BE USED

C16061

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:42Z
Check the source to verify that this is the current version before use.