INCH-POUND

MIL-DTL-29424B
10 December 2024
SUPERSEDING
MIL-C-29424A(MC)
15 November 1990

DETAIL SPECIFICATION

COAT, MAN'S – POLYESTER/WOOL, GABARDINE, GREEN (WITH BELT)

This specification is approved for use by all Departments and Agencies of the Department of Defense.

1. SCOPE

1.1 Scope. This specification covers a United States Marine Corps (USMC) green polyester/wool gabardine man's service coat with a belt.

1.2 Classification. The coat is of one type in the following sizes and lengths, as specified (see 6.2).

1.2.1 Sizes and lengths. The coat is available in the sizes and lengths specified in table I.

TABLE I. Sizes and lengths.

| Length | Extra Short | Short | Regular | Long | Extra Long |
|---|---|---|---|---|---|
| Size | 30 | 30 | 30 | 30 | - |
| | 32 | 32 | 32 | 32 | - |
| | 33 | 33 | 33 | 33 | - |
| | 34 | 34 | 34 | 34 | - |
| | 35 | 35 | 35 | 35 | 35 |
| | 36 | 36 | 36 | 36 | 36 |
| | 37 | 37 | 37 | 37 | 37 |
| | 38 | 38 | 38 | 38 | 38 |
| | 39 | 39 | 39 | 39 | 39 |
| | 40 | 40 | 40 | 40 | 40 |
| | 41 | 41 | 41 | 41 | 41 |
| | 42 | 42 | 42 | 42 | 42 |
| | - | 43 | 43 | 43 | 43 |
| | - | 44 | 44 | 44 | 44 |
| | - | 46 | 46 | 46 | 46 |
| | - | - | 48 | 48 | 48 |

1.3 Individual order. When coats are custom tailored to an individual order, this specification will govern, except the cut pieces may be modified to the extent necessary for good custom tailoring practice and the finished dimensional requirements will be determined based on modifications to the patterns.

Comments, suggestions, or questions on this document should be addressed to trpsptctstandardiz@dla.mil. Since contact information can change, verify the currency of the address information using Acquisition Streamlining and Standardization Information System ASSIST online database https://assist.dla.mil.

AMSC N/A FSC 8405

Distribution Statement A. Approved for public release: distribution is unlimited.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

## 2. APPLICABLE DOCUMENTS

2.1 General. The documents listed in this section are specified in sections 3 and 4 of this specification. This section does not include documents cited in other sections of this specification or recommended for additional information or as examples. While every effort has been made to ensure the completeness of this list, document users are cautioned that they must meet all specified requirements of documents cited in sections 3 and 4 of this specification, whether or not they are listed.

2.2 Government documents.

2.2.1 Specifications, standards, and handbooks. The following specifications, standards, and handbooks form a part of this document to the extent specified herein. Unless otherwise specified, the issues of these documents are those cited in the solicitation or contract.

COMMERCIAL ITEM DESCRIPTIONS

A-A-50067 - Cloth, Flannel, Wool
A-A-50198 - Thread, Gimp, Cotton, Buttonhole
A-A-50199 - Thread, Polyester Core, Cotton or Polyester-Covered
A-A-52071 - Tape, Textile, Cotton, General Purpose
A-A-52106 - Cloth, Twill or Plain Weave, Polyester and Polyester Blend
A-A-55222 - Belt, Man's Coat
A-A-59826 - Thread, Nylon
A-A-59994 - Button, Sewing Hole, and Button, Staple, (Plastic)

DEPARTMENT OF DEFENSE SPECIFICATIONS

MIL-DTL-371 - Braid, Textile, Tubular
MIL-DTL-495 - Finish, Chemical, Black, for Copper Alloys
MIL-B-3461 - Button, Insignia, Metal, Uniform and Cap
MIL-DTL-10176 - Cloth, Gabardine: Wool, Polyester and Wool
MIL-DTL-15064 - Pads, Shoulder and Sleeve-Head
MIL-C-15065 - Coat Fronts
MIL-B-20289 - Button, Insignia, Plastic
MIL-DTL-32075 - Label: For Clothing, Equipage, and Tentage, (General Use)

DEPARTMENT OF DEFENSE STANDARDS

MIL-STD-1490 - Provisions for Evaluating Quality of Coats, Men's, Dress

(Copies of these documents are available online at https://quicksearch.dla.mil.)

2.3 Non-Government publications. The following documents form a part of this document to the extent specified herein. Unless otherwise specified, the issues of these documents are those cited in the solicitation or contract.

AMERICAN ASSOCIATION OF TEXTILE CHEMISTS AND COLORISTS (AATCC)

AATCC EP1 - Gray Scale for Color Change
AATCC EP2 - Gray Scale for Staining
AATCC TM15 - Colorfastness to Perspiration
AATCC TM132 - Colorfastness to Drycleaning
AATCC TM133 - Colorfastness to Heat: Hot Pressing
AATCC TM158 - Dimensional Changes on Drycleaning, Perchloroethylene

(Copies of these documents are available online at https:https://aatcc.org.)



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

ASTM INTERNATIONAL

ASTM D6193 - Standard Practice for Stitches and Seams

(Copies of this document are available online at https://astm.org.)

2.4 Order of precedence. Unless otherwise noted herein or in the contract, in the event of a conflict between the text of this document and the references cited herein, the text of this document takes precedence. Nothing in this document, however, supersedes applicable laws and regulations unless a specific exemption has been obtained.

3. REQUIREMENTS

3.1 Inspections.

3.1.1 First article. When specified (see 6.2), a sample shall be subjected to first article inspection in accordance with 4.3.

3.1.2 Conformance inspection. When specified (see 6.2), a sample shall be subjected to a conformance inspection in accordance with 4.4.

3.2 Standard sample. Standard samples are furnished solely for guidance and information (see 6.3). Variation from the specification may appear in the sample, in which case the specification shall govern.

3.3. Design. The coat is a four-button, single-breasted, lined coat with separate belt (see 3.3.2), having a skirt-type front with side body pieces, waist seam and waist darts, upper and lower patch pockets with worked eyelets for detachable insignia buttons and with flaps to button, a two-piece back with a vent, ornamental sleeve cuffs, one inside breast pocket with a horizontal piped opening, shoulder straps to button, and a roll collar with worked eyelets and notched lapels. The coat may be made with a full lining or with a half lining. If a half lining is used, the vent is also lined.

3.3.1 Figures. Figures 1 through 5 show general design of the coat and are furnished for information only. In the event of conflict between these figures and the text of this specification, the text of this specification shall govern.

3.3.2 Belt. The belt used for the coat shall be made in accordance with A-A-55222. It is recommended that the belt parts be cut from the same lot of basic fabric as the coat to facilitate shade match between parts.

3.4 Materials.

3.4.1 Recycled, recovered, environmentally preferable, or biobased materials. Recycled, recovered, environmentally preferable, or biobased materials should be used to the maximum extent possible, provided that the material meets or exceeds the operational and maintenance requirements, and promotes economically advantageous life cycle costs.

3.4.2 Basic material. The basic material shall be cloth, polyester/wool gabardine, green, shade 2212 (see 6.3), conforming to type II, class 12 of MIL-DTL-10176.

3.4.3 Lining. The material for lining fronts, pocket flaps, sleeves, yoke, and vent, and facing the inside breast pocket, shall be an acetate lining material, twill or satin (alternate) weave, conforming to the requirements of table II when tested as specified in 4.4.1.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE II. Lining requirements.

| Characteristic | Twill Requirement | Satin Requirement |
|---|---|---|
| Shade | Good match to the shade of the basic material (see 6.5) | |
| Fiber identification | Acetate | |
| Yarns per inch (minimum) | | |
| Warp | 120 | 288 |
| Filling | 68 | 68 |
| Weight, ounces per square yard (minimum) | 3.8 | 4.9 |
| Breaking strength, pounds (minimum) | | |
| Dry: warp | 74 | 83 |
| Dry: filling | 49 | 117 |
| Wet: warp | 54 | 54 |
| Wet: filling | 34 | 77 |
| Colorfastness to perspiration, rating (minimum) | | |
| Color change | 5 | 5 |
| Staining on cotton | 3.5 | 5 |
| Staining on wool | 4.5 | 5 |
| Colorfastness to drycleaning, rating (minimum) | | |
| Color change | 4.5 | 4.5 |
| Staining on cotton | 4.5 | 4.5 |
| Staining on wool | 4.5 | 4.5 |
| Colorfastness to crocking, rating (minimum) | 4.5 | 4.5 |
| Dimensional stability to drycleaning, percent (maximum) | | |
| Individual sample unit | ±3.5 | ±3.5 |
| Lot average | ±3.0 | ±3.0 |

3.4.3.1 Bias binding. The binding for the upper edge of pockets, back edge of facing, armhole shield, bottom turnup, and the raw edge of seam allowances shall be bias cut out of the lining material specified in 3.4.3. The binding shall be 5/8 to 7/8 inch wide and shall have sized edges.

3.4.4 Twill, polyester, and cotton cloth. The material for interfacing the coat and for lining the upper and lower patch pockets, inside breast pocket, pocket stays, shoulder straps, and stays for shoulder and armhole seams shall be cloth, twill, polyester, and cotton in accordance with class 1 of A-A-52106, except the requirements for non-fibrous material and seam efficiency shall not apply. The color shall be black. See 3.4.4.1 for alternate fusible interfacing.

3.4.4.1 Fusible interfacing. As an alternate to the fabric specified in 3.4.4, fusible interfacing may be used for the facings, collar, flaps, pockets, and shoulder straps. The fusible interfacing shall be non-woven cloth, 20 percent nylon and 80 percent polyester, polyamide paste dot, 1.25 to 1.75 ounces per square yard. The color shall be black or charcoal. A known source of a material that meets the requirements of this specification can be found in 6.4.1. Fusing conditions shall be as follows or as directed by the supplier:

Temperature - 280 to 290 °F (140 to 145 °C)
Time - 12 to 15 seconds
Pressure - 4 to 6 pounds per square inch



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

3.4.5 Flannel cloth. The under collar cloth shall be wool flannel in accordance with A-A-50067. As an alternate, material that meets the requirements of table III, when tested in accordance with 4.4.1, may be used. The color of the cloth shall be green of a shade to closely match the basic material (see 6.5). The acidity (pH) requirement and colorfastness to perspiration and crocking requirements shall not apply.

TABLE III. Alternate flannel fabric properties.

| Characteristic | Requirement |
|---|---|
| Fiber content | 100 percent polyester |
| Construction | Needle punched non-woven material |
| Weight (ounces per square yard) | 8.0 to 10.0 |
| Thickness (inch at 0/6 pounds per square inch) | 0.070 and 0.095 |
| Stiffness, cross machine direction (load pounds [minimum]) | 0.05 |

3.4.6 Shoulder pads. The shoulder pads shall be in accordance with type I, class 2 of MIL-DTL-15064.

3.4.7 Sleeve-head. The sleeve-head shall be in accordance with type IV of MIL-DTL-15064. Sleeve-head cut from a continuous roll may be used as long as the finished coat meets appearance requirements.

3.4.8 Coat fronts. The coat fronts shall be in accordance with type IX of MIL-C-15065, except that the cotton warp, hair-wool filling cloth and stays should be dyed black. The dyeing of the cotton warp, hair-wool filling cloth shall be accomplished with a selected direct dye and the dyed cloth shall be after treated, preferably with copper sulfate to meet the requirements specified herein. The dyed cotton warp, hair-wool filling cloth shall show fastness to dry cleaning, perspiration, and steam pressing equal to or better than the standard sample. When no standard is available or has not been established, the dyed cotton warp, hair-wool filling cloth shall show good fastness to dry cleaning, perspiration, and steam pressing. As an alternative, the coat front and center back vent may be fused using a woven cloth fusible (see 3.4.4.1). A known source of a material that meets these requirements can be found in 6.4.

3.4.8.1 Front fusible interfacing. The twill weave woven front fusible interfacing shall be 100 percent cotton, cotton/polyester, or acrylic/cotton in the warp direction and wool/polyester in the fill direction. The material shall be 3 to 4 ounces per square yard, black or charcoal gray in color, and have a polyamide dot/double dot mesh.

3.4.8.2 Chest canvas. The chest canvas of the floating chest piece shall be twill weave woven canvas that is 100 percent cotton in the warp direction and 20 to 35 percent animal hair; 65 to 80 percent synthetic in the fill direction. The material weight shall be 6 to 8.5 ounces per square yard.

3.4.8.3 Hair cloth and flannel. The cloth for the hair cloth shoulder piece shall be as specified in MIL-C-15065, type IX.

3.4.9 Tape. The tape shall be cotton in accordance with A-A-52071 as specified in 3.4.9.1 and 3.4.9.2. The requirement for non-fibrous material shall not apply. Fusible tapes may be used where appropriate and where the use of these tapes does not affect the finished quality or appearance.

3.4.9.1 Stay tape. The stay tape shall be in accordance with type II, class 2 of A-A-52071, 3/8 inch wide for the front edges of coats and 1/4 inch wide for the armholes, back vent, and waist seam.

3.4.9.2 Bridle tape. The bridle tape for the breakline of the lapel shall be 5/8 inch wide in accordance with type I, class 1 of A-A-52071.

3.4.10 Hanger braid. The braid for the coat hanger shall be cotton tubular braid in accordance with type IX, class 1 of MIL-DTL-371. The color shall be black or a good match to the basic material.

3.4.11 Thread. The thread shall be in accordance with the documents cited in table IV. All threads, except that used for basting, shall be a good match to the basic material. Basting thread may be white or clear.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE IV. Thread.

| Use (Seam Type) | Description | Document | Ticket No. (Tex) | Ply |
|---|---|---|---|---|
| Seaming (301) | Cotton-covered polyester core | A-A-50199, type I | 50 (36-45) for needle and bobbin | 2 |
| Seaming (401) | Cotton-covered polyester core | A-A-50199, type I | 50 (36-45) for needle | 2 |
| | | | 70 (31-35) for looper | |
| Overedging (504 and 505) | Cotton-covered polyester core | A-A-50199, type I | 70 (31-35) for needle and looper | 2 |
| Raise, edge, and topstitching | Cotton-covered polyester core | A-A-50199, type I | 50 (36-45) for needle and bobbin | 2 |
| Buttonholes | Nylon, twisted, soft finish | A-A-59826, type I, class A | Government letter size B (45-46) | 2 or 3 |
| | | | Government letter size F (90-101) | 3 or 4 |
| Buttonhole reinforcement | Cotton gimp | A-A-50198, soft or glazed finish | 8 (210) | - |
| Buttons | Cotton-covered polyester core | A-A-50199, type I | 30 (61-70) | 2 or 3 |
| Snap fasteners | Cotton-covered polyester core | A-A-50199, type I | 50 (36-45) | 2 |
| Eyelets | Nylon, twisted, soft finish | A-A-59826, type I, class A | Government letter size B (45-46) | 2 or 3 |
| Felling | Nylon, tailoring, twisted multiple cord, soft finish | A-A-59826, type VI | Government letter size O (24) | 2 or 3 |
| Machine tacking armholes | Cotton-covered polyester core | A-A-50199, type I | 30 (61-70) | 2 or 3 |
| Padding lapels | Nylon | A-A-59826, type III | 00 (16) | - |
| Tacking (103 or hand) | Cotton-covered polyester core | A-A-50199, type I | 50 (36-45) | 2 |
| | | | 70 (31-35) | |
| Basting | Commercial grade cotton, cotton-covered polyester core, nylon, or monofilament synthetic (see 3.4.11.1) | | | |

3.4.11.1 Synthetic thread. A monofilament synthetic thread may be used for basting operations in which the thread is required to be removed, provided the garment is subsequently given a treatment of a dry cleaning agent in which the synthetic thread is soluble. When this thread is used, any residue remaining on the garment after the dry cleaning process shall be brushed off or removed.

3.4.12 Buttons.

3.4.12.1 Insignia buttons. The insignia buttons shall be in accordance with type I, 40-ligne, and type II, 27-ligne, black finish of MIL-B-20289. As an alternate, insignia buttons in accordance with type I, style 3, class B, subclass 1 of MIL-B-3461 may be used. A dull black epoxy finish, with durability equal to or better than the specified finish, in lieu of dull black enamel finish is acceptable with prior approval from the contracting agency.

3.4.12.2 Sewing hole buttons. The sewing hole buttons shall be melamine formaldehyde composition, glossy finish, in accordance with type I, class 1, style 20, 34-ligne, and style 4, 22-ligne of A-A-59994. The color of the buttons shall be a good match to the basic fabric (see 6.3).



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

3.4.13 Fastener, snap. The snap fastener for the pocket flaps shall be round or square style, rolled edge, size 1/0 sew-on type, brass, with a black japanned finished, shiny finish, or black chemical finish in accordance with MIL-DTL-495.

3.4.14 Labels. Each coat shall have a combination identification/instruction label, a size label, and a barcode tag as specified in 3.4.14.1 through 3.4.14.3. The order of information on the labels may be modified to facilitate production of the labels. The coat is intended to be dry cleaned and the labels shall show fastness to dry cleaning.

3.4.14.1 Identification/instruction label. The identification/instruction label shall be in accordance with type VI, class 15 of MIL-DTL-32075 and shall measure not less than 2-1/2 inches wide by 1-1/2 inches long. The content shall be as follows:

Nomenclature:

Contract number:

Name of contractor:

Wool Products Act information

DRY CLEAN ONLY

NOTE: Size of characters for "Name of contractor" shall be minimum 8 points (approximately 3/32 inch).

3.4.14.2 Size label. The size label shall be in accordance with type VI, class 2 of MIL-DTL-32075 and shall measure not less than 1-1/2 inches by 1 inch. The label shall consist of the numerical size designation specified in 1.2 followed by the letters S, R, L, or XL (for Short, Regular, Long, or Extra Long), and the stock number. The content of an example size label is as follows:

40R

(stock number)

3.4.14.3 Barcode tag. Each item shall be individually barcoded with a paper tag for personal clothing items. There shall be a 12-digit Universal Product Code (UPC) assigned for all National Stock Numbers (NSN) by the Government. The initials "UPC" shall appear beneath the code. The barcodes for NSNs and UPCs shall be a medium to high density and shall be located so that they are completely visible on the item when it is folded and or packaged as specified herein. The label's location shall cause no damage to the item. The Government-assigned UPC shall be placed on all shipping cartons on which the NSN appears. If the end item is placed in a plastic bag, a pressure sensitive label in accordance with type VII of MIL-DTL-32075 shall be used. If the end item is tied in a bundle or left as an individual item, a paper tag in accordance with type VIII of MIL-DTL-32075 shall be used.

3.5 Patterns. Standard patterns will be furnished by the Government as specified (see 6.2). Government patterns show size, seam allowances, and directional lines for cutting and are marked or notched for proper placement and assembly of component parts. The directional lines indicate the warp direction of the cloth unless otherwise indicated on the patterns. The list of pattern parts in 3.5.1 is provided to ensure that the pattern set provided is complete. The Government patterns shall not be altered in any way and shall only be used for cutting the contractor's working patterns. The working patterns shall be identical to the Government patterns with the following exceptions:

a. Additional notching may be permitted on the working patterns if needed to facilitate manufacture during construction.

b. Minor modifications may be permitted where necessary to accommodate the manufacturer's processes and the use of automated equipment, provided the modifications do not alter the dimensional, serviceability, or appearance requirements cited in the document or those governed by the Government pattern.

3.5.1 List of pattern parts. Coats shall be cut from the materials specified herein in accordance with the number of pattern parts indicated in table V.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE V. List of pattern parts.

| Material | Item | Number of Cut Parts |
|---|---|---|
| Basic material (see 3.4.2) | Front (upper) | 2 |
| | Skirt (lower front) | 2 |
| | Side body | 2 |
| | Right facing | 1 |
| | Left facing | 1 |
| | Back | 2 |
| | Top sleeve | 2 |
| | Under sleeve | 2 |
| | Sleeve cuff | 2 |
| | Top collar | 1 |
| | Shoulder strap | 2 |
| | Pocket, upper | 2 |
| | Pocket, lower | 2 |
| | Pocket flap, upper | 2 |
| | Pocket flap, lower | 2 |
| | Armhole shield | 2 |
| Lining (see 3.4.3) 1/ | Front (half lined) | 2 |
| | Front upper (full lined) | 2 |
| | Skirt (full lined) | 2 |
| | Back yoke (half lined) | 1 |
| | Side body (full lined) | 2 |
| | Back right (full lined) | 1 |
| | Back left (full lined) | 1 |
| | Top sleeve | 2 |
| | Under sleeve | 2 |
| | Pocket flap, upper | 2 |
| | Pocket flap, lower | 2 |
| | Vent lining | 1 |
| | Inside breast pocket facing | 1 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE V. List of pattern parts – Continued.

| Material | Item | Number of Cut Parts |
|---|---|---|
| Polyester/cotton twill (see 3.4.4) | Inside breast pocket | 1 |
| | Inside breast pocket stay | 1 |
| | Stay, upper pocket | 2 |
| | Stay, lower pocket | 2 |
| | Lining, upper pocket | 2 |
| | Lining, lower pocket | 2 |
| Fusible interfacing (see 3.4.4.1) 2/ | Front upper | 2 |
| | Front lower | 2 |
| | Lapel facing | 2 |
| | Shoulder strap | 2 |
| | Collar interfacing | 1 |
| Cloth, wool, flannel | Under collar | 1 |
| Shapers | Working lapel shaper | - |
| | Finished collar and lapel shaper | - |
| | Under collar shaper | - |
| | Finished pocket shaper, upper | - |
| | Finished pocket shaper, lower | - |
| | Finished pocket flap shaper, upper | - |
| | Finished pocket flap shaper, lower | - |
| | Left vent shaper | - |
| | Left front shaper | - |
| Markers | Sleeve cuff marker | - |
| | Under collar stand marker | - |
| | Inside breast pocket marker | - |
| Canvas | Front canvas | 2 |
| | Chest piece canvas | 2 |
| | Wedge canvas | 4 |
| Felt | Chest piece felt | 2 |
| Haircloth | Shoulder piece haircloth | 2 |

FOOTNOTES:

1/ For each coat, half lined or full lined design pattern pieces shall be used. Mixing shall not be permitted.

2/ As an alternative to fusible interfacing, the fabric cited in 3.4.4 may be used.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

3.6. Construction. The coats shall be manufactured in accordance with the operations and the stitch type, seam type, and stitches per inch specified in appendix A. It shall not be required to follow the exact sequence of the operations listed in appendix A, but the finished coat shall have the same appearance as a coat manufactured using all operations specified in appendix A.

3.6.1 Stitches, seams, and stitchings. The stitch and seam types specified in appendix A shall be in accordance with ASTM D6193. The number of stitches per inch as specified in appendix A indicates the minimum and maximum number permitted. All overedge stitching shall be done on serging machines with a knife attachment properly set to trim the raveled edge without cutting the material.

3.6.1.1 Thread breaks and ends of seams. The ends of all seams and stitching produced with 301 stitch types, when not caught in other seams or stitching, shall be backstitched not less than 1/4 inch. Thread breaks (all stitch types) shall be secured by stitching back of the break not less than 1/2 inch. Skipped stitches may be repaired by using 301 stitch type. The ends of a continuous line of stitching shall be overlapped not less than 1/2 inch. Thread ends of darts shall be trimmed to a length of 1/2 inch. When an automatic dart machine is used, the ends shall be backstitched not less than three stitches.

3.6.2 Shade marking. The component parts of the coat cut from one piece of basic material and lining material, including pairs of sleeve linings when cut from ends, and the two parts of the under collar cut from under collar cloth shall be shade marked to ensure a uniform shade and size throughout the garment. Any method of shade marking may be used except the following:

a. Corrosive metal fastening devices.

b. Sew-on shade tickets.

c. Adhesive type tickets that show discoloration or the use of an adhesive mass that adheres to the material upon removal of the tickets.

3.7 Finished dimensions. The finished coat shall conform to the measurements in table VI, when measured in accordance with table VII and table VIII.

TABLE VI. Coat measurements (inches).

| Size | A: Breast | B: Back Length | C: Sleeve Length |
|---|---|---|---|
| **Extra Short** | | | |
| 30 | 32 | 27-1/2 | 17 |
| 32 | 34 | 27-3/4 | 17 |
| 33 | 35 | 27-7/8 | 17 |
| 34 | 36 | 28 | 17 |
| 35 | 37 | 28-1/8 | 17 |
| 36 | 38 | 28-1/4 | 17 |
| 37 | 39 | 28-3/8 | 17 |
| 38 | 40 | 28-1/2 | 17 |
| 39 | 41 | 28-5/8 | 17 |
| 40 | 42 | 28-3/4 | 17 |
| 41 | 43 | 28-7/8 | 17 |
| 42 | 44 | 29 | 17 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE VI. Coat measurements (inches). Continued

| Size | A: Breast | B: Back Length | C: Sleeve Length |
|---|---|---|---|
| **Short** | | | |
| 30 | 32 | 28-1/2 | 18 |
| 32 | 34 | 28-3/4 | 18 |
| 33 | 35 | 28-7/8 | 18 |
| 34 | 36 | 29 | 18 |
| 35 | 37 | 29-1/8 | 18 |
| 36 | 38 | 29-1/8 | 18 |
| 37 | 39 | 29-1/4 | 18 |
| 38 | 40 | 29-1/2 | 18 |
| 39 | 41 | 29-5/8 | 18 |
| 40 | 42 | 29-3/4 | 18 |
| 41 | 43 | 29-7/8 | 18 |
| 42 | 44 | 30 | 18 |
| 43 | 45 | 30-1/8 | 18 |
| 44 | 46 | 30-1/4 | 18 |
| 46 | 48 | 30-1/2 | 18 |
| **Regular** | | | |
| 30 | 32 | 29-1/2 | 19 |
| 32 | 34 | 29-3/4 | 19 |
| 33 | 35 | 29-7/8 | 19 |
| 34 | 36 | 30 | 19 |
| 35 | 37 | 30-1/8 | 19 |
| 36 | 38 | 30-1/4 | 19 |
| 37 | 39 | 30-3/8 | 19 |
| 38 | 40 | 30-1/2 | 19 |
| 39 | 41 | 30-5/8 | 19 |
| 40 | 42 | 30-3/4 | 19 |
| 41 | 43 | 30-7/8 | 19 |
| 42 | 44 | 31 | 19 |
| 43 | 45 | 31-1/8 | 19 |
| 44 | 46 | 31-1/4 | 19 |
| 46 | 48 | 31-1/2 | 19 |
| 48 | 50 | 31-3/4 | 19 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.




TABLE VI. Coat measurements (inches) – Continued.

| Size | A: Breast | B: Back Length | C: Sleeve Length |
|---|---|---|---|
| **Long** | | | |
| 30 | 32 | 30-1/2 | 20 |
| 32 | 34 | 30-3/4 | 20 |
| 33 | 35 | 30-7/8 | 20 |
| 34 | 36 | 31 | 20 |
| 35 | 37 | 31-1/8 | 20 |
| 36 | 38 | 31-1/4 | 20 |
| 37 | 39 | 31-3/8 | 20 |
| 38 | 40 | 31-1/2 | 20 |
| 39 | 41 | 31-5/8 | 20 |
| 40 | 42 | 31-3/4 | 20 |
| 41 | 43 | 31-7/8 | 20 |
| 42 | 44 | 32 | 20 |
| 43 | 45 | 32-1/8 | 20 |
| 44 | 46 | 32-1/4 | 20 |
| 46 | 48 | 32-1/2 | 20 |
| 48 | 50 | 32-3/4 | 20 |
| **Extra Long** | | | |
| 35 | 37 | 32-5/8 | 21-1/2 |
| 36 | 38 | 32-3/4 | 21-1/2 |
| 37 | 39 | 32-7/8 | 21-1/2 |
| 38 | 40 | 33 | 21-1/2 |
| 39 | 41 | 33-1/8 | 21-1/2 |
| 40 | 42 | 33-1/4 | 21-1/2 |
| 41 | 43 | 33-3/8 | 21-1/2 |
| 42 | 44 | 33-1/2 | 21-1/2 |
| 43 | 45 | 33-5/8 | 21-1/2 |
| 44 | 46 | 33-3/4 | 21-1/2 |
| 46 | 48 | 34 | 21-1/2 |
| 48 | 50 | 34-1/4 | 21-1/2 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE VII. Coat methods of measurement.
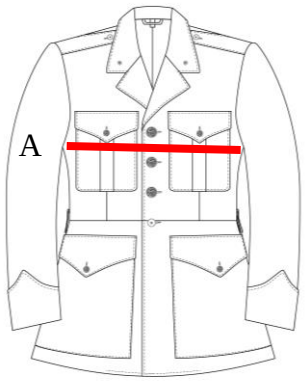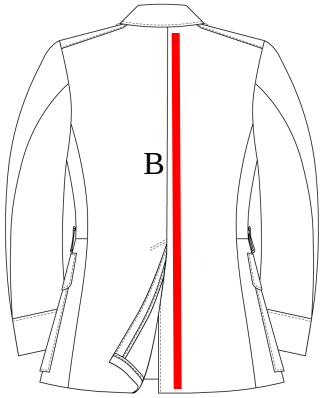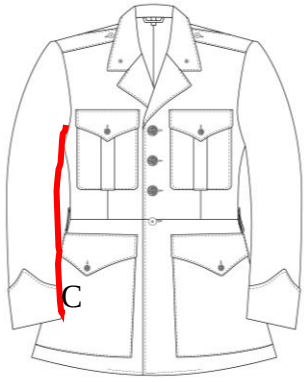
| Measurement | Description | Guidance |
|---|---|---|
| A: Breast | Measurement taken with the coat buttoned from folded edge to folded edge 1 inch below the pit of the armhole, multiplied by 2. The tolerance is ±3/4 inch. |  |
| B: Back length | Measurement taken along the center back seam from the lower edge of the under collar to the bottom edge of the coat. The tolerance on the back length measurement is +3/4 inch and -3/8 inch. |  |
| C: Sleeve length | Measurement taken along the forearm seam from pit to armhole to the bottom edge of the cuff. The tolerance is ±3/8 inch. |  |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE VIII. Pocket and flap measurements (inches). [1/]

| Upper Pockets and Flaps | | | |
|---|---|---|---|
| Size [2/] | 36 to 38 | 40 to 42 | 44 to 46 |
| Length of flap at center point | 2-7/8 | 2-7/8 | 2-7/8 |
| Length of flap at sides | 2-1/8 | 2-1/8 | 2-1/8 |
| Width of flap at top edge | 5 | 5-1/2 | 6 |
| Width of pocket at top edge, side edge to side edge | 4-3/4 | 5-1/4 | 5-3/4 |
| Width of pocket at bottom edge, side edge to side edge | 5-1/8 | 5-5/8 | 6-1/8 |
| Length of pocket, top edge to bottom edge | 6-1/2 | 6-1/2 | 6-1/2 |
| **Lower Pockets and Flaps** | | | |
| Size [2/] | 36 to 38 | 40 to 42 | 44 to 46 |
| Length of flap at center point | 3-3/4 | 3-3/4 | 3-3/4 |
| Length of flap at sides | 2-1/4 | 2-1/4 | 2-1/4 |
| Width of flap at top edge | 7-3/4 | 8-1/4 | 8-3/4 |
| Width of pocket at top edge, side edge to side edge | 7-1/2 | 8 | 8-1/2 |
| Width of pocket at bottom edge, side edge to side edge | 10 | 10-1/2 | 11 |
| Length of pocket top to bottom edge | - | - | - |
| Short | 10-1/2 | 10-1/2 | 10-1/2 |
| Regular | 10-3/4 | 10-3/4 | 10-3/4 |
| Long | 11 | 11 | 11 |
| Extra Long | 11-3/4 | 11-3/4 | 11-3/4 |

FOOTNOTES:

[1/] The tolerance on all measurements is ±1/8 inch.

[2/] All lengths (Short, Regular, Long, and Extra Long).

3.8. Workmanship. The finished coats shall conform to the quality and grade of product established by this specification.

4. VERIFICATION

4.1 Classification of inspections. The inspection requirements specified herein are classified as follows:

a. First article inspection (see 4.3).

b. Conformance inspection (see 4.4).

4.2 Inspection conditions. Unless otherwise specified, all inspections shall be performed in accordance with the test conditions specified in MIL-STD-1490.

4.3 First article inspection. When first article is required (see 3.1.1), inspection shall be made of a completely fabricated coat for all provisions of this specification. The tests and inspections in the conformance inspection (see 4.4) shall be performed.

4.4 Conformance inspection.

4.4.1 Testing of components. Testing shall be performed on components listed in table IX for the characteristics noted. If one or more sample units fail to meet any applicable test requirements, that may be cause for rejection of the lot. Certificates of compliance specifying that components meet the requirements cited in section 3 may be accepted, as specified (see 6.2).



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE IX. Test methods.

| Components | Characteristics | Requirement | Test Method | Results Reported As |
|---|---|---|---|---|
| Cotton warp, hair wool filling cloth [1/] | Colorfastness to: | | | |
| | Dry cleaning | 3.4.8 | AATCC TM132 [2/] | Rating |
| | Perspiration | | AATCC TM15 [2/] | |
| | Hot pressing | | AATCC TM133 | |
| Interfacing | Shrinkage | 3.4.4.1 and 3.4.8.1 | AATCC TM158 | Actual value |

FOOTNOTES:

[1/] Sample size for cotton warp, hair wool filling cloth is 1/2 yard.

[2/] Rated using AATCC EP1 and AATCC EP2.

4.4.2 End-item examination. As a final step prior to the formation of a lot , each coat shall be buttoned on a model form and examined for those defects identified by an asterisk (*) and listed as selected defects in MIL-STD-1490. Any coat containing a selected defect shall not be included in the end item lot. The model forms used for the separate sizes of coat shall be as shown in table X. The sample unit shall be one coat.

TABLE X. Form measurements. [1/]

| Coat Size | Form Size | Chest | Waist | Seat |
|---|---|---|---|---|
| 36 | 34 | 36 | 30 | 36 |
| 38 | 36 | 38 | 32 | 38 |
| 40 | 38 | 40 | 34 | 40 |
| 42 | 40 | 42 | 36 | 42 |
| 44 | 42 | 44 | 38 | 44 |
| 46 | 44 | 46 | 40 | 46 |

FOOTNOTE:

[1/] Tolerance of 1/2 inch in all form measurements.

4.4.3 Finished measurement examination. The provisions for the finished measurement examination of the finished coat shall be as specified in MIL-STD-1490 and tables VI and VIII of this specification.

5. PACKAGING

5.1 Packaging. For acquisition purposes, the packaging requirements shall be as specified in the contract or order (see 6.2). When packaging of materiel is to be performed by DoD or in-house contractor personnel, these personnel need to contact the responsible packaging activity to ascertain packaging requirements. Packaging requirements are maintained by the Inventory Control Point's packaging activities within the Military Service or Defense Agency, or within the military service's system commands. Packaging data retrieval is available from the managing Military Department's or Defense Agency's automated packaging files, CD-ROM products, or by contacting the responsible packaging activity.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

6. NOTES

(This section contains information of a general or explanatory nature that may be helpful, but is not mandatory.)

6.1 Intended use. The coat covered by this specification is intended to be worn by male officer personnel of the United States Marine Corps.

6.2 Acquisition requirements. Acquisition documents should specify the following:

a. Title, number, and date of this specification.
b. Size and length required (see 1.2).
c. The specific issue of individual documents referenced (see 2.2 and 2.3).
d. When first article is required (see 3.1.1).
e. When conformance inspection is required (see 3.1.2).
f. Applicable pattern information, including pattern date (see 3.5).
g. Certificates of compliance (see 4.4.1).
h. Packaging requirements (see 5.1).
i. Shade standard information (see 6.5).

6.3 Standard sample. The standard sample and color sample may be obtained from the procuring activity or as directed by the contracting officer.

6.4 Known sources. Known sources for materials or equipment meeting the requirements of this specification are found below in 6.4.1 and 6.4.2.

6.4.1 Fusible interfacing. The Pellon style 8313 has been found to meet the requirements for interfacing specified in 3.4.4.1.

6.4.2 Chest canvas. Kufner style B893, Lainiere de Picardie style 3960/184, meet the requirements specified in 3.4.8.2 for chest canvas of the floating chest piece.

6.5 Shade criticality. Some items may be deemed “non-shade-critical” by the contracting agency and alternative shade standards or information regarding shade may be specified in the contract or order (see 6.2). It is recommended that manufacturers refer to the contract or order to determine the criticality of the shade matching or alternate shade standards that are acceptable.

6.6 Subject term (key word) listing.

Lapel
Male
Uniform

6.7 Changes from previous issue. Marginal notations are not used in this revision to identify changes with respect to the previous issue due to the extent of the changes.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

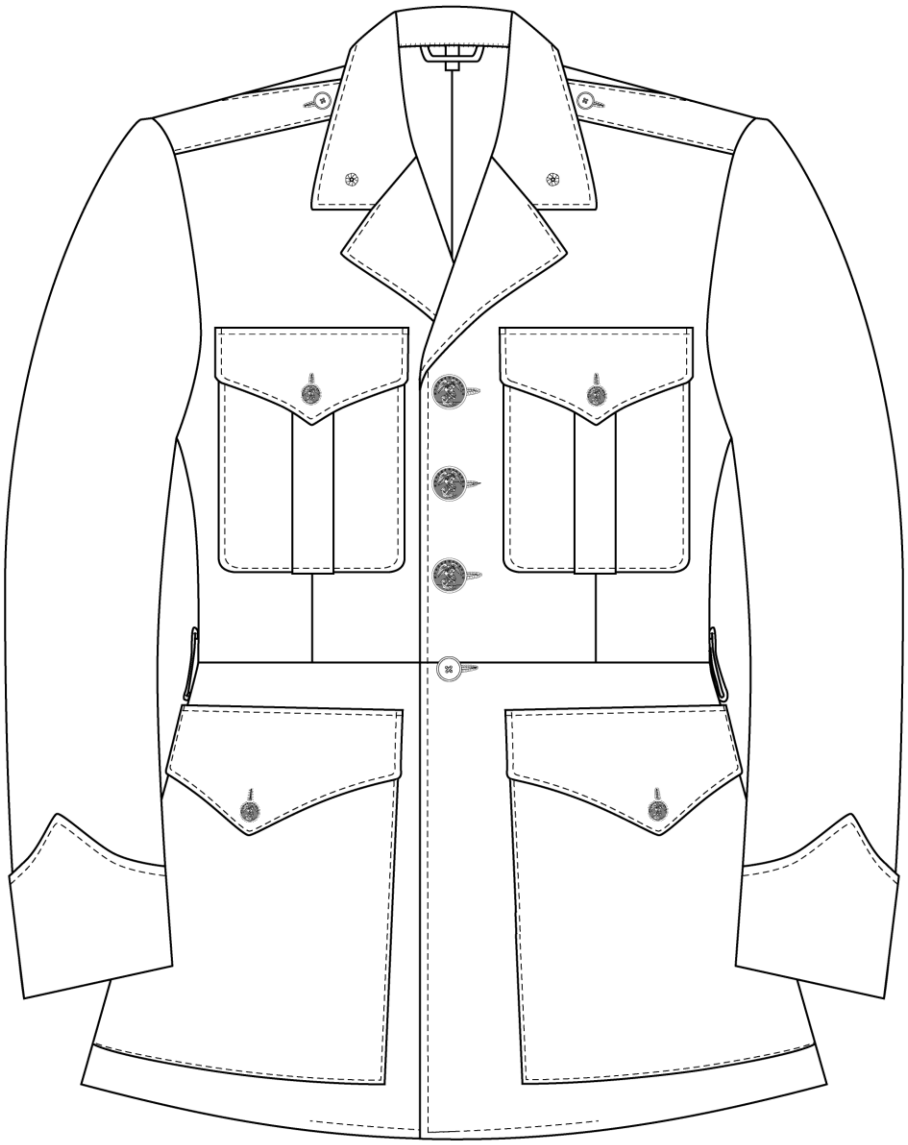


FIGURE 1. Coat, man's – service, officer's, USMC – outside front view.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.


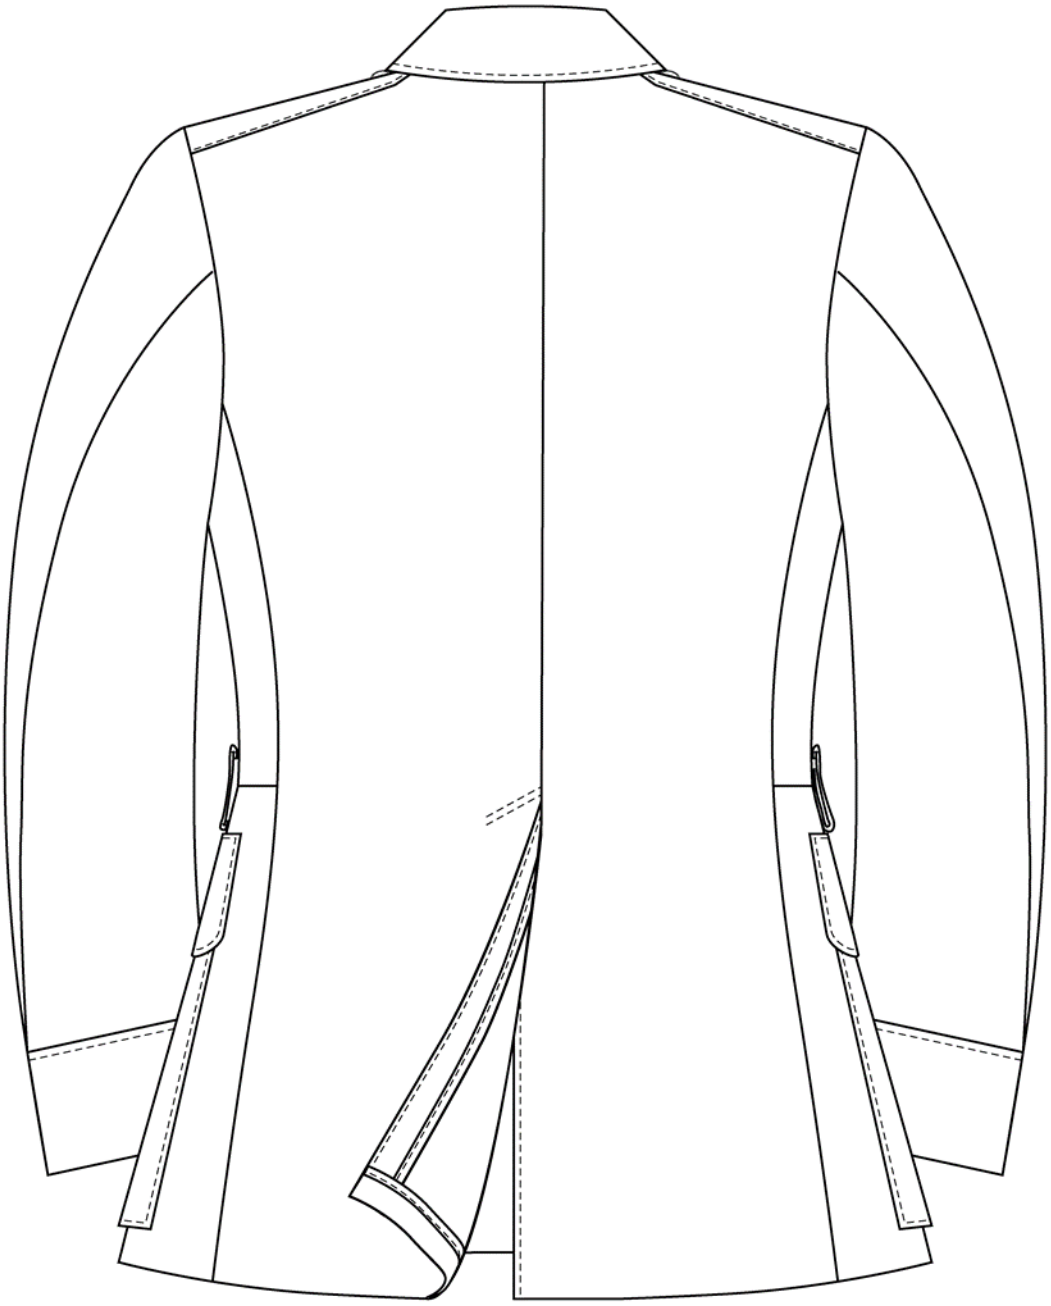


FIGURE 2. Coat, man's – service, officer's, USMC – outside back view.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

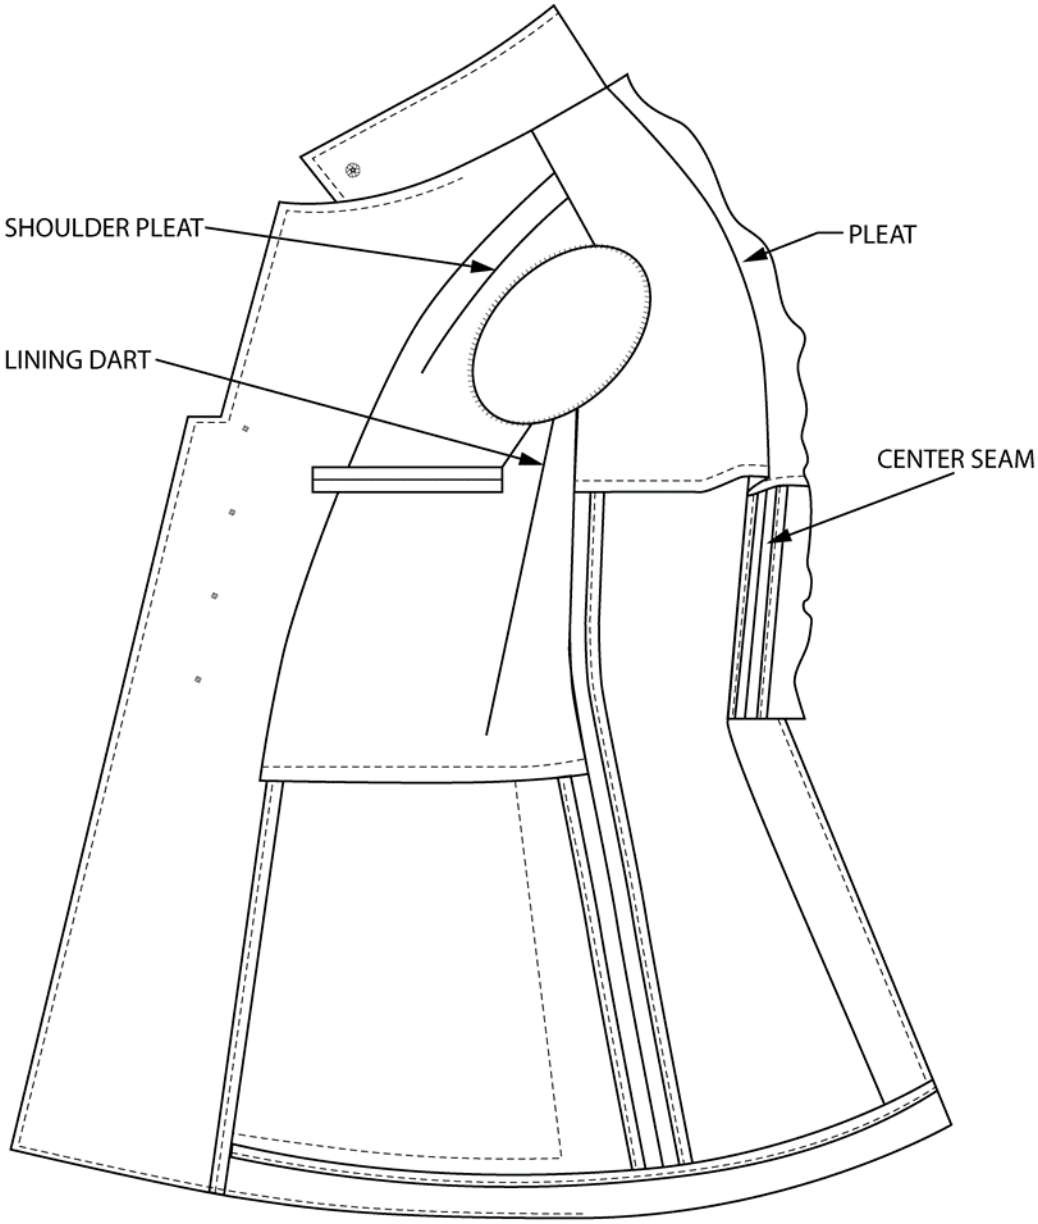


NOTE: Half lined coat shown to depict shell detail. On full lined coat, shell edges are not bound.

FIGURE 3. Coat, man's – service, officer's, USMC – inside view.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

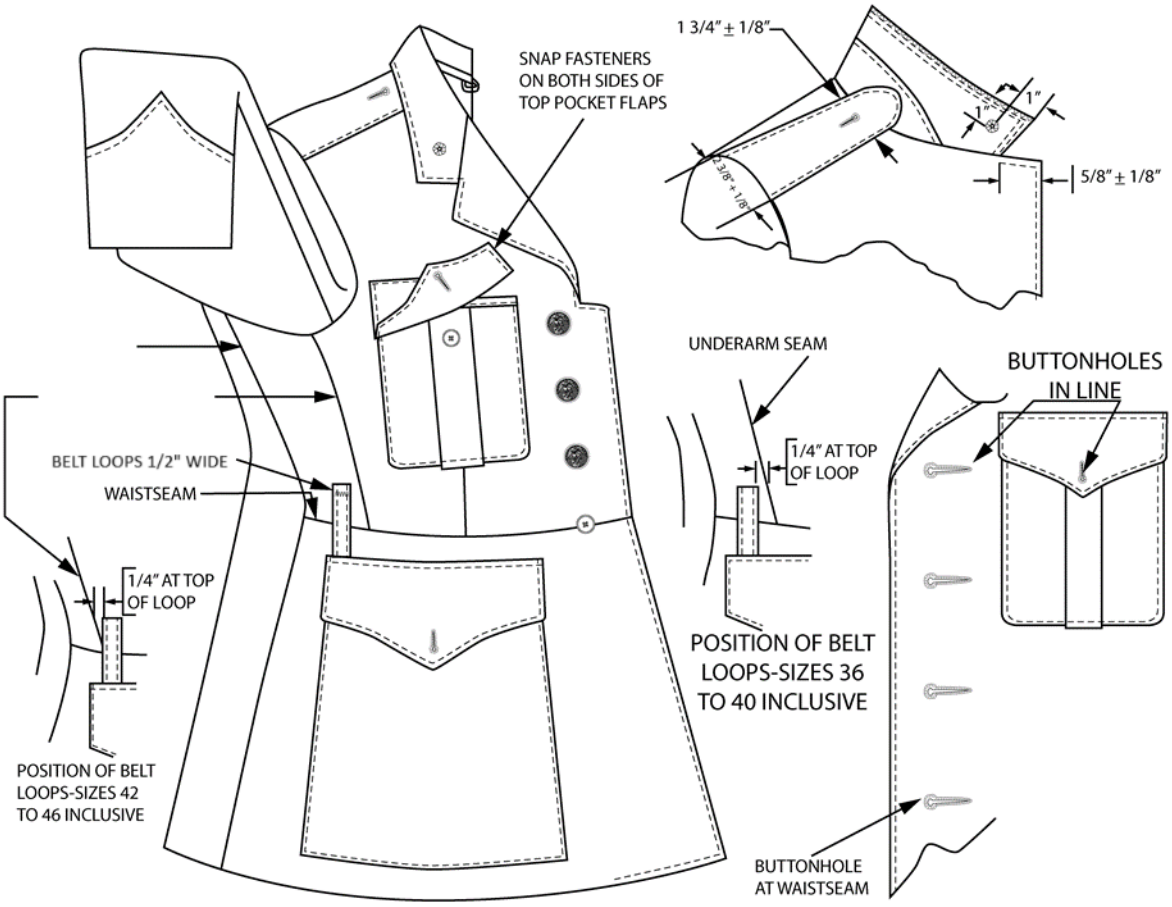



FIGURE 4. Coat, man's – service, officer's, USMC – outside detail.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

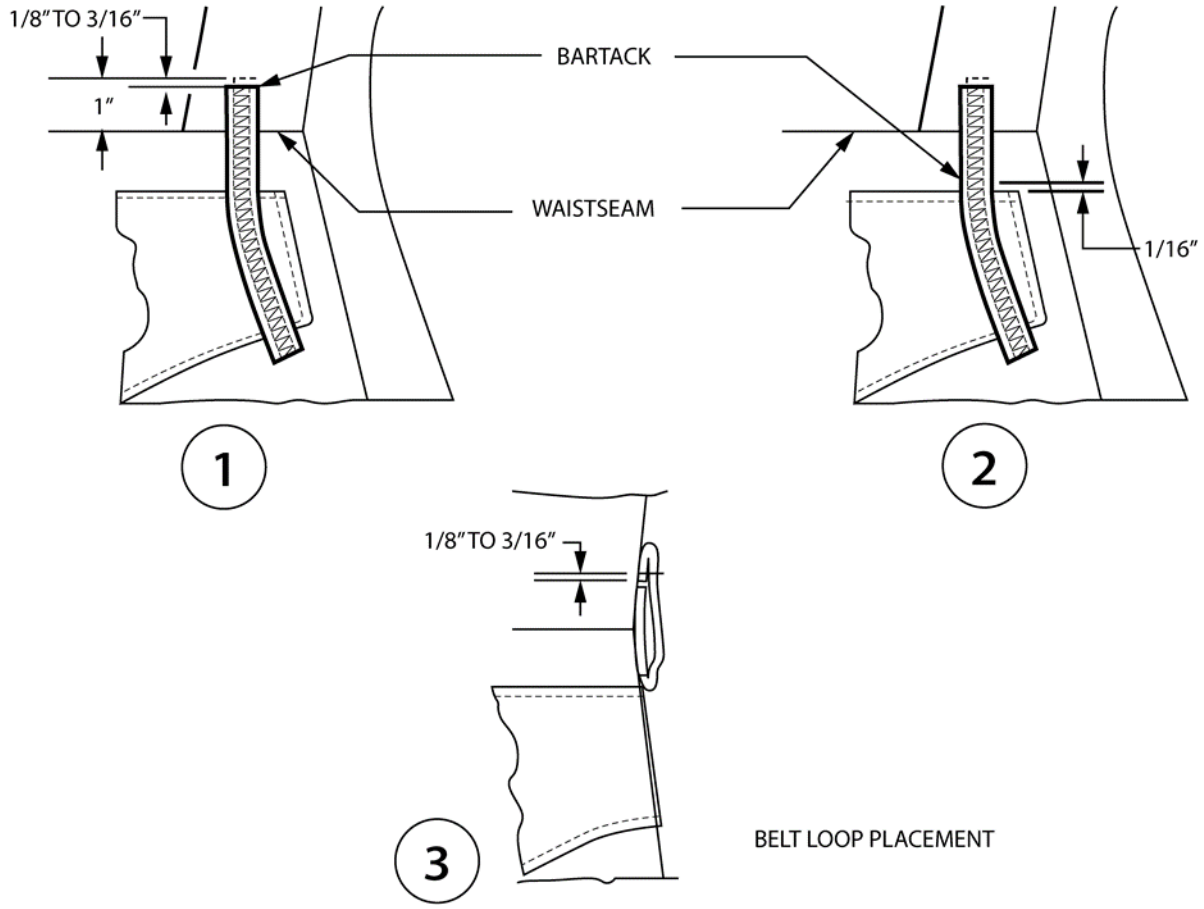



FIGURE 5. Coat, man's – service, officer's, USMC – waist detail.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

OPERATIONS

A.1 SCOPE

A.1.1 Scope. This appendix covers operations and includes stitch type, seam type, and stitches per inch for the final coat design. This appendix is a mandatory part of the specification. The information contained herein is intended for compliance. It is not required to follow the exact sequence of the operations listed in table A-1, but it is expected that the finished coat has the same appearance as a coat manufactured using all operations specified in table A-1.

TABLE A-I. Table of operations.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 1 | Cutting. | | | |
| | a. Cut coats in strict accordance with patterns furnished by the Government. | | | |
| | b. Cut all materials in the direction indicated by the directional lines on the patterns. | | | |
| | c. Cut all polyester/wool parts of the coat from the same lot of basic material, except armhole shields, belt loops, and belt keeper may be cut from ends; when so cut, the parts shall harmonize with the shade of the coat. Belt loops and the belt keeper may be banded 1 inch wide. When armhole shields are cut from ends, the shields shall match each other. | | | |
| | d. Cut fronts, yoke, and vent lining parts of the coat and facing for the inside pocket from the same lot of lining material. All other lining parts may be cut from ends. When pairs of sleeve linings are cut from ends, the shade of the linings shall match each other. The bias binding shall be cut 5/8 to 7/8 inch wide. | | | |
| | e. Cut polyester and cotton twill cloth stays for the armhole and shoulder seams on the bias, 3/4 inch wide, 4±1/4 inches long for the front shoulder and armhole edge. Cut polyester and cotton twill cloth for the inside pocket and the stays for upper and lower pockets and the inside pocket on the straight in accordance with the patterns furnished. Cut polyester and cotton twill cloth for upper and lower pockets in accordance with the patterns furnished. | | | |
| | f. Cut the interfacing cloth for collar on the bias in accordance with the pattern furnished. | | | |
| | g. Dress the left vent in accordance with the shaper furnished. | | | |
| | h. The use of drill holes shall be prohibited. | | | |
| | i. The left front shall be dressed in the front shaping operation only (see operation 42). | | | |
| | j. The belt to be paired with the coat during production should use the same basic fabric lot or fabric in a matching shade (see 3.3.2). | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 2 | Replacement of damaged parts. | | | |
| | a. Replace, at the time of cutting, any parts of the coat containing holes or serious weakening defects such as smashes; multiple floats; loose weakening slubs; other material defects listed in MIL-STD-1490 expected to develop into holes, shade bars, and dye streaks; or unsightly slubs affecting appearance. | | | |
| | b. Replace any parts damaged during the manufacturing process by needle chews, which may develop into a hole, scissor or knife cuts, tears, holes, mends, or burns in the material affecting appearance. | | | |
| 3 | Shade marking. | | | |
| | a. Mark or ticket (see 3.6.2) all component parts cut from one piece of basic material, and the two parts of the under collar to insure uniform shade and size throughout the coat. All lining parts shall be marked, bundled or ticketed to ensure uniform shade and size throughout the garment. | | | |
| | b. The use of tickets with any metal fastening devices or sew-on shade tickets shall be prohibited on the lining material. | | | |
| 4 | Make belt loops and keeper. | | | |
| | Finished appearance. The belt loops and keeper shall be uniformly stitched and uniform in width and shall finish smooth and flat without pleats, gathers, puckers, or other distortion. | | | |
| | a. The belt loops and keeper shall be made from a 1-inch wide strip of basic material. | | | |
| | b. Fold the sides of the strip lengthwise towards the center, abutting the raw edges, and join the raw edges together with a covering stitch, to finish 1/2 inch wide. The stitching shall be uniformly 1/8 inch from the finished edges of the loops and keeper. | | | |
| | c. Cut the loop for the left and right sides of the coat 5-1/2 inches and 3-1/2 inches long, respectively. | | | |
| | d. Cut the keeper 4-1/2 inches long, fold in half end to end, and join the ends with a bartack across the width of the keeper. The finished keeper shall measure 2-1/8±1/8 inches from bartack to folded edge. | Bartack | | 28 per bartack (min) |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 5 | Make upper and lower pocket flaps. | | | |
| | Finished appearance. The pocket flaps shall be uniformly stitched and shall finish smooth and flat without twists, gathers, puckers, pleats, or raw edges. They shall be uniform in shape and size in accordance with the finished pocket flap shaper. The seamed edges, the corners, and point of the flaps shall be well worked out and the lining shall not be visible on the outside of the flaps. The buttonholes shall be clean cut, well made, properly positioned, well worked over the gimp to fit a 27-ligne insignia button, and stitching shall be securely caught in the basic material. The gimp shall be pulled through to the underside of the buttonholes and the purling of the buttonholes shall be on the outside of the flaps. | | | |
| | a. Pocket flaps shall be made of one ply of basic fabric and lined with one ply of lining. | | | |
| | b. Seam the two plies together face-to-face, 3/16 inch from the side and bottom edges, evenly trimming the edges for proper turning. | 301 | SSe-1 | 10-14 |
| | c. Turn the flaps, working the edges, corners, and point out completely. Edgestitch the flaps uniformly 1/8 inch from seamed edges. | 301 | SSe-2 (b) | 10-14 |
| | d. Mark and trim the top edge of the flaps with the finished shaper so that in the finished coats the length of the flaps at the center point and sides shall conform to measurements shown in table VII. | 502 or 503 | SSa-1 | 8-10 |
| | e. Overedge stitch together the top raw edges of the flaps. | 502 or 503 | SSa-1 | 8-10 |
| | f. Make a vertical, cut first, eyelet end, square bar type buttonhole with a 3/4 inch long cut, through the center of each breast patch flap with the edge of the eyelet 5/8 inch above the center point. | Buttonhole | | 38 per buttonhole (not incl. tack) |
| | g. Make a vertical, cut first, eyelet end, square bar type buttonhole with a 3/4-inch long cut through the center of each lower patch pocket flap with the inside edge of the eyelet 5/8 inch above the center point of the flap. | Buttonhole | | 38 per buttonhole (not incl. tack) |
| | h. Securely bartack the ends of the buttonholes, catching the ends of the gimp in the bartack. Trim the ends of the gimp.<br>NOTE: Combination machines that cut the buttonhole and bartack automatically may be used. Care shall be exercised in trimming the excess gimp at the end of the buttonhole. | Bartack | | 21 per bartack (min) |
| | i. Press the upper and lower pocket flaps smooth and flat. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 6 | Make upper pockets (creasing machine construction). | | | |
| | Finished appearance. The binding shall be uniformly stitched; it shall not be tight or full causing puckers, gathers, or pleats; and the basic material shall be securely caught in the stitching. The pleats shall be vertically centered and the folded side edges of the pleats shall be parallel. The pockets shall be uniform in shape and size in accordance with the pattern. The pockets shall be lined with polyester/cotton cloth twill and the pleats shall be stitched. | | | |
| | a. Form a vertical box pleat on the outside center of upper pockets with a heated creasing machine. The pleat shall be 1-1/2 inches wide. | | | |
| | b. Secure the pleat with a row of stitches 1/8 inch from the top and bottom edges, respectively. | 301 | SSa-1 | 10-14 |
| | c. Stitch the abutted edges of the pleat together on the inside of the pocket with blind stitching. | 103 | SSm-1 | 4-8 |
| | d. Place the polyester and cotton twill lining on the underside of the pocket after the pleat is formed and stitched and seamed together along the top, sides, and bottom 1/8 to 3/16 inch from the raw edges. | 301 | SSa-1 | 10-14 |
| | e. Bind the upper edge of the pockets, including the lining, with 7/8-inch wide bias binding with the pleat closed and the outside edge of the binding only turned under and caught in the stitching 1/16 inch from the inner folded edges of the binding. | 301 | BSb-1 | 10-14 |
| | f. Turn under and crease the side and bottom edges of the pockets in a heated edge creasing machine. | | | |
| | g. Perform one of the following: | | | |
| | (1) Trim the lower corners of pockets. | | | |
| | (2) Fold the pocket in half lengthwise and stitch 1-1/2 inches from the edge. | 301 | OSf-1 | 10-14 |
| | i. Form the pleat and seam across the top and bottom edges, respectively, 1/8 inch from raw edge. | 301 | SSa-1 | 10-14 |
| | j. Press the pleat in the center of the pocket smooth and flat. | | | |
| | k. Trim the pocket to conform to the upper finished pocket shaper with a 3/16-inch seam allowance added. Sew the polyester/cotton twill lining and pocket face-to-face after the pleat is formed and seam around the sides and bottom 3/16 inch from the raw edges. | 301 | SSa-1 | 10-14 |
| | l. Turn the pocket so that the face side is on the outside and baste the edges with the twill lining slightly back from pocket edges. The finished pocket shall conform to the finished shaper. | 101 or Hand | | |
| | m. Stitch across the top of the pocket. | 301 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 6 | Make upper pockets (creasing machine construction) (continued). | | | |
| | n. Bind the upper edge of the pockets, including the lining, with 7/8-inch wide bias binding with the pleat closed and the outside edge of the binding turned under and caught in the stitching 1/16 inch from the inner folded edges of the binding. | 301 | BSc-1 | 10-14 |
| 7 | Make lower pocket. | | | |
| | Finished appearance. The binding shall be uniformly stitched and shall not be tight or full causing puckers, gathers, or pleats. The basic material and both edges of binding shall be securely caught in the stitching. The pockets shall be uniform in shape and size in accordance with the finished pocket shaper. The pockets shall be lined with polyester/cotton twill cloth (see 3.4.4). | | | |
| | a. Place the polyester/cotton twill lining on the underside of the pocket and seam together along the top, sides, and bottom 1/8 to 1/4 inch from raw edges. | 301 | SSa-1 | 10-14 |
| | b. Bind the upper edge of the pockets, including the lining, with 7/8-inch wide bias binding. The top edge of the binding shall be turned under and caught in the stitching 1/16 inch from the inner folded edges of the binding. | 301 | BSc-1 | 10-14 |
| | c. Mark the pockets in accordance with the finished shaper. | | | |
| | d. Seam lower corners of pockets 3/8 inch from the edges. | 301 | SSa-1 | 10-14 |
| | e. Spread open the corner seams of pockets and press smooth and flat with a heated pressing iron. | | | |
| | f. Trim the corners and turn the pocket, working out the corners completely. Edgestitch uniformly 1/8 inch from folded edges. | 301 or 101 or Hand | OSf-1 | 12-16 |
| | g. Press the entire pocket smooth and flat with a heated pressing iron or pressing machine, evenly creasing the edges. | | | |
| | h. The pockets shall be uniform in shape and size in accordance with the finished pocket shaper. | | | |
| 8 | Make shoulder straps. | | | |
| | Finished appearance. The shoulder strap shall be uniformly stitched and shall finish smooth and flat without twists, gathers, puckers, pleats, or raw edges. The buttonholes shall be cut-first type, well made, properly positioned, well worked over the gimp to fit a 27-ligne insignia button, and the stitching shall be securely caught in the basic material. The gimp shall be pulled through to the underside of the buttonhole, and purling of the buttonholes shall be on the outside of the shoulder straps. | | | |
| | a. The shoulder straps shall be made of one ply of basic material and one ply of interfacing. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 8 | Make shoulder straps (continued). | | | |
| | b. Fold the side edges face-to-face enclosing the interfacing and seam together with a 1/4-inch seam. | 301 | SSe-2 (a) | 10-14 |
| | c. Press the seam open with a heated iron. | | | |
| | d. Stitch the pointed end of the strap with a 1/4-inch seam. | 301 | SSe-2 (a) | 10-14 |
| | e. Trim the points and turn the straps, working the seams out to the edges. Fold the straps according to notches, and topstitch the straps uniformly 1/8 inch from the edges. | 301 | SSe-2 (b) | 10-14 |
| | f. Make a horizontal eyelet-end, square-bar type, cut-first buttonhole 3/4-inch long in each strap midway between the back and front edges with the inside edge of the eyelet placed so that in the finished coat the edges of the shoulder strap button will be 1/4 to 1/2 inch from the edge of the collar. The purling shall finish on the outside of the strap. | Buttonhole | | 38 per buttonhole (min) (not incl. tack) |
| | g. On the finished coat, the straps shall measure 2-3/8±1/8 inches at the eyelet end of the buttonhole. | | | |
| | h. Press the straps smooth and flat with a heated pressing iron or pressing machine. The strap shall be uniform in shape and size in accordance with the pattern. | | | |
| 9 | Make under collar. | | | |
| | a. The under collar assembly may consist of one or two pieces of under collar cloth. | | | |
| | b. Join the two halves of the under collar with a 3/8-inch seam (when two-piece construction is used). | 301 | SSa-1 | 10-14 |
| | c. Spread the seam open and press flat with a heated pressing iron. | | | |
| | d. Join the two halves of the interfacing together with a 3/8-inch lap seam (when two-piece construction is used). | 301 | LSa-1 | 10-14 |
| | e. Mark the breakline of the under collar with the under collar stand marker. | | | |
| | f. Stitch the under collar to the interlining at the breakline; the stand shall be 1-1/4±1/8 inches at the center. | 301 | SSa-1 | 10-14 |
| | g. Quilt the interfacing to the under collar with four to five rows of blind stitching. | 103 | SSm-1 | 4-6 |
| | h. Press the under collar smooth and flat with a heated pressing iron or pressing machine. | | | |
| | i. Stitch the under collar to the interfacing 1/2±1/8 inch from the top and side edges. | 301 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 10 | Assemble top collar and under collar. | | | |
| | Finished appearance. The collar shall be uniform in appearance and shall finish smooth and flat without twists, gathers, puckers, pleats, or raw edges (top and sides). The felling shall not be too tight or loose and the collar material shall be securely caught in the stitching. The eyelets shall be well worked with the purling on the outside of the collar and shall finish with a 1/8-inch diameter opening. | | | |
| | a. Position the top collar between the under collar and the interfacing with the upper edge abutting the under collar interfacing seam and with notches aligned. | | | |
| | b. Join the top collar to the under collar at the top edge with zig-zag stitching, properly distributing the fullness between the notches. The zig-zag stitching shall extend to the end of the collar. | 304 | LSa-1 | 8-10 |
| | c. Turn the under collar inside on the top collar and stitch the ends with a 1/8-inch seam. | 301 | SSa-1 | 10-14 |
| | d. Trim and turn the top collar to the outside, forcing out the ends. | | | |
| | e. Baste the ends and upper edge and along the breakline with the fullness placed between the two rows of basting stitches. | 101 | | |
| | f. If the ends of the collar are felled by hand, 1/8 inch shall be cut off the ends of the collar.<br>NOTE: When collar ends are hand felled, the ends of the under collar will not be turned under. | Hand | | 8-10 |
| | g. Press the collar smooth and flat with a heated pressing machine. Edges and corners shall be smooth, flat, and uniformly even. | Eyelet | | 20 per eyelet (min) |
| | h. Trim the lower edge of the topcollar to provide seam allowance for seaming to the coat. Cut a guide notch in the lower edge of the top collar at the center. | | | |
| | i. Make one eyelet at each end of the collar 1 inch from the side and upper edges, respectively. The eyelets shall be well worked with the purling on the outside of the collar and shall finish with a 1/8-inch diameter opening. | | | |
| 11 | Seam sleeves at forearm. | | | |
| | Finished appearance. The forearm seam shall finish smooth and flat without twists, gathers, puckers or pleats and shall start and finish evenly. | | | |
| | a. Position the top and undersleeves with notches matching and join at the forearm with a 3/8 inch seam. | 301 or<br>401 | SSa-1<br>SSa-1 | 10-14<br>10-14 |
| | b. Spread open the seam and press flat with a heated pressing iron, holding seam short. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 12 | Join cuffs to sleeve. | | | |
| | Finished appearance. The upper curved edge of cuffs shall be properly formed and creased and the cuffs shall be uniformly stitched to sleeves. The point of the cuff shall be centered between the lower front creased edge and the creased backarm seam of sleeve. | | | |
| | a. Fold the cuff lengthwise at the point with the wrong side out. Tack the point 1/8 inch from the raw edges. Turn cuffs, completely working out the point. | 301 | SSa-1 | 10-14 |
| | b. Turn under the upper edge of the cuff, forming the finished curved edge in accordance with the shape of the pattern. Press smooth and flat with a heated pressing iron or pressing machine, creasing the edge. | | | |
| | c. In lieu of pressing, the turn under at the upper edge of cuffs may be basted. | 101 or Hand | | |
| | d. Mark the sleeves in accordance with the sleeve cuff marker for positioning the cuffs with the notch on the pattern matching the forearm seam line and with the lower edge of the sleeve and marker even. | | | |
| | e. Position the cuffs at the mark on the sleeve and seam uniformly 1/8 inch from the upper folded edge of the cuff. | 301 | LSd-1 | 10-14 |
| 13 | Seam sleeve at backarm. | | | |
| | Finished appearance. The backarm seam shall finish smooth and flat without twists, gathers, puckers, or pleats and shall start and finish evenly. | | | |
| | a. Join the top sleeve to the under sleeve at the backarm with a 3/8 inch seam, catching the ends of the cuff in the seam. | 301 or 401 | SSa-1 | 10-14 |
| | b. Spread open the sleeve and cuff seams and press flat with a heated pressing iron. | | | |
| 14 | Tack cuff to sleeve. | | | |
| | a. Turn the cuff outlet to the inside, in accordance with notches, against the bottom end of the sleeves and baste along the turned edge of the cuff. | 101 or Hand | | |
| | b. Tack the raw edge of the cuff to the body of the sleeve with blind stitching. | 103 | SSm-1 | 4-6 |
| | c. On the finished coat, the length of the cuff shall be 3-1/4±1/4 inches at the front and back creased edges and 6±1/4 inches at the point. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 15 | Seam sleeve linings. | | | |
| | Finished appearance. The sleeve lining shall be uniform in appearance, uniformly stitched, and shall finish smooth and flat without twists, gathers, puckers, or pleats. The seams shall start and finish evenly. | | | |
| | a. Position the top and under sleeve lining pieces in accordance with notches on pattern and join the forearm and backarm respectively, with a 3/8-inch seam, continuously from top to bottom on each seam.<br>NOTE: The seams of the sleeve lining shall be finished on the inside of sleeve linings. | 301 or 401 | SSa-1 | 10-14 |
| 16 | Assemble sleeve and sleeve lining. | | | |
| | Finished appearance. The sleeve linings shall be properly positioned and seamed to the sleeve without twists, gathers, puckers, or pleats. | | | |
| | a. Position the sleeve lining on the sleeve with the notch on the lining even with the armhole edge of the sleeve and extending the same width around the armhole edge of the sleeve. | | | |
| | b. Seam or tack lining to the sleeve backarm and forearm seam allowance, respectively, approximately 4 inches above the finished bottom edge of the sleeve and extending to approximately 6 inches below the armhole edge at the backarm and approximately 4-1/2 inches below the armhole edge at the forearm. | 301 or Hand | SSa-1 | 6-8 |
| 17 | Fell turnup of sleeve lining: press sleeves. | | | |
| | Finished appearance. The sleeve linings shall not be short, tight, or twisted at the bottom of sleeves and shall extend to within 1 to 1-1/4 inches from the finished end of the sleeve. The sleeves shall be properly pressed. | | | |
| | a. Pull sleeves through the lining and turn under the bottom edge of the sleeve lining to finish 1 to 1-1/4 inches above the finished end of the cuff. The sleeve lining may be felled to the bottom of sleeve without basting. | 101 or Hand | | |
| | b. Fell the folded edge of the sleeve lining to turnup of the cuff with blind stitching. | 103 or | EFc-1 (b) | 6-8 |
| | | Hand | | 8-10 |
| | c. Turn sleeves and assembly in pairs. The sleeves may be pressed prior to setting. The backarm crease shall be on the backarm seam. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 18 | Hem yoke and front lining. | | | |
| | Finished appearance. The hem shall be uniformly stitched and uniform in width and shall finish smooth and flat without twists, gathers, puckers, or pleats. | | | |
| | a. Hem the bottom edge of the yoke and front linings, respectively, with the raw edge turned under. Stitch 1/16 inch from the folded upper edge of the hem. The hem shall measure 3/8±1/8 inch wide. | 301 | EFb-1 | 10-14 |
| 19 | Make armhole shields. | | | |
| | Finished appearance. The armhole shields, of one ply of basic material, shall finish without puckers, gathers, or raw edges. | | | |
| | a. Bind the rounded edge of the shield with bias binding, turning under the outside raw edge of the binding only and catching the turned under portion in the stitching 1/16 inch from folded edge. | 301 | BSb-1 | 10-14 |
| 20 | Make center pleat in back yoke lining. | | | |
| | Finished appearance. The pleat shall be uniform in width and shall finish smooth and flat without puckers or pleats. | | | |
| | a. Perform one of the following: | | | |
| | (1) Fold the back yoke lining, in accordance with the notches on the pattern, to form a 5/8- to 3/4-inch wide pleat at the center back. Tack lengthwise along the pleat in line with the notches for a distance of 1 to 1-1/2 inches from the top end. | 301 | OSf-1 | 10-14 |
| | (2) Form the pleat by stitching across the top of pleat at the neckline. Press the pleat smooth and flat from the top to the bottom edges of the back yoke lining with a heated pressing iron. The folded edge of the pleat on the outside of the back yoke shall be towards the left side. | 301 | SSa-1 | 10-14 |
| 21 | Stitch dart in front lining. | | | |
| | Finished appearance. The dart shall be tapered to a point at the lower end and shall finish without gathers, puckers, or pleats. | | | |
| | a. Fold the front lining, matching the cut edge of the underarm dart. Stitch lengthwise along the dart, tapering from 3/8 inch at the armhole to a point at the lower end not more than 1 inch below the cut of the dart. | 301 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 22 | Seam facing to front lining. | | | |
| | Finished appearance. The lining shall be carefully and properly aligned, and seamed to the facing so that in the finished coat, the lining shall be smooth and flat along the facing without creases, bulges, overlapping of excess material, or other defect or distortion. | | | |
| | a. Position the lining on the facing with the top edges even, matching the notches to form chest pleat across the chest. The bottom finished edge of the lining shall be matched with the notch in the back edge of the facing to ensure proper seaming. | | | |
| | b. Seam the front edge of the lining to the back edge of the facing 3/8 inch from the edge, matching the notches in the lining to form a horizontal pleat. The pleat shall face down. | 301 | SSa-1 | 10-14 |
| | c. Press the facing lining seam, the pleat, the underarm dart, and the bottom edge of the lining smooth and flat with a heated pressing iron with the raw edges of the underarm dart toward the side. | | | |
| 23 | Assemble inside pocket on lining and facing. | | | |
| | Finished appearance. The inside pocket shall be made of one piece of polyester/cotton twill cloth with a facing of lining at the horizontal piped pocket opening. | | | |
| | a. Position the facing on the pocket material with notches matching. Turn under the top and bottom edges, respectively, of the facing and seam the facing to the pocket 1/16 to 1/8 inch from the folded edges with the top edge of the identification label centered and caught in the stitching at the top edge of the facing. The selvage edge need not be turned under. | 301 | LSd-1 (each turned edge) SSa-1 (each selvage edge) | 10-14 |
| | b. Stitch the remaining three sides of the label to the pocket 1/16 inch from each edge. | 301 | SSa-1 | 10-14 |
| | c. Mark the right facing and the front lining, with the pocket marker furnished, for the position of the pocket opening. | | | |
| | d. Position the pocket at the mark with the pocket facing next to the lining material. Place the polyester/cotton twill stay piece on the underside of the lining with the diagonal extension of the stay extending to the armhole edge of the lining. | | | |
| | e. Stitch the pocket to the lining and facing through the stay piece with one row of stitches 3/16 to 1/4 inch on each side of the mark for the pocket opening. | 301 | SSv-2 | 10-14 |
| | f. Cut the opening for the pocket midway between the two rows of stitches joining the pocket and pocket stay to the lining and facing, tongue notching each end of the opening. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 23 | Assemble inside pocket on lining and facing (continued). | | | |
| | g. Perform one of the following: | | | |
| | (1) Turn the pocket through the opening to the inside with the front and the backs of the pocket toward the bottom and top edges, respectively, of the lining. Form the piping at the top and bottom edge of the opening. Topstitch the upper and lower edges of the pocket opening adjacent to the seamed outer edge of the piping. | 301 | BSp-2 | 10-14 |
| | (2) Accomplish the pocket opening with a double-piped pocket machine that stitches, cuts, and turns in one operation. When this machine is used, the piping piece may be trimmed to permit insertion into the machine. The joining seam of the top and bottom piped edges shall be raise stitched through the lining and coat facing prior to the pocket closing and the top edge stitched through all plies. Tack ends of the pocket opening. | 101 or 301 | | |
| | h. Turn down the back part of the pocket and seam the front and back together approximately 1/2 inch from the raw side and bottom edges, catching the tongue notch at each end of the pocket opening in the stitching and securely backtacking each end of the tongue notch. Continue to stitch across the top of the pocket adjacent to the top piping seam, catching the twill stay in the stitching and closing the top of pocket. | 301 | SSa-1 | 10-14 |
| | i. Stitch the lining, on the outside, to the diagonal extension of the pocket stay from the armhole end of the pocket opening to the armhole. Tacking of the pocket stay to the canvas only is permitted. | 301 | SSv-1 | 10-14 |
| | j. Notch the top of the polyester and cotton pocket at the front edge of the full width of the seam allowance and blind stitch the inner ply of the pocket to the facing (see 70.c for alternate operation). | 103 or<br>306 | SSm-1<br>SSm-1 | 4-6<br>4-6 |
| | k. In the finished coat, the width of the pocket opening shall be 5±1/4 inches for all sizes and shall not extend into the facing more than 1 inch nor extend into the armhole. The depth of the pocket shall be not less than 6 inches. | | | |
| | l. Sew the instruction label to the outside of the right pocket facing, centered, 1/2 inch below pocket opening, with a single row of stitching 1/16 inch from each edge. | 301 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 24 | Bind backs. | | | |
| | Finished appearance. The binding shall be uniformly stitched, shall not be tight or full causing puckers, gathers, or pleats, and the basic material and edges of the binding shall be caught in the stitching. Only the outside raw edge of the binding shall be turned under and caught in the stitching. | | | |
| | a. Bind the raw side edge of the left and right back parts, respectively, with bias binding from the top edge of back parts to the top end of the vent. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the inner folded edge. When binding the left back part, continue to bind the raw edge of the vent for the left back part from the top to the bottom end. The binding is not required along the top edge of the vent. | 301 | BSb-1 | 10-14 |
| | b. Bind the raw side edge of the left and right back part, respectively, with bias binding from the top to the bottom edge of the coat. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the inner folded edge. | 301 | BSb-1 | 10-14 |
| 25 | Bind facings. | | | |
| | Finished appearance. The binding shall be uniformly stitched and shall not be tight or full causing puckers, gathers, or pleats. The basic material shall be securely caught in the stitching. The binding shall extend from the bottom edge of facing to not less than 1 inch above the bottom finished edge of lining. | | | |
| | a. Bind the raw back edge of the facing with the 3/4-inch wide bias cut binding with the outside raw edge only of the binding turned under and caught in the stitching 1/16 inch from the inner folded edge. | 301 | BSb-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 26 | Seam lining to right vent. | | | |
| | Finished appearance. The vent lining shall be uniformly stitched and shall finish smooth and flat without twists, gathers, puckers, or pleats. | | | |
| | a. Fold the vent lining in half lengthwise face-to-face and stitch along the top, from the notches to the folded edge, with a 5/16-to 3/8-inch seam. Turn the vent lining to the right side, forcing out the corner and seam. | 301 | SSa-1 | 10-14 |
| | b. Press the vent lining smooth and flat with a heated pressing iron or pressing machine. Position the raw edge of lining on the outside of the right vent, with notches on the lining in line with the top end of the vent, then seam together 3/8 inch from back edge. The lining shall extend from the notches to the bottom finished edge of the coat. | 301 | SSe-2 (a) | 10-14 |
| | c. Turn the lining to the inside with the seam 1/16 to 1/8 inch back of folded edge. Stitch the entire length of the vent 1/8 inch from the folded edge. | 301 | SSe-2 (b) | 10-14 |
| 27 | Join back parts and tape neck. | | | |
| | Finished appearance. The backs shall be joined without gathers, puckers, or pleats. The folded edge of the left vent shall be in line with the center back seam. In the finished coat, the left back part shall overlap the right back part not less than 3-1/2±1/4 inches, measured at the bottom edge of the coat, and the left vent shall be 1-1/2±1/8 inches wide measured at the bottom bound edge. Stitch the 1/4-inch wide stay tape to the inside of the left center back along the vent with the edge of the tape positioned approximately 1/8 inch in front of the fold notch of the vent. | | | |
| | a. Position the back parts with edges even and join at the center with a 5/8-inch seam from the top edge of the backs to approximately 3/4 inch below the top end of the vent. From that point, continue to stitch diagonally across the top end of the left and right vents to the bound edge of the backs. | 301 | SSa-1 | 10-14 |
| | b. Turn the left vent to the inside of the left back part in accordance with the notches and edgestitch uniformly 1/8 inch from the folded edge. The folded edge of the vent shall be in line with the center back seam. | 301 | OSf-1 | 10-14 |
| | c. Sew a 1/4-inch wide tape to the inside neck of the back, 1/4 inch from the top raw edge and 5/8 inch from each shoulder edge. The tape shall be sewn flat and the center back seam shall be open. | 301 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 28 | Press center back seam and vent lining. | | | |
| | a. Notch the top end of the right vent diagonally from the juncture point of the vent and the center seam allowance of the right back part to the lower end of the stitching for the center back seam. | | | |
| | b. Spread the center back seam open and press flat with a heated pressing iron. | | | |
| 29 | Baste and stitch vent lining. | | | |
| | Finished appearance. The folded edge of the lining shall extend beyond the center seam allowance of the right back part. | | | |
| | a. Baste the vent lining to the coat. | 101 or Hand | | |
| | b. Stitch the upper part of the vent lining to the center back on each side of the seam allowance 1/8 inch from the seamed edge of lining. Turn the coat on the outside. | 301 | SSa-1 | 10-14 |
| | c. Stitch and backstitch through all plies, across the top end of the vent, through the vent lining, from the back center seam to the edge of the vent. | 301 | SSa-1 | 10-14 |
| 30 | Seam reinforcement stay to armhole and shoulder. | | | |
| | Finished appearance. The cotton and polyester twill reinforcement stays shall be sewn to the armhole and shoulder edges of the fronts without gathers, puckers, or pleats. | | | |
| | a. Seam the 3/4-inch wide polyester cotton stays to the underside of the fronts along the shoulder edge and upper front edge of the armhole, respectively, 1/8 inch from the outer edges. The top end of the armhole stay shall form a right angle at the armhole without the stays overlapping each other. | 301 | SSaa-1 | 10-14 |
| 31 | Bind lower fronts. | | | |
| | Finished appearance. The binding shall be uniformly stitched; shall not be tight or full causing puckers, gathers, or pleats; and the basic material and edges of binding shall be securely caught in the stitching. The outside raw edge only of the binding shall be turned under and caught in the stitching. | | | |
| | a. Bind the raw back edge of the lower fronts with bias binding, turning under the outside raw edge of binding only and catching the turned under portion in the stitching 1/16 inch from the inner folded edge. The binding shall extend from the waist seam to the bottom edge of fronts. | 301 | BSb-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 32 | Assemble fronts. | | | |
| | Finished appearance. The waist darts shall be properly tapered and shall finish without gathers, puckers, or pleats. The upper and lower front and side body panel shall be joined without gathers, puckers, or pleats. | | | |
| | a. The fronts shall consist of an upper front, a side body panel, and a lower front (skirt). | | | |
| | b. Fold the upper fronts, matching the cut edges of the waist dart, and stitch the entire length of the dart 3/8 inch from the cut edges at the lower end and tapering to a point 1 inch from the end of the cut at the upper end. | 301 | SSa-1 | 10-14 |
| | c. Position the upper front and side-body panel with edges even and join with a 3/8-inch seam. | 301 | SSa-1 | 10-14 |
| | d. Spread open the waist dart and the underarm seam and press flat with a heated pressing iron. | | | |
| | e. Position the upper and the lower fronts with edges even and join together at the waist with a 3/8-inch seam and with the 1/4-inch wide stay tape positioned on the upper fronts 1/4 inch from the edge and caught in the stitching. Back tack the front end of the seam on the left front for a distance of not less than 1-1/2 inches.<br>NOTE: The tape may be sewn simultaneously in the joining seam of the waist, or the tape may be sewn to the upper fronts prior to joining the skirt to the upper front. | 301 | SSa-1 | 10-14 |
| | f. The tape shall be sewn with normal tension (not loose or tight) and shall extend from the front edge of the fronts. | | | |
| | g. Spread open the waist seam and press flat with a heated pressing iron. | | | |
| | h. Press and shape the fronts, from the waist to the top edge, on a heated pressing machine, shrinking the fronts to eliminate the excess fullness of the chest. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 33 | Set pockets and pocket flaps. | | | |
| | Finished appearance. The pockets and pocket flaps shall be set without twists, gathers, puckers, pleats, or raw edges. The stitching for the raised edge of the flaps shall conform to stitching for setting the pockets. The side edges of the pockets shall not be exposed beyond the sides of the flaps. The pocket and pocket flaps on the left and right side, respectively, shall be in horizontal alignment with each other. The front edge of the upper pockets, pocket flaps, and pleats shall be in parallel alignment with the front edge of the coat when buttoned. The top of the upper pocket flaps shall be perpendicular to the front edge of the coat when buttoned. The point of the upper pocket flap shall be at the center of the pleat on the upper pockets. The center of the pleat on the upper pockets shall be aligned as accurately as possible with the waist darts in the fronts. The top edge of the bottom pocket flap shall be parallel with the waist seam line, and the front edge of the flap shall be in line with the front edge of the upper pocket. The lower front corners of the bottom pocket shall be 3/8 inch further back towards the side seam. Pockets and pocket flaps shall conform to the measurements in table VII.<br>NOTE: The breast pocket and flap marker (template) shall be made to ensure that the top of the breast pocket flaps finish perpendicular to the front edge of the coat and the front edge of the breast patch pocket shall finish in vertical alignment with the front edge of the lower flap. | | | |
| | a. Mark the fronts in accordance with the marks on the pattern or template when used for position of the upper and lower pockets and pocket flaps, ensuring adherence to the finished appearance requirements. | | | |
| | b. Position the pocket flaps on the outside of the fronts in accordance with the marks for the upper and lower pocket flaps, respectively. Position the polyester and cotton twill stay piece for the flaps and top corners of the pocket on the underside of the fronts. | | | |
| | c. Seam the pocket flaps to the front, through the polyester and cotton twill stay, uniformly 1/8 inch from the serged edge of the flap. | 301 | LSq-2 (a) | 10-14 |
| | d. Turn down the flaps and topstitch the flaps 1/8 inch from the raised edge. | 301 | LSq-2 (b) | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 33 | Set pockets and pocket flaps (continued). | | | |
| | e. Position the upper pockets in accordance with the marks and seam to the fronts uniformly 1/8 inch from the side and bottom edges. The top corners of the pockets shall be securely tacked through the twill stay pieces. | 301 | LSd-1 | 10-14 |
| | f. Position the lower pockets in accordance with the marks on the pattern and with the lower edge 1-1/4 inches above bottom edge of finished coat. Securely tack the upper corners of the pockets through silesia stay pieces. | 301 | LSbj-1 | 10-14 |
| 34 | Set belt loops (see figure 5). | | | |
| | Finished appearance. The belt loops shall finish vertically straight and shall be positioned 1/4 inch in from the back end of the lower flap and perpendicular to the lower flap. The belt loops shall measure 2-1/2±1/8 inches along from top to bottom folded edges. The underloop for the belt keeper shall have an opening of not less than 1-3/4 inches. | | | |
| | a. Position the 5-1/2-inch long belt loop on the left front, 1/4 inch in from back end of the lower pocket flap, with one end approximately 1 inch above the waist seam. Bartack the loop to the front 1/8 inch from the end of the loop. Bartack the loop to the front at the top edge of the lower pocket flap 1/4 inch from the backend of the flap to form the underloop for the belt keeper. Turn under the top end of the loop to the front 1/8 inch from the folded edge, catching the turned under portion of the loop in the stitching. | Bartack | | 28 per bartack (min) |
| | b. Position one end of the 3-1/2-inch long belt loop on the right front and bartack the loop to the front at the top edge of the lower pocket flap 1/4 inch from the back end of the lower pocket flap. Turn under the top end of the loop, and bartack the loop to the fronts 1/8 inch from the folded edge with the loop caught in the stitching. | Bartack | | 28 per bartack (min) |
| 35 | Interface fronts. | | | |
| | a. Position the left and right fronts on the respective coat front interfacing and baste along the top edge of the upper pocket flap on the outside. | 301 or Hand | | |
| | b. Tack the top edge of the upper pocket stay and the front end of the upper and lower pocket stay to the coat front interfacing. The front end of the stays shall be tacked as close to the side edges of the pocket flap as possible. | 301 or Hand | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 35 | Interface fronts (continued). | | | |
| | c. Baste the interfacing and fronts together starting approximately 1-1/2 inches above the top edge of the upper pocket flap and baste along the center of the upper pocket flap and pocket, along the waist dart to the top edge of the lower pocket flap, and then diagonally across the front corner of the lower pocket flap to the front edge of the lower pocket. From that point, continue to baste along the front edge of the pocket to the bottom of the coat. | 301 or Hand | | |
| | d. Baste along the breakline of lapel and along the front edge down to the bottom of the coat. | 301 or Hand | | |
| | e. Baste across the shoulder, allowing room for setting the shoulder pad, and working the fullness towards the armhole. Baste along the front of armhole and down the back edge of the interfacing. | 301 or Hand | | |
| 36 | Baste bridle tape to lapel. | | | |
| | a. Position the 5/8-inch bridle tape adjacent to and behind the breakline from the gorge to 1 to 1-1/2 inches from the lower end of the lapel. | | | |
| | b. Baste the tape evenly and smoothly for a distance of 1-1/2 to 2 inches down from the gorge; continue basting for a distance of 4 to 5 inches, holding the tape taut and working in 3/8 to 1/2 inch breast fullness. Baste the remainder of the tape evenly, smoothly, and without tension or fullness. The tape and interfacing shall be stamp marked to assure proper fullness. | 301 or Hand | | |
| 37 | Pad lapels. | | | |
| | a. Pad each lapel from approximately 1 inch from the front edge to the breakline with six rows of blind stitching, properly distributing the fullness in the interfacing between the row of stitches to roll the lapels. | 103 or 306 | SSm-1 | 4-8 |
| | b. Blind stitch both edges of bridle tape to the interfacing. | 103 or 306 | SSm-1 | 4-8 |
| | c. Press the left and right fronts on a heated pressing machine with the chest to conform to the shape of the body. | | | |
| 38 | Join back and fronts at sides. | | | |
| | Finished appearance. The back and fronts shall be carefully joined at the sides without twists, gathers, puckers, or pleats. | | | |
| | a. Position the back and fronts with edges even and join together at the sides with a 3/4-inch seam. | 301 or 401 | SSa-1 | 10-14 |
| | b. Spread open the side seams and press flat with a heated pressing iron. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 39 | Tape armholes. | | | |
| | a. Sew 1/4-inch wide tape around the armhole from a point 1 to 1-1/2 inches to 3/4 to 1 inch above the notch on the fronts from the shoulder edge on the back. | 301 or 401 | SSaa-1 | 10-14 |
| | b. From the front notch to 1-1/2 to 2 inches back of the underarm seam, the tape shall be stitched with slight tension and from this point up to 1-1/2 to 2 inches above the notch on the back, the tape shall be held taut while stitching and gathering 1/4 to 3/8 inch fullness. | 301 or 401 | SSaa-1 | 10-14 |
| 40 | Sew snap fastener to upper pockets. | | | |
| | Finished appearance. The pockets shall lie smooth and flat without distortion when closed. | | | |
| | a. Securely sew one socket snap fastener part to each side edge of the upper pockets to engage the stud part of the flaps. When the socket part is sewn by hand, the stitching shall be tacked off with not less than two stitches. | 101 or | | 21 per fastener (min) |
| | | 301 or | | 16 per fastener (min) |
| | | Hand | | 3-4 double thread (not incl. tack) |
| 41 | Press armholes, shoulder blades, and lapels. | | | |
| | a. Press the armhole tapes, the shoulder blades, and the lapels smooth and flat with a heated pressing iron or heated pressing machine. | | | |
| 42 | Shape fronts. | | | |
| | a. Mark and shape the front edge of the coat and mark and shape the lapels in accordance with the shaper furnished. The left front edge shall be dressed from the bottom notch of the coat to the base of the lapel. | | | |
| | b. Mark the fronts 1-1/4 inches below the bottom edge of the lower pockets for the bottom turnup. Trim the excess material if necessary. In the finished coat, the bottom turnup shall be 1±1/8 inches wide. The side seams and left vent shall not be mitered at the bottom. | | | |
| | c. Perform one of the following: | | | |
| | (1) Trim the coat front interfacing1/4 to 3/8 inch back from the top and front edges of the lapel and the front edge of coat. Trim the bottom of the interfacing 1/4 to 3/8 inch above the mark for the bottom turnup and the bottom edge of the coat, matching the length of right and left backparts at the vent. | | | |
| | (2) Marking and shaping the front edges and lapels and trimming the bottom edge of the coat may be accomplished with a clicker machine using dies conforming to the pattern furnished. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 42 | Shape fronts (continued). | | | |
| | d. In the finished coat, the left front shall overlap the right front 3-1/2 to 4 inches at the bottom edge, and the lapels shall be 3±1/8 inches wide for all sizes. | | | |
| 43 | Bind bottom turnup. | | | |
| | Finished appearance. The binding shall be uniformly stitched and shall not be tight or full causing puckers, gathers, or pleats. The basic material and edges of the binding shall be securely caught in the stitching. | | | |
| | a. Bind the raw edge of the bottom turnup with bias binding, turning under the outside raw edge of binding only and catching the turned under portion in the stitching 1/16 inch from the inner folded edge. The binding shall extend from the back edge of the front cutout to the edge of the vent at the center back. | 301 | BSb-1 | 10-14 |
| 44 | Baste facing-lining assemblies to fronts. | | | |
| | a. Position the right and left facing lining assemblies on the outside of the respective fronts and baste along the breakline, distributing the fullness in the breast area. Continue to base along the front and bottom edges. Baste from the top and front edge of the lapel down to the lower end of the lapel, working the fullness towards the center of the lapel. | 301 or Hand | | |
| 45 | Join facings and fronts with polyester/cotton tape. | | | |
| | a. Join the facings to the front 3/16 inch from the top and front edges of the lapels and the front and bottom edges of the coat with a 1/2-inch wide polyester/cotton tape positioned on the interfacing side of the fronts and caught in the stitching. | 301 | SSab-1 | 10-14 |
| | b. The polyester/cotton tape shall extend from 1/2 inch to the back of the lapel notch to 1-1/2 to 2 inches beyond the back edge of the facing, except the tape is not required along the step of the right front. The tape shall be sewn with normal tension along the top and front edges of the lapel and with slight tension along the front edge of the coat. | 301 | SSab-1 | 10-14 |
| | c. Fell the inside edge of 1/2-inch wide stay tape to the coat front interfacing from the top end of the tape to the bottom edge of the interfacing. | 103 | SSm-1 | 4-6 |
| | d. Remove all basting stitches, trim the lower front corner of the facings and corner of the lapels, and notch the lapels for proper turning. | | | |
| | e. Press edges flat and smooth with a heated pressing iron. Edge seam is to be pressed open. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 46 | Baste front and bottom edge of coat. | | | |
| | a. Turn the facing-lining assemblies to the inside of the fronts, completely working out the corners of the lapel. Turn up the bottom of the coat, lapping the facing on the bottom turnup and completely working out the front corner. | | | |
| | b. Baste along the top and front edges of the lapels, the front (including the step of the right front) and finished bottom edges of the coat, working the seams to the edge of the coat. | 101 or Hand | | |
| 47 | Fell bottom turnup. | | | |
| | a. Fell the bound edge of the bottom turnup to the fronts and backs, blind stitching. | 103 or 306 or Hand | | 6-8 |
| 48 | Baste facings (second time). | | | |
| | a. Baste the facings to the front approximately 1-1/4 inches from the top and front edges of the lapel and the front and bottom edge of the coat, holding the lower corner of the coat in such a manner as to cause the lower front edge of the fronts to roll inward. | 301 or Hand | | |
| | b. Baste the lapels diagonally from the corner to the breakline, properly placing the fullness to allow the lapels to roll. | 301 or Hand | | |
| | c. Baste along the breakline of the lapel, properly placing the fullness to allow the lapels to roll. | 301 or Hand | | |
| | d. Baste as close to the facing-lining seam line as possible, placing the fullness over the chest and continue basting along the bound edge of the facing to the bottom turnup of the coat. | 301 or Hand | | |
| 49 | Fell facings to fronts and tack to interfacing. | | | |
| | a. Fell the bound edge of the left facing to the left front with blind stitching from the bound edge of the bottom turnup to the lower edge of the front interfacing at the waist. | 103 or Hand | EFc-1 (b) | 6-8 |
| | b. Tack the back edge of the left facing to the interfacing only to not more than 3 inches below the shoulder edge. | 301 or 103 or Hand | SSm-1 | 4-6 4-6 8-10 |
| | c. Fell the bound edge of the right facing to the right front with blind stitching from the bound edge of the bottom turnup to not less than 2 inches above the bottom finished edge of the front lining. | 103 or Hand | EFc-1 (b) | 6-8 |
| | d. Tack the back edge of the right facing to the front interfacing only, with one row of blind stitching from not more than 3 inches from the shoulder edge to not more than 1 inch above the inside pocket opening. Continue the tacking along the outer ply of the inside pocket seam allowance the length of the pocket (see 69.c for alternate operation). | 103 or Hand | SSm-1 | 4-6 8-10 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 50 | Baste yoke lining to back. | | | |
| | a. Position and baste the one-piece yoke lining to the inside of the back along the center pleat, armholes, shoulder (allowing room for shoulder pad), and bottom edge of the yoke. | 301 or Hand | | |
| 51 | Baste and fell front lining. | | | |
| | a. When necessary, trim the backend of lower pocket stays away from the side seam. | | | |
| | b. Tack the upper back corner of the inside pocket to the coat front interfacing. | Hand or Machine | | 4 per tack (min) |
| | c. Fold the front lining, forming the chest pleat at the armhole. Continue to baste across the pleat and toward the lower edge of the armhole, along the side seam, and across the bottom edge of the lining. The folded edge of the chest pleat on the outside of the lining shall be towards the bottom. | | | |
| | d. Turn under the back edge of the front lining and baste to the coat, lapping the folded edge over the side seam and yoke lining and basting to allow room for felling of the side seam lining. | Hand or 301 | | |
| | e. Fell the turned-under portion of the front lining to the side seam allowance of the fronts and to the yoke lining with blind stitching 1/4 to 3/8 inch from the folded edge. Stitching shall extend from the bottom finished edge of the front lining to the lower edge of the armhole. The blind stitching shall not be exposed on the face side of the lining nor shall the blind stitching be exposed on the outside of the front (basic material). | 103 or Hand | EFc-1 (b) | 6-8<br>8-10 |
| 52 | Trim front lining and interfacing. | | | |
| | a. Trim the excess coat front interfacing and front lining at the armhole. | | | |
| | b. Trim the yoke lining even with the back at the neck. | | | |
| 53 | Baste shoulder pads. | | | |
| | a. Insert shoulder pad between interfacing and chest padding of coat front interfacing in line with the armhole edge and securely tack pad to the interfacing and chest padding only. | 301 or Hand | | |
| 54 | Seam shoulders. | | | |
| | Finished appearance. The shoulder seam shall be uniformly stitched and the fullness on the backs shall be properly placed in order that the shoulder may be properly shaped. The shoulder seam shall finish without a distorted appearance. | | | |
| | a. Join the fronts and back together at the shoulders with a 3/8-inch seam, working in the proper fullness on the backs in accordance with good manufacturing practice. | 301 or 401 | SSa-1 | 10-14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 54 | Seam shoulders (continued). | | | |
| | b. Spread open the shoulder seam and press flat, holding the shoulder short and exercising much care in the pressing in order not to effect a distorted appearance in the finished seam. The pressing shall be accomplished with a heated pressing iron or pressing machine over a block. | | | |
| 55 | Set shoulder straps (see figure 4).<br>Finished appearance. The shoulder strap shall be properly positioned and uniformly stitched to the coat without twists, puckers, pleats, or other distortion. On the finished coat, the straps shall be 2-3/8±1/8 inches wide at the armhole seam and shall taper to 1-3/4±1/8 inches at buttonhole eyelet end. | | | |
| | a. Position the shoulder straps with the pointed end of the strap even with the edge of the neck and with the seam of the shoulder strap matching the shoulder seam at the armhole edge. | | | |
| | b. Seam the shoulder straps to the coat 1/8 to 1/4 inch from the armhole edge. Trim the shoulder strap even with the armhole, where necessary. | 301 | SSa-1 | 10-14 |
| 56 | Baste shoulder. | | | |
| | a. Position the shoulder interfacing and lining in place. Baste the upper part of each shoulder on the outside and turn the coat on the inside. | Hand or 301 | | |
| | b. Turn the raw edge of yoke lining at the shoulders. Baste the upper part of each shoulder over the front lining and continue to baste across the neck at the back with the end of the back pleat caught in the basting. | Hand or 301 | | |
| | c. In lieu of basting the lining at the shoulder as required in operations 56.a and 56.b, and handfelling as required in operation 68B.f, trim the shoulder edge of the front lining and yoke lining to approximately 3/8 inch from shoulder at the armhole edge and tapering to 1/8 inch at the neck. Join the yoke lining to the facing-lining assembly at the shoulder with a 3/8-inch seam, working in the proper fullness on the back. In the finished coat, the yoke lining shall be lapped on the facing-lining assembly at the shoulder. | 301 | SSa-1 | 10-14 |
| 57 | Stitch hanger and size label. | | | |
| | Finished appearance. The size label and the ends of the coat hanger shall be centered and sewn to the inside center back of the coat at the neck. | | | |
| | a. Stitch the upper edge of the size label and the ends of the hanger to the inside center back of the coat at the neck. | 301 | SSa-1 | 10-14 |
| | b. The hanger opening in the finished coat shall be 2±1/8 inches long when measured along the lower edge of the collar. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 58 | Set collar. | | | |
| | Finished appearance. The collar shall finish centered on the back seam with the fullness distributed over the shoulder to conform to and hug the neck. | | | |
| | a. Mark the coat on the outside around the neck from shoulder seam to shoulder seam 5/8 inch from the top edge and continue to mark along the gorge with the line of marking tapering to 3/8 inch at the lapel notch. | | | |
| | b. Join the top collar to the facing at the gorge from the lapel notch to a point not less than 1 inch in back of the lapel breakline. | 301 | SSa-1 | 10-14 |
| | c. Notch the facing at the end of the gorge seam, in back of the lapel breakline, the width of the seam without cutting the stitching of the seam. | | | |
| 59 | Tack top collar to fronts at gorge. | | | |
| | a. Spread open the seam joining the top collar to the facing and tack the seam allowance of the top collar to the front at the gorge from the lapel notch to the end of the seam, catching the top end of the bridle tape in the tacking. | Hand or 301 | SSa-1 | 2-4 10-14 |
| 60 | Baste under collar to coat. | | | |
| | Finished appearance. The center seam of the under collar shall be in line with the center back seam of the coat. Fullness in the collar shall be properly placed over the shoulders to permit the collar to lie flat. | | | |
| | a. Turn the collar to the outside with the lower neck of the under collar lapped on the outside of the coat at the mark. | | | |
| | b. Securely tack the corners of the collar across the juncture point of the collar and the lapel. | Hand or Machine | | 5-8 per tack |
| | c. Baste the under collar to the front and back, placing proper fullness over the shoulder. | Hand or Machine | | |
| | d. In the finished coat, the ends of the collar and top edge of lapels shall each be 1-5/8±1/8 inches when measured from the tacked corners to the finished edges of the collar and lapel, respectively. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 61 | Tack collar interfacing to coat and baste top collar to coat. | | | |
| | a. Perform the following two steps or 61.b. | | | |
| | (1) Raise the lower edge of the top collar and tack the collar interfacing to the upper edge of the coat and the yoke lining with overcast stitching from shoulder seam to shoulder seam. | Hand or<br>103 or<br>301 | SSm-1<br>SSm-1 | 2-3<br>3-4<br>3-4 |
| | (2) Turn under the lower edge of the top collar and baste across the neck. | Hand or<br>301 | | |
| | b. In lieu of operation 61.a, join the lower edge of the top collar from gorge seam to gorge seam across the neck. | 301 | SSa-1 | 10-14 |
| 62 | Edgestitch coat and collar. | | | |
| | Finished appearance. The coat shall be uniformly edge stitched the same gage as used on flaps and pockets. | | | |
| | a. Stitch the side and top edge of the collar, the top and front edge of the lapels, the front edges of the coat (including the step of the right front), and continue the stitching along the bottom edge of the coat the width of the facings. | 301 | SSb-1<br>(Collar)<br>SSe-2<br>(Lapels front and bottom edge of coat [shows finished seam]) | 10-14 |
| | b. The stitching shall be uniformly 1/8 inch from the edge. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 63 | Set sleeves. | | | |
| | Finished appearance. The sleeves shall be properly and uniformly set and the fullness at the armholes shall be properly distributed. The armhole sleeve seam shall finish smooth and flat without twists, puckers, or pleats. The armhole shall not be stretched or distorted due to pressing. | | | |
| | a. Position the sleeves on the outside of the coat at the armholes, with the back arm seam of the sleeve matching the notch in the back, and with the notch in the top sleeve and fronts matching. | | | |
| | b. Join the sleeves to the coat with a 3/8-inch seam, distributing the fullness in accordance with good manufacturing practice and catching the ends of the shoulder straps in the stitching. | 301 or 401 | SSa-1 | 10-14 |
| | c. Press the entire armhole smooth and flat with a heated pressing iron to remove the fullness. Press and remove the fullness using a heated iron from the upper part of the armhole sleeve seam from the backarm sleeve seam over the shoulder area to approximately midway between the shoulder and the notch at the front edge of armhole so that the sleeve seam finishes smooth and flat. | | | |
| 64 | Baste armhole. | | | |
| | a. Position the shoulder pad to the armhole and baste around the outside of armhole, with the stitches adjacent to and not greater than 1/8 inch away from armhole seam, forcing out the armhole in the basting so that all fullness is removed from basic material between the lapel and the armhole. Care shall be taken not to catch the yoke or the front lining in the basting on the inside of the armhole. The basting stitches shall extend from the backarm seam of the sleeves to the front notch of the coat. | 301 or Hand | | |
| | b. Turn coat on the inside. | | | |
| | c. Baste around the inside armhole, positioning the yoke lining and the front lining in place to the inside of the coat front interfacing and the shoulder pad around the armhole, distributing fullness evenly so that the armhole finishes smooth and without fullness, puckers, twists, or pleats. | 301 or Hand | | |
| 65 | Baste underarm shield to coat. | | | |
| | a. Position the underarm shield on the lining side of the coat with the raw edges even with the lower edge of the armhole. | | | |
| | b. Baste or tack the underarm shield at the base of the armhole. The shield shall not cover the opening of the inside pocket. | 301 or Hand | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

APPENDIX A

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 66 | Tack armhole and stitch sleeve-head pads. | | | |
| | Finished appearance. The armhole shall not be distorted or puckered due to stitching the sleeve-head pads and linings at the armhole. | | | |
| | a. Position the sleeve-head pad on the sleeves with the folded edge of the pad approximately 1/8 inch back from the raw edge of the armhole seam and with the front end of the pad matching the notch in the fronts. | | | |
| | b. Stitch the sleeve-head pad to the sleeve from end to end through the armhole sleeve seam allowance 1/8 inch from the folded edge of the pad, catching the armhole end of the stay for the upper pockets, the front and yoke linings, the shields at the base of armhole, and the shoulder pad in the stitching. Continue stitching the linings around the remainder of the armhole, trimming away the excess material. | 301 | SSa-1 | 4-6 |
| 67 | Fell collar to coat. | | | |
| | a. Fell the lower edge of the entire length of under collar to the fronts and backs. | Hand or Machine or Hand type felling or 306 | LSa-1 | 8-12 |
| 67 | Fell collar to coat (continued). | | | |
| | b. Fell the folded edge of the top collar to the coat from gorge seam to gorge seam, catching the top edge of the size label and the ends of the coat hanger in the stitching. | Hand | | 8-10 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 68 | Linings may be felled using either operation 68A or operation 68B. | | | |
| 68A | Fell linings (standard procedure). | | | |
| | a. Position the sleeve lining at the armhole with the back and forearm seams of the sleeves and linings matched. Turn under the armhole edge of the sleeve lining and lap the lining on the outside of the front and yoke linings at the armhole. Fell the sleeve lining to the coat around the entire armhole, placing the stitching over the folded edge of sleeve lining, distributing the fullness along the bias front of the armhole and the back of the armhole from the shoulder seam area to 1 to 2 inches below the backarm seam and back stitching the lower armhole edge from approximately 1-1/2 inches to the front of the forearm sleeve lining seam to the side seam of the body lining. | Hand | | 8-10 |
| | b. Stitch the sleeve lining by machine to the armhole on the inside from the forearm seam to the backarm seam across the under sleeve, and fell the balance of the sleeve lining to the armhole by hand. The forearm and backarm seams of the sleeve linings shall be matched. | 301 or Hand | SSa-1 | 10-14 8-10 |
| | c. Machine stitch the lower portion of the armhole as required in operation 68A.b. The remaining upper portion of the armhole shall be felled using machine duplicated hand felling with stitching placed over the folded edge of sleeve lining with the fullness distributed along the bias front of the armhole and the back of the armhole from the shoulder seam area to 1 to 2 inches below the backarm seam.<br>NOTE: It is required that the machine duplicated hand stitching shall be equal to or better than felling stitches made by hand. | Machine Duplicated | | 8-10 |
| | d. Close the previously left open forearm seam. | 301 | SSc-1 | 10-14 |
| | e. Fell the lower corners of the front lining to the facings and the front seam allowance. | Hand | | 8-10 12 per tack |
| | NOTE: As an alternate, operations 68A.d and 68A.e may be performed by machine with one blind tack on each corner. | | | |
| | f. Fell the upper back edge of the front lining to the yoke lining, placing the stitching over the folded edge of the front lining. Fell the lower finished edge of the yoke lining to the side seam allowance. As an alternate, this operation may be performed by machine with two blind tacks on each side. | Hand | | 8-10 |
| | g. Tack the bottom edge of the armhole shields on the underside to the lining. | Hand | | 4 per tack (min) |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 68A | Fell linings (standard procedure) (continued). | | | |
| | h. Fell the back lining and facing lining assembly together at the shoulders, placing the stitching over the folded edge of the back lining. | Hand or Machine 301 | | 8-10 10-12 |
| 68B | Fell linings (felling machine procedure). | | | |
| | a. Fell the armhole lining utilizing a sleeve lining felling machine that consists of a feed off the arm machine equipped with a lower and upper feed (review specification requirements for felling of sleeve lining in relation to appropriate turn under). | | | |
| | (1) Stitch the sleeve lining to the armhole on the inside of the front sleeve notch to the backarm seam across the under sleeve. | 301 | SSa-1 | 10-14 |
| | (2) Stitch the top lining to the armhole on the inside from the front armhole notch to the top back arm lining seam across the crown of the top sleeve lining. | 306 | SSa-1 | 10-14 |
| | (3) Close the previously left open forearm seam 1/16 to 3/32 inch from edge. | 301 | SSc-1 | 10-14 |
| | b. Either 68B.b.1 or 68B.b.2 shall be performed. When operation 68B is performed to fell the armhole lining, it consists of leaving an opening between the notches of the forearm sleeve lining seam, stitching the lining to the armhole on the inside from front sleeve notch of sleeve to back arm seam across under sleeve (301 stitch) utilizing the forearm sleeve opening, and stitching the top sleeve lining to the armhole on the inside by felling machine from front sleeve notch to back arm seam across the crown of top sleeve lining. | | | |
| | (1) Stitch the sleeve lining by machine to the armhole on the inside from the forearm seam to the backarm seam across the under sleeve, and fell the balance of the sleeve lining to the armhole by hand. The forearm and backarm seams of the sleeve linings shall be matched. Operations 68A.c and 68A.d may be performed by machine with one blind tack on each corner. | 301 | SSa-1 | 10-14 |
| | (2) Machine stitch the lower portion of the armhole as required in operation 68B.b.1. The remaining upper portion of the armhole shall be felled using machine duplicated hand felling with stitching placed over the folded edge of the sleeve lining with the fullness distributed along the bias front of the armhole and the back of armhole from the shoulder seam area to 1 to 2 inches below the backarm seam.<br>NOTE: It is required that the machine duplicated hand stitching shall be equal to or better than felling stitches made by hand. | Machine Duplicated | | 8-10 |
| | c. Fell the lower corners of the front lining to the facings and the front seam allowance. | Hand | | 8-10<br>12 per tack |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 68B | Fell linings (felling machine procedure) (continued). | | | |
| | d. Fell the upper back edge of the front lining to the yoke lining, placing the stitching over the folded edge of the front lining. Fell the lower finished edge of the yoke lining to the side seam allowance. As an alternate, this operation may be performed by machine with two blind tacks on each side. | Hand | | 8-10 |
| | e. Tack the bottom edge of the armhole shields on the underside to the lining. | Hand | | 4 per tack (min) |
| | f. Fell the back lining and facing lining assembly together at the shoulders, placing the stitching over the folded edge of the back lining. | Hand or Machine 301 | | 8-10 10-12 |
| 69 | Tack facing and bottom turnup. | | | |
| | a. Fell the ends of the bottom. Turnup to the body of the coat at the vent. | Hand | | 8-10 |
| | b. Fell the back edge of the facings to the coat from the bottom to the top edge of the bottom turnup. NOTE: As an alternate, operations 69.a and 69.b may be performed by machine with two blind tacks on each vent. | Hand | | 8-10 12 per tack |
| | c. Tack the facings on the outside to the front edge of the inside pocket through the interfacing with a hidden backstitch, extending for a distance of 5 inches down from, and in line with, the front end of the pocket opening. | Hand | | 4-6 |
| 70 | Press left front. | | | |
| | a. Press the left front smooth and flat, removing any fullness prior to marking and making buttonholes. | | | |
| 71 | Make buttonholes. | | | |
| | Finished appearance. The buttonhole shall be clean cut, well made, properly positioned, and well worked over the gimp to fit a 40-ligne insignia button and the 34-ligne sewing hole button. The stitching shall be securely caught in the basic material. The gimp shall be pulled through to the underside of the front and the purling of the buttonholes shall be on the outside. The waist seam shall not be open beyond the end of the waist buttonhole. | | | |
| | a. Mark the left front in accordance with the marks on the pattern for the location of four buttonholes. The mark for the bottom buttonhole shall be on the waist seam, the top buttonhole shall be on the horizontal line with the eyelet of the buttonhole in the upper pocket flap, and the remaining two buttonholes shall be evenly spaced. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 71 | Make buttonholes (continued). | | | |
| | b. Make one horizontal eyelet end, square-bar type, cut-first buttonhole, 1-1/8 inches long, at each of the marks, with the purling of the buttonhole to finish on the outside of the front. The inside edge of the eyelet end of the buttonhole shall be 5/8 inch from the front edge. The buttonhole shall be well worked over the gimp and the ends of the gimp shall be pulled through to the underside. | Buttonhole | | 50 per buttonhole (min) (not incl. tack) |
| | c. Care should be exercised when making the buttonhole in the waist seam so that the seam does not come open beyond the ends of the buttonhole. | | | |
| | d. Securely bartack the ends of each buttonhole and trim the ends of the gimp and thread. | Bartack | | 21 per bartack (min) |
| | e. An automatic one-cycle buttonhole/bartack machine with a cut-first attachment may be used to make the required eyelet-end, square-bar type buttonholes. Stitches and thread requirements remain the same. | | | |
| 72 | Make eyelets in pockets. | | | |
| | Finished appearance. The eyelets shall be worked with the purling on the outside of the pocket and shall finish with a 1/8 inch diameter opening. All stitches shall be securely caught in fabric. | | | |
| | a. Make one eyelet in each pocket for a removable insignia button to correspond with the eyelet-end of the buttonhole in the flaps, so that when buttoned on the finished coat, the flaps shall be smooth and flat without twists or bulges. | Eyelet | | 21 per eyelet |
| 73 | Clean coat. | | | |
| | a. Pull and remove all basting threads. Trim and remove all loose ends of thread and remove all spots, stains, and shade tickets and markings without injury to the material. | | | |
| 74 | Press coat. | | | |
| | Finished appearance. The coat shall be well pressed throughout with a heated pressing iron or pressing machine to obtain the desired shape and appearance in accordance with good manufacturing practices. | | | |
| | a. Press the fronts smooth and flat, straightening and shaping the front edges and working the fullness towards the chest. Care shall be exercised in pressing the fronts so that the bottom edges are even. | | | |
| | b. Press the entire collar smooth and flat, smooth stretching where necessary to obtain the proper shape and to straighten the edges, working any fullness towards the center of the collar and removing the fullness by shrinking. | | | |
| | c. Press the upper front on a body machine, shrinking in and properly shaping the chest. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 74 | Press coat (continued). | | | |
| | d. Press the lower front and pockets smooth and flat. | | | |
| | e. Press the sides, working fullness towards the back. | | | |
| | f. Press the back smooth and flat, removing all fullness and lapping the left vent on the right vent. | | | |
| | g. Press the sleeves smooth and flat, creasing at the backarm and the forearm. The backarm crease shall be on the backarm seam. The forearm crease shall extend uniformly to a point 1 to 1-1/2 inches above the bottom edge of the breast pockets. The backarm crease shall be in line with the forearm crease. | | | |
| | h. Block the shoulders to remove the fullness. Press shoulders smooth on a shoulder shaping machine with shoulder straps properly positioned over shoulder seam and pressed flat. | | | |
| | i. Press the armholes solid from the inside, creasing the armholes on the front, back, and armpit. The armpit and the back of the armhole shall be held short while pressing. | | | |
| | j. Block the armholes on a pressing buck, shrinking in the top sleeves. | | | |
| | k. Press the lapels smooth and flat, straightening the edges and working any fullness towards the center of the lapel and removing the fullness by shrinking. | | | |
| | l. Press the lapels, uniformly creasing on the lapel breakline from the gorge seam to approximately 3 inches above the top buttonhole. Then roll press the lapel to the front edge of the coat. | | | |
| | m. Press the collar on a collar machine, creasing on the breakline and shaping to obtain the proper contour while pressing. | | | |
| | n. Press the lower edge of the coat smooth, flat, and even. | | | |
| | o. Remove all wrinkles and impressions from under the lapels, collar, shoulder straps, and pocket flaps. Press the lining throughout, removing all wrinkles and creases. Press the front and yoke lining pleats smooth and flat. Remove all gloss marks. | | | |
| 75 | Mark for buttons. | | | |
| | a. Mark the right front for the location of three 40-ligne insignia buttons and one 34-ligne sewing hole button to properly engage with the buttonholes in the left front. | | | |
| | b. Mark each shoulder for the location of one 27-ligne insignia button to properly engage with the buttonhole in the shoulder straps in order that the straps shall lie smooth and flat without twisting or bulging on the finished coat. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

TABLE A-I. Table of operations – Continued.

| No. | Operation | Stitch Type | Seam Type | Stitches Per Inch |
|---|---|---|---|---|
| 76 | Sew on buttons. | | | |
| | Finished appearance. The buttons shall be securely sewn to the coat and shall properly engage buttonholes in the left front, the shoulder straps, and upper and lower pocket flaps. The insignia buttons on the front and pockets shall finish with the head of the eagle in an upright position. The shoulder buttons shall finish with the head of the eagle towards the edge of the collar. When the coat is buttoned, the center of those buttons between the upper pockets shall be midway between the front edge of the pockets. | | | |
| | a. Sew one 40-ligne insignia button at each of the marks on the right front, except at the waist. The button shall be sewn through all plies of material with the head of the eagle in an upright position and the wings parallel to the waist of the coat. | 101 or 301 or | | 21 per button |
| | | Hand | | 4-6 per button (double thread) |
| | b. Sew one 34-ligne sewing hole button at the waist mark on the right front through all plies, necking the button for shank wrapping. | 101 or 301 or | | 21 per button |
| | | Hand | | 6-8 per button (double thread) |
| | c. Shank wrap the 34-ligne sewing hole button. | Hand or | | 4 wraps (double thread) |
| | | Machine | | 32 stitches per shank |
| | d. Attach one 27-ligne insignia button to each pocket with the shank of the buttons inserted through the eyelets and secured by ring toggles. | 101 or 301 or | | 21 per button |
| | | Hand | | 4-6 per button (double thread) |
| | e. Sew a 27-ligne insignia button at the mark on each shoulder. The button shall be sewn through all plies of material. The head of the eagle shall be towards the edge of the collar. | 101 or | | 24 per button |
| | | 301 or | | 21 per button |
| | | Hand | | 4-6 per button (double thread) |
| 77 | Attach belt to coat. | | | |
| | Match the belt to the coat. Place the belt in the loops, thread the belt fastener through the belt keeper, and button. | | | |



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.

CONCLUDING MATERIAL

Custodians:
Navy – MC
DLA – CT

Preparing activity:
DLA – CT
(Project 8405-2025-002)

NOTE: The activities listed above were interested in this document as of the date of this document. Since organizations and responsibilities can change, you should verify the currency of the information above using the ASSIST Online database at https://assist.dla.mil.



Source: https://assist.dla.mil -- Downloaded: 2026-10-20T23:03Z
Check the source to verify that this is the current version before use.