MIL-O-82250D(NU)
30 December 1983
SUPERSEDING
MIL-O-82250C(SA)
28 February 1977

MILITARY SPECIFICATION

OVERCOAT, MAN'S (OFFICER'S TYPE)

This specification is approved for use by Navy Clothing and Textile Research Facility, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

1. SCOPE

1.1 Scope. This specification covers the requirements for man's dark blue wool melton double breasted overcoat.

1.2 Classification. The overcoats shall be of one type only, in the following sizes and lengths (see 6.2):

Sizes - 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, and 48
Lengths - Short, Regular, Long and Extra Long

2. APPLICABLE DOCUMENTS

2.1 Government documents

2.1.1 Specifications, standards, and handbooks Unless otherwise specified, the following specifications, standards and handbooks of the issue listed in that issue of the Department of Defense Index of Specifications and Standards (DoDISS) specified in the solicitation form a part of this specification to the extent specified.

SPECIFICATIONS

FEDERAL

V-B-871 - Button, Sewing Hole, and Button, Staple (Plastic)
V-T-276 - Thread, Cotton
V-T-280 - Thread, Gimp, Cotton, Buttonhole
V-T-285 - Thread, Polyester
V-T-295 - Thread, Nylon
V-T-301 - Thread, Silk

Beneficial comments (recommendations, additions, deletions) and any pertinent data which may be of use in improving this document should be addressed to: Officer in Charge, Navy Clothing and Textile Research Facility, 21 Strathmore Road, Natick, MA 01760) by using the self-addressed Standardization Document Improvement Proposal (DD Form 1426) appearing at the end of this document or by letter.

FSC 8405

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

CCC-C-438 - Cloth, Buckram, Cotton
CCC-C-441 - Cloth, Corduroy, Cotton
DDD-L-20 - Label; for Clothing, Equipage and Tentage (General Use)
DDD-T-86 - Tape, Textile; Cotton, General Purpose (Unbleached, Bleached, or Dyed)
PPP-B-636 - Boxes, Shipping, Fiberboard
PPP-T-45 - Tape, Gummed, Paper, Reinforced and Plain, for Sealing and Securing

MILITARY

MIL-C-368 - Cloth, Satin, Rayon and Cloth, Twill, Rayon
MIL-B-371 - Braid, Textile, (Tubular)
MIL-B-3461 - Button, Insignia, Metal, Uniform and Cap
MIL-P-15064 - Pad, Shoulder and Sleeve-head
MIL-C-15065 - Coat Fronts
MIL-C-16290 - Cloth, Melton, Wool (Moth Proofed)
MIL-B-17757 - Box, Shipping, Fiberboard (Modular Sizes)
MIL-T-43548 - Thread, Polyester, Cotton-Covered and Rayon Covered
MIL-C-43718 - Cloth, Twill, Polyester, Polyester and Cotton, Polyester and Rayon

STANDARDS

FEDERAL

FED-STD-751 - Stitches, Seams, and Stitchings
FED-STD-191 - Textile Test Methods

MILITARY

MIL-STD-129 - Marking for Shipment and Storage
MIL-STD-1391 - Provisions for Evaluating Quality of Overcoats, Men's

(Copies of specifications, standards, drawings, and publications required by contractors in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

2.1.2 Other Government documents, drawings, and publications The following other Government documents, drawings, and publications form a part of this specification to the extent specified herein.

RULES AND REGULATIONS

U.S. POSTAL SERVICE MANUAL

Copies of the manual may be obtained from the Superintendant of Documents, U.S. Government Printing Office, Washington, D.C. 20402.)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

2.2 Other publications. The following documents form a part of this specification to the extent specified herein. The issues of documents which are indicated as DoD adopted shall be the issue listed in the current DoDISS and supplement thereto, if applicable.

NATIONAL MOTOR FREIGHT TRAFFIC ASSOCIATION, INC., AGENT

National Motor Freight Classification

(Application for copies should be addressed to American Trucking Associations, Attn: Traffic Department, 1616 P Street, N.W., Washington, D.C. 20036.)

UNIFORM CLASSIFICATION COMMITTEE, AGENT

Uniform Freight Classification

(Application for copies should be addressed to the Uniform Classification Committee, Room 1106, 222 South Riverside Plaza, Chicago, Illinois 60606.)

3. REQUIREMENTS

3.1 Guide sample. Samples, when furnished, are solely for guidance and information to the contractor (see 6.3). Variation from this specification may appear in the samples, in which case this specification shall govern.

3.2 First article. When specified (see 6.2), the contractor shall furnish sample unit(s) for first article inspection and approval (see 4.3).

3.3 Materials.

3.3.1 Basic material. The basic material for the overcoat shall be 22 ounce wool melton conforming to type II, class 4 of MIL-C-16290.

3.3.2 Cloth, rayon, lining. The rayon material for lining the overcoat shall conform to class 1 of MIL-C-368 and shall be dyed to match Black 3202.

3.3.3 Collar interlining. The material for the collar interlining shall be cotton, buckram, unbleached or white and shall conform to type I, class 2 of CCC-C-438, except that the test for shrinkage shall be in accordance with method 5580 of FED-STD-191 and the minimum stiffness requirement (inch-pounds) shall be 0.015 in the filling.

3.3.4 Hanger loop. The hanger loop for the overcoat shall be cotton tubular braid conforming to type III, class 1 of MIL-B-371. The braid shall be dyed black and show a minimum of good fastness to wet-dry cleaning and a Munsell value for crocking not lower than 8.5 when tested as specified in 4.4.1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

3.3.5 Front pockets. The material for the front pockets shall be cotton corduroy, conforming to type I, class 1 of CCC-C-441.

3.3.5.1 As an alternate, the material for the front pockets shall be a soft filled cotton flannel, having a smooth suede finish on one side. The color shall be natural or gray. The finished material shall conform to the following minimum requirements:

Weight (oz/sq yd)	6.0
Yarns per inch:	
Warp	44
Filling	40
Breaking strength (pounds):	
Warp	60
Filling	35

The use of sulfur dyes and dyes containing elementary sulfur or sulfur compounds capable of oxidation to sulfuric acid is prohibited. The dyed material shall show a minimum of good fastness to wet-dry cleaning and a Munsell Value for crocking not lower than 8.5 when tested as specified in 4.4.1.

*3.3.6 Inside pocket and reinforcement pieces. The material for the left inside breast pocket, buttonhole reinforcement on the right vent and pocket stays shall be twill cloth conforming to class 1 of MIL-C-43718. The shade Shall be natural or black. When a black shade is used, the requirements for perspiration and crocking shall not apply.

3.3.7 Coat front interlinings. The coat front interlinings shall conform to type XIV of MIL-C-15065. The basic interlining material shall be dyed black.

3.3.8 Shoulder and sleeve pads. The shoulder pads shall conform to type I, class 1 and the sleeve pads shall conform to type IV of MIL-P-15064.

3.3.9 Tapes.

3.3.9.1 Woven tape. The tape for staying the overcoat shall be cloth, cotton, preshrunk, conforming to type I, class 1 or 2 of DDD-T-86. Required widths shall be as follows:

1/2 inch for staying edges of lapels, fronts and bottom of facings
3/4 inch for staying bridle at breakline of lapel
1/4 inch for staying armholes, front neck gorge and pocket welts

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

*3.3.9.2 Cross-cut tape. The tape for staying the front shoulder, front armhole and neckline of back shall be dyed or undyed. The material for the tape shall conform to class 1 of MIL-C-43718. The tape shall be cut across the width of the cloth in strips 1/2 (± 1/16) inch wide. The raw edges of the tape shall be treated with a synthetic resin to prevent ravelling and shall be tested in accordance with 4.4.1.

3.3.10 Thread.

*3.3.10.1 Cotton thread. The cotton thread for seaming and stitching the overcoat shall be dyed shade Black AA, Cable No. 66043, and shall conform to type I of V-T-276 in the following types and sizes:

Use	Type	Ticket No.	Ply
Seaming and stitching	IC2	0	3
Tacking armholes and attaching sleeve head pads	IA1 or IA2	30	3
Button sewing:			
Hand	IA3 or IB3	12, 16	4
Machine	IA3 or IB3	20	4
Buttonholes and bartacks	IC2	A, B	3

*3.3.10.2 Polyester-covered thread The following polyester-covered threads may be utilized as alternates to the above specified cotton threads and, when used, shall conform to MIL-T-43548:

Use	Ply	Ticket No.
Seaming and stitching	2 or 3	40 or 50
Tacking	2 or 3	40
Button sewing:		
Hand	2 or 3	16
Machine	2 or 3	24
Bartacking and buttonholes	2 or 3	30

3.3.10.3 Basting thread. The thread for basting and tacking shall be a good commercial grade cotton, bleached or unbleached. A monofilament synthetic thread may be used for only those basting operations where the thread is required to be removed provided the garment is subsequently given a treatment, by a cleaning agent in which the synthetic thread is soluble. When this thread is used, any residue remaining on the garment after the drycleaning process shall be brushed off or removed.

Source: https://assist.dla.mil -- Downloaded: 202640-26T04:39Z
Check the source to verify that this is the current version before use.

3.3.10.4 Silk thread. The silk thread shall be dyed Black AA, Cable No. 66043, conforming to V-T-301 in the following types and sizes:

Use	Type	Class	Size designation	Ply
Machine stitching and felling	I	-	0	3
Hand felling	III	3	A, C	2

3.3.10.4.1 The following threads may be utilized as alternates to the silk threads specified above for the operations indicated:

a. For machine felling and blind felling - polyester thread conforming to type I, class 1, size A/3 or AA/2 of V-T-285 or a monofilament nylon thread of comparable type and size.

b. For hand felling - nylon thread conforming to type IV, size A/2 or C/2 of V-T-295..

*c. For padding lapels - nylon thread conforming to type III, size 00 of V-T-295.

3.3.10.5 Nylon thread. If an automatic machine which sews shank buttons imitating hand sewing is used, the thread shall be nylon waxed monocord, special No. 4, having a breaking strength of 11 pounds and a minimum length per pound of 3,250 yards and shall be tested for these requirements in accordance with test methods outlined in V-T-295.

3.3.10.6 Colorfastness of threads. The dyed threads shall show colorfastness to wet-dry cleaning and light equal to or better than the standard sample when tested as specified in V-T-276, V-T-285, V-T-295, V-T-301, or MIL-T-43548. When no standard sample is available, the dyed threads shall show good colorfastness to wet-dry cleaning and light when tested as specified in V-T-276, V-T-285, V-T-295, V-T-301, or MIL-T-43548.

3.3.11 Gimp. The gimp for reinforcing the buttonholes shall be thread, cotton gimp, buttonhole conforming to type I or II, size No. 8 of V-T-280. The gimp shall be dyed black.

3.3.11.1 Colorfastness. The dyed gimp shall show fastness to wet-dry cleaning equal to or better than the standard sample when tested as specified in V-T-280. When no standard sample is available, the dyed gimp shall show good fastness to wet-dry cleaning when tested as specified in V-T-280.

3.3.12 Buttons.

3.3.12.1 Metal buttons. The four buttons for the right front shall be regular shank; the four buttons for the left front, two for the lapels, and two for the half belt shall be short shank with depressed backs conforming to type I, style 4, class A, 40-line of MIL-B-3461.

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:39Z
Check the source to verify that this is the currentversion before use.

3.3.12.2 Plastic buttons. The buttons shall conform to type II, class D, style 20 and 21, 24-line (back vent, sword slit flap) and 45-line (inside anchor button) of V-B-871. The buttons shall be shade Black BT, Cable No. 62001.

3.3.13 Labels

*3.3.13.1 Combination label. Each overcoat shall have a combination identification and instruction label conforming to type VI, class 15 of DDD-L-20. The label shall show colorfastness to dry cleaning and bear the following inscription:

OVERCOAT, MAN'S (OFFICER TYPE)
FIBER CONTENT: Wool (100%)
CONTRACT NO: DLA 100-00-0-0000 (Example)
NAME OF CONTRACTOR:

DRY CLEAN ONLY

3.3.13.2 Size label Each coat shall have a size label conforming to type VI, class 2 of DDD-L-20. The label shall show colorfastness to dry cleaning and bear the following inscription:

SIZE: 38R (Example)
STOCK NO: 8405-00-000-0000 (Example)

The length (short, regular, long, or extra long) may be abbreviated as S, R, L, or XL.

3.4 Design. The overcoat shall be double breasted, full length, fully lined, with a convertible collar and a two piece half belt on back fastened with two 40-line Navy eagle buttons; five 40-line Navy eagle buttons shall be on each front. The overcoat shall have a two piece set in sleeve; through opening lower welt pockets; inside left breast welt pocket; a sword slit on the left side, and a two piece back with a center vent.

3.4.1 Figure. Figure 1 is furnished for information purposes only. When inconsistencies exist between the written specification and the figures, the written specification shall govern.

3.5 Patterns. Standard patterns to be used for cutting the contractor's working patterns will be furnished by the Government (see 6.3). The working patterns shall be identical to the standard patterns and shall not be altered in any way. Unless otherwise specified in Table I, seam allowances shall be as follows:

Joining center back and side seams - 5/8 inch
Joining underarm darts, shoulders, armholes, and sleeves - 3/8 inch
Joining facings to fronts - 1/8 to 3/16 inch
Joining facings to lining - 3/8 inch
Joining sides of lining - 3/4 inch
Joining center back and sleeves of lining - 3/8 inch

Source: https://assist.dla.mil -- Downloaded: 202640-26T04:39Z
Check the source to verify that this is the current version before use.

3.5.1 Pattern parts. The component parts for the overcoat shall be cut from the materials as specified, and in accordance with the following pattern parts:

Material	Nomenclature of pattern parts	Cut parts
Cloth, Melton, Wool	Front	2
	Back	2
	Front facing	2
	Topsleeve	2
	Undersleeve	2
	Topcollar	1
	Topcollar stand	1
	Undercollar, front part	2
	Undercollar, back part	2
	Belt (back)	2
	Welt, pocket	2
	Facing, pocket	4
	Flap, sword slit	1
	Facing, sword slit	1
Cloth, Rayon, Lining	Front	2
	Back	2
	Topsleeve	2
	Undersleeve	2
	Wide inside breast pocket (facing and piping)	1
	Narrow inside breast pocket (facing and piping)	1
	Flap, sword slit	1
	Belt (back)	2
Cloth, Twill	Vent piece (buttonhole) reinforcement	1
	Inside breast pocket (piping side)	1
	Inside breast pocket	1
Cloth, Corduroy, Cotton or Cloth, Flannel, Cotton	Pocket - Top ply	2
	Pocket - Bottom ply	2
Collar, Interlining	Undercollar interlining (front part)	2
	Undercollar interlining (back part)	2
Template	Lapel shaper	
	Undercollar shaper	
	Undercollar stand marker	
	Sword slit flap marker	

NOTE: Patterns are not furnished for shoulder loops (see operation 7).

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:39Z
Check the source to verify that this is the current version before use.

3.6 Construction.

3.6.1 Stitch, seam, and stitching types. Stitch, seam, and stitching types specified in Table I shall conform to FED-STD-751. Wherever two or more methods for seam or stitch types are given for the same part of the operation, any one of them may be used. Unless otherwise specified, edgestitching shall be 1/2 inch from the edge.

3.6.2 Thread breaks and ends of seams. Ends of all seams and stitchings when not caught in other seams or stitchings shall be backtacked not less than 3/8 inch, unless otherwise specified. The ends of a continuous line of stitching shall be overlapped not less than 1/2 inch. Thread breaks shall be secured by stitching back of the break not less than 1/2 inch. Skipped stitches and thread breaks may be repaired by using 301 stitch type.

3.6.3 Stitches per inch. The minimum and maximum number of stitches per inch shall be as specified in Table I.

3.7 Manufacturing operations requirements. The overcoats shall be manufactured in accordance with the operation requirements specified in Table I. The contractor is not required to follow the exact sequence of operations listed provided that the finished overcoats are identical to that produced by following the sequence of operations as listed in Table I.

3.7.1 Shade and size marking. The component parts shall be marked or ticketed to insure a uniform shade and size throughout the overcoat. Any method of shade and size marking may be used except:

1. Corrosive metal fastening devices. No metal device or sew-on type marking shall be used on the rayon lining.

2. Adhesive type tickets which discolor or adhere to the material upon removal of the tickets.

NOTE: The use of ink pad numbering machine, rubber stamp or pencil is allowed, provided the numbering does not show on the outside of the overcoat and wherever possible, is covered by the seam allowance.

3.7.2 All pressing operations referenced in Table I shall be performed by using a heated pressing iron and steam pressing machine.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
1.	Cutting a. Cut the overcoats in strict accordance with patterns furnished which show size, shape, directional lines, and notches for the proper assembly of all parts. Perforated and plain paper markers are prohibited on the basic fabric. Felt back paper markers are permitted. b. Cut the component woolen parts of the overcoat from one piece of material except the undercollar parts, pocket facings, sword slit flap, sword slit facing and shoulder loops which may be cut from ends. When so cut, these parts shall approximate the shade of the overcoat. The patterns shall be so laid that all component parts are in the downward direction of nap. Undercollar parts shall match each other when assembled. c. Cut the component lining parts of the overcoat from one piece of material except the sword slit flaps, b[illegible] linings, and sleeve linings which may be cut from ends. When so cut, these parts shall approximate the shade of the main assembly. When pairs of sleeve linings are cut from ends, all parts shall match each other. d. Cut all pocket stays 2-1/2 inches wide in the warp direction. The length of the individual pocket stays shall be 1-1/2 inches longer than the nominal finished welt length of outer pockets and finished pocket opening of inside pocket.					

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
2.	Replacement of defective components During the spreading, cutting, and manufacturing process, components having material defects or damages that are classified as defects in MIL-STD-1391 shall be removed from production and replaced with non-defective and properly matched components.					
3.	Shade marking All component parts of the basic material and lining including the undercollar parts and sleeve linings whether cut from ends or in the main lay shall be marked or ticketed to assure a uniform shade and size throughout the overcoat. Other parts cut from ends need not be shade marked (see 3.7.1).					
4.	Make interlining for coat fronts The coat front interlinings shall conform to the requirements of 3.3.7.					
5.	Make sword slit flap a. Stitch 3/16 to 1/4 inch from raw edge the sword slit flap lining to sword slit flap and trim where necessary. Turn to finished position, working out seamed edges and point, and edgestitch 1/16 to 1/8 inch from folded edge.	301	SSe-2	10-14	0/3	0/3
	b. Press flap smooth and flat.					
	c. Stitch a buttonhole in the sword slit flap located as indicated in operation 41.f.					
	d. The finished sword slit flap shall conform to the sword slit flap marker by ± 1/8 inch.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:36:37Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
6.	Make half-belt sections					
	a. Belt on back shall be in two sections, a left and right back. Each section shall be constructed from one ply of basic fabric lined with rayon.					
	b. Stitch 5/16 to 3/8 inch from raw edge the basic fabric to lining along the two sides and pointed end. Trim point, turn to finished position working out seam edges and point, and edgestitch 1/2 inch from folded edge.	301	SSae-2	10-14	0/3	0/3
	c. Press each half-belt section smooth and flat prior to buttonhole operation.					
	d. Stitch two buttonholes in the left section of the half-belt located as indicated in operation 41.d.					
	e. Finished belt for all sizes and lengths shall measure 2-1/2 (± 1/8) inches wide except at pointed end.					
7.	Make shoulder loops					
	a. The finished loop shall measure 5/16 to 3/8 inch wide.					
	b. Make loops by folding strip of basic material to center with edges abutting and double stitch 3/16 to 1/4 inch gauge with a covering stitch on the underside.	406	EFh-1	6-8	0/3	0/3

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T07:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
8.	Make pocket welts					
	a. Position 1/4 inch woven tape approximately 1/8 inch off center, on underply of welt and stitch tape to welt 1/16 to 1/8 inch from either edge of tape. The tape stitching shall not show on outer ply of welt.	301	SSaa-1	10-14	0/3	0/3
	b. Fold welt in half lengthwise and seam both ends with a 1/4 to 5/16 inch seam.	301	SSae-2(a)	10-14	0/3	0/3
	c. Trim corners, turn to finished position and work out seamed ends and points of welt.					
	d. Edgestitch 1/2 inch from the seamed ends and fold of welt.	301	SSae-2(b) and OSf-1	10-14	0/3	0/3
	e. Press welts, holding folded edge straight.					
	f. Slit underply of welt not more than 1/4 inch from joining seams at end of welt. Mark width of welt 1-1/2 inches from fold line of top ply.					
	NOTE: The edgestitching at ends of welt shall be ripped in order to slit and mark outer ply of welt. The slit at the ends of the welt shall be deep enough to permit marking and accommodate the seam allowance of top ply of welt.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
9.	Set and stitch pocket welts and inside hanging pockets					
	a. Place face side of the top ply of pocketing along the raw edge of welt underply and stitch 3/8 inch from edge.	301	SSa-1	10-14	0/3	0/3
	*b. Position raw edge of one pocket facing 7/8 inch above upper raw edge of bottom ply of pocketing. Fold the extended portion of facing over the upper raw edge of bottom ply of pocketing and stitch 3/16 to 1/4 inch from folded edge. Stitch the opposite edge of the facing to the bottom pocketing 1/16 to 1/8 inch from the raw edge. The face side of the bottom pocketing shall face toward the outside of pocketing.	301	SSbc-1 and LSbj-1	10-14	0/3	0/3
	c. Position the welt on the outside of the fronts with the folded edge towards the front of the fronts and the marked portion of welt in line with pattern marks indicated on fronts.					
	d. Stitch 1/4 to 5/16 inch from raw edge top ply of welt to front along marked width simultaneously securing a pocket stay on the underside. Clip ends of welt seam allowance.	301	LSbj-1	10-14	0/3	0/3
	e. Position front edge of the other pocket facing approximately 1/2 inch from and parallel to welt joining seam and stitch 1/8 to 3/16 inch from raw edge catching the pocket stay.	301	LSbj-1	10-14	0/3	0/3
	f. Slash forepart midway between the two parallel rows of stitching, tongue notching ends of opening.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
9.	Set and stitch pocket welts and inside hanging pockets (cont'd)					
	NOTE: Care shall be taken not to make tongue notches too deep, thereby preventing cut from being visible after pocket welts are completed.					
	f. Turn welt and pocket facing to the under side and press or spread seams open. Form and stitch a 1/4 to 3/8 inch piping with the stitching through the opened pocket facing (piping) seam.	301	Similar to SSaf-2	10-14	0/3	0/3
	h. Stitch through pressed or spread seam joining top ply of welt to forepart, simultaneously catching the under ply of welt and stay piece.	301	SSaf-2(b)	10-14	0/3	0/3
10.	Complete welts and close hanging pockets					
	a. Set pocketing and welt to finished position. The material shall lie flat and smooth to facilitate stitching and tacking ends of welt to foreparts.					
	b. Topstitch ends of welt with two rows of stitching through forepart, pocket facings and stay; the first row 1/16 inch gauge from the edge and the second row superimposed over welt stitching; extending diagonally at the corners between the double stitching.	301	LSa-2	10-14	0/3	0/3
	c. Close free edges of pocketing catching the ends of the pocket facing. The corduroy or flannel face shall finish on the inside of pockets.	301	SSa-1	10-14	0/3	0/3
	d. Press pockets smooth.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
10.	Complete welts and close hanging pockets (cont'd)					
	e. Finished welt shall measure 1-1/2 (± 1/8) inches wide by 7-1/2 (± 1/4) inches long for all sizes and lengths.					
11.	Prepare fronts					
	a. Stitch, 1/4 inch from raw edge, the sword slit flap to the front edge of underarm dart seam in left front as indicated by notches.	301	LSq-2(a)	10-14	0/3	0/3
	b. Stitch, 1/4 inch from raw edge, the sword slit facing to back edge of underarm dart seam opposite the sword slit flap.	301	LSq-2(a)	10-14	0/3	0/3
	c. Stitch, 3/8 inch from raw edge, the underarm dart seam in each front the length as indicated by patterns leaving the prestitched sword slit flap and facing open as indicated by notches on pattern.	301	SSa-1	10-14	0/3	0/3
	d. Press underarm dart seams open and flat.					
	e. Turn and raisestitch, 1/16 to 1/8 inch from folded edge, sword slit flap through front and seam allowance.	301	LSq-2(b)	10-14	0/3	0/3
	f. Turn the seam against the sword slit facing and raisestitch, 1/16 to 1/8 inch from folded edge.	301	LSq-2(b)	10/14	0/3	0/3
	g. Turn the sword slit facing to finished position and press.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
11.	Prepare fronts (cont'd)					
	h. The finished facing shall extend not less than 3/8 inch above and below sword slit flap.					
	i. Stitch a 3/16 to 1/4 inch bartack or tack across each end of the sword slit opening. The bartack or tack shall be centered across the underarm dart seam on the outside.	Bartack or 301 or Hand		20-22 10-14 10-12 per tack	B 0/3 B	B 0/3
	j. Position a 3/8 to 1/2 inch bartack, or tack the ends of the shoulder loops to each shoulder of coat front, 1/16 to 1/8 inch from the raw edge of loop.	Bartack or 301		21-28 10-14 per tack	B 0/3	B 0/3
	k. Measurements for shoulder loops shall be as follows Shoulder loop opening on each side shall measure 1 (± 1/8) inch for the loop next to the neck, and 1-3/8 (± 1/8) inches for the loop next to the armhole. The space between the shoulder seam and the top end of shoulder loops shall measure 1/8 to 1/4 inch for the loop next to the neck and 1/4 to 1/2 inch for the loop next to the armhole. The space between the shoulder loops shall be approximately 2-1/2 inches for all sizes.					
	l. Stitch a 1/4 inch woven tape on armhole to extend 1/2 to 3/4 inch from underarm dart to 3-1/2 to 4 inches above armhole notch on front.	301	SSaa-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
11.	Prepare front (cont'd)					
	m. Stitch a 1/2 inch wide cross-cut tape on armhole to extend 1/2 to 3/4 inch from shoulder seam to a point overlapping the 1/4 inch wide woven tape on lower armhole of front by 3/8 to 1/2 inch.	301	SSaa-1	10-14	0/3	0/3
	n. Sew a 1/4 inch woven tape from neck-shoulder outlet to lapel notch (gorge).	301	SSaa-1	10-14	0/3	0/3
	o. Stitch a 1/2 inch wide cross-cut tape on fronts along shoulder seams 3/4 to 1 inch from gorge to 1/2 to 3/4 inch from armhole.	301	SSaa-1	10-14	0/3	0/3
	p. Press tapes with a heated pressing iron.					
	q. A tolerance of ± 1/4 inch shall be permitted for positioning of all stay tapes.					
*12.	Baste front interlinings to overcoat and baste bridle stay tape					
	a. Position left and right fronts on the respective coat front interlinings with the interlinings extending the full length of the overcoat fronts and beyond the armholes and shoulders. Baste the fronts to the interlining along the vertical center of fronts approximately 1 1/2 inches above the bottom edge of front with the hanging pocket turned back in order not to be caught in the basting.	301	Hopper		Commercial	

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-02-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
*12.	Baste front interlinings to overcoat and baste bridle stay tape (cont'd)					
	b. At this point, the front of the inside hanging pocket may be tacked to front canvas interlining with two rows of permanent basting stitches. Or, pocket may be blindstitched as prescribed in operation 12.h.	301	SSbd-2	4-8	0/3 or Comm'l	0/3 or Comm'l
	c. Mark the breakline and baste the fronts and interlining together at the breakline of the lapel approximately 3 inches down from the shoulder edge of fronts and continuing to approximately 1 1/2 inches from the armhole allowing room for setting shoulder pad. Baste along the front of the armhole and continue basting along back edge of interlining.					
	d. Baste front to the interlining along breakline of the lapel, starting approximately 3 inches down from top edge and baste to 1 inch from the front edge. Continue basting to bottom edge of front.					
	e. Position a 3/4 inch wide woven tape (bridle stay) on the interlining side of the fronts along the breakline of lapel with the edge of the tape closest to the breakline 1/8 inch behind the breakline. The bridle stay shall extend sufficiently above the gorge seam to permit catching the stay in the gorge seam tacking, and to within 1 1/2 inches from bottom of lapel breakline.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
*12.	Baste front interlinings to overcoat and baste bridle stay tape (cont'd)					
	f. Baste the bridle stay tape to the lapel evenly and smoothly along its vertical center, with no tension or slack for a distance of approximately 1 1/2 to 2 inches from the gorge line. Then, holding the bridle stay taut and drawing up material, work in proper chest fullness within an area of 3 3/4 to 4 3/4 inches. Proper fullness is achieved when interlining and tape are stamp marked with 1/4 to 1/2 inch between the marks (1/4 inch for small sizes; 1/2 inch for size 42 and up) and fullness is evenly distributed above the marks. The balance of the bridle stay tape shall be basted without tautness or fullness.					
	g. Trim excess canvas along shoulders allowing 1/4 inch of interlining to finish beyond front shoulder point to 1/2 inch from shoulder point at armhole. Continue trimming the interlining along armhole allowing 1/2 inch interlining to finish beyond the shoulder point at armhole and tapering to 3/8 inch at lower curved edge of armhole. Trim canvas along gorge line allowing a 1/8 inch extension of interlining to permit interlining and edge of gorge to finish even when lapel is turned, and to preclude fullness where gorge line meets breakline.					
	h. Tack front edges of inside hanging pocket to front canvas interlining with two rows of blindstitching if tacking was not performed in operation 12.b.	Hand or 103	 SSm-1	2-4 4-8	0/3 or Comm'l 0/3 or Comm'l	

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
*12.	Fit and baste front interlinings to overcoat (cont'd)					
	j. Trim excess canvas at shoulders, armholes, and collar gorge.					
13.	Pad lapels					
	a. Pad each lapel of overcoat to canvas interlining with not less than 7 equally spaced rows of blind-stitching. Fullness shall be equally distributed between rows of stitching in order to roll lapel.	103 or 306	SSm-7 SSm-7	4-8 4-8	0/3 0/3	0/3
	b. Blindstitch both edges of bridle stay.	103 or 306	SSm-2	4-8	0/3 0/3	0/3
14.	Join center back and make vent					
	a. The back shall consist of two pieces with a center back vent.					
	b. Stitch 1/8 inch from raw edge a stay (button-hole reinforcement) piece on the inside along fold line of left vent. Stitching shall not be exposed beyond fold line of left vent.	301	LSbj-1	10-14	0/3	0/3
	c. Join center back seam, face to face, and continue the stitching across top of vent outlet to within 3/4 to 1 inch from raw edge of extension; simultaneously catching top edge of reinforcement piece on the underside. Slash seam allowance of right back diagonally at top of vent starting from the corner at the top of vent closest to center back seam toward the stitches at the bottom of center back seam.	301 or 401	SSa-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
14.	Join center back and make vent (cont'd)					
	d. Sew two buttonholes in the left vent turn under portion and stay piece as indicated in operation 41.e.					
	e. Fold left vent against the underside of back in line with the center back seam. Baste along fold line to approximately 1-1/2 to 2 inches above bottom edge of overcoat.	Hand or Machine				
	f. Press center back seam open and flat with a heated pressing iron; holding seam at waistline short and the vent in position.					
	g. Blindstitch inner edge of left vent to back.	Hand or 103 or 306	 EF1-1 EF1-1	4-8 4-8 4-8	0/3 0/3 0/3	 0/3
	h. Sew a 1/2 inch wide cross-cut tape strip to neckline of back. The ends of the tape shall clear the shoulder seam allowance with the top edge of the tape 1/8 to 3/8 inch from back neck edge.	301	SSaa-1	10-14	0/3	0/3
15.	Join side seams					
	a. Join sides of back and fronts, face to face, inserting the respective belt half between the plies, with the upper edge of the belt corresponding to the upper pattern notch. Buttonhole section of the half belt shall finish on the left back. (See Figure 1).	301 or 401	SSa-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
15.	Join side seams (cont'd) NOTE: The location of the belt on the finished overcoats when measured along the side seam from the armhole seam to the top of the belt shall be as follows: Short - 6 Long - 7-1/4 Regular- 6-5/8 Extra Long - 8 A ± 3/8 inch tolerance is permitted on the above measurements, except that on the same overcoat, the difference between the two measurements shall not be greater than 1/4 inch.					
	b. Sew a 1/4 inch wide tape at armholes of back approximately 1/2 inch from underarm dart seam to 1/4 inch below shoulder seam; holding tape taut to draw up material and working in proper fullness.	301	SSaa-1	10-14	0/3	0/3
	c. Press stays and side seams open and flat with a heated pressing iron; holding seam short at waistline.					
16.	Press fronts Press front edge, lapel and chest of right and left forepart individually on a suitably shaped pressing block with a steam pressing machine to conform to the shape of the body.					
17.	Shape fronts a. Mark and shape lapels in accordance with lapel shaper.					

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
17.	Shape fronts (cont'd) b. Shape front and bottom edges of overcoat, matching vent lengths. c. Trim interlining 1/4 to 3/8 inch along lapel bottom and front edges. d. Trim bottom of right front, taking off 1/4 inch at front edge, tapering to nothing for a distance of 5 (±1/2) inches, making the right front edge 1/4 inch shorter than the left front edge. e. The canvas interlining at the bottom may be cut diagonally so that the bottom edge is not caught in the tape stitching.					
18.	Mark bottom turn up a. Mark bottom turn up 1-1/4 (± 1/8) inches. b. Trim left vent turn under even with hem fold line from the inner edge to approximately 3/8 inch from fold line of vent, eliminating bulk. c. Bind bottom edge of overcoat with a continuous bias cut strip of rayon lining cloth 5/8 to 7/8 inch wide.	301	BSb-1	10-14	0/3	0/3
19.	Attach front facing to lining a. Stitch each forepart lining underarm dart in accordance with marks on pattern.	301	SSa-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z*
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
19.	Attach front facing to lining (cont'd)					
	b. Join inner edge of front facing to front edge of lining, inserting size label between the plies. The size label shall be positioned approximately 12 inches above bottom of coat on the left front. Terminate the seam 7/8 (± 1/8) inch above the bottom of facing lining assembly to facilitate hem felling operation. There shall be no fullness in the facing of the finished overcoat.	301	SSa-1	10-14	0/3	0/3
	c. Press seam joining front body lining to facing and underarm dart with a heated pressing iron, placing the raw edges toward the side seam. Press open bottom of the seam.					
20.	Make inside vertical breast pocket and attach label					
	a. Mark position for a 3/16 to 1/4 inch wide double piped inside vertical breast pocket on left front facing as indicated by marks on pattern with the pocket facings and pipings made of rayon lining.					
	b. Position each facing piece to its respective pocket ply with the top and outer edges even. Turn in inner edge and stitch 1/16 inch along the fold line Selvage edge need not be turned under. The bottom edge of the combination label shall be centered, inserted and caught under the narrow facing piece. Printing of label shall not be obscured. Stitch the remaining three sides of the label.	301 and 301	LSd-1 LSbj-1	10-14 10-14	0/3 0/3	0/3 0/3
	c. As an alternate, center and stitch the four sides of the combination label with the bottom edge lapping the seam joining the narrow facing to the pocket.	301	LSbj-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
20.	Make inside vertical breast pocket and attach label (cont'd)					
	d. Seam 1/4 to 5/16 inch gauge, each piping portion (lining and pocketing) to left front facing as indicated by marks on pattern simultaneously catching a pocket stay on the underside.	301		10-14	0/3	0/3
	e. Cut opening of pocket through facing and stay piece midway between the rows of stitching and tongue notch ends of the opening. Care shall be taken not to make tongue notches too deep, thereby preventing cut from being visible after double piped edges are completed.					
	f. Turn pocket through opening to the inside, forming a double piped opening. Topstitch through seam allowance joining each pocket ply and stay piece.	301	SSaf-2(b) (shows finished seam)	10-14	0/3	0/3
	g. Draw piped edges together on the underside; turn in tongue notched ends and tack across the width of opening, securing piped ends.	301	SSa-1	10-14	0/3	0/3
	h. Turn down wider ply of pocketing and stitch across the bottom of facings approximately 3/4 to 1 inch from tacked tongue notch end of opening and around raw edges of pockets.	301	SSa-1	10-14	0/3	0/3
	i. The finished inside pocket shall measure as follows: Length of opening - 6 to 6-3/8 inches Depth from bottom of opening - 3-1/2 to 4 inches					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
20.	Make inside vertical breast pocket and attach label (cont'd)					
	NOTE: As an alternate a double piped pocket machine which stitches, cuts, and turns piped edges in one operation may be used. When this machine is used, the welt piece may be trimmed to permit insertion into the machine. The bottom piping piece shall be raise stitched 1/16 inch through lining, coat facing and piping piece. The top piping piece shall be raise stitched through all plies, closing top of the pocket opening. Ends of pocket opening shall be securely tacked.	101 and 301		10-14 10-14	0/3 0/3	 0/3
21.	Join back and sides of lining					
	a. Join back lining pieces at center back, face to face.	301 or 401	SSa-1	10-14	0/3	0/3
	b. Join side seams of fronts and back lining pieces, face to face.	301 or 401	SSa-1	10-14	0/3	0/3
	c. Press side seams to one side with a heated pressing iron, placing the raw edge of joining seams toward center back.					
22.	Match, fit and baste facings					
	Position the right and left facing-lining assemblies on the outside of their respective fronts, and baste along the lapel breakline, front and bottoms, putting in proper lapel and breast fullness. The facings shall be held slightly taut at bottom of fronts.	Hand or Machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
23.	Join facings and fronts with tape					
	a. Join the facings and fronts together 3/16 inch from front and top edges of lapel and front and bottom edges of overcoat, with a 1/2 inch wide tape positioned on the interlining side of fronts 1/8 to 3/16 inch from the edges and caught in the stitching. The tape shall extend from the lapel notch to the mark for the bottom turnup and continue along the bottom not less than 3 inches beyond back edge of facings. Tape on the lapel edge shall be sewn natural and smooth without material take up and the tape shall be held taut from the bottom of the lapel breakline to the bottom edge. Stitching along bottom of overcoat shall not be exposed when worn.	301	SSab-1	10-14	0/3	0/3
	b. Blindstitch back edge of tape to canvas interlining on fronts and lapels.	Hand or 103	SSm-1	2-4 4-8	0/3 0/3	
	c. Press edges of lapels and fronts flat and smooth; remove basting and press edge seams open and flat. Trim lower front corner of facings and corners of lapels, and notch lapels. Turn the facing-lining assembly to the inside, working out corners and lapels.					
24.	Baste fronts, facings, and bottom hem					
	a. Baste edges, working seams to the edge, and baste across and down lapels and fronts and across bottom of facings and bottom of overcoat, matching vent lengths.	Hand or Machine				
	b. Baste facings (second facing basting) approximately 1 1/4 inches from top and front edges of lapels and down fronts to back edge of facings, rolling lower front inward.	Hand or Machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
24.	Baste fronts, facings, and bottom hem (cont'd)					
	c. Baste diagonally from lapel breakline to the corner of lapel, placing proper fullness in facing to allow lapel to roll.	Hand or Machine				
	d. Baste along breakline of lapel allowing fullness to permit lapel to roll.	Hand or Machine				
	e. Baste facing close to the inner edge, properly distributing fullness of facing within the chest area and holding lower corner of overcoat rolled in such a manner as to cause lower front edge of foreparts to roll inward. The facing-lining seam shall be turned toward the side seams. Continue basting along the facing-lining seam toward the shoulder.	Hand or Machine				
25.	Tack facings to interlinings					
	a. Tack the back edge of left facing to the canvas interlining with one row of blindstitching from not more than 2-1/2 inches from shoulder seam to not more than 2 inches above pocket opening. Continue the tacking from not more than 2 inches from the lower edge of pocket to within 2 inches above bottom of overcoat.	Hand or 103	SSm-1	2-4 4-8	0/3 0/3 or comm'l	
	b. Tack the back edge of right facing to the canvas interlining with one row of blindstitching from not more than 2-1/2 inches from shoulder seam to within 2 inches above bottom of overcoat.	Hand or 103	SSm-1	2-4 4-8	0/3 0/3 or comm'l	

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
26.	Fit and baste body lining to overcoat					
	a. Baste lining fronts; commencing from the inner edge of facing approximately 5 inches above raw edge of overcoat, across bottom, up side seam (seam on seam) to approximately 4 inches below pit of armhole, then diagonally upward forming a front shoulder dart pleat, 8 (± 1/2) inches in length and 2 (± 1/4) inches from inner edge of facing with the fold facing toward the armhole.	Hand or Machine				
	b. Notch, fold, and baste left vent lining extension approximately 1-3/4 inches from folded edge of left vent facing. Length of basting shall extend to approximately 4 to 5 inches above bottom of raw edge of overcoat.	Hand or Machine				
	c. Baste lining back; pick up basting at pit of armhole at side seam; diagonally upward to center back neck edge; taking in excess material and forming a back pleat with the fold against the left back.	Hand or Machine				
	d. Notch right back lining 2-1/2 (± 1/4) inches above top of right vent on the underside of pleat, approximately 1/4 inch from fold of pleat.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
26.	Fit and baste body lining to overcoat (cont'd)					
	e. Position unstitched portion of right vent wool extension on fold of left vent lining. Baste and fold right back lining diagonally down from notched pleat to top of vent; fold lining and continue basting along raw edge of right vent with the fold of the lining even with the edge of the vent. Length of basting shall extend approximately 4 to 5 inches above bottom edge of overcoat.	Hand or Machine				
	f. Slash lining in line with pocket and sword slit opening. The finished slash opening for the pockets shall measure not less than 6 nor more than 7 inches					
	g. Fit and insert lower edge of rayon lining under top raw edge of hem. Baste along top of hem forming a bellows pleat of not less than 3/4 inch. Fold of bellows shall overlap raw edge of hem by 1/4 to 1/2 inch.	Hand or Machine				
	h. Trim away excess lining extending beyond the interlining of armholes, shoulders, and neck edges of fronts and back.					
27.	Join shoulder seam					
	a. Join shoulder seams of overcoat smooth and without distortion; working in proper fullness on back.	301	SSa-1	10-14	0/3	0/3
	b. Press shoulder seams open and flat with a steam heated pressing iron. Seam shall finish smooth and flat and shall curve slightly toward front.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
27.	Join shoulder seam (cont'd) c. Position shoulder interlining and lining; baste upper part (neck end) of each shoulder on outside and turn coat to the inside. Turn under edges of back lining at shoulders and baste upper part of lining, continuing the basting across neck at back.					
28.	Make undercollar a. The collar shall consist of a one-piece topcollar with a stand and a four-piece undercollar. In addition, the collar shall be interlined with a collar canvas (attached to undercollar).					
	b. Join 1/4 to 5/16 inch from edge, the undercollar center back seam and the seams joining center and end sections together.	301	SSa-1	10-14	0/3	0/3
	c. Press seams open and flat with a heated pressing iron.					
	d. Stitch 1/4 inch from edge, the undercollar interlining canvas center back seam and seam joining the center and end sections with the raw edges lapped over each other.	301	LSa-1	10-14	0/3	0/3
	e. Mark breakline of undercollar in accordance with undercollar stand marker for proper size to ensure correct size.					
	f. Join undercollar interlining canvas to undercollar at breakline 1-1/4 (± 1/8) inches wide at center of undercollar and tapering at each end.	301	SSv-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
28.	Make undercollar (cont'd)					
	g. Pad area between breakline stitching and the outer edge of undercollar with not less than 4 equally spaced rows of blindstitching and not less than 2 equally spaced rows of blindstitching between breakline and neck edge of undercollar.	Hand or 103	SSm-6	2-4 4-8	0/3 0/3	
	h. Mark and shape the undercollar with undercollar shaper and trim the canvas interlining and undercollar edges even when necessary. Trim interlining not more than 3/16 inch from lower edge of undercollar.					
29.	Make topcollar					
	a. Join 5/16 inch from edge topcollar to topcollar stand, face to face.	301	SSa-1	10-14	0/3	0/3
	b. Press seam open and flat.					
30.	Assemble collar					
	a. Position center of topcollar to center seam of undercollar. Stitch collarstand seam allowance through interlining and undercollar with the seam line 3/8 to 5/8 inch below undercollar breakline. The row of stitching shall terminate approximately 1/4 inch from the front of seam joining center and end sections of undercollar.	301	LSa-1	10-14	0/3	0/3
	b. Baste topcollar to undercollar along breakline and approximately 1 inch from outer edge putting in proper fullness.	Hand or Machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
29.	Assemble collar (cont'd)					
	c. Baste below breakline of collar.	Hand or Machine				
	d. Trim, turn, and baste side and top edges of top-collar over interlining between undercollar and interlining.	Hand or Machine				
	e. Fell top and side edges of topcollar to finished undercollar by hand.	Hand		8-10	C (silk)	
	OR					
	f. As an alternate, topcollar may be machine-felled. The stitching shall enclose the raw edges of the undercollar.	306		6-10	O (silk)	O(silk)
	OR					
	g. Insert 1/2 to 3/4 inch bias binding (made from the required body lining fabric) between the undercollar and interlining and stitch the 3 plies with a zig-zag or E stitch machine. Bias binding will extend approximately 1/4 inch from outer edge of collar.	304 or 306		6-10	O (silk)	O(silk)
	h. Stitch undercollar to topcollar using a 3/16 inch knife attachment, matching notches and distributing fullness. The interlining edge shall be used as a guide for the finished stitch line and the shape of collar.	301	SSa-1	10-14	0/3	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
29.	Assemble collar (cont'd) i. Turn collar; force out edges and baste collar edge with at least 2 rows of stitching, distributing the collar fullness evenly and rolling the joining seam to underside. The first row shall be 1/4 inch from edge. Place an additional row of basting along the outside edge of collar. NOTE: The rayon ribbon will not be exposed at the edge of collar. j. Crease collar at breakline and press with a heated pressing iron on a suitable pressing buck. Center area of creaseline shall be straight for a distance of 3 to 4 inches.	Hand or Machine			comm'l	
31.	Set collar a. Trim neck edge of topcollar leaving proper seam allowance.					
	b. Seam topcollar to front facings at gorge 5/16 inch from edge to a point not less than 1 inch back of lapel breakline; notch seam allowance of gorge facing at end of stitching.	301	SSa-1	10-14	0/3	0/3
	c. Spread open the seam joining topcollar/collarstand assembly to the facings, and tack gorge seam allowance of the topcollar to the fronts at the gorge from lapel notch to the end of the seam, catching the canvas interlining and end of bridle stay tape to collar seam. Tack stitches shall be close to gorge seam.	Hand or 301	 SSa-1	4-8 10-14	0/3 0/3	 0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
31.	Set collar (cont'd)					
	d. Baste back neck lining to back at neck from facing to facing.	Hand or Machine				
	e. Lap the lower edge of the undercollar 5/8 inch over the overcoat neck from lapel notch to lapel notch. Baste under collar to overcoat putting proper fullness over shoulders. Centerback seam of undercollar shall align with the centerback seam of the overcoat.	Hand or Machine				
	f. Tack neck outlet and lining across back to undercollar interlining with a row of blindstitching.	Hand or 103	 SSm-1	2-4 4-8	0/3 0/3	
	g. Stitch ends of a black hanger braid centered at the back of neck to all plies of material with two rows of stitching 3/8 to 1/2 inch from the edge of neck and the ends even with neck edge of back.	301	SSa-2	10-14	0/3	0/3
	h. Finished hanger at neck seam line shall measure 2 (± 1/4) inches between inner edges.					
	i. Turn under edge of topcollar and baste topcollar to neck through all plies.	Hand or Machine				
	j. Finished collar shall measure 3-1/2 (± 1/8) inches wide from breakline at center back to outer edge.					

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
32.	Stitch edges of collar, lapels and fronts a. Edgestitch 1/2 inch from folded edge along edge of collar, lapels and fronts and across bottom to back edge of facings. The stitching at the lapels and collar notches shall be at a right angle across the lapels to notch and concealed in the gorge seam from notch to required width. b. Press edge of collar, lapels and fronts on edge pressing machine without stretching. c. Edges may be pressed prior to edge stitching.	301	SSae-2(b) (shows finished seam)	10-14	0/3	0/3
33.	Make wool sleeves a. Join the forearm of sleeves, face to face, distributing fullness between the notches. b. Press forearm seam open and flat with a steam heated pressing iron, maintaining proper fullness. c. Mark and baste the turn up of sleeve bottom as indicated by pattern notches. Press bottom of sleeve creasing edges evenly and remove basting. OR d. The turn up of sleeve bottom may be turned up evenly and pressed, as indicated by pattern notches, without marking and basting. e. Join backarm seam of sleeves, face to face. f. Press backarm seam open and flat with a steam heated pressing iron.	301 Hand or Machine 301	SSa-1 SSa-1	10-14 10-14	0/3 0/3	0/3 0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
33.	Make wool sleeves (cont'd)					
	g. Tack or blindstitch turn up of sleeve at the forearm seam.	Hand or 103 or 301	 SSm-1 SSm-1	2-4 4-8 4-8	0/3 0/3 0/3 or comm'l	 0/3
	NOTE: The stitching shall not show on the outside.					
34.	Make and tack sleeve linings					
	a. Join the forearm of sleeve linings, face to face, distributing fullness between notches.	301	SSa-1	10-14	0/3	0/3
	b. Join the backarm seam of sleeve linings, face to face.	301	SSa-1	10-14	0/3	0/3
	c. The sleeve lining shall extend not less than 3/4 inch above top of sleeve. Tack forearm and backarm seam of sleeve linings to forearm seam and backarm seam of sleeves; respectively distributing lining fullness properly. The tacking shall extend from not more than 5 inches below top of sleeve to not more than 5 inches above creased bottom edge of sleeve.	Hand or 301	 SSa-1	2-4, 1/2 to 1-1/2 inches in length 4-8	0/3 0/3 or comm'l	 0/3
	NOTE: When tacking is done by hand, both ends of stitching shall be securely tacked with not less than 3 stitches.					
	d. Turn sleeve through lining and baste bottom turn up of sleeve lining. Sleeve lining shall have not less than 1-1/4 inch outlet at bottom. Turn sleeves to finished position and assemble in pairs.	Hand or Machine				

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
34.	Make and tack sleeve linings (cont'd) e. Sleeves may be pressed prior to hanging to facilitate check on balance of sleeves during setting operation.					
35.	Join and press sleeves to armhole a. Set and stitch sleeves to armholes, notch to notch, distributing proper fullness.	301	SSa-1	10-14	0/3	0/3
	b. Holding armhole seam short, press and shrink the gathered fullness on a suitably shaped buck so that the seam lies flat all around the armhole.					
36.	Set and tack shoulder pads Insert shoulder pads in proper position between chest piece section and felt section and securely tack through canvas interlining, pad and felt.	Hand or 301		2-4 4-6	0/3 0/3 or comm'l	0/3
37.	Baste and tack armholes a. Baste around outside of front armholes placing lining, back end of shoulder, shoulder pad, and interlining in proper place; continue the basting along shoulder seam to gorge seam distributing fullness of lining at armhole and leaving shoulder lining free on the underside.	Hand or Machine				
	b. Turn coat to lining side at shoulder and armholes. Tack back end of each shoulder pad through sleeve armhole seam allowance.	Hand or 301		2-4 4-6	0/3 0/3 comm'l	0/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
37.	Baste and tack armholes (cont'd)					
	c. Lap and baste back shoulder lining over front shoulder lining properly distributing fullness between neck gorge and end of shoulder at armhole. Baste balance of back armholes.	Hand or Machine				
	d. Tack all around armhole seam. NOTE: When armholes are tacked by machine, a loose but properly formed and elastic stitch may be used. When armholes are tacked by hand, every other stitch from front notch, across top to end of shoulder pad shall be backstitched.	Hand or 301		2-4 4-6	30/3 30/3 or comm'l	30/3
	e. Tack across base of armhole from sleeve notch on front to underarm dart.	301	SSa-1	4-6	0/3	0/3
	f. Trim away excess lining, interlining and shoulder pads.					
	g. Tack sleeve head wadding to armhole from front sleeve notch to back seam of sleeve. The sleeve head wadding shall be positioned with the folded edge adjacent to the edge of armhole, backing cloth side against sleeve and in such a manner as to cause it to fold on itself. The tacking shall be adjacent to the armhole seam and fullness shall be properly distributed. When armhole is tacked by machine, the sleeve head wadding shall be attached in the armhole tacking operation. When sleeve head waddings are tacked by hand, every other stitch shall be backstitched.	Hand or 301		2-4 4-6	30/3 30/3 or comm'l	30/3

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
38.	Fell and tack lining, collar, hem, and vent					
	a. Fell sleeve lining to armholes. Sleeve lining shall be seam on seam with sleeve. Pit of armhole shall be backstitched from forearm seam to side seam when armholes are hand felled.	Hand or Machine (Hand Type)		8-10 6-8	C (silk) A (silk)	
	OR					
	The sleeve lining may be stitched to the armhole on the inside from forearm seam of sleeve to the backarm seam across undersleeve.	301		10-14	0/3	0/3
	b. Fell back shoulder lining lapped over front lining.	Hand or Machine		8-10 6-8	C (silk) A (silk)	
	c. Fell topcollar to facing and neck lining from seam to gorge seam, securely tacking ends of hanger loop.	Hand or Machine		8-10 6-8	C (silk) A (silk)	
	d. Fell neck edge of undercollar to overcoat securely hand tacking corners of undercollar to lapel at notch.	Hand or Machine (Hand Type)		8-10 6-8	C (silk) A (silk)	
	e. Fell bottom front corners of lining at facing and hem.	Hand		8-10	A or C (silk)	
	f. Fell inner edge of facings the width of the hem.	Hand		8-10	A or C (silk)	
	g. Tack bottom folded edge of bellows to hem at side seam.	Hand		6-8	A or C (silk)	

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
38.	Fell and tack lining, collar, hem, and vent (cont'd)					
	h. Fell width of hem at right and left vents. Folded and raw edges of hem shall not be exposed on outside of overcoat.	Hand		8-10	A or C (silk)	
	i. Fell top raw edge of hem along the width of left vent.	Hand		8-10	A or C (silk)	
	j. Tack front edge of inside breast pocket thru facing and canvas interlining the length of pocket opening.	Hand		2-4	A or C (silk)	
	k. Fell lining around sword slit and pocket openings securely tacking top and bottom ends.	Hand		8-10	A or C (silk)	
	l. Center back fold of right back lining 1-1/4 (±1/4) inches above notched portion of pleat, continuing downward in a diagonal and straight line to edge of right vent and down approximately 1 inch along side raw edge of right vent and extending across to fold of left vent lining.	Hand		8-10	A or C (silk)	
39.	Fell sleeve lining, vent lining, and bottom hem					
	a. Fell bottom fold of sleeve lining to sleeve.	Hand		8-10	A or C (silk)	
		or				
		103 or		6-8	0 (silk)	
		306		6-8	0 (silk)	0 (silk)
*	b. Fell or blindstitch bound inside edge of hem to overcoat thru lower edge of lining.	Hand	EFc-1	8-10	A or C (silk)	
		or				
		103 or		6-8	0 (silk)	
		306		6-8	0 (silk)	0 (silk)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
39.	Fell sleeve lining, vent lining, and bottom hem (cont'd)					
	c. Turn under edge of left vent lining and fell to inner edge of left vent facing.	Hand		8-10	A or C (silk)	
		or				
		103 or		6-8	0 (silk)	
		306		6-8	0 (silk)	0 (silk)
	d. Stitch folded edge of right vent lining 1/16 inch from fold from end of hand felling at top of vent to raw edge of hem.	301	SSb-1	10-14	0/3	0/3
	e. Fell bottom corners of lining at left and right vents to back of vent and hem.	Hand		8-10	A or C (silk)	
40.	Buttonholes					
	a. All buttonholes, except where otherwise specified, shall be eyelet end, square bar, cut first type, reinforced with well worked over gimp with the stitching securely caught in the fabric and the ends of the gimp pulled through the underside. Buttonholes shall be clean, correctly positioned and the purling finishing on the outside.					
	b. The ends of all square bar type buttonholes shall be bartacked in a separate operation from buttonhole marking; securely catching ends of gimp and covering the width of the bar.	Bartack		21-22 per bartack	A	A
		or				
		Hand		10-12 per tack.	A	
	c. As an alternate, buttonholes in sword vent flap, and left vent may be eyelet end, taper bar type.					
	NOTE: The buttonhole distance shall be measured from the inside edge of its eyelet.					

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
41.	Mark and stitch buttonholes as follows:					
	a. Fronts.- Five (5) horizontal buttonholes; four (4) on left front and one aligned with the second from top left buttonhole on right front, cut 1-1/4 to 1-3/8 inches to fit a 40-line button in accordance with marks on pattern.	Button-hole	Stitches per size: 1-1/4 inch 1-3/8 inch	70-75 80-85 including bartack	A	B
	b. Lapels.- Two (2) horizontal buttonholes; one (1) on the lapel of each front, cut 1-1/4 to 1-3/8 inches to fit a 40-line button. The lapel buttonholes shall be parallel and 2-1/8 (± 1/8) inches from the finished top edge of the lapels.	Button-hole	Stitches per size: 1-1/4 inch 1-3/8 inch	70-75 80-85 not including bartack	A	B
	c. Inside eyelet edge of each front and lapel button-hole shall be 1 (± 1/8) inch from the finished edge, vertically aligned and equally spaced.					
	d. Left half-belt section.- Two (2) horizontal buttonholes; cut 1-1/4 to 1-3/8 inches to fit a 40-line button; centered in the left half-belt section, midway between the rows of stitching with eyelet end of each buttonhole facing the finished pointed end of the belt. The inside eyelet edge of the first buttonhole shall be 1-1/4 (±1/8) inches; the second 5 (± 1/8) inches from the finished pointed end of belt.	Button hole	Stitches per size: 1-1/4 inch 1 3/8 inch	70-75 80-85 not including bartack	A	B

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
41.	Mark and stitch buttonholes as follows: (cont'd) e. Left vent.- Two (2) vertical buttonholes; cut 3/4 inch to fit a 24-line button, through left vent turn-under and stay piece; 1-1/4 (±1/8) inches from the folded edge with each eyelet facing top of vent. The inside eyelet edge of the upper buttonhole shall be 4-1/2 (±1/4) inch below top of vent. The inside eyelet edge of the lower buttonhole shall be midway between the eyelet end of upper buttonhole and finished bottom edge of overcoat (±1/2 inch).	Buttonhole (square or taper bar type)	bartack or	50-55per button-hole not including including tack (as applicable)	A	B
	f. Sword slit flap.- One (1) horizontal buttonhole; cut 3/4 inch to fit a 24-line button, centered in the sword slit flap with the eyelet end of the buttonhole facing the point. The inside eyelet edge shall be 5/16 to 7/16 inch from the point of flap.	Buttonhole (square or taper bar type)		50-55 per button-hole not including bartack or tack (as applicable)	A (silk)	B (silk)
42.	Clean overcoat a. Remove all bastings. b. All ends of stitching shall be trimmed and loose threads removed from the overcoat. c. All spots and stains shall be removed. Shade tickets shall be removed without injury to the material.					

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:39Z
Check the source to verify that this is the current version before use.

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
43.	Press overcoat Finished appearance. Edges of collars, lapels, fronts and bottoms shall be smooth and flat. Left front edge shall be straight. Shoulders and chest fronts shall be molded and shaped to body contours with no excess fullness. The balance of the fronts, sides, and back shall be smooth and flat with no fullness. The left vent shall lap over the right with no distortion at the back of the overcoat. Back arm seams shall be creased from the elbow down; the forearm shall roll. Fullness in the tops of the sleeves shall be shrunk in. The collar breakline shall be maintained, and the collar edges shall be shaped and stretched over the shoulders. The collar width and lapels shall finish according to shaper templates. The crease at collar shall extend partially into the lapel area, but the remaining lapel shall roll at the break line. a. Press edges of lapels, fronts, collars and bottom of coat on edge pressing machine. b. Press right and left fronts on right and left breast machine, respectively. c. Sleeves shall be roll pressed. d. Press balance of fronts, side seams, and back on body machine. e. Press collar on collar machine stretching outer edge of collar over shoulder area.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
43.	Press overcoat (cont'd) f. Press armholes and shoulders on an armhole machine. g. Press armhole solid from the inside creasing armhole from not less than 1/2 inch above backarm seam to not less than 4 inches of shoulder seam. The armpit and back of the armhole shall be held short and pressed flat. h. Press lapel.- The creasing of the lapels shall extend a uniform distance from the gorge seam. The lapels shall be roll pressed from midway between the gorge seam to bottom of lapel.					
44.	Finish pressing a. Finish press rayon lining smooth and flat with a hand iron, maintaining creased pleats at front shoulders, on center back and bellows pleat at bottom of overcoat hem. b. Remove gloss, wrinkles, creases, and pressing impressions from under lapels, collar, pocket welts, half-belt sections and vent. c. Touch up any areas missed by machine pressing. d. Block armholes and shrink top of sleeve or the top of sleeve may be blocked by machine. e. Place overcoat on hanger until thoroughly dry.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
45.	Buttons a. Hand or machine sewn plastic buttons shall have the thread tightly wrapped not less than 4 times around to form a 1/8 to 3/16 inch shank and ends tacked off with not less than two stitches and thread ends hidden. b. Metal buttons on left front, lapels and right half back belt section shall be short shank with depressed backs and those on right front shall be regular shank. c. All metal buttons shall be sewn with the eagle in an upright position. NOTE: The button shall be measured from the center of its circumference. When buttons are attached, they shall be in vertical and horizontal alignment. When the finished overcoat is buttoned, the buttons shall properly engage buttonholes (front and belt) with no fullness or twisting.					
46.	Mark and sew buttons as follows: a. Mark the location for sewing all buttons according to pattern marks. b. Fronts.- Sew eight (8) 40-line metal buttons, four (4) on each overcoat front through interlining, except the two bottom buttons of each front which shall be sewn through interlining canvas and top ply of pocketing only. The lower ply of pocketing and both plies of inside breast pocket shall not be caught in stitching front button over pockets, thereby preventing restrictive use of pockets. Center of each button shall be sewn 6-1/2 (± 1/8) inches from the finished edge.	Hand or 101 or 301 or 801 (see Fig 2)		Stitches per button: 4 (double thread) 14-16 14-16 12 (min.)	12/4 or 16/4 20/4 20/4 No. 4 (Nylon)	20/4

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
46.	Mark and sew buttons as follows: (cont'd)					
	c. Lapels.- Sew two (2) 40-line metal buttons, one (1) under lapel of each front, through facing. Center of button shall be aligned with the eyelet of corresponding lapel buttonhole. NOTE: Right lapel button shall provide a proper and smooth closure when collar is in the up position.	Hand or 101 or 301 or 801 (See Fig 2)		Stitches per button: 4 (double thread) 14-16	12/4 or 16/4 20/4	
				14-16 12 (min.)	20/4 No. 4 (Nylon)	20/4
	d. Right half back belt.- Sew two (2) 40-line metal buttons on right back belt. The button shank shall be centered between the double row of stitching and aligned with the eyelets of corresponding left half belt buttonholes and stitched through both plies.	Hand or 101 or 301 or 801 (See Fig 2)		Stitches per button: 4 (double thread) 14-16	12/4 or 16/4 20/4	
				14-16 12 (min.)	20/4 No. 4 (Nylon)	20/4
	e. Right vent.- Sew two (2) 24-line, black plastic buttons on the outside of right vent through vent lining and aligned with the eyelets of corresponding buttonholes of left vent turn under. NOTE: Buttons shall be placed on right vent so that the edge of the left vent forms a straight line with the center back seam and the bottoms of the vent are even when vent is buttoned.	Hand or 101 or 301 or 801 (See Fig 2)		Stitches per button: 4 (double thread) 14-16	12/4 or 16/4 20/4	
				14-16 12 (min.) (Nylon)	20/4 No. 4	20/4

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Table I - Construction of Overcoat (cont'd)

No.	Description of Operation	Stitch Type	Seam and Stitching Type	Stitches Per Inch	Thread	
					Needle	Bobbin or Looper
46.	Mark and sew buttons as follows: (cont'd)					
	f. Sword slit flap.- Sew one (1) 24-line, black plastic button on the lining through sword slit facing to correspond with eyelet of buttonhole of sword slit flap.	Hand or 101 or 301 or 801 (See Fig 2)		Stitches per button: 4 (double thread) 14-16 14-16 12 (min.)	12/4 or 16/4 20/4 20/4 No. 4 (Nylon)	20/4
	g. Inside left front.- Sew one (1) 45-line, black plastic button on left front facing through canvas interlining to correspond with eyelet of buttonhole of right front.	Hand or 101 or 301 or 801 (See Fig 2)		Stitches per button: 4 (double thread) 14-16 14-16 12 (min.)	12/4 or 16/4 20/4 20/4 No. 4 (Nylon)	20/4
47.	Button overcoat Button the front and the outer back vent of the overcoat.					

NCTR Form 1, 15 Sep 1967

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:39Z
Check the source to verify that this is the current version before use.

3.8 Sizes and measurements. Sizes and measurements of the finished overcoat shall be as shown in Table II. All measurements and tolerances are expressed in inches unless otherwise specified.

Table II - Sizes and measurements

Size	(A) Chest	(B) Center Back Length				(C) Sleeve Inseam Length				(D) Sweep
		Short	Regular	Long	X-Long	Short	Regular	Long	X-Long	
35	39	43-3/4	45-3/4	48	51	16-1/2	17-1/2	18-3/4	20	58-1/2
36	40	43-7/8	45-7/8	48-1/8	51-1/8	16-1/2	17-1/2	18-3/4	20	59-1/2
37	41	44	46	48-1/4	51-1/4	16-1/2	17-1/2	18-3/4	20	60-1/2
38	42	44	46	48-1/4	51-1/4	16-1/2	17-1/2	18-3/4	20	61-1/2
39	43	44-1/8	46-1/8	48-3/8	51-3/8	16-1/2	17-1/2	18-3/4	20	62-1/2
40	44	44-1/8	46-1/8	48-3/8	51-3/8	16-1/2	17-1/2	18-3/4	20	63-1/2
41	45	44-1/4	46-1/4	48-1/2	51-1/2	16-1/2	17-1/2	18-3/4	20	64-1/2
42	46	44-3/8	46-3/8	48-5/8	51-1/2	16-1/2	17-1/2	18-3/4	20	65-1/2
43	47	44-1/2	46-1/2	48-3/4	51-3/4	16-1/2	17-1/2	18-3/4	20	66-1/2
44	48	44-5/8	46-5/8	48-7/8	51-7/8	16-1/2	17-1/2	18-3/4	20	67-1/2
45	49	44-5/8	46-5/8	48-7/8	51-7/8	16-1/2	17-1/2	18-3/4	20	68-1/2
46	50	44-3/4	46-3/4	49	52	16-1/2	17-1/2	18-3/4	20	69-1/2
47	51	44-3/4	46-3/4	49	52	16-1/2	17-1/2	18-3/4	20	70-1/2
48	52	44-7/8	46-7/8	49-1/8	52-1/8	16-1/2	17-1/2	18-3/4	20	71-1/2
Tolerance	± 1	± 1/2	± 1/2	± 1/2	± 1/2	± 1/4	± 1/4	± 1/4	± 1/4	± 1

NOTE: Refer to Figure 1 for A, B, C, and D measurements.

(A) Chest - Twice the measurement taken across width of the overcoat at the base of armhole with overcoat fully buttoned, laid flat, and smoothed out.

(B) Center Back Length - Measurement shall be taken from undercollar seam at center back to bottom edge of overcoat.

(C) Sleeve Inseam Length - Measurement shall be taken from the base of armhole along inseam to bottom folded edge of sleeve.

(D) Sweep - Measurement shall be taken at the bottom of the overcoat in a straight line from front edge to front edge with the vent fully closed.

3.9 Workmanship. The finished overcoats shall conform to the quality established by this specification. As a final step in the contractor's production control plan, before formation of a lot, each overcoat shall be buttoned on a model form and examined for selected defects. An overcoat containing a selected defect shall not be included in the end item lot. Selected defects are those defects listed in Table III of MIL-STD-1391. The occurrence of defects shall not exceed the applicable point value or selected defect limit.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract, the contractor is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract, the contractor may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to the prescribed requirements.

4.1.1 Certificate of compliance. Where certificates of compliance are submitted, the Government reserves the right to check test such items to determine the validity of the certification.

4.2 Classfication of inspections. The inspection requirements specified herein are classified as follows:

1. First article inspection (see 4.3).
2. Quality conformance inspection (see 4.4).

4.3 First article inspection. The first article submitted in accordance with 3.2, shall be inspected as specified for compliance with design, construction, workmanship and dimensional requirements.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

4.4 Quality conformance inspection. Inspection shall be performed in accordance with MIL-STD-1391.

4.4.1 Component and material inspection. In accordance with 4.1 above, components and materials shall be inspected and tested in accordance with the requirements of referenced specifications, drawings, and standards unless otherwise excluded, amended, modified or qualified in this specification or applicable purchase document. In addition, a certificate of compliance shall be furnished for the colorfastness requirements of 3.3.4, the cotton flannel requirements of 3.3.5.1, when applicable, and the resin treatment requirements of 3.3.9.2.

4.4.2 End item examination. Sampling and examination of the end item shall be performed in accordance with the provisions of MIL-STD-1391.

4.4.3 Packaging examination The examination for compliance with packaging requirements shall be as specified in MIL-STD-1391.

5. PACKAGING

5.1 Preservation - Packaging. Packaging shall be level A or C as specified (see 6.2).

5.1.1 Level A. Each overcoat shall be laid flat back down and folded as follows: 1. Fold in thirds lengthwise by bringing the left front over the right front, with the edge of the left front near the right side seam. 2. Fold the sleeves one on top of the other across the chest. 3. Fold the top of garment down approximately 1/3 the length of the overcoat. 4. Bring bottom of garment up approximately 1/3 the length of the overcoat so that the folded garment measures approximately 14-1/2 inches by 23 inches. Each overcoat shall be packaged in a fiberboard box conforming to style OPF or RSC, type CF variety SW, class domestic, grade 125 of PPP-B-636. The outside dimensions of each fiberboard box shall be 23-1/4 inches in length, 14-3/4 inches in width, and 3-11/16 inches in depth. The box shall be secured by taping all seams with a minimum 3 inch wide gummed paper tape conforming to type III, grade B of PPP-T-45.

5.1.2 Level C. Overcoats shall be packaged to afford adequate protection against physical damage during shipment from the supply source to the first receiving activity. The package and the quantity per package shall be the same as that normally used by the contractor for retail distribution.

5.2 Packing. Packing shall be level A, B, or C as specified (see 6.2).

5.2.1 Level A. Four overcoats of one size and length only, packaged as specified in 5.1.1, shall be packed in a fiberboard shipping container assembled, closed and reinforced conforming to type CF, class weather-resistant, variety DW, grade V15c, size 3 of MIL-B-17757. Level A packages shall be packed flat, four in depth within the shipping container. Toward the end of the contract, or when there are less than the required amount per container of the same size, mixed sizes may be packed within the same shipping container.

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:39Z
Check the source to verify that this is the current version before use.

5.2.2 Level B. Four overcoats of one size and length only, packaged as specifed in 5.1.1, shall be packed in a fiberboard shipping container assembled and closed conforming to type CF, class domestic, variety DW, grade 275, size 3 of MIL-B-17757. Level A packages shall be packed flat four in depth within the shipping container. Toward the end of the contract or order, or when there are less than the required amount per container of the same size, mixed sizes may be packed within the same shipping container.

5.2.3. Level C. Overcoats, packaged as specified in 5.1, shall be packed in a manner to insure carrier acceptance and safe delivery at destination at the lowest transportation rate for such supplies. The quantity per shipping container shall be the same as that normally used by the contractor for retail distribution. Containers shall comply with the U.S. Postal Service Manual, Uniform Freight Classification Rules or National Motor Freight Classification Rules, as applicable.

5.3 Marking. In addition to any special marking required by the contract or order, interior packages and shipping containers shall be marked in accordance with MIL-STD-129.

5.3.1 Labels, mixed sizes. Each shipping container packed with mixed sizes shall have securely attached to the end and side, directly under the printing or stenciling, a white paper label 5 by 4 inches with the words "MIXED SIZES" plainly printed or stamped thereon and under these words shall be legibly printed or stamped the correct quantity and sizes contained herein.

6. NOTES

6.1 Intended use. The overcoats are intended to be worn by authorized male Navy personnel.

6.2 Ordering data. Procurement documents shall specify the following:

a. Title, number and date of this specification.
b. Sizes and lengths required (see 1.2).

*d. When a first article inspection is required, the item will be tested

6.3 Samples and patterns. For access to samples and patterns, address the procuring activity issuing the invitation for bids.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

*6.4 Changes from previous issue The margins of this specification are marked with an asterisk to indicate where changes (additions, modifications, corrections, deletions) from the previous issue were made. This was done as a convenience only and the Government assumes no liaiblity whatsoever for any inaccuracies in these notations. Bidders and contractors are cautioned to evaluate the requirements of this document based on the entire content irrespective of the marginal notations and relationship to the last previous issue.

Custodian:
Navy - NU

Review Activity:
DLA - CT

Preparing activity:
Navy - NU

Project No. 8405-N902

☆U.S. GOVERNMENT PRINTING OFFICE: 1984—705-040/A0826

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:39Z
Check the source to verify that this is the current version before use.

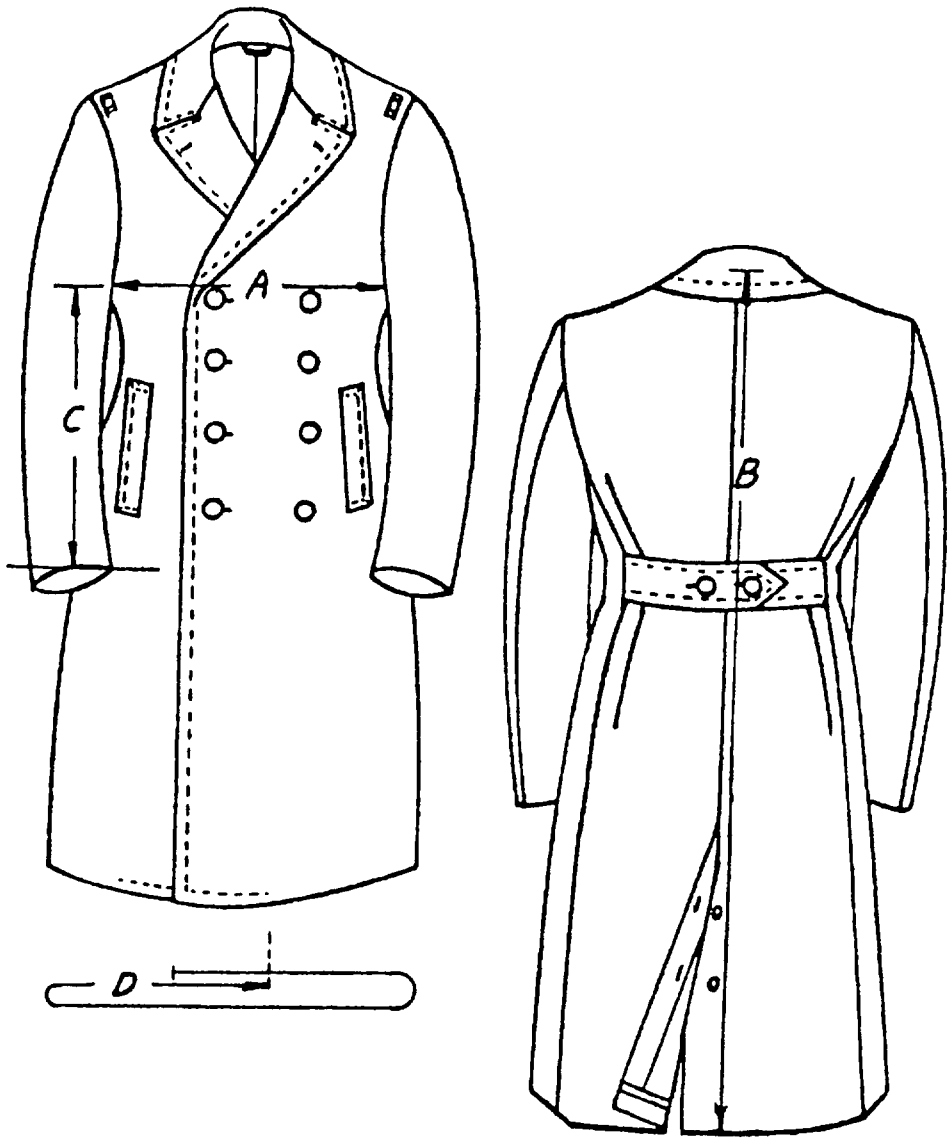


FIGURE-1 OVERCOAT, MAN'S (OFFICER'S TYPE)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

FOLD

POSTAGE AND FEES PAID
DEPARTMENT OF THE NAVY
DoD-316



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Officer in Charge
Navy Clothing and Textile Research Facility
21 Strathmore Road
Natick, MA 01760

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

MIL-O-82250D

INSTRUCTIONS: This form is provided to solicit beneficial comments which may improve this document and enhance its use. DoD contractors, government activities, manufacturers, vendors, or other prospective users of the document are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity. A response will be provided to the submitter, when name and address is provided, within 30 days indicating that the 1426 was received and when any appropriate action on it will be completed.

NOTE: This form shall not be used to submit requests for waivers, deviations or clarification of specification requirements on current contracts. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements.

DOCUMENT IDENTIFIER *(Number)* AND TITLE

MIL-O-82250D Overcoat, Man's (Officer's Type)

NAME OF ORGANIZATION AND ADDRESS OF SUBMITTER

☐ VENDOR ☐ USER ☐ MANUFACTURER

1. ☐ HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE? ☐ IS ANY PART OF IT TOO RIGID, RESTRICTIVE, LOOSE OR AMBIGUOUS? PLEASE EXPLAIN BELOW.

A. GIVE PARAGRAPH NUMBER AND WORDING

B. RECOMMENDED WORDING CHANGE

C. REASON FOR RECOMMENDED CHANGE(S)

2. REMARKS

SUBMITTED BY *(Printed or typed name and address — Optional)*

TELEPHONE NO.

DATE

DD FORM 1426 1 OCT 76

Replaces edition of 1 Jan 72 which may be used.

S/N 0102-LF-001-4260

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:39Z
Check the source to verify that this is the current version before use.