MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 1

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).

REQUIREMENTS:


The configuration and marking requirements applicable to style 1 hasp shall conform to figure 1.

Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.

Preparing activity:
Navy - SH
(Project 5340-N079)


FSC 5340

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:41Z
Check the source to verify that this is the current version before use.

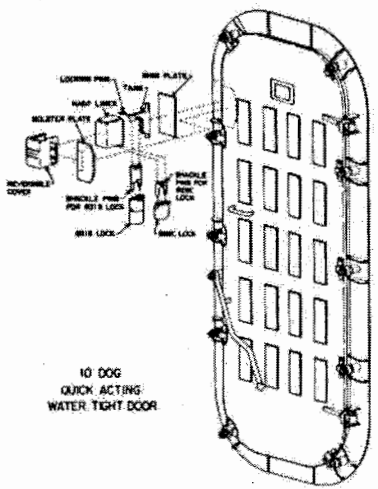


10 DOG
QUICK ACTING
WATER TIGHT DOOR


NOTE: HIGH SECURITY HASP SYSTEM CAN BE CERTIFIED WITH EITHER THE 826C OR THE 631B LOCK.

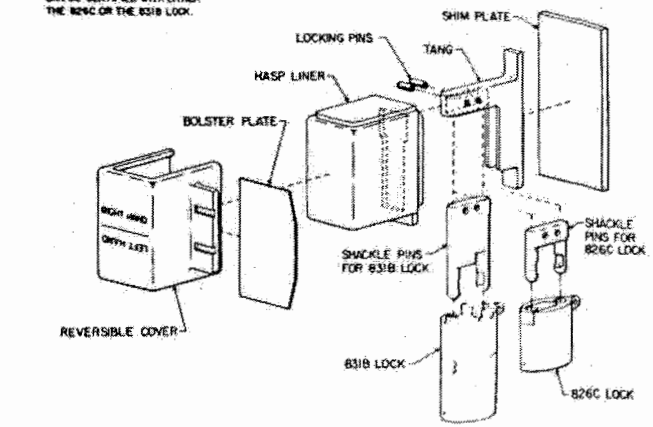


SH 131786



NON TIGHT DOOR



3, 6, 8 OR 10 DOG
GANG OPERATED
(3 DOG SHOWN)

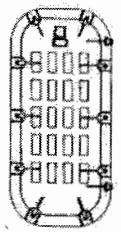


4-6,-8-10, OR 12 DOG WATER TIGHT
INDIVIDUALLY DOGGED DOOR
(10 DOG SHOWN)




WATER TIGHT DOOR
SLIDING DOG TYPE

FIGURE 1. Configuration for left-hand or right-hand hinged doors swinging out to open style 1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:41Z
Check the source to verify that this is the current version before use.

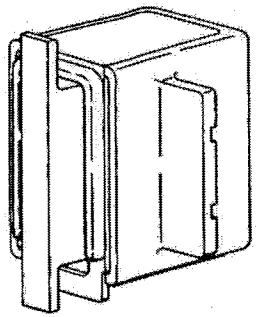

Hasp shown with liner, tang, cover and packaging (as shipped from manufacturer.)

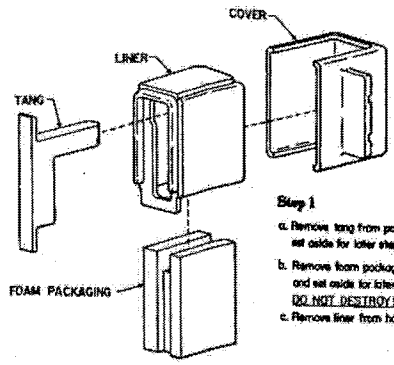

Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step. DO NOT DESTROY!

c. Remove liner from hasp cover.


Step 2


General:

The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure (a) shows the hasp and liner in the right-hand mode. For use with doors swinging out to open, the hasp in its right-hand mode will be welded to right-hand hinged doors. The hasp in its left-hand mode will be welded to left-hand hinged doors.


a. Determine the attitude of the hasp liner and cover assembly by holding units against the door as shown.

b. After trial assembly, weld the liner to the cover as shown.

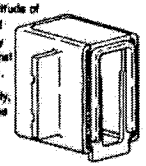

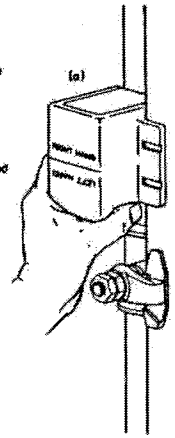

(only use the welding rod provided or specified in this document. Strength and security capabilities will be seriously impaired if a non-certified rod is used.)

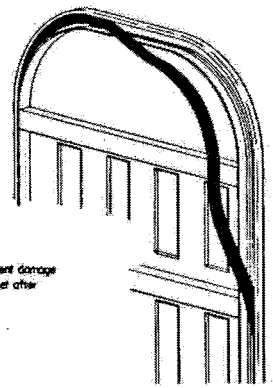

Step 3

Remove water tight gasket to prevent damage from welding heat or replace gasket after welding.

Step 4

General:

To strengthen the door, a bolster plate has been provided. This plate will be fully welded to the door face. The hasp cover/liner assembly will then be welded to it.

a. Position the bolster plate and hasp cover/liner assembly as shown. A minimum of 6 inches of clearance must be provided between the open locking end of the hasp and any obstruction to allow removal of the lock.

b. Clamp the hasp cover/liner assembly in place.


c. Weld the bolster plate to the door face as shown.

d. Weld the hasp cover/liner assembly to the bolster plate.

e. Remove clamp and allow welds to air cool.

Step 5

Reinstall gasket.

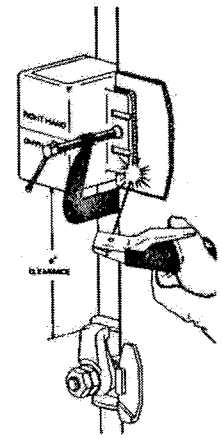


WELDING ROD SPEC.

STAINLESS STEEL, TYPE E, CLASS 1,
310 -16 3/32 DIA.
AWS A5.4 PER MIL-E 22200/2

SH 131794

FIGURE 2. Installation procedures for left-hand or right-hand hinged doors swinging out to open style 1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:41Z
Check the source to verify that this is the current version before use.

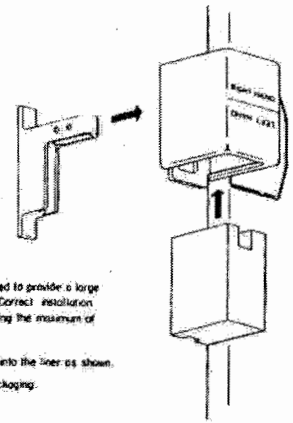


Step 5

General:
The hasp is designed to provide a large degree of hasp/lock flexibility. Correct installation of the tang is important to ensure the maximum of flexibility.

a. Reinsert the foam packaging into the liner as shown.

b. Reinsert the tang into the packaging.

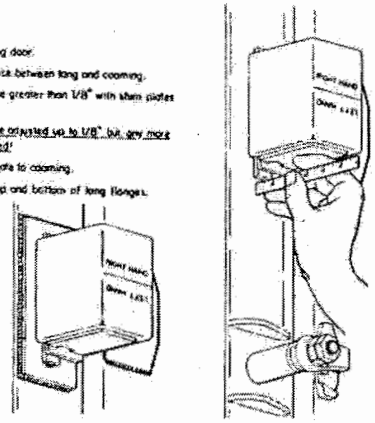

Step 6 (cont.)

c. Close and dog door.

d. Measure space between tang and coaming.

e. Fill any space greater than 1/8" with shim plates provided.

The tang may be adjusted up to 1/8" but, any more must be shimmed!

f. Weld shim plate to coaming.


g. Tack weld top and bottom of tang flanges.

Step 6 (cont.)

h. Open door leaving tang attached to coaming.

i. Finish welding tang to coaming as shown. Allow welds to air cool.


j. Remove foam packaging from cover/liner and discard.

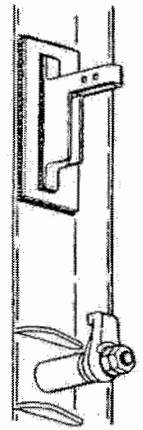



Step 7

General:
The hasp is designed to be used with one of two locks -- The Sargent and Greenleaf Inc., 826C and 8518. Either lock meets the high security requirements when used with the hasp. Both require their shackles to be removed (by a locksmith.) The long set of pins may be used with either lock. The short set must be used with the 826C.

a. Insert the set of pins selected into the tang as shown and drive in locking pins.



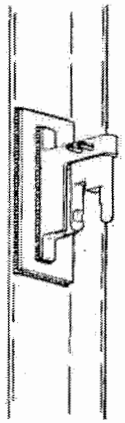

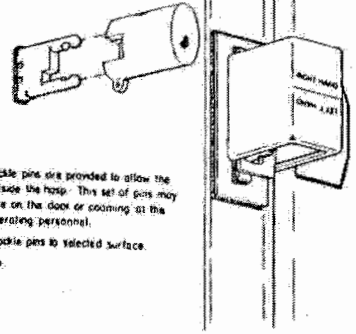

Step 8

General:
A second set of shackle pins are provided to allow the lock to be stored outside the hasp. This set of pins may be installed anywhere on the door or coaming at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

SH 131794

FIGURE 2. Installation procedures for left-hand or right-hand hinged doors swinging out to open style 1. - Continued

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:41Z
Check the source to verify that this is the current version before use.