MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 2

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).

REQUIREMENTS:

The configuration and marking requirements applicable to style 2 hasp shall conform to figure 1.


Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.


Preparing activity:
Navy - SH
(Project 5340-N080)


FSC 5340

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

NOTE
HIGH SECURITY HASP SYSTEM CAN BE CERTIFIED WITH EITHER THE 826C OR 831B LOCK

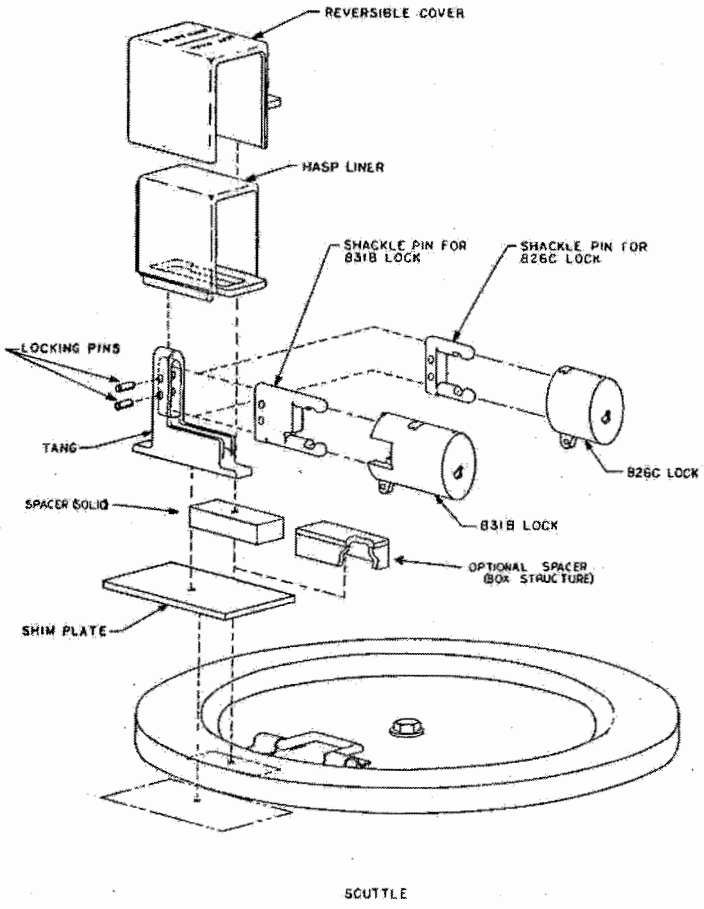

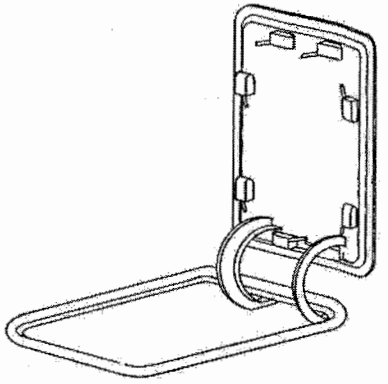

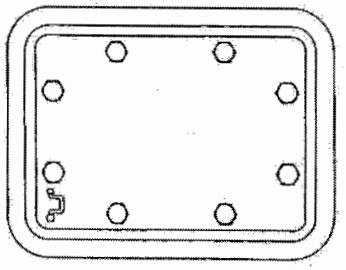


REVISION STATUS OF SHEETS			
SHEET	1	2	3
REV	A	A	A


SH 131787

FIGURE 1. Configuration for left-hand or right-hand hinged armored doors swinging out to open, style 2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

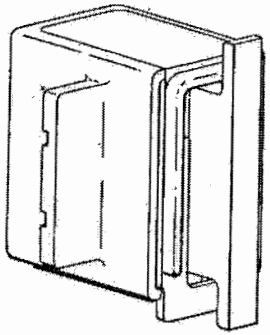

Hasp shown with liner, tang, cover and packaging (as shipped from manufacturer.)

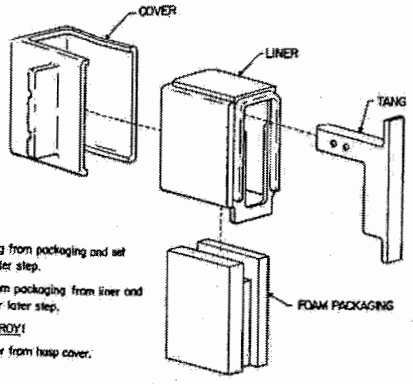


Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step.

DO NOT DESTROY!

c. Remove liner from hasp cover.

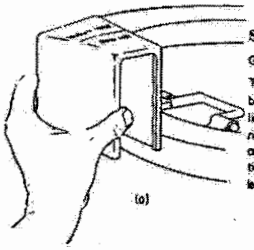


Step 2

General:


The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure (a) shows the hasp and liner in the right-hand mode. In the case of a watertight scuttle, the two configurations allow the user to select the direction from which the lock is to be accessible.

(a)

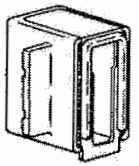

a. Determine the attitude of the hasp liner and cover assy. by holding units against the scuttle as shown.

b. After trial assembly, weld the liner to the cover as shown (only use the welding rod provided or specified in this document. Strength and security capabilities will be seriously impaired if a non-certified rod is used.)

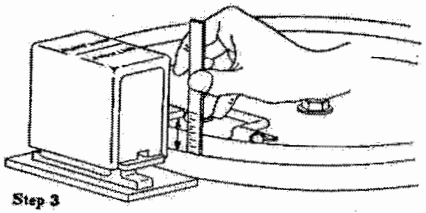

Step 3

Most armored closures do not have a 1 7/8 dimension between the closure face and the frame or deck. Therefore, a shim or box structure must be fabricated to fill the space between the flange on the hasp cover and the closure face.


This spacer must be made from one of the following:
(1) Structural steel if a solid shim is used.
(2) 300 series stainless steel, 1/4 inch min thick, if a welded box structure is used to fill the space. Weld filler metal should be stainless steel.

Spacer thickness should be determined by inserting the tong into the hasp with the foam jig in place, and placing the hasp as shown on the closure. Before this is done, both surfaces should be free of any file or other coverings. After the hasp has been located and is perpendicular to the frame or deck, the gap between the cover flange and the closure face should be measured. This dimension is the thickness of the spacer. Spacer thickness can be increased up to 1/8 inch above the minimum thickness to allow use of standard size stock.



Step 4

Remove watertight gasket to prevent damage from welding heat or replace gasket after welding.

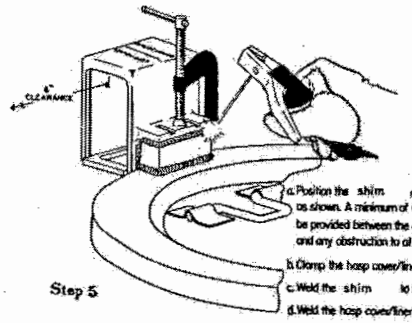

Step 5

a. Position the shim and hasp cover/liner assy. as shown. A minimum of 6 inches of clearance must be provided between the open locking end of the hasp and any obstruction to allow removal of the lock.

b. Clamp the hasp cover/liner assy. in place.

c. Weld the shim to the door face as shown.

d. Weld the hasp cover/liner assy. to the shim.

e. Remove clamp and allow welds to air cool.

Step 6


Reinstall gasket.

WELDING ROD SPEC.
STAINLESS STEEL TYPE E, CLASS 1
310-16 3/32 DIA
AWS A5.4 PER MIL- E-22200/2

SH 131795

FIGURE 2. Installation procedures for left-hand or right-hand hinged armored doors swinging out to open, style 2.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

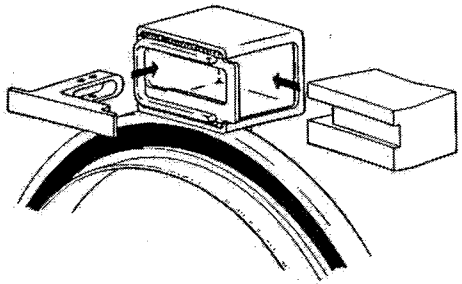


Step 7

The hasp is designed to provide a large degree of hasp/lock flexibility. Correct installation of the tang is important to insuring the maximum of flexibility.

a. Reinsert the foam packaging into the liner as shown.

b. Reinsert the tang into the packaging.

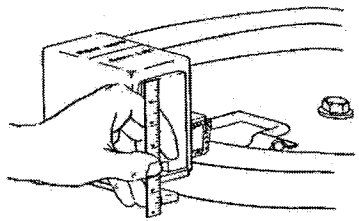


Step 7 (cont.)

c. Close and dog scuttle.


d. Measure space between tang and coaming, hatch or deck.

e. Fill any space greater than 1/8" with shim plates provided. The tang may be adjusted up to 1/8" but any more must be shimmed!

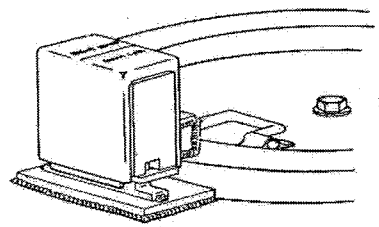

f. Weld shim plate to coaming, hatch or deck.

g. Tack weld top and bottom of tang flanges.

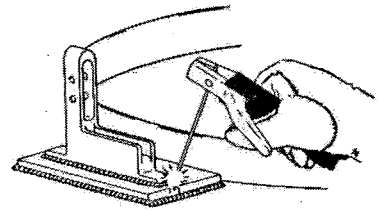


Step 7 (cont.)

h. Open door leaving tang attached to coaming, hatch or deck.

i. Finish welding tang as shown. Allow welds to air cool.

j Remove foam packaging from cover/liner and discard.

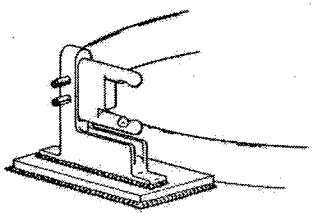



Step 8

General:

The hasp is designed to be used with one of two locks – The Sargent and Greenleaf Inc., 826C and 831B. Either lock meets the high security requirements when used with the hasp. Both require their shackles to be removed (by a locksmith.) The long set of pins may be used with either lock. The short set must be used with the 826C.

a. Insert the set of pins selected into the tang as shown and drive in locking pins.

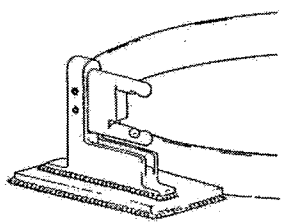

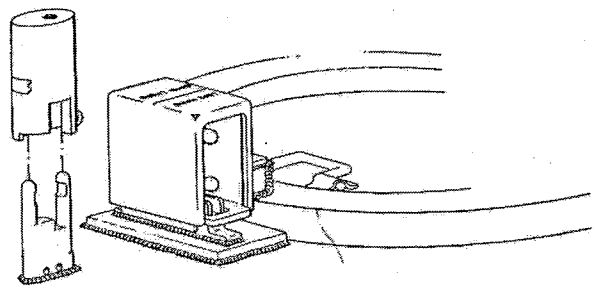

Step 9

General:

A second set of shackle pins are provided to allow the lock to be stored outside the hasp. This set of pins may be installed anywhere on the scuttle, hatch or deck at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

FIGURE 2. Installation procedures for left-hand or right-hand hinged armored doors swinging out to open, style 2. – Continued

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.