MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 3

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).


REQUIREMENTS:

The configuration and marking requirements applicable to style 3 hasp shall conform to figure 1.

Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.

Preparing activity:
Navy - SH
(Project 5340-N081)


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

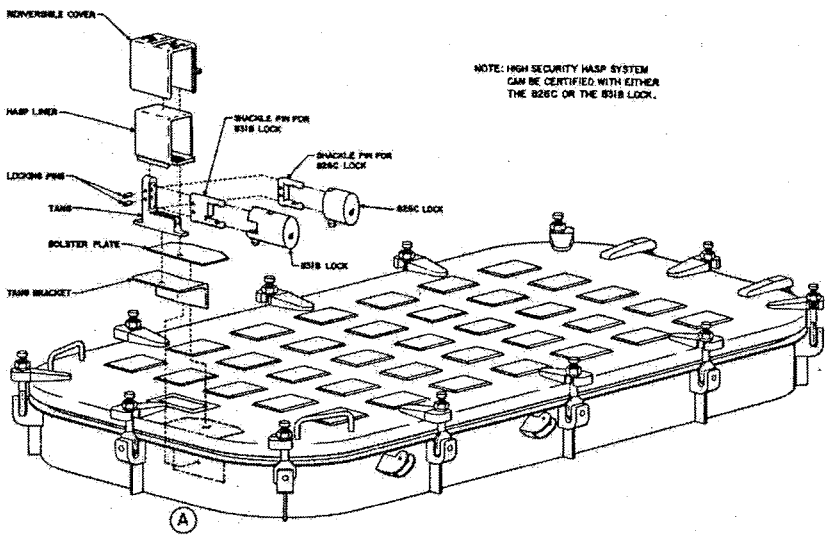


INDIVIDUALLY DOGGED RAISED HATCH
30 X 60 SHOWN

A	A	A
1	2	3


REVISION STATUS OF SHEETS

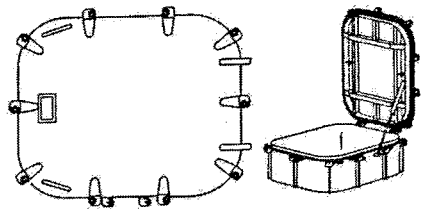


INDIVIDUALLY DOGGED RAISED HATCH
(30 X 36 SHOWN)

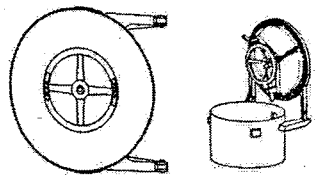

QUICK ACTING RAISED SCUTTLE
(3 DOG SHOWN)

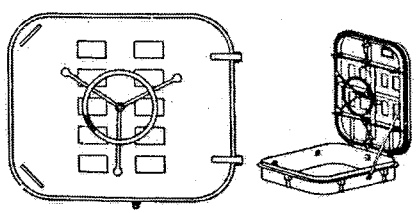


QUICK ACTING WATER TIGHT RAISED HATCH
(30 X 36 SHOWN)

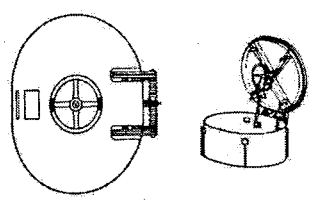


QUICK ACTING WATER TIGHT RAISED HATCH
(24 X 30 SHOWN)

FIGURE 1. Configuration for watertight hatches, style 3.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

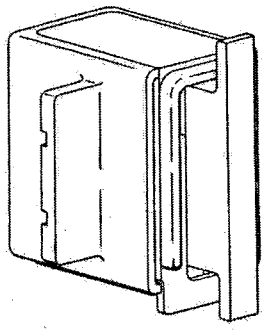

Hasp shown with liner, tang, cover and packaging (as shipped from manufacturer.)

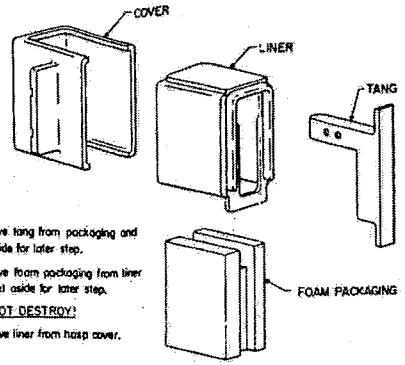


Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step.

DO NOT DESTROY!


c. Remove liner from hasp cover.

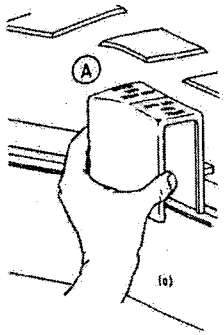

Step 2

General:

The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure (a) shows the hasp and liner in the right-hand mode. In the case of a water tight hatch, the two available configurations allow the user to select the direction from which the lock is to be accessible.

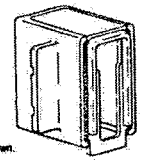


a. Determine the attitude of the hasp liner and cover assembly by holding unit against the hatch face as shown.

b. After trial assembly, weld the liner to the cover as shown (only use the welding rod provided or specified in this document. Strength and security capabilities will be seriously impaired if a non-certified rod is used.)


WELDING ROD SPEC.

STAINLESS STEEL TYPE E, CLASS 1
310-16 3/32 DIA,
AWS A 5.4 PER MIL-E-22200/2

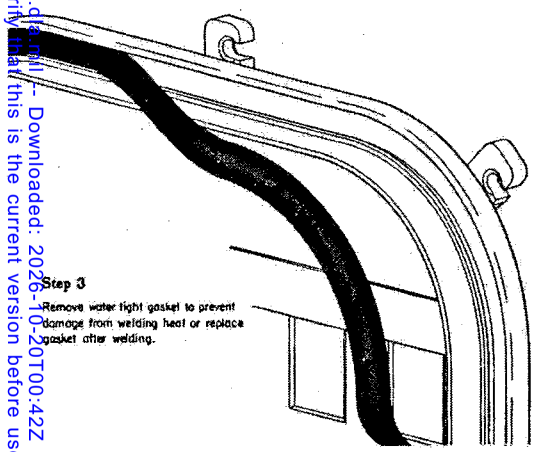

Step 3

Remove water tight gasket to prevent damage from welding heat or replace gasket after welding.

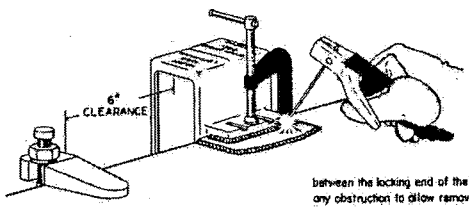

Step 4

General

To strengthen the hatch face, a bolster plate has been provided. This plate will be fully welded to the hatch face. The hasp cover/liner assembly will then be welded to it.

a. Position the bolster plate and hasp cover/liner assembly as shown. A minimum of 6 inches of clearance must be provided between the locking end of the hasp and any obstruction to allow removal of the lock.

b. Clamp the hasp cover/liner assy. in place.

c. Weld the bolster plate to the hatch face as shown.

d. Weld the hasp cover/liner assy. to the bolster plate.


e. Remove clamp and allow welds to air cool.

Step 5

Reinstall gasket.

FIGURE 2. Installation procedures for watertight hatches, style 3.

Source: https://assist.dla.mil/ - Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

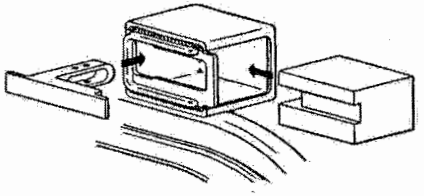


Step 6

General:
The 1300 series hasp is designed to provide a large degree of hasp/lock flexibility. Correct installation of the tang is important to insuring the maximum of flexibility. Also, because a raised hatch has no mounting surface for the tang, a tang bracket has been provided. The tang bracket will be welded to the raised coaming and the tang to the bracket.

a. Reinsert the foam packaging into the liner as shown.

b. Reinsert the tang into the packaging.

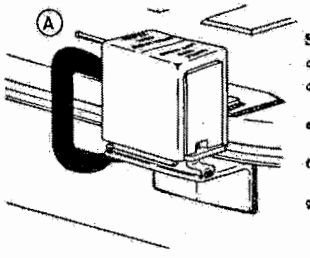

Step 6 (cont.)

c. Close and dog hatch.

d. Clamp tang bracket to tang with angled leg against the hatch coaming as shown.


e. Weld tang bracket to raised coaming as shown.


f. Tack weld top and bottom of tang flanges to tang bracket.

g. Open hatch leaving tang attached to bracket.

h. Finish welding tang to tang bracket as shown and allow welds to air cool.

i. Remove foam packaging from cover/liner and discard.

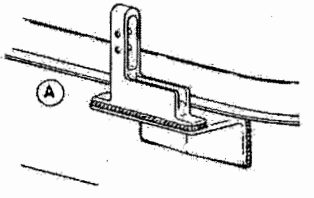

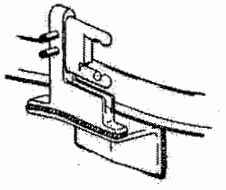



Step 7

General:

The 1300 series hasp is designed to be used with one of the two locks – the Sargent and Greenleaf Inc., 826C and 8518. Either lock meets the high security requirements when used with the 1300 series hasp. Both require their shackles to be removed (by a locksmith). The long set of pins may be used with either lock. The short set must be used with the 826C.

a. Insert the set of pins selected into the tang as shown and drive in locking pins.

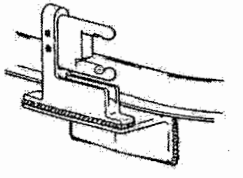

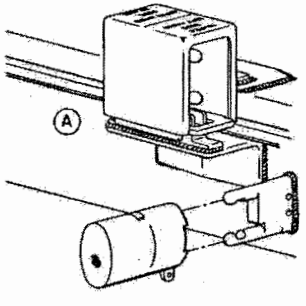

Step 8

A second set of shackle pins are provided to allow the lock to be stored outside of the hasp. This set of pins may be installed anywhere on the hatch or coaming at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

FIGURE 2. Installation procedures for watertight hatches, style 3. - Continued

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.