MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 4

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).

REQUIREMENTS:


The configuration and marking requirements applicable to style 4 hasp shall conform to figure 1.


Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.

Preparing activity:
Navy - SH
(Project 5340-N082)

FSC 5340

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

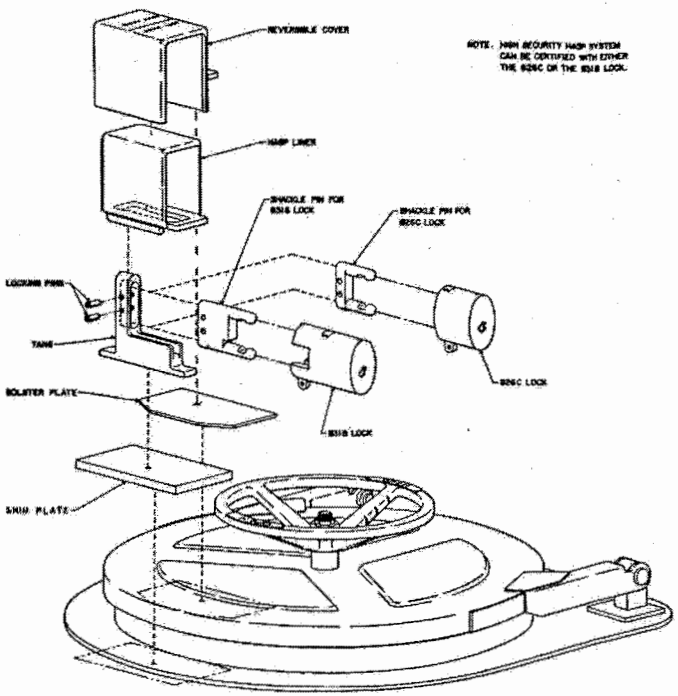

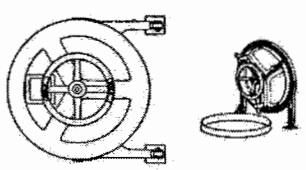
18-21 OR 25" DIA. QUICK ACTING WATER TIGHT SCUTTLE ON DECK


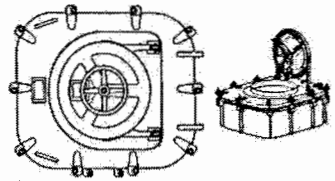

18-21 OR 25" DIA. QUICK ACTING SCUTTLE ON A RAISED HATCH (30X36" SHOWN)


FIGURE 1. Configuration for watertight scuttles, style 4.

SH 131789

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

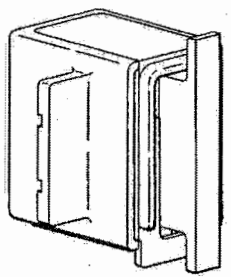

Hasp shown with liner, long cover and packaging (as shipped from manufacturer.)

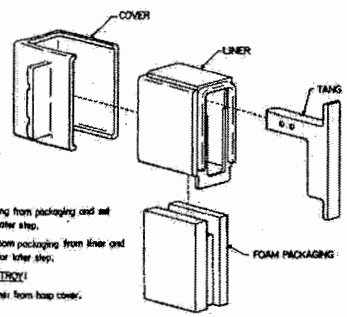


Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step.

DO NOT DESTROY!

c. Remove liner from hasp cover.

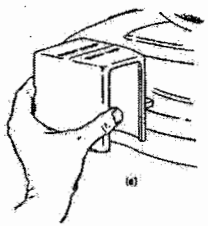


Step 2

General:

The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure (a) shows the hasp and liner in the right-hand mode. In the case of a watertight scuttle, the two configurations allow the user to select the direction from which the lock is to be accessible.

(a)




a. Determine the attitude of the hasp liner and cover assy. by holding units against the scuttle as shown.

b. After trial assembly, weld the liner to the cover as shown (only use the welding rod provided or specified in this document. Strength and security considerations will be seriously impaired if a non-certified rod is used.)


WELDING ROD SPEC.

STAINLESS STEEL TYPE E, CLASS I
310-16 3/32 DIA.
AWS A5.4 PER MIL-E-22200/2

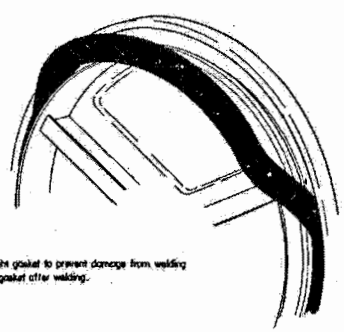

Step 3

Remove watertight gasket to prevent damage from welding heat or replace gasket after welding.

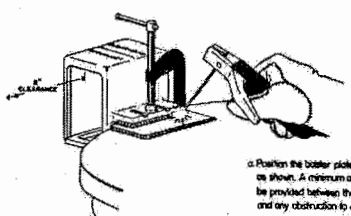

Step 4

General:

To strengthen the scuttle, a bolster plate has been provided. This plate will be fully welded to the scuttle face. The hasp cover/liner assembly will then be welded to it.

a. Position the bolster plate and hasp cover/liner assy. as shown. A minimum of 6 inches of clearance must be provided between the open locking end of the hasp and any obstruction to allow removal of the lock.

b. Clamp the hasp cover/liner assy. in place.

c. Weld the bolster plate to the door face as shown.

d. Weld the hasp cover/liner assy. to the bolster plate.

e. Remove clamp and allow welds to air cool.


Step 5

Reinstall gasket.

FIGURE 2. Installation procedures for watertight scuttles, style 4.

SH 131797

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.

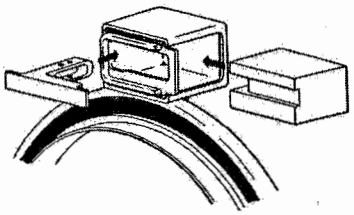


Step 6

The hasp is designed to provide a large degree of hasp/lock flexibility. Correct installation of the tang is important to insuring the maximum of flexibility.

a. Reinsert the foam packaging into the liner as shown.

b. Reinsert the tang into the packaging.

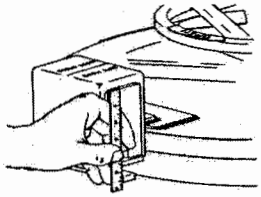


Step 6 (cont.)

c. Close and dog scuttle.


d. Measure space between tang and coaming, hatch or deck.

e. Fill any space greater than 1/8" with shim plates provided. The tang may be adjusted up to 1/8" but any more must be shimmed.

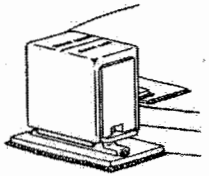

f. Weld shim plate to coaming, hatch or deck.

g. Tack weld top and bottom of tang flanges.

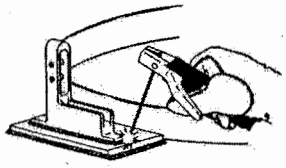


Step 6 (cont.)

h. Open door leaving tang attached to coaming, hatch or deck.

i. Finish welding tang as shown. Allow welds to air cool.

j. Remove foam packaging from cover/liner and discard.

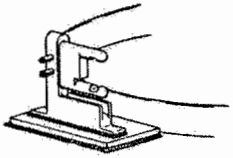


(by a locksmith.) The long set of pins may be used with either lock. The short set must be used with the 826C.


a. Insert the set of pins selected into the tang as shown and drive in locking pins.

Step 7

General:

The hasp is designed to be used with one of two locks – The Sargent and Greenleaf Inc., 826C and 831B. Either lock meets the high security requirements when used with the hasp. Both require their shackles to be removed

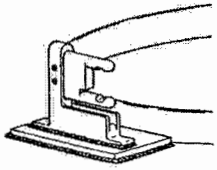

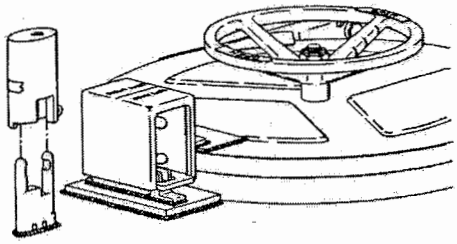

Step 8

General:

A second set of shackle pins are provided to allow the lock to be stored outside the hasp. This set of pins may be installed anywhere on the scuttle, hatch or deck at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

SH 131797

FIGURE 2. Installation procedures for watertight scuttles, style 4. - Continued

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:42Z
Check the source to verify that this is the current version before use.