MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 5

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).

REQUIREMENTS:


The configuration and marking requirements applicable to style 5 hasp shall conform to figure 1.

Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.

Preparing activity:
Navy - SH
(Project 5340-N083)


FSC 5340

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

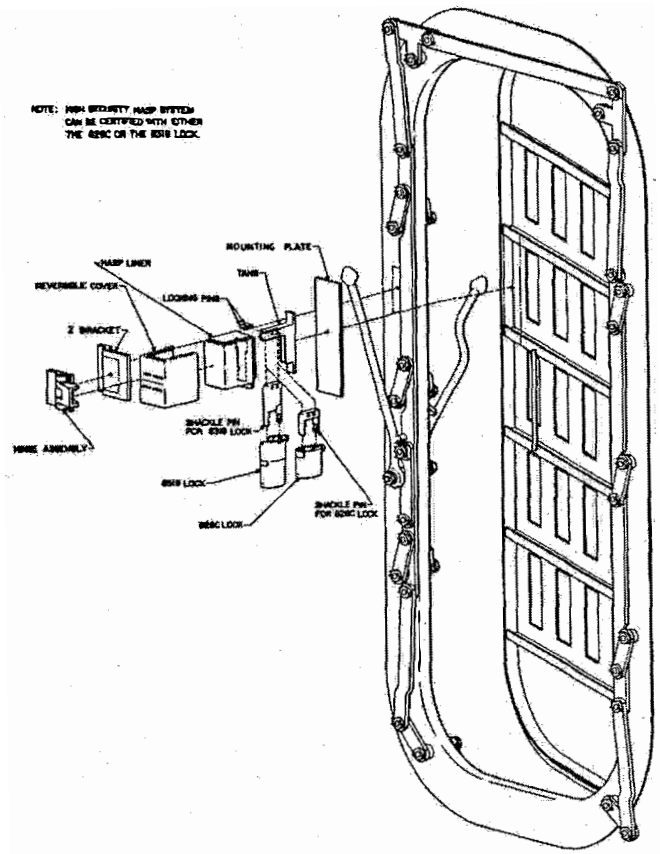


10 DOG QUICK ACTING WATERTIGHT DOOR INWARD SWINGING

SH 131790




6 DOG QUICK ACTING WATERTIGHT DOOR SWINGING INWARD




3 DOG AIRTIGHT GANG OPERATED DOOR SWINGING INWARD

FIGURE 1. Configuration for left-hand or right-hand hinged quick acting watertight doors swinging in to open, style 5.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

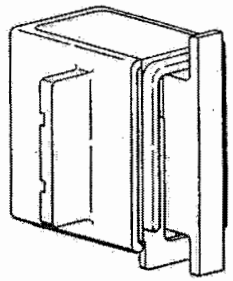

Hasp shown with liner, tang, cover and packaging (as shipped from manufacturer.)

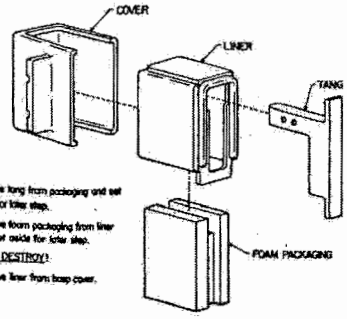


Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step.

DO NOT DESTROY!

c. Remove liner from hasp cover.

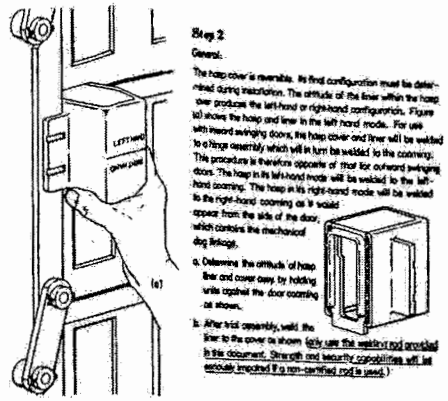


Step 2

General:

The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure (a) shows the hasp and liner in the left hand mode. For use with inward swinging doors, the hasp cover and liner will be welded to a hinge assembly which will in turn be welded to the coaming. This procedure is therefore opposite of that for outward swinging doors. The hasp in its left-hand mode will be welded to the left-hand coaming. The hasp in its right-hand mode will be welded to the right-hand coaming as it would appear from the side of the door, which contains the mechanical dog linkage.

a. Determine the attitude of hasp liner and cover easy by holding units against the door coaming as shown.

b. After trial assembly, weld the liner to the cover as shown (only use the welding rod provided in this document. Strength and security capabilities will be seriously impaired if a non-certified rod is used.)

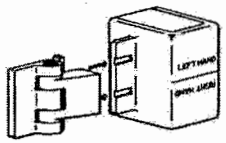


Step 3


General:

The use of a hinge assembly permits the hasp to be swung out of the door clear opening with the lock removed and after the door is painted. The door must first be opened because of the limited turning radius of the hinge assembly and the tang/liner interference that results.

a. Locate hinge assy. so that covered portion fits into grooves provided in the flange of the hasp cover.

b. Weld hinge assembly to hasp cover as shown.

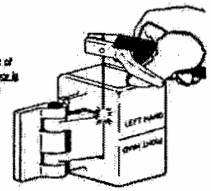

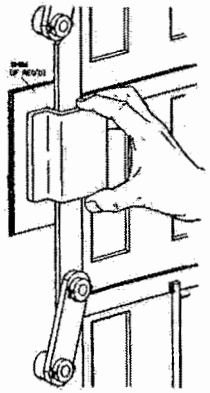

Step 4

General:

The presence of the quick-acting dog mechanism on the side of the door where the hasp is to be mounted requires the use of special hardware. This will consist of a Z-bracket to bridge over the mechanism and a plate to mount the tang to the back side of the door.

a. Undog door to full open position.

b. Locate Z-bracket as shown so that it rests against quick acting mechanism but does not interfere with its operation. Rotate operator to determine maximum movement of linkages.

c. Shim(s) may be inserted between the door frame and the Z-bracket to maintain a minimum of 1/8" clearance between operator linkage and Z-bracket throughout the entire operational cycle. If shim(s) are required, weld shims to door frame.



Step 5

Weld hinge/hasp assembly to Z-bracket in a horizontal position, maintaining the 1 inch dimension shown.


WELDING ROD SPEC.

STAINLESS STEEL TYPE E, CLASS 1
310-16 3/32 DIA.
AWS A5.4 PER MIL-E-22200/2

SH 131798


FIGURE 2. Installation procedures for left-hand or right-hand hinged quick acting watertight doors swinging in to open, style 1

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

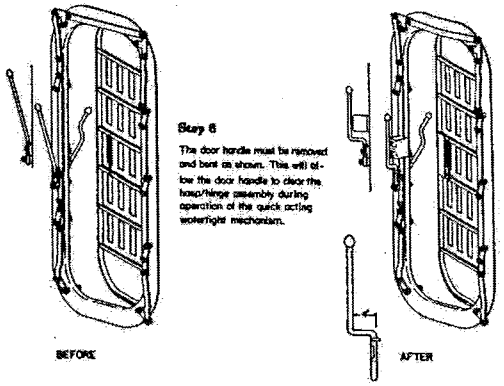

Step 6

The door handle must be removed and bent as shown. This will allow the door handle to clear the hasp/hinge assembly during operation of the quick acting watertight mechanism.

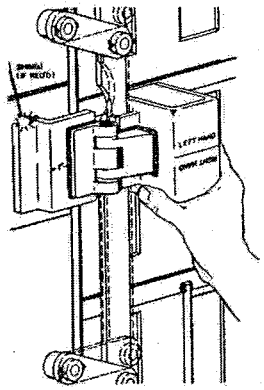


Step 7

a. Locate Z-bracket on frame as shown. Z-bracket/hinge/hasp assembly should be parallel to door stiffeners.

b. Undog door and verify that assembly does not contact quick acting mechanism during the process.

c. Tack weld the Z-bracket to the door frame, as shown.

d. Rotate the quick acting mechanism through a complete cycle, to assure clearance between the Z-bracket and mechanism.

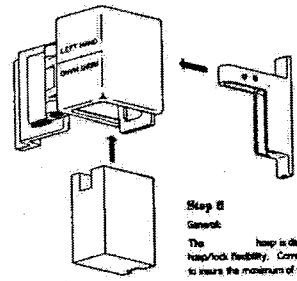


Step 8

General:

The hasp is designed to provide a large degree of hasp/lock flexibility. Correct installation of the tong is important to insure the maximum of flexibility.

a. Reinsert the foam packaging into the liner as shown.

b. Reinsert the tong into the packaging.

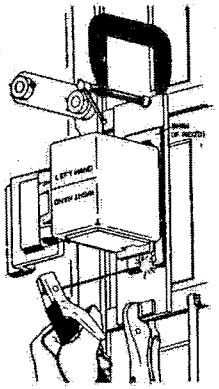

Step 9

a. Locate and clamp tong mounting plate to door superstructure. With the hasp parallel to the door face, fill any space between tong and plate greater than 1/8" with shim plates provided. The tong may be adjusted up to 1/8" but any more must be shimmed!


b. Weld shim plate to mounting plate (if required).

c. Tack weld top and bottom of tong flange to the mounting plate.

d. Mark plate location on door.

e. Remove mounting plate/tong assembly and finish welding tong to mounting plate (recommend welding in the horizontal position).

f. Remove foam packaging from liner and discard.



Step 10

General:

The hasp is designed to be used with one of two locks -- the Sargent and Greenleaf, Inc., 826C and 838. Either lock meets the high security requirements when used with the hasp. Both require their shackles to be removed (by a locksmith). The long set of pins may be used with either lock. The short set must be used with the 826C.

a. Insert the set of pins selected into the tong and drive in locking pins.

b. Reposition mounting plate/tong assembly and clamp the assembly to the door as previously marked.


c. Close and dog the door. With hasp body encompassing the shackle pins, assemble 838 or 826C lock, as appropriate, to the shackle pins. Assure that there is no interference between the lock body and the hasp body during the locking process, or between the tong and hasp liner while opening and closing the door. Interference may be eliminated by adjusting the mounting plate on the door so that the shackle pins/tong assembly is centered in the opening in the back side of the hasp liner.

d. Undog door and cycle door, hasp, quick acting watertight mechanism and lock through several operational cycles. When operation of the units is satisfactory, i.e., (1) no interferences upon door closure/opening, either door to hasp or quick acting watertight mechanism to hasp or (2) no interference upon assembly/disassembly of the lock body.

e. Full weld Z-bracket to door frame.

f. Repeat steps c. and d. above.

g. The mounting plate should be welded securely to door stiffeners.

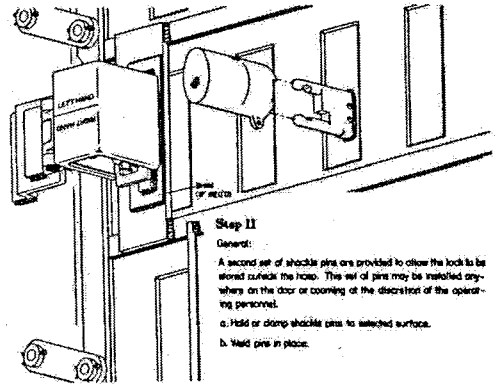

Step 11

General:

A second set of shackle pins are provided to allow the lock to be stored outside the hasp. This set of pins may be installed anywhere on the door or coaming at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

FIGURE 2. Installation procedures for left-hand or right-hand hinged quick acting watertight doors swinging in to open, style 5. - Continued

SH 131798

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.