MILITARY SPECIFICATION SHEET

HASP, HIGH SECURITY, SHROUDED FOR SHIPBOARD DOORS AND HATCHES USING HIGH AND MEDIUM SECURITY PADLOCK, STYLE 6

This specification sheet is approved for use by the Naval Sea Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the hasp described herein shall consist of this document and the latest issue of MIL-H-24653(SH).


REQUIREMENTS:

The configuration and marking requirements applicable to style 6 hasp shall conform to figure 1.


Installation instructions: Each hasp assembly shall be furnished with installation instructions shown on figure 2.

Preparing activity:
Navy - SH
(Project 5340-N087)


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

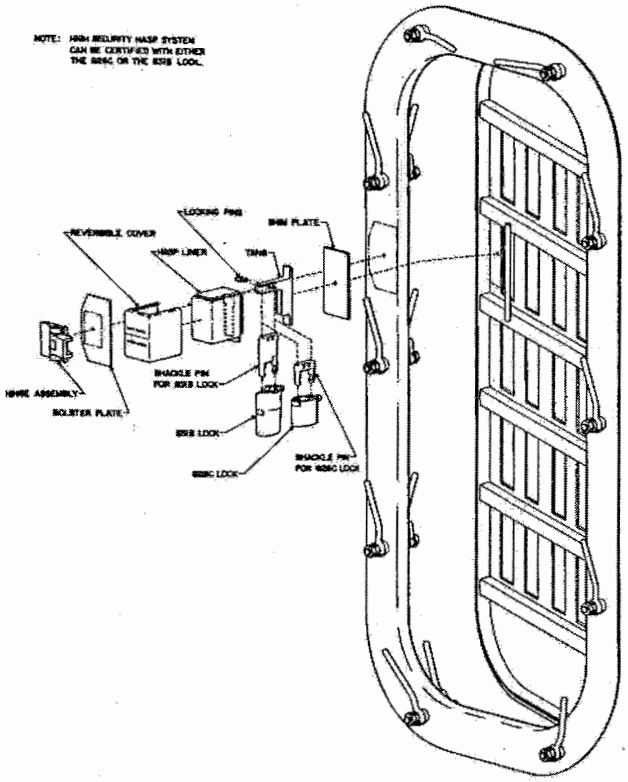


INDIVIDUALLY DOGGED INWARD SWINGING WATERTIGHT DOOR



INWARD SWINGING WATERTIGHT DOOR SLIDING DOG TYPE



INWARD SWINGING WATERTIGHT DOOR




INWARD SWINGING WATERTIGHT DOOR


FIGURE 1. Configuration for left-hand or right-hand hinged swinging in to open, style 6.

SH 131791

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

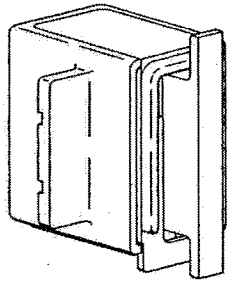

Hasp shown with liner, tang,cover and packaging (as shipped from manufacturer.)

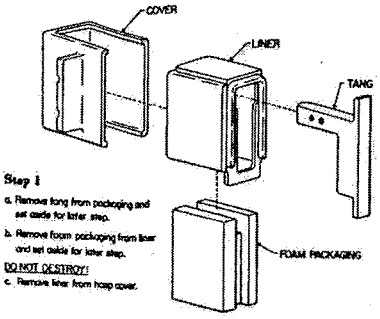


Step 1

a. Remove tang from packaging and set aside for later step.

b. Remove foam packaging from liner and set aside for later step.

DO NOT DESTROY!

c. Remove liner from hasp cover.

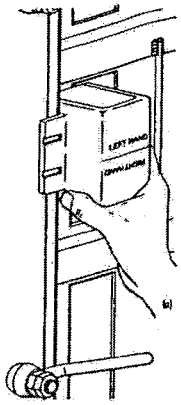

Step 2

General:


The hasp cover is reversible. Its final configuration must be determined during installation. The attitude of the liner within the hasp cover produces the left-hand or right-hand configuration. Figure 6(a) shows the hasp and liner in the left-hand mode. For use with inward swinging doors, the hasp cover and liner will be welded to the coaming. This procedure is therefore opposite of that for outward swinging doors. The hasp in its left-hand mode will be welded to the left-hand coaming. The hasp in its right-hand mode will be welded to the right-hand coaming.

a. Determine the attitude of hasp liner and cover assy. by holding units against the door coaming as shown.

b. After trial assembly, weld the liner to the cover as shown.

6(a)

(only use the welding rod provided or certified in this document. Strength and security capabilities will be seriously impaired if a non-certified rod is used.)

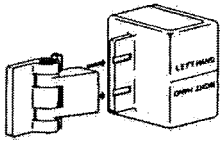


Step 3


General:

The use of the hinge assembly permits the hasp to be swung out of the door clear opening with the lock removed and after the door is opened. The door must first be opened because of the limited turning radius of the hinge assembly and the tang/liner interference that results.

a. Locate hinge assembly so that covered portion fits into grooves provided in the flange of the hasp cover.

b. Weld hinge assembly to hasp cover as shown.

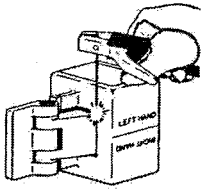

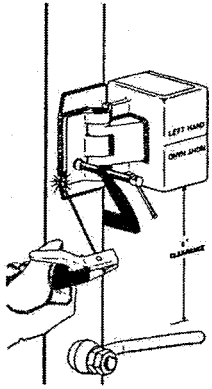

Step 4

General:

To provide a correctly aligned hasp, a bolster plate has been provided. This plate will be fully welded to the door coaming. The hasp cover/liner assembly will then be welded to it.

a. Position the bolster plate, the hinge and cover/liner assembly as shown. A minimum of 6 inches of clearance must be provided between the open locking end of the hasp and any obstruction to allow removal of the lock.

b. Clamp the plate and hasp cover/liner assy. in place.

c. Weld the bolster plate to the coaming as shown.

d. Weld the hinge and hasp cover/liner assy. to the bolster plate.


e. Remove clamp and allow welds to air cool.

WELDING ROD SPEC.

STAINLESS STEEL TYPE E, CLASS 1
310-16 $\frac{1}{16}$ DIA.
AWS A5.4 PER MIL-E-22200/2

FIGURE 2. Installation procedures for left-hand or right-hand hinged doors swinging in to open, style 6.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.

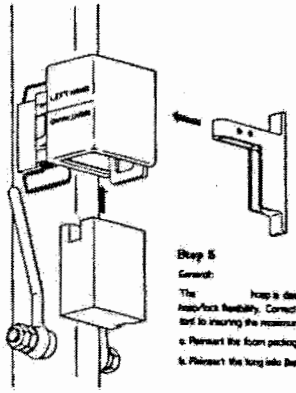


Step 5

General:

The hasp is designed to provide a large degree of keep-face flexibility. Correct installation of the long is important to insuring the maximum flexibility.

a. Reinsert the foam packaging into the door as shown.

b. Reinsert the long into the packaging.

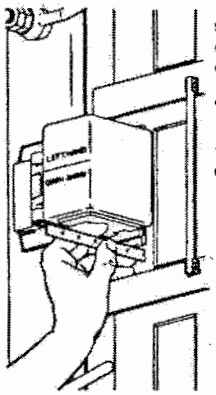

Step 5 (cont.)


c. Close and secure door.


d. Swing hasp cover/liner away into position in door opening and measure clearance from the long flange to the facing door surface.

e. Fill any spaces greater than 1/8" with shim plates provided. The liner must be installed so as to 1/8" but any more must be shimmed.

f. Weld shim plates to door.

g. Tack weld top and bottom of long flanges.

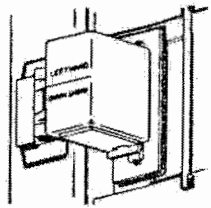

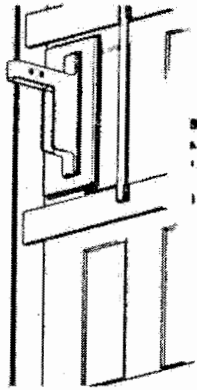


Step 5 (cont.)

h. Open door leaving long unattached.

i. Finish welding long to door as shown. Allow welds to air cool.

j. Remove foam packaging from cover/liner and discard.

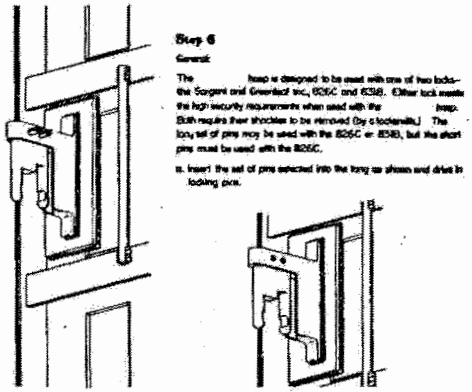


Step 6

General:

The hasp is designed to be used with one of two locks--the Sargent and Greenleaf inc., 8265C and 8258. Either lock meets the high security requirements when used with the hasp. Both require liner shackles to be removed (by a locksmith.) The long set of pins may be used with the 8265C or 8258, but the short pins must be used with the 8265C.

a. Insert the set of pins selected into the long as shown and drive in locking pins.

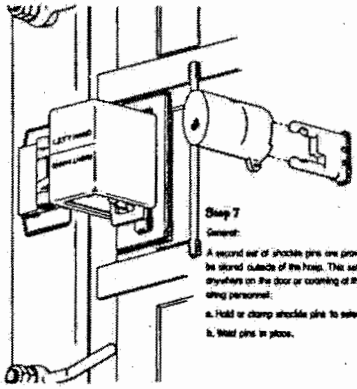

Step 7

General:

A second set of shackle pins are provided to allow the lock to be stored outside of the hasp. This set of pins may be installed anywhere on the door or coaming at the discretion of the operating personnel.

a. Hold or clamp shackle pins to selected surface.

b. Weld pins in place.

FIGURE 2. Installation procedures for left-hand or right-hand hinged doors swinging in to open, style 6. - Continued

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:43Z
Check the source to verify that this is the current version before use.