NOT MEASUREMENT SENSITIVE

MIL-HDBK-863A
13 October 2015

SUPERSEDING
MIL-HDBK-863
1 September 1997

# DEPARTMENT OF DEFENSE HANDBOOK FOR WIRING DATA AND SYSTEM SCHEMATIC DIAGRAMS PREPARATION OF

This handbook is approved for use by the Department of the Air Force and is available for use by all Departments and Agencies of the Department of Defense.

Comments, suggestions, or questions on this document should be addressed to AFLCMC/HIAM Technical Data Section, 4170 Hebble Creek Road, Bldg. 280, Door 15, Area A, Wright-Patterson AFB, OH 45433–5653 or emailed to SGMLsupport@us.af.mil. Since contact information can change, the currency of this address information should be verified using the ASSIST Online database at https://assist.dla.mil/.

**AMSC N/A** **AREA DRPR**

**DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.**

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# FOREWORD

## NOTE

**The sample drawings are informational only and complete to the degree necessary to illustrate a type of drawing. Actual format and drawing should conform to the textual guidance set forth in this handbook**

1. This handbook is for guidance only and cannot be cited as a requirement for wiring data and schematic diagram guidance for aerospace vehicles and aerospace support applications.

2. This handbook utilizes the intent of ISO 2042-1973-10-01, aircraft electrical circuit diagrams.

3. This handbook supplements the general guidance of ASME Y14.100, Engineering Drawing Practices, with detailed information on specific drawing guidance.

4. Following the guidance herein will:

   a. insure uniform state-of-the-art data preparation and presentation.

   b. enhance training and understanding of systems by use of schematics and diagrams directly reproduced from engineering data.

   c. permit direct incorporation of engineering data into technical publications without need for redraw.

   d. provide rapid access to aerospace vehicle wiring and system data.

   e. provide the management activity with management and configuration control data.

   f. provide effective engineering source document for fault isolation logic and analysis.

5. Tailoring of the use of this handbook to meet the guidance of a specific contract is encouraged.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# CONTENTS

FOREWORD ..... ii
1 SCOPE ..... 1
2 Applicable DOCUMENTS ..... 1
2.1 General ..... 1
2.2 Government documents ..... 1
2.2.1 Specifications, standards, and handbooks ..... 1
2.2.2 Other Government documents, drawings, and publications ..... 1
2.3 Non-Government publications ..... 1
3 DEFINITIONS ..... 2
3.1 Aerospace vehicle functional system ..... 2
3.2 Line replaceable unit (LRU) ..... 2
3.3 Management activity ..... 2
3.4 Master reproducible ..... 2
3.5 Modification directive ..... 2
3.6 Sub-system ..... 2
3.7 Sub-sub-system ..... 2
3.8 Technical publication ..... 2
3.9 Wire harness ..... 2
4 GENERAL guidance ..... 2
4.1 Wiring data and system schematic diagrams ..... 2
4.2 Drawing method ..... 2
4.3 Drawing size and format ..... 2
4.3.1 Diagram pages ..... 2
4.3.2 Records, indexes, lists, and general information ..... 2
4.4 Legibility and contras ..... 3
4.4.1 Reproducible master copies ..... 3
4.4.2 Microfilming ..... 3
4.5 Graphic symbols ..... 3
4.6 Unit symbols ..... 3
4.7 Abbreviations ..... 3
4.8 Metric system ..... 3
5 DETAILED guidance ..... 3
5.1 Book-form wiring and schematic data ..... 3
5.1.1 Drawing title page ..... 4
5.1.2 Book-form drawing revision record ..... 4
5.1.3 Contents record ..... 4
5.1.4 General Information ..... 5
5.1.5 Index of production diagrams ..... 6
5.1.6 Index of effective diagrams ..... 6
5.1.7 Index of modification ..... 7
5.1.8 Modification data indexes ..... 7
5.1.9 Connection list ..... 7
5.1.10 Wire harness list ..... 8
5.1.11 Equipment list ..... 9
5.1.12 Interconnection diagrams ..... 9



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# CONTENTS

5.1.13 System schematic diagrams ..... 11
5.1.14 Equipment location diagrams ..... 14
5.1.15 Wire harness location diagrams ..... 15
5.2 System coding method (aerospace system) ..... 15
5.2.1 System sub-division and higher level designations ..... 15
5.2.2 Line replaceable unit (LRU) higher level designations ..... 16
5.2.3 Class letter ..... 17
5.2.4 Unit number identifier ..... 17
5.2 Reference Designators (System Coded) ..... 18
5.2.5 Suffix letter ..... 19
5.2.6 Ground point designation ..... 19
5.3 Page identification ..... 19
5.3.1 Page titles ..... 19
5.3.2 Configuration code ..... 19
5.4 Wire identification ..... 20
5.5 Electromagnetic compatibility categories ..... 20
5.6 Wire type code ..... 20
5.7 Wiring/equipment modifications ..... 20
5.7.1 Wiring/equipment modification identification ..... 20
5.7.2 As installed data ..... 20
5.7.3 Installation data ..... 20
5.8 Revisions ..... 20
6 Notes ..... 21
6.1 Subject term (key word) listing ..... 21
FIGURE 1. Drawing Format (C Size) ..... 22
FIGURE 2. Drawing Format (D Size) ..... 23
FIGURE 3. Dimensions for Common Graphic Symbols ..... 25
FIGURE 4. Title Page ..... 26
FIGURE 5. Revision Record ..... 27
FIGURE 6. Contents Record ..... 28
FIGURE 7. Index of Production Diagrams ..... 29
FIGURE 8. Index of Effective Diagrams ..... 30
FIGURE 9. Index of Modifications ..... 31
FIGURE 10. Modification Data Index ..... 32
FIGURE 11. Connection List ..... 33
FIGURE 12. Wire Harness List ..... 34
FIGURE 13. Equipment List Communications System ..... 35
FIGURE 14. Block Interconnection Diagram ..... 36
FIGURE 15. Point to Point Interconnection Diagram ..... 37
FIGURE 16. System Schematic Diagram Graphics ..... 45
FIGURE 17. Block Schematic Diagram ..... 46
FIGURE 18. Simplified Schematic Diagram ..... 48
FIGURE 19. Detail Schematic Diagram ..... 50
FIGURE 20. Detailed System Schematic Diagram ..... 54
FIGURE 21. Equipment Location Diagram ..... 55



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# CONTENTS

FIGURE 22. Wire Harness Location Diagram .....59
FIGURE 23. Higher Level Designations (System Coded) .....61
FIGURE 24. Terminal Size Symbols .....62
INDEX .....67
CONCLUDING MATERIAL .....67



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# 1 SCOPE

This handbook is for guidance only and cannot be cited as a requirement. This engineering data (wiring data and schematic diagrams) is to be used for (1) configuration control by management activity, (2) direct incorporation into technical publications without redrawing, (3) training of maintenance personnel, and (4) development of engineering source document for fault isolation logic and analysis.

# 2 APPLICABLE DOCUMENTS

2.1 General. The documents listed below are not necessarily all of the documents referenced herein, but are those needed to understand the information provided by this handbook.

| | |
|---|---|
| **MIL-PRF-5480** | Data, Engineering and Technical, Reproduction |
| **MIL-STD-681** | Identification Coding and Application of Hookup and Lead Wire |
| **MIL-STD-1808** | Department of Defense Interface Standard System Subsystem Sub-Subsystem Numbering |

(Copies of federal and military specifications, standards and handbooks are available at http://quicksearch.dla.mil/ or from the Standardization Documents Order Desk, Building 4D, 700 Robbins Avenue, Philadelphia, PA 19111-5094.)

PUBLICATIONS

DEFENSE SUPPLY AGENCY

| | |
|---|---|
| **H4-1** | Cataloging Handbook |
| **H4-3** | Federal Supply Code for Manufacturers |

(Copies of specifications, standards, drawings, and publications required by contractors in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

2.2 Government documents.

2.2.1 Specifications, standards, and handbooks.

2.2.2 Other Government documents, drawings, and publications.

2.3 Non-Government publications. The following documents form a part of this document to extent specified herein.

| | |
|---|---|
| **ASME Y14.1** | Drawing Sheet, Size and Format |
| **ASME Y14.1M** | Metric Drawing Sheet Size and Format |
| **ASME Y14.2** | Line Conventions and Lettering |
| **ASME Y14.15** | Electrical and Electronic Diagrams |
| **ASME Y14.38** | Abbreviations and Acronyms |
| **ASME Y14.41** | Digital Product Definition Data Practices |
| **ASME Y14.100** | Engineering Drawing Practices |
| **ASME/IEEE 260** | Letter Symbols for Units Used in Science and Technology |
| **IEEE STD 91** | Graphic Symbols for Logistic Diagrams (Two-state Devices) |
| **IEEE STD 100** | Reference Designations for Electrical and Electronic Parts and Equipment |
| **IEEE STD 315** | Graphic Symbols for Electrical and Electronics Diagrams (Including Reference Designation Class Designation Letters) |
| **ISO 2042-1973-10-01** | Aircraft Electrical Circuit Diagrams |
| **SAE-AS39029** | Contacts, Electrical Connector, General Specification For: |
| **SAE-AS50881** | Wiring, Aerospace Vehicle |

The American Society of Mechanical Engineers (ASME), Three Park Avenue, New York, NY 10016-5990. http://www.asme.org

SAE (SAE is not an acronym), SAE International, 400 Commonwealth Drive, Warrendale, PA 15096-0001. http:/www.sae.org/servlets/index



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

## 3 DEFINITIONS

3.1 Aerospace vehicle functional system. A functional system is a combination of inter-related groups of equipment, sets and line replaceable units (LRUs) arranged to perform an operational function within an aerospace system. Specific system descriptions may be found in MIL-STD-1808.

3.2 Line replaceable unit (LRU). An LRU is a unit which can be removed from an aerospace system and replaced with a like operating unit, in order to restore the operational capability of the next higher system.

3.3 Management activity. A generic term used to denote the governmental organization responsible for the aerospace system during a specific phase of its acquisition/service life cycle.

3.4 Master reproducible. A deliverable original, first generation copy, or duplicate copy of a drawing.

3.5 Modification directive. The normal authorization document directing modification of an aerospace system. The directive may be in the form of a Time Compliance Technical Order (TCTO-USAF), Modification Work Order (ARMY) a Airframe Technical Directive (NAVY) Service Bulletin, etc.

3.6 Sub-system. A sub-system is a combination of related groups of equipment, sets and LRUs arranged to perform a specific function with a system and is a major sub-division of the systems Specific sub-system descriptions may be found in MIL-STD-1808.

3.7 Sub-sub-system. A sub-sub-system is generally a single set or group of related equipment and LRUs arranged to perform a specific function of a sub-system and is a sub-division of a sub-system. A sub-sub-system of a highly complex sub-system and system may consist of more than one identical and redundant single set of equipment.

3.8 Technical publication. A technical publication is a manual containing a description of a weapon system and equipment with instructions for effective use, including one or more of the following sections: installation, preparation for use, operation, maintenance, overhaul, parts breakdown, related technical information, or procedures.

3.9 Wire harness. A wire harness consists of one or more conductors, including coaxial cables which are grouped together or treated as a separate assembly for the purpose of ease of assembly or installation.

## 4 GENERAL GUIDANCE

4.1 Wiring data and system schematic diagrams. The wiring data and system schematic diagrams should be prepared in bookform drawing format, in accordance with ASME Y14.100 and this handbook. Pages should be prepared, arranged and numbered in 3 accordance with this handbook. Each modification or alteration to the aerospace system should be documented

4.2 Drawing method. The wiring data and system schematic diagrams may be prepared and maintained in any suitable manner which is capable of being reproduced as master reproducible data conforming to the format, drawing density, drawing quality, and all other guidance of this handbook and ASME Y14.100.

4.3 Drawing size and format. Drawings should conform to the guidance of this handbook (see Figures 1 and 2), and where specified, to ASME Y14.1. All drawing dimensional guidance specified in 4.3.1 and 4.3.2 or elsewhere in this handbook refer and apply to deliverable master reproducible drawings.

4.3.1 Diagram pages. Diagram pages should be prepared on C or D size formats, as specified by procuring activity. Letters should be upper case (sans serifs preferred) with no more than 10 characters per inch (25mm). Upper case letters representing lower case letters, such as in connector pin identification, should be followed by an asterisk in accordance with ASME Y14.15. The minimum letter and number heights on wiring and schematic diagrams should be in accordance with ASME Y14.2. Letters, numbers, and symbols should be machine applied or hand scribed using templates or guides. Free-hand lettering is not permitted. Lines may be inked or photo processed. Line spacing on diagram pages should be based on a .10 inch (2.5mm) grid system with a minimum separation of .20 inch (5mm).

4.3.2 Records, indexes, lists, and general information. Record, index, general information, and list pages should be prepared for reproduction on B or C size formats (see Figures 5 through 13). NOTE: Figures containing automated printout are intended only for format presentations; automated printout is not a



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

requirement. Letters should be upper case (sans serifs preferred), with no more than 10 characters to the inch (25mm). Upper case letters representing lower case letters, such as in connector pin identification, should be followed by an asterisk, in accordance with ASME Y14.15. The minimum letter and number height should be .12 inch (3.0mm) for C size format and .10 (2.5mm) for B size format. Only mechanically applied lettering, in accordance with ASME Y14.2, should be used.

4.4 Legibility and contras. All master reproducible pages should meet the guidance of MIL-PRF-5480.

4.4.1 Reproducible master copies. When stable base reproducible masters are specified in the contract, the copies should be furnished on 3 to 4 mil erasable stable base polyester film, or as specified by procuring activity.

4.4.2 Microfilming. When microfilmed in accordance with ASME Y14.41, blow backs of Type I Class I microfilm should produce copies conforming to applicable legibility and contrast guidance.

4.5 Graphic symbols. Electrical and electronic diagram graphic symbols should conform to IEEE STD 315 and should be prepared so that the connection points are located at the intersections of a modular grid of 0.10 inch (2.5mm) increments. Dimensions for commonly used symbols should conform to Figure 3. Other symbol sizes should be relative to those shown. Terminal stud sizes should be shown by symbols on the interconnection diagrams in accordance with Figure 24. When non-handbook symbology is needed, a table or tables should be provided, as general information, which show and explain all symbols used on the drawing. This symbol library, after initial approval by the procuring activity, and subsequent updating, should be used throughout the lifetime of the aerospace system. IEEE STD 91 should be used for logic diagrams.

4.6 Unit symbols. Letter symbols for electrical and electronic units should be in accordance with ASME/IEEE 260.

4.7 Abbreviations. Abbreviations should be in accordance with ASME Y14.38.

4.8 Metric system. Metric units of measurement should be in accordance with ASME Y14.1M.

## 5 DETAILED GUIDANCE

5.1 Book-form wiring and schematic data. System wiring and schematic data should be prepared as book-form drawings containing the following categories of data.

| Category Title | Data Category (Page Prefix) |
|---|---|
| Revision Record | 1 |
| Contents Record | 2 |
| General Information | 3 |
| Index of Production Diagrams | 4 |
| Index of Effective Diagrams | 5 |
| Index of Modifications | 6 |
| Modification Data Index | 7 |
| Connection List | 8 |
| Wire Harness List | 9 |
| Equipment List | 10 |
| Interconnection Diagrams | 11 |
| System Schematic Diagrams | 12 |
| Equipment Location Diagrams | 13 |
| Wire Harness Location Diagrams | 14 |



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

5.1.1 Drawing title page. The drawing title page should list the system production unit numbers or serial numbers and each production contract to which the drawing is applicable. The title page should contain the title of the overall drawing. For example: “Wiring Data and System Schematics Diagrams”. The title page should always bear the latest revision letter assigned to the drawing (see Figure 4).

5.1.2 Book-form drawing revision record. The revision record should be mechanically prepared and should alphabetically list each revision to the drawing by revision letter, omit I, O, Q, S, X, and Z (International V), with the date of the revision (see Figure 5). Each line listing should also contain the approval authority and a description of the change. A brief description of the change should be made on the revision page or a reference made to the revision authorization document (design change notice, engineering change order, etc.) describing the change. The change description should include in addition to the description of the change a listing by page number of each drawing page revised and each new page added by the revision and should become a part of the book-form drawing filed as supplementary revision data pages. This revision record satisfies the ASME Y14.100 requirement for a revision block containing a change history record on each page of the book-form drawing.

5.1.2.1 Revision record page numbering. Each revision record page should be numbered with a three element number. The first element should consist of the data category prefix 1 (reference 5.1). The second element should consist of a four digit number assigned sequentially, beginning with 0001 and should be the basic page numbers of the revision record. The third element should consist of a two digit number, beginning with 00 and should be used as a supplementary page number to the basic page. The pages of the change description should be numbered sequentially, beginning from the last number previously used in the revision record. Should supplementary pages to the basic page be required, they should be inserted in the revision record directly after the basic page being supplemented (see the following examples).

| | | | | |
|---|---|---|---|---|
| 1 | - | 0001 | - | 02 |
| 1 | - | 0009 | - | 00 |
| 1 | - | 0009 | - | 01 |
| (a) | | (b) | | (c) |

a. Data category prefix (for revision record)

b. 0001 - 1st page of revision record.
0009 - 9th page of revision record.
0009 - 9th page of revision record.

c. 02 - 2nd supplementary page to revision record page 0001
00 - Basic page of revision record page 0009
01 - 1st supplementary page to revision record page 0009

5.1.3 Contents record. The contents record should list each page of the drawing by page number and its latest revision letter. The record should list all pages which have at any time been released as part of the drawing without regard to current system applicability. The record should list the pages by category and page sequence in the same order that the data is to be filed or bound as a book (see Figure 6).

5.1.3.1 Contents record page numbering. Each contents page should be numbered with a three element number. The first element should consist of the data category prefix 2 (reference 5.1). The second element should consist of a four digit number assigned sequentially beginning with 0001. The third element should consist of a two digit number beginning with 00 (see the following example).

| | | | | |
|---|---|---|---|---|
| 2 | - | 0002 | - | 00 |
| (a) | | (b) | | (c) |

a. Data category prefix (for contents record)

b. 2nd page of contents



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

c. Basic page

5.1.4 General Information. The general information category of pages should contain information to fully explain the use and interpretation of the drawing. Sufficient data should be included to minimize the need for reference to other documents in order to interpret data contained in the drawing. Such data as handbook practices in bonding, wiring assembly, installation, etc., may be included. The data described in the following sub-paragraphs should be included as a minimum.

5.1.4.1 Drawing description. The purpose, arrangement, and use of the drawing should be fully explained. Each category of data pages should be listed and the content, interpretation, and use of each should be described. Column headings on equipment list, wire harness list, and connection lists should be shown and explained including descriptors, acronyms, or abbreviations used.

5.1.4.2 Production unit numbers. A cross reference listing or contractor production unit numbers versus government assigned serial numbers should be provided.

5.1.4.3 System identification numbers. The construction and interpretation of system identification numbers as required by 5.2 should be explained. A list should be provided of the system identification numbers that were used with the system titles. A list should, also, be included of all sub-sub-system identification numbers that were used on the drawing with their respective titles.

5.1.4.4 Higher level designations. The arrangement and interpretation of higher level designations as required by 5.2 should be explained. A table should be included listing all class letters used in the drawing with their assigned noun phrases.

5.1.4.5 Wire harness numbers. Wire harness numbers should be explained and the methods used to physically identify harnesses should be described (see 5.4).

5.1.4.6 Wire numbers. The arrangement and interpretation of wire identification numbers (reference 5.4) should be fully explained and each method used to physically identify wires such as imprinting, color coding, etc., should be explained.

5.1.4.7 Manufacturers (Vendors) list. A listing should be provided of each manufacturer (vendor) of an LRU. The list should consist of the name, address, and when assigned, the Federal Supply Code for Manufacturer (FSCM) in accordance with Cataloging Handbook H4-1.

5.1.4.8 Electromagnetic compatibility criteria. Electromagnetic compatibility category designators required by 5.5 should be listed and explained. Wire separation nomographs and other installation criteria concerning electromagnetic compatibility should be included in this section.

5.1.4.9 Wire type code. Wire type codes required by 5.6 should be explained and listed.

5.1.4.10 Symbols library. A table(s) should be provided which shows and explains all symbols used on the drawing(s). Once established and approved by the Management Activity, the same symbols should be used throughout the life cycle of the system.

5.1.4.11 Notes. Notes on drawings are used to provide supplemental information and instructions, to avoid congestion in the field of the drawing, to avoid repetition of information and to otherwise assure completeness and clarity of the data. The system notes used should be fully explained.

5.1.4.11.1 Coded notes. Coded notes are notes which are listed in the general information section and which utilize a coding symbol to indicate the locations throughout the drawing data where each note is applicable. The coding symbol should consist of a number assigned in numerical sequence and enclosed in parentheses, for example: (5). Coded notes should be used for notes required on list and index pages. Coded notes should also be used on diagrams for notes which are repetitively used. Leaders may be used with the note coding symbol on diagrams, but in general should be avoided.

5.1.4.11.2 Local notes. Local notes are numbered notes which are grouped together on a drawing and which apply only to that specific page. Local notes should be used only on diagram pages. When a numbered local note must indicate applicability at a particular location within the diagram to achieve clarity, the note number should be within a flag (for example: 5) and the numbered flag should also be entered on the diagram at the location(s) to which the note applies.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

5.1.4.12 General information page numbering. Each general information page should be numbered with a three element number. The first element should consist of the data category prefix 3 (reference 5.1). The second element should consist of a four digit number assigned sequentially beginning with 0001, and should be the basic page number of the general information. The third element should consist of a two digit number beginning with 00, and should be used as a supplementary page number to the basic page (see the following example).

| | | | | |
|---|---|---|---|---|
| 3 | - | 0001 | - | 00 |
| 3 | - | 0002 | - | 01 |
| (a) | | (b) | | (c) |

a. Data category prefix (for general information)

b. 0001 - 1st page of general information
   0002 - 2nd page of general information

c. 00 - Basic page of the general information page
   01 - Supplementary page to general information page 0002

5.1.5 Index of production diagrams. The index of production diagrams should list all diagrams applicable to systems as delivered from production to the government. The index should list the production unit number or government-assigned serial number of all systems which each diagram is applicable. Each diagram should be identified by page number, noun phrase, and applicable revision letter. This index should provide a permanent record of the exact "as delivered" configuration of the aerospace system. A separate page or group of pages should be prepared for each system number assigned in accordance with 5.2.1 (see Figure 7).

5.1.5.1 Index of production diagrams page numbering. Each page of the production diagram index should be assigned four element number. The first element should consist of the data category prefix 4 (reference 5.1). The second element should consist of the diagram category prefix (reference 5.1). The third element should consist of the functional system number (reference 5.2.1 and MIL-STD-1808) or location code (reference 5.1.14.1). The fourth element should consist of a two digit number assigned sequentially beginning with 01. (See the following examples.)

| | | | | | | |
|---|---|---|---|---|---|---|
| 4 | - | 3 | - | 24 | - | 01 |
| 4 | - | 14 | - | 00 | - | 01 |
| (a) | | (b) | | (c) | | (d) |

a. Data category prefix (for production diagram index)

b. Diagram category

   11 - Interconnection diagrams

   12 - Schematic diagrams

   13 - Equipment location diagrams

   14 - Wire harness location diagrams

c. System designator (reference 5.2.1 and MIL-STD-1808)

d. 1st page of system grouping

5.1.6 Index of effective diagrams. The index of effective diagrams should list all diagrams currently applicable and should list the production unit number or government-assigned serial numbers of all systems which each diagram is applicable. Each diagram should be identified by page number, noun phrase, configuration code, and applicable revision letter. This index should identify the current authorized applicability of each diagram and should be updated as necessary to incorporate approved modifications and



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

changes upon direction of the management activity. The index should indicate modification sequencing affecting diagram applicability including superseding and superseded diagram information. The index should also identify the incorporating modification directive for all diagrams effected as a result of modifications. After a diagram has been incorporated on all systems to which it applies, superseded diagram information should be deleted upon direction of the Management Activity. A separate index page or group of index pages should be prepared for each system number assigned in accordance with 5.2.1 (see Figure 8).

5.1.6.1 Index of effective diagram page numbering. Each page of the effective diagram index should be assigned a four element number. The page number should be assigned as in 5.1.5.1 except the data category prefix in the first element should be 5.

5.1.7 Index of modification. The modification index should list each modification after delivery of the production system, affecting wiring or requiring the addition, deletion or change of an LRU (see 5.7.1). As a minimum, the index should list the modification number (sequentially assigned), modification title, the drawing number of the top installation drawing for the modification and its Federal Supply Code for Manufacturers number, the Engineering Change Proposal number or other change number, and the modification directive (see Figure 9).

5.1.7.1 Index of equipment modifications page numbering. Each page of the index of modifications should be assigned a three element numbers. The first element should consist of the data category prefix 6 (reference 5.1). The second element should consist of a four digit number assigned sequentially beginning with 0001. The third element should consist of a two digit number beginning with 00 (see the following example).

| 6 | - | 0002 | - | 00 |
|---|---|---|---|---|
| (a) | | (b) | | (c) |

a. Data category prefix (for modification index)

b. 2nd page of modification index

c. Basic page

5.1.8 Modification data indexes. An individual modification index consisting of one or more pages should be prepared for each after-delivery modification affecting wiring or requiring the addition, or deletion, or change of a line replaceable unit. Each index should list the production unit or serial number of the applicable systems, the modification title, the contract number, the top installation drawing for the modification and its Federal Supply Code for Manufacturers, the modification directives and modification sequencing information. Each index should list, by page number and revision letter, all list and diagram data affected by the modification including new and superseded pages with the applicability of each page by production unit number or serial number (see Figure 10).

5.1.8.1 Modification data index page numbering. Each page of the modification data indexes should be assigned a three element number. The first element should consist of the data category prefix 7 reference 5.1). The second element should be a four digit number assigned sequentially according to the modification number (reference 5.1.7) and beginning with 0001. The third element should consist of a two digit number assigned sequentially according to the number of pages required and beginning with 01 (see the wing example).

| 7 | - | 0015 | - | 03 |
|---|---|---|---|---|
| (a) | | (b) | | (c) |

a. Data category prefix (for modification data indexes)

b. 15th modification

c. 3rd page of the 15th modification data index

5.1.9 Connection list. Connection list pages should list all LRUs to which system wiring is connected and should identify each connection and the attached wiring. A separate page or group of pages should be prepared for each sub-system number for which items are listed. Items should be listed in alpha-numerical



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

order by higher level designations (reference 5.2.2). All connection points on each item should be listed by alpha-numeric identifier, symbol, color code, etc. Grounds should be listed by ground point designations (see 5.2.6). For each connection, the complete wire identification (see 5.4), overall system effectivity and sub-sub-system number of the applicable interconnection diagram should be listed (see Figure 11).

5.1.9.1 Connection list page numbering. Each page of the connection list should be identified by a four element number. The first element should consist of the data category prefix 8 (reference 5.1). The second element should consist of a two digit functional system number (reference MIL-STD-1808). The third element should consist of a two digit sub-system number (reference MIL-STD-1808). The fourth element should consist of a two digit number assigned sequentially beginning with 01 (see the following example).

| 8 | - | 23 | - | 10 | - | 01 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c) | | (d) |

a. Data prefix category (for connection list)

b. Functional system (communications)

c. Sub-system (high frequency)

d. 1st page of connection list for the communication HF sub-system

Configuration codes should not normally be used for page identification except as noted in 5.3.2.2.

5.1.10 Wire harness list. Wire harness data pages should list all interconnecting wiring (see 4.3.2 NOTE: and Figure 12). A separate page or group of pages should be prepared for each harness. Each conductor in the harness including shields should be listed by wire number. Each line listing should include the following categories of information as applicable:

a. Applicable revision letter for the line entry

b. Wire number (reference 5.4)

c. Wire type code (reference 5.6)

d. Wire length (specify units, i.e., feet/inches (m/mm))

e. Sub-sub-system interconnection wiring diagram number where wire is shown

f. Termination end 1 (higher level designations for LRU at which the conductor is terminated including ground points, splice areas if termination is a splice and adjacent LRU for a shield termination reference 5.2.2 through 5.2.2.7).

g. Terminating code (a code which identifies the part number of the terminating device to which the wire attaches and the tooling data for the termination). A three digit code (basic identification number BIN code) should be used for connector contacts in accordance with MIL-C-39029. A distinctive code determined by the aerospace system manufacturer should be used for lugs, splices and ferrules (reference 5.1.4.11.1).

h. Connection point (connet. pt.).
Numbers under the Connet. Pt. column consisting of up to 9 alpha-numeric characters identify pin or socket number for connectors, terminal identification or ground point number for lugs, splice number for splices and ferrule number for shield connections.

i. Termination end 2 (same as item f. above)

j. Termination information for end 2 as required for end 1 (reference items g and h above)

k. Modification directive incorporating line listings if applicable

l. System serial or production number incorporating the line listing

m. Electromagnetic compatibility category (EMC) designation for the line listing (reference 5.1.4.8)

n. Signal code - a specific code which identifies the discrete signal carried by the wire may be included for each line listing. This code, if used, should be listed in the General Information



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

category 3 data under Signal Codes. The first page of each wire harness group should identify the manufacture assembly number of the harness, system effectivity and Federal Supply Code for Manufacturers by note or other suitable method.

5.1.10.1 Wire harness list page numbering. Each page of the wire harness should be assigned a three element number. The first element should consist of the data category prefix 9 (reference 5.1). The second element should be assigned a four digit number consisting of the wire harness identifying number. The third element should consist of a two digit number ass signed sequentially and beginning with 01 (see the following example).

| 9 | - | 0129 | - | 02 |
|---|---|---|---|---|
| (a) | | (b) | | (c) |

a. Data category prefix (for wire harness lists)

b. Harness identifier (129th harness)

c. 2nd page of the 129th harness list

Configuration codes should not normally be used except as noted in 5.3.2.2.

5.1.11 Equipment list. Equipment list pages should list all LRUs and equipment enclosures installed in the aerospace system. A separate page or group of pages should be prepared for each functional system identification number assigned (reference 5.2.1). Items should be listed by higher level designations reference 5.2.2.1) in alpha-numerical order. Each line listing should include part number, noun phrase description, installation drawing effectivity system production unit or serial number effectivity and location by water line, station line, and buttock line reference. If the line item LRU is part of a higher assembly LRU, the location may be defined as the system higher level designation of the higher assembly in lieu of station, water, and buttock line references. The Federal supply Code for Manufacturers should be entered in the part number/FSCM code column under the part number for all parts identified by manufacturer's part number. If a code has not been assigned in Catalog Handbook H4-1, the manufacturer's name and address should be provided by means of a numerically coded note (reference 5.1.4.11.1). The applicable revision letter for each line entry should be listed. Additional data columns, such as status and use of item, change authorization, may be included (see Figure 13).

5.1.11.1 Equipment list page numbering. Each page of the equipment list should be assigned a four element number. The first element should consist of the data category prefix 10 (reference 5.1). The second element should consist of a two digit functional system number (reference MIL-STD-1808). The third element should consist of the two digit code 00 (reference general sub-system category in MIL-STD-1808). The fourth element should consist of a two digit number assigned sequentially beginning with 01 (see the following example).

| 1 | - | 24 | - | 00 | - | 02 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c) | | (d) |

a. Data category prefix (for equipment list)

b. System designator (for electrical power systems)

c. Sub-system designator (general sub-system)

d. 2nd page of the electrical power system equipment list

Configuration codes should not normally be used for page identification except as noted in 5.3.2.2.

5.1.12 Interconnection diagrams. Interconnection diagrams should be prepared to clearly show all wiring interconnections between LRUs of each sub-sub-system. Only one sub-sub-system should be shown on a diagram. Except for written data within equipment outlines, interconnection diagrams should not indicate signal flow. Interconnection diagrams should be of two types; point-to-point diagrams and block diagrams.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

5.1.12.1 Point-to-point interconnection diagrams. A point-to-point interconnection diagram should be prepared for each sub-sub-system depicting all wiring, connections, and line replaceable units. Aerospace system wiring provided with equipment that is connected externally to the LRU should be shown complete. Individual wires should be identified by color coding or numbers. Vendor supplied wiring should also be identified by a cartwheel symbol (reference IEEE STD 315 Item 1.12). Each diagram may consist of one or more pages as required to depict the complete sub-sub-system and its interfaces (see Figure 15).

5.1.12.2 Block interconnection diagrams. A block interconnection diagram depicts the overal1 interconnection relationship of line replaceable units within a sub-sub-system requiring more than 3 pages. The block interconnection diagram should show and identify by higher level designations all line replaceable units of the sub-sub-system including connectors, junction boxes, mounts, control panels, power sources, etc. Groups of terminal strips, such as those within a junction box, may be shown as a single block and the individual higher level designations tabulated within. Each wire harness should be shown and should identify the harness number and the applicable point-to-point interconnect diagram page number (see Figure 14).

5.1.12.3 Interconnection diagram page numbering. Each page of the interconnection diagrams should be assigned a four element number. The first element should consist of the data category prefix 11 (reference 5.1). The second element should consist of a two digit functional system number (reference MIL-STD-1808). The third element should consist of a two digit sub-system number (reference MIL-STD-1808). The fourth element should consist of a two digit number assigned sequentially beginning with 01 (see the following example).

| 11 | - | 23 | - | 11 | - | 03 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c) | | (d) |

a. Data category prefix (for interconnection diagrams)

b. System number (for communications system)

c. Sub-sub-system number (for high frequency sub-system)

d. 3rd page (of high frequency sub-sub-system interconnection diagrams)

Configuration codes (reference 5.3.2) should also be placed in the diagram page block below the page number as required. Within each sub-sub-system, the block interconnection diagram if required should appear first, followed by the point-to-point interconnection pages.

5.1.12.4 Diagram arrangement. Equipment and interconnecting wiring should be arranged so as to provide easy traceability of each wire from end to end and to minimize the number of pages require a to show the entire sub-sub-system. Both end connections of each wire and the wire number should be shown on only one page of point-to-point interconnection diagram. An effort should be made to arrange pages of a multiple page diagram functionally if practicable but not in conflict with the above guidance. Information concerning wire path, seals, raceways, cable routes, hole locations, etc., should be indicated with a dashed line in accordance with IEEE STD 315. In drawing wiring lines, the break in the line for wire numbers should be large enough so that the wire number does not touch the line. On short lines, the wire number should be inserted near one end. On long lines, the wire number should be inserted near both ends. In applications where the wire number cannot be inserted into the drawn line, the wire number may be placed in an adjacent location with a leader and arrowhead to show the point of application. The wire number should be positioned so that no difficulty should be encountered in associating the proper wire with the wire leader line arrowhead. Wire numbers should be spaced evenly so that letters and numbers do not touch each other. Where the wire numbers are in a series, one above the other, they should line up at the left of the wire numbers. Object lines should be broken for feeder lines. Individual wire lines should be spaced in increments of 0.2 inch. Line crossing, bends, and jogs should be kept at a minimum.

5.1.12.5 Interface. Sub-sub-system diagram pages should cross reference all other sub-system diagram pages to which it is interfaced. An interface in this respect means a connection point where a sub-sub-system connects to another sub-sub-system or otherwise changes circuit identity from one sub-sub-system to another. The point of interface may be on a circuit breaker, switch, relay terminal, splice, connector, or other appropriate connection. A dashed line from the connection point should be used to reference the interfacing



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

diagrams. Interfacing diagrams should be identified by the individual interconnection diagram page number. (For example: 33-11-01, 23-21-06, A ---33-11-01, etc.)

5.1.12.6 Critical circuit wiring. When circuit functions are so sensitive as to be affected by wire path, direction, or position, the wiring involved is regarded as critical. Critical lengths of wire or cable and critical bending radii that may affect the performance of equipment should be noted. Such critical wiring guidance can frequently be covered by drawing notes. However, in exceptional cases, a two or three dimensional delineation drawn to scale may be required for a more precise specification of guidance.

5.1.12.7 Line replaceable units or (LRUs). All internal wiring of line replaceable units should be shown with the exception of electronic equipment. The internal wiring should be shown in simple schematic form (reference Figures 14 and 15). Where several identical line replaceable units appear, the internal wiring schematic of only one need be shown.

5.1.12.8 Line replaceable unit terminals. All line replaceable unit wire terminals should be shown in the same manner as the line replaceable unit as marked by the manufacturer. Arbitrary terminal identification based on ASME Y14.15 concepts described under paragraph titled "Identification of Terminals (General)" should be used on diagrams and lists if the line replaceable unit terminals are not otherwise identified.

5.1.12.9 Busses. Busses should be identified as being neither alternating current or direct current and should show the applied voltage. Phase and frequency should be specified if applicable.

5.1.12.10 Circuit breakers. Circuit breakers should be identified by current rating and applied voltage and should have the same functional identification as that shown adjacent to the installed circuit breaker. Phase and frequency should be specified if applicable.

5.1.12.11 Fuses. Fuses should be identified by current rating, applied voltage and should have the same functional identification as that shown adjacent to the installed fuse. Phase and frequency should be specified if applicable.

5.1.12.12 Switches. Switch markings should agree with the functional identification adjacent to the installed switch.

5.1.12.13 Transformers. Transformers should be identified by their voltage and output current rating or by their voltage output.

5.1.12.14 Relays. Relays should normally be shown in their de-energized conditions. Relays should be identified and shown complete with diagram references, if applicable, on the interconnection diagram that provides control of the coil or coils.

5.1.12.15 Controls markings. All control markings which appear on the actual equipment should be repeated identically on the diagram. Controls should be indicated clearly.

5.1.12.16 Higher level designations. Each item of equipment should be identified by the higher level designations assigned in accordance with 5.2.2 and IEEE STD 200. LRUs which also have reference designation assigned by the equipment manufacturer, should in addition show the equipment manufacturer's designator in parentheses. Each connector, terminal strip, or other connecting point for interconnecting wiring which is part of a replaceable unit should be identified by the reference designation assigned by the equipment manufacturer (for example: 1J1, 1J2, 2TB1, etc.). The system identification number may be left off the interconnection diagram for equipment which is a part of that system. (Example: a 2311P1 connector can be placed on the 11-23-11-01 diagram as P1 but a 2459CB1 on the 11-23-11-01 diagram must be identified by 2459CB1 indicating it is a part of the 2459 system.)

5.1.13 System schematic diagrams. System schematic diagrams should be prepared to depict the energy paths and interrelationships between LRU within an aerospace system. The energy paths may be copper, fluids mechanical, or electromagnetic. Schematic diagrams should be structured in a logical manner that will show the complete functional performance and relationship of the systems, sub-systems and sub-sub-systems of the aerospace system. Clarity of presentation of the information depicted on the schematic diagram should be a prime requirement. Graphic presentation of LRUs should be shown by symbol, picture, or cutaway (see Figure 16). Schematic diagrams should portray a system in a sufficient detail to permit



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

trouble analysis to an electrical or mechanical failure and to permit understanding of the system operation by maintenance personnel. Three levels of detail should be used in preparation of schematic diagrams. These levels are: block, simplified, and detail.

5.1.13.1 Block schematic diagrams (first level). The block schematic diagram should be complete, on one page, for the system, sub-system, or sub-sub-system being depicted. The primary purpose of the block schematic diagram is to provide a rapid understanding of the major replaceable units and their interrelationships. Signal flow information is limited to primary functions and does not include control, inhibiting, interlocking, etc. LRU representation should generally be limited to rectangular shapes with restricted use of symbols and pictorial drawing. Block schematic diagrams should be prepared for each system except those instances where 1 or 2 sub-sub-systems comprise the entire function (see Figure 17).

5.1.13.2 Simplified schematic diagrams (second level). Simplified schematic diagrams may be on more than one page. Primary purpose of simplified schematic diagrams is to supplement the block or detail schematic diagrams to provide a better understanding of the function or functions being performed. Simplified schematic diagrams are normally prepared for systems, sub-systems, or sub-sub-systems where the complexity is such that third level schematics do not enable easy understanding of the system (see Figure 18).

5.1.13.3 Detail schematic diagrams (third level). Detail schematic diagrams should be prepared for each sub-sub-system except those of such simplicity that the interconnection diagrams provide complete technical and functional understanding. The primary purpose of the detail schematic diagram is to provide sufficient information for sub-sub-system maintenance. Each sub-subsystem diagram may consist of more than one page. Graphic presentation of line replaceable units should be shown by two of the three types of graphic presentation (Figure 16) when transitioning from one energy media to another (see Figures 19 and 20).

5.1.13.4 Schematic diagram page numbering. Each page of the schematic diagram should be assigned a four element number as described in 5.1.12.3 except the first element (data category prefix) should be 12. Configuration codes (references 5.3.2) should be placed in the schematic diagram page block below the page number as required. Within each sub-system or sub-subsystem grouping the diagrams should be arranged with the block diagrams preceding the simplified diagrams which in turn precede the detail diagrams.

5.1.13.5 Schematic diagram arrangement. When practical, the diagram arrangement should correspond to the equipment location on the system. The preferred layout of a diagram is one in which energy flow is from left to right, top to bottom. Show system controls on the left to right, top to bottom. Show system controls on the left and controlled items on the right. However, to utilize available space, it is permissible to deviate from this requirement.

5.1.13.6 Symbols and pictorials. Schematic diagrams of electromechanical systems, such as the Air Conditioning System, are to be drawn showing the mechanical and electrical relationships in an integrated presentation. Mechanical linkages are to be shown by dashed lines or by isometric, orthographic, or perspective pictorials where the clarity of the function is enhanced. Use recognizable pictorial items such as a reduced size panel face of a control module, the dial of an indicator or an antenna outline, to provide a bridge between theoretical circuit and physical installation for easier assimilation by non-system trained personnel, as well as a system specialist. Dial pictorials need not reflect power off status.

5.1.13.7 Lines. Schematic symbols and pictorials should be logically grouped, with each group located on the schematic so that the complete schematic requires a minimum number of signal flow paths and crossed lines. All lines should be routed as directly as possible with a minimum number of zigzags. Use scattered ground symbols rather than long lines to a central ground. Large groups of lines that run parallel to each other should be in groups of 2 to 4 with double spacing between groups.

5.1.13.8 Line replaceable unit internal schematics. Internal simplified schematics or logic diagrams for LRUs should be drawn for at least one of each different type of LRU shown on the detail schematic diagram page. Cross references to equipment in which the common internal circuitry is shown should be placed within the LRU outline on the schematic. In lieu of this requirement on electronic units manufactured under ARINC specifications, word functions may be used provided that they agree with the specific ARINC report. (Note: An ARINC report or specification is a document that is prepared and published by Aeronautical Radio, Inc. (ARINC), 2551 Riva Road, Annapolis MD 21401. ARINC



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

develops standards for electronic equipment and systems for airlines.) Logic and electrical/electronic interlock circuits should be symbolically presented. To assist function understanding, explanation by words may be used on the schematic. Antenna internal circuitry should be shown.

5.1.13.9 Line replaceable unit sub-modules. Each input to output conversion of a sub-module should be displayed with a minimum of electrical/electronic circuitry by showing it in symbolized form. The exact signal flow should be displayed between sub-modules and sub-sub-modules. Each sub-module and sub-sub-module should be identified by its function description. Sub-modules and sub-sub-modules performing basic functions (amplifier t gates, oscillators, generators, motors, etc. - see Figure 19) should not be shown in detail.

5.1.13.10 Cross reference. Cross reference information should be indicated on all detail schematic diagrams where the complete connection to components such as relays, switches, transformers, etc., are not shown on one diagram, but must be continued on another schematic diagram. Cross reference should be shown by printing the related system/sub-system/sub-sub-system number adjacent to the line that represents the interface with the other schematic diagram (for example: 34-10-03, A ---24-10-04).

5.1.13.11 Spare circuits. Spare circuits specifically assigned to a sub-sub-system should be shown on the schematics.

5.1.13.12 Test points. Test points should be shown to facilitate trouble shooting. Signal characteristics will be shown except when the characteristics are obvious. Inside the unit, the interface of BITE (Built In Test Equipment) test signals should be indicated (reference Figure 19). In-line disconnects, terminal strips, and splices need not be shown on schematic diagrams except when used as test points unless otherwise specified. Test point identification should be in accordance with ASME Y14.15.

5.1.13.13 Signal identification. Signal path nomenclature and electrical or mechanical characteristics should be shown, if needed, for trouble shooting.

5.1.13.14 Signal values. Electrical signal or impedance values should be shown, if required, to verify circuit function (in order to isolate trouble source). Show nominal and tolerance ranges.

5.1.13.15 Signal generation. The method of signal generation of sensors and transmitters should be displayed in a simplified manner.

5.1.13.16 Power source. Power sources should be shown as complete as possible on each schematic diagram. In the event this is impractical, the abbreviated power source details should be drawn with dotted lines and a cross reference added to identify the schematic diagram on which the complete power source details are shown.

5.1.13.17 Line replaceable unit identification. Detail schematics diagrams should show LRUs identified by their respective higher level designations (reference 5.2.2). Units of the system being presented should be outlined with a solid line and identified by name and system higher level designation. Equipment identification should be clearly stated adjacent to the symbols. If possible, the same nomenclature should be used as shown on the placard in the system.

5.1.13.18 Line replaceable unit ratings. Ratings should be included for line replaceable circuit breakers, fuses, resistors, capacitors, etc.

5.1.13.19 Relays and switches. Operation criteria of relay contacts and switches (both limit and manual) should be shown adjacent to the contacts. A relay should normally be shown in the de-energized condition. It should be shown complete on the schematic that provides control of the coil or coils. Reference should be made to all other schematics where the relay is shown.

5.1.13.20 Basic parts. Parts that perform a basic function need not be shown in detail as long as each function is defined by a symbol.

5.1.13.21 Unit outlines. LRU outlines should be shown on all schematic diagrams except system block schematic diagrams with a heavy solid black outline. All interfacing sub-systems should be identified with a crosshatch outline (see Figure 3).

5.1.13.22 Wiring diagram reference. Source wiring diagrams should be listed on each detail schematic diagram. A rectangular box outline should list all page numbers of affected wiring diagrams.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

5.1.14 Equipment location diagrams. Equipment location diagrams should be prepared to show the location and general shape of equipment racks, cabinets, consoles, panels, junction boxes, and bulkhead mounted electrical and electronic LRUs. A group of diagrams should be prepared for each of the following categories of equipment installations.

1 - Instrument and control panels

2 - Electrical and electronic racks

3 - Junction boxes and bulkheads

System number 39 (reference MIL-STD-1808) should be used to identify location diagrams. The first page or pages of each group should show the location of all items in the category with respect to the vehicle outline and zones. Each rack, panel enclosure, etc., shown should reference a succeeding page which should detail the LRUs contained therein (see Figure 21). Each item shown should be identified by its assigned higher level designation (reference 5.2.2).

5.1.14.1 Aerospace vehicle zone coding. An aerospace vehicle should be zoned for locations using the zone categories as follows:

5.1.14.1.1 Major zone.

1 - Fuselage, lower

2 - Fuselage, upper

3 - Empennage

4 - Power plants, nacelles, struts

5 - Left wing

6 - Right wing

7 - Landing gear and landing gear door

8 - Doors other than maintenance access doors

9 - Reserved

5.1.14.1.2 Sub-major zone. Major zones may be divided into sub-major zones which may be further divided into zones.

5.1.14.2 Equipment location diagram page numbering. Each page of the equipment location diagrams should be assigned a four element number. The first element should consist of the data category prefix 13 (reference 5.1). The second element should consist of the system number 39 which should be used for all equipment location diagrams. The third element should consist of a two digit number. The most significant digit should identify the equipment category. The least significant digit of the third element should identify the major zone location in the vehicle (reference 5.1.14.1). The fourth element should consist of a two digit number assigned sequentially beginning with 01 (see the following example).

| 13 | - | 39 | - | 12 | - | 01 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c)(d) | | (e) |

a. Data category prefix (for equipment location diagrams)

b. System number (for equipment locations)

c. Equipment category (instrument and control panels)

d. Major zone (upper fuselage)

e. 1st page (of equipment location diagrams for instrument and control panels located in the upper fuselage zone)



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

Configuration codes (reference 5.3.2) should be placed in the page number block below the page number as applicable.

5.1.15 Wire harness location diagrams. Wire harness location diagrams should be prepared to show the relative location and routing of all wire harnesses. These pages should consist of isometric or orthographic single line drawings and should show harness numbers, harness connector higher level designations and the approximate or relative locations of connector, harnesses, raceways, conduits and pressure seals (see Figure 22). Electromagnetic susceptible or interference generating harnesses should be noted. A group of diagrams should be prepared for each major zone of the vehicle (reference 5.1.4.1). The first page of the wire harness location diagrams should illustrate and identify the major zones of the aerospace vehicle and should also reference succeeding pages which should detail wire harness locations.

5.1.15.1 Wire harness location diagram page numbering. Each page of the wire harness location diagrams should be assigned a four element number. The element should consist of the data category prefix 14 (reference 5.1). The second element should consist of system number 91 which should be used for all wire harness location diagrams. The third element should be assigned a two digit number consisting of the system's major zone code (reference 5.1.14.1). The fourth element should consist of a two digit number assigned sequentially beginning with 01 (see the following examples).

| 14 | - | 91 | - | 60 | - | 01 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c) (d) | | (e) |

a. Data prefix category (for wire harness location diagrams)
b. System number (for wire harness locations)
c. Major vehicle zone (right wing)
d. Sub-division of major zone (none)
e. 1st page of right wing harness location diagrams

| 14 | - | 91 | - | 00 | - | 01 |
|---|---|---|---|---|---|---|
| (a) | | (b) | | (c) (d) | | (e) |

a. Data category prefix (for wire harness location diagrams)
b. System number (for wire harness location)
c. Major zone (entire vehicle)
d. Sub-division of major zone (none)
e. 1st page of wire harness location diagrams (identifies and illustrates major zones of the system)

5.2 System coding method (aerospace system). The system coding method, a form of the Unit Numbering Method (IEEE STD 200), serves as a higher level designation to identify system, subsystems, sub-sub-systems and items. This higher level designation should be used to identify LRUs within the aerospace system in lieu of vendor reference designations.

5.2.1 System sub-division and higher level designations. All functional systems should be subdivided into sub-systems and all functions within each sub-system should be divided into sub-subsystems. If within a functional system there is only one group of equipment (i.e., sub-division into two or more sub-sub-systems is not appropriate), that group of equipment should be treated as a sub-sub-system of the functional system. Each functional system, sub-system, and sub-sub-system should be assigned an individual code number. These numbers are to be used in the assignment of higher level designations. Each functional system should be assigned a four digit identification number. The first two digits should be selected from MIL-STD-1808. The last two digits should be zeros. For example:

2300 COMMUNICATION SYSTEM



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

Each sub-system should be assigned a four digit code number. The two most significant digits identify the functional system and the two least significant digits identify the sub-system. The four digit code should be selected from MIL-STD-1808 (see the following examples).

2310 HF RADIO

2320 VHF/UHF RADIO

2330 PASSENGER ADDRESS

2340 INTERPHONE

2350 AUDIO INTEGRATING

2360 STATIC DISCHARGE

2370 AUDIO/VIDEO MONITORING

Each sub-sub-system should be assigned a four digit code identification number. The three most significant digits should consist of the assigned system and sub-system number. The least significant digit should be arbitrarily assigned sequentially beginning with 1 (see the following example).

2311 HIGH FREQUENCY COMMUNICATION SUB-SUB-SYSTEM

5.2.2 Line replaceable unit (LRU) higher level designations. Higher level designations (system coded) should be assigned to all LRUs and equipment enclosures except wire harnesses and static ground points. These designations should be used for identifying and locating items on diagrams and in the aerospace system. They should also be used for correlating items in the aerospace system, with graphic symbols on diagrams and items in the list pages, the circuit descriptions and the instructions. Higher level designations, assigned by the aerospace system manufacturer, should be substituted for the reference designations assigned by the equipment manufacturers. Higher level designations assigned to LRUs should consist of a functional system, sub-system, sub-subsystem, equipment class letter(s), a sequentially assigned number, and a suffix letter when applicable (see the following example).

| 23 | 2 | 1 | P | 12 | A |
|---|---|---|---|---|---|
| (a) | (b) | (c) | (d) | (e) | (f) |

a. Functional system number (assigned from MIL-STD-1808)

b. Sub-system number (assigned from MIL-STD-1808)

c. Sub-sub-system number (reference 5.2.1)

d. Equipment class letter (reference5.2.3)

e. Connector unit number (assigned sequentially within each functional system beginning with the number 1; reference 5.2.4)

f. Multiple element unit suffix (reference 5.2.5)

Mechanical parts, such as cams, drums, torque tubes, pedals, levers, etc., need not have higher level designations assigned.

5.2.2.1 Line replaceable unit (LRU) system coding. Except as specified in 5.2.2.2 through 5.2.6, each LRU should be to a sub-sub-system. An LRU which interfaces between more sub-sub-systems should be assigned to the sub-sub-system to which it is most functionally related.

5.2.2.2 Equipment enclosure system coding. Enclosures, consoles, and junction shields which cannot be reasonably assigned to a sub-sub-system should be assigned to the functional system number 39 (see the following example).



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

39 - 22 - A - 2
(a) (b) (c) (d) (e)

a. System number (electrical/electronic enclosures)

b. Sub-system number (equipment racks - reference 5.1.14)

c. Aerospace system zone location (reference 5.1.14.1)

d. Class letter (A - equipment rack)

e. 2nd general purpose electrical/electronic equipment rack in aerospace system zone

5.2.2.3 Connector system coding. Connectors which mate to line replaceable units should be assigned the same system code number as that of the mating unit. In-line connectors which are part or predominately part of a specific sub-sub-system should use the applicable sub-sub-system number. In-line connectors which cannot be reasonably assigned to a specific sub-sub-system should be assigned the functional system number of which it is a part or more predominately a part. In-line bulkhead installed connectors not predominately a part of a functional system should be coded according to procedures in 5.2.2.2.

5.2.2.4 Terminal boards system coding. Terminal boards installed in equipment enclosures should use the same system code number assigned to the enclosure. Other terminal boards should be assigned the number of the sub-sub-system to which each is predominately applicable.

5.2.2.5 Relay system coding. Relays should utilize the same code number as the energizing sub-sub-system.

5.2.2.6 Fluid parts system coding. Fluid parts such as filters, actuators, conditioners, reservoirs, tc., should be assigned class letters from Table II or IEEE STD 315. When a direct electrical connection is not made, the fluid part designation may be shown only on the schematic diagram. For example, an electrically activated fluid valve reference designator would be shown on both the wiring diagram and schematic diagram. A reference designator for a fluid filter for a hydraulic fluid controlled valve would only be shown on a schematic diagram.

5.2.2.7 Splice system coding. Wiring splices or groups of splices should be assigned the class letter SA and a system number that indicates the location in the system. For example:

3935SA1 Left Wing Junction Box Splice Area 1

5.2.2.8 Ferrule system coding. Each ferrule should be assigned the same designator as the LRU to which the shielded wire, on which the ferrule is installed, connects. For example:

3441FR1 First Ferrule of Weather Radar System

5.2.3 Class letter. The letters identifying the class of an item should be selected in accordance with the lists of IEEE STD 315 and Table II. For items not specifically listed, use the letters already assigned for the most similar class of items. The letters "A" and "U" (for assembly) should not be used if more specific class letters are assigned for a particular item. NOTE: Certain item names and class designating letters may apply to either a part or an assembly.

Connector higher level designation class letters should be assigned in accordance with the following principles:

a. The movable (less fixed) connector of a mating pair should be designated "P".

b. The stationary (more fixed) connector of a mating pair should be designated "J".

c. If two flexible cables are connected, the connector containing pins should be designated "J".

5.2.4 Unit number identifier. Each LRU within each system identification number and class letter group should be assigned a sequential unit number beginning with 1 and not to exceed three digits. Mating in-line connectors, "J" and "P", should be assigned the same unit number regardless of sequence. Within each system identification number and class letter group, use of an identical part number in more than one location requires assignment of a different unit number to each identical part number. Plug-in parts or



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

assemblies with the same part number which have multiple application and do not have terminations for wiring, coax, piping, etc., may have the same number (for example: light bulbs, fuses). Each lamp socket assembly, fuse holder, etc., should have a unique number. Interchangeable or optional parts applicable to the same location should be assigned the same number.

Reference Designators (System Coded).

| | |
|---|---|
| CO | antenna coupler |
| CT | Control unit<br>Control panel<br>Selector panel |
| CM | Computer processing Unit |
| CY | Encryption device |
| EC | End cap |
| FD | Fluid connector<br>Fluid disconnect |
| FF | Fluid fuse |
| FP | Fluid pump<br>Fluid turbine motor (nonelectrical) |
| FR | Fluid reservoir |
| FS | Fluid conditioners<br>Fluid separator<br>Heat exchanger<br>Fluid filter |
| FT | Feed through |
| FU | Fluid replaceable item<br>Filter element<br>Chip detector |
| FV | Fluid control<br>Fluid valve<br>Fluid regulator<br>Fluid restrictor |
| GD | Ground point |
| GS | Ground stud |
| JB | Junction box |
| MX | Multiplex unit |
| PL | Panel, circuit breaker/Instrument enclosure, wire terminating junction box, wire bulkhead |
| PT | Pigtail |
| RC | Recording unit<br>Reproducing unit |
| SA | Splice area |
| SP | Splice |
| TE | Teletypewriter |



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| | |
|---|---|
| TS | Transceiver |
| Z | Signal conditioning<br>Tuning unit |

5.2.5 Suffix letter. A suffix letter, beginning with A, should be added to the basic higher leveldesignation to identify each portion of a multiple element unit. These elements may be removableprinted circuit boards or connectors containing more than one integral jack or plug. The letters I, O, Q, S, X, and Z should not be used. For example:

| (2311P19) | | (2311P20) | |
|---|---|---|---|
| 2311 | System identification number | 2311 | System identification number |
| P | Class letter group | P | Class letter |
| 19 | Unit number | 20 | Unit number |
| 2311P19A | Connector element A | 2311P20 | Connector |
| 2311P19B | Connector element B | 2311P20A | Connector backshell |
| 2311P19C | Connector shell | | |
| Multi element (plug & shell) connector | | Multi element (plug & connector backshell) connector | |

5.2.6 Ground point designation. Each interconnect wiring ground point should be assigned a reference designation. The ground point designation is intended for ground point identification in wire harness lists, in connection lists, and on diagrams. The ground point designation should consist of the designation GD, and a number identifier not to exceed four digits. Each ground point on the airframe structure should be assigned a number. These numbers may be grouped and assigned to areas and need rot be assigned sequentially.

5.3 Page identification. All pages should contain the drawing number, federal supply code for manufacturer, latest revision letter applicable to the page, and the vehicle type and model. The guidance of ASME Y14.1 do not apply to the page (sheet) numbering described in this handbook.

5.3.1 Page titles. Each page should contain the applicable title listed in 5.1. List pages, diagram pages, and wiring modification data index pages should include title modifiers following the basic page title which further describes the specific page content. Title modifier should be included on diagram index pages when the index is sectionalized.

5.3.2 Configuration code. Configuration variations are shown in the data specified in this handbook, by two methods. Variations may be shown by serialization of applicability of data on each page (separate page variations may be made of a given page) or by the use of a configuration code which represents a specific configuration.

5.3.2.1 Diagrams. Except for minor variations suitable for explanation by means of local or coded notes, configuration differences should be shown by use of separate pages for each configuration. The configuration code element should be placed below the page number in the "page" block of the data. The configuration code included as a fifth element in the "page" block should be different for each separate page. The aerospace system manufacturer's configuration code should begin with Config 001 and be assigned through Config 499 for both production and modification. The management activities configuration code should begin with Config 500 and be assigned through Config 999.

5.3.2.2 Lists. The preferred method for showing configuration variations within the equipment lists, the wire harness lists, and the connection lists should be by specifying the serialization and applicability within the data on each page. Separate pages with configuration code page number elements may be used when



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

this method is more appropriate and does not result in a significant increase in the total number of pages required. If the configuration code method is used, the index of (production/effective) diagrams (reference 5.1) should be retitled "Index of (production/effective) Diagrams and Lists". All list pages would then be indexed in the same manner as diagram pages. When a list utilizes the preferred preparation method with serialization applicability shown within each data page and different versions of that list are required to correspond to separate technical publication for different system series or models, configuration code numbers should be added to differentiate those pages applicable to each publication.

5.3.2.3 Diagram indexes. When separate wiring data or schematic diagram technical publication are to be issued for different system series or models, a separate group of index pages should be prepared to correspond to each maintenance manual. When this is required, configuration code numbers should be added to differentiate those pages applicable to each publication.

5.4 Wire identification. The wire identification system should be a non-significant (non-function) system in accordance with ASME Y14.100.

5.5 Electromagnetic compatibility categories. Procedures should be established to form categories for wires and cables according to interference and susceptibility characteristics, and an identifying code should be established for each category. Complete explanation of categories and identifying codes including separation nomographs, if applicable, should be included in the general information section. Each wire should be assigned the appropriate category identifier and the identifier should be shown in the applicable wire harness list. The identifying code should not be imprinted on the wire.

5.6 Wire type code. A system of alphabetic codes should be established to identify type of wire or cable by specification, type, class, number of conductors, etc., but excluding gauge. The codes should consist of not more than three alphabetic characters. The letters I, O, Q, S, X, and Z should not be used. The codes and associated wire type descriptors should be listed in the general information section of the drawing. The code applicable to each wire should be entered in the wire type column of the wire harness list. Buss bars on terminal boards should be identified.

5.7 Wiring/equipment modifications. A wiring/equipment modification is any addition, deletion, or alteration of the system's wiring or equipment made subsequent to original production of the system. Each modification should be separately identified and modification data should be prepared. The data developed for each modification in accordance with this handbook should reflect the exact configuration of the system after modification and, in addition, sufficient data should be prepared to accomplish the change.

5.7.1 Wiring/equipment modification identification. Each modification should be identified by a modification number assigned in numerical sequence and by a descriptive title. The number and title of each modification should be entered in the index of modifications.

5.7.2 As installed data. As installed data consists of complete new diagram pages, new or revised list and general information pages and revised index pages as are required to depict the exact configuration of the system after the modification has been performed. A separate modification data index should be prepared for each modification and should list all as installed data applicable to the modification. Each modification data index should be listed in the index of modifications and should be called out on the top drawing of the modification.

5.7.3 Installation data. Installation data consists of drawings and diagrams which provide information necessary to accomplish the addition, deletion, or alteration of the wiring or equipment. Modification installation data is not to be a part of the wiring data book-form drawings for the system and should be assigned independent drawing numbers. This installation data should be called out on the top drawing of the modification. In minor modifications, it may be possible for the modification to be performed by reference to the as installed data and installation data will not be required.

5.8 Revisions. A revision is any change or addition to the drawing after its release. Revisions should be identified in accordance with ASME Y14.100 except as noted in 5.1.2 of this handbook. All changes incorporated at the same time should be identified by the same revision letter. Each revision should be entered in the revisions section as specified in 5.1.2 and the revision letter (letters I, O, Q, S, X, and Z should not be used) should be entered in the revision letter block of each revised page or new page added


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

by the change. The title page should always bear the latest revision letter assigned to the drawing. A revision column should be included at the left side of each index and list page and when a line is added or revised, the applicable revision letter should be entered in this column (see Figures 5 through 13).

**NOTE**

**The sample drawings in the figures used in this document are informational only and complete to the degree necessary to illustrate a type of drawing. Actual format and drawing should conform to the textual guidance set forth in this handbook.**

## 6 NOTES

6.1 Subject term (key word) listing.

- Block
- Connection list
- Connector
- Critical circuit
- Drawing size
- Interconnection
- Line replaceable unit
- LRU
- Point to point connection
- Spare circuit
- Wire harness
- Wiring Data



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

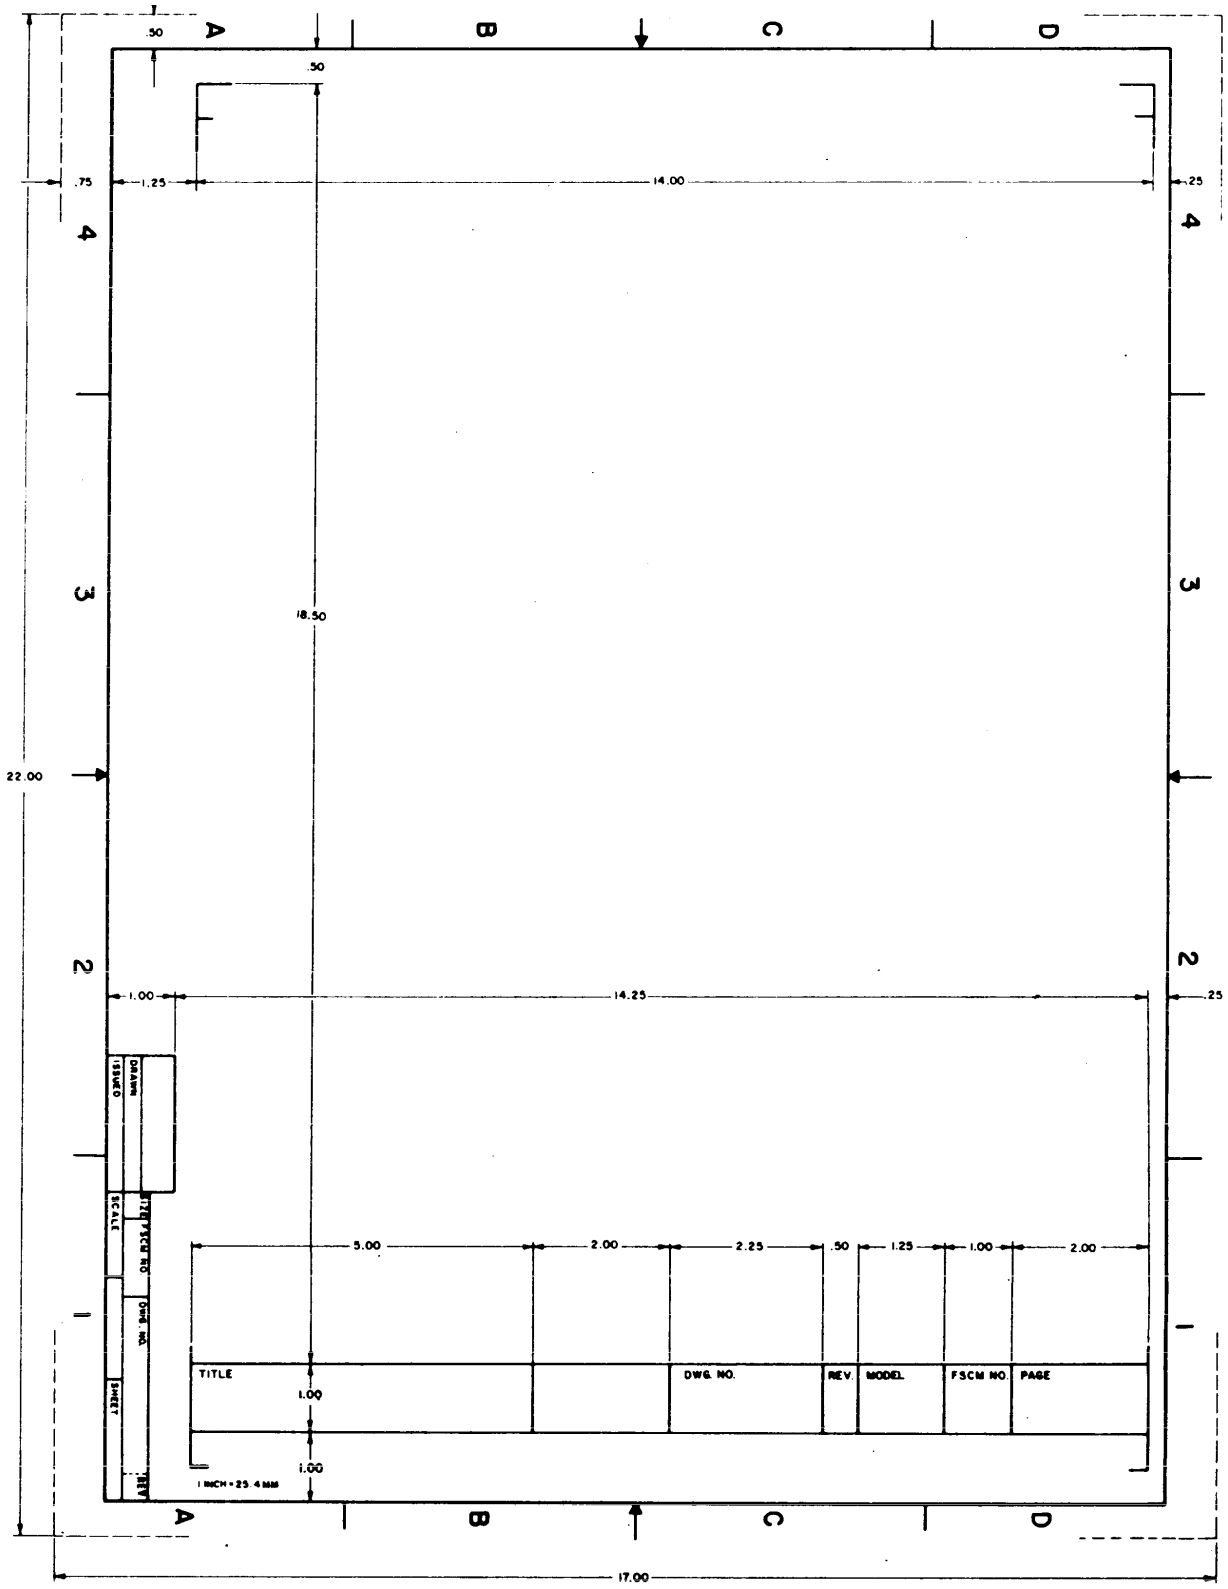



**FIGURE 1. Drawing Format (C Size)**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

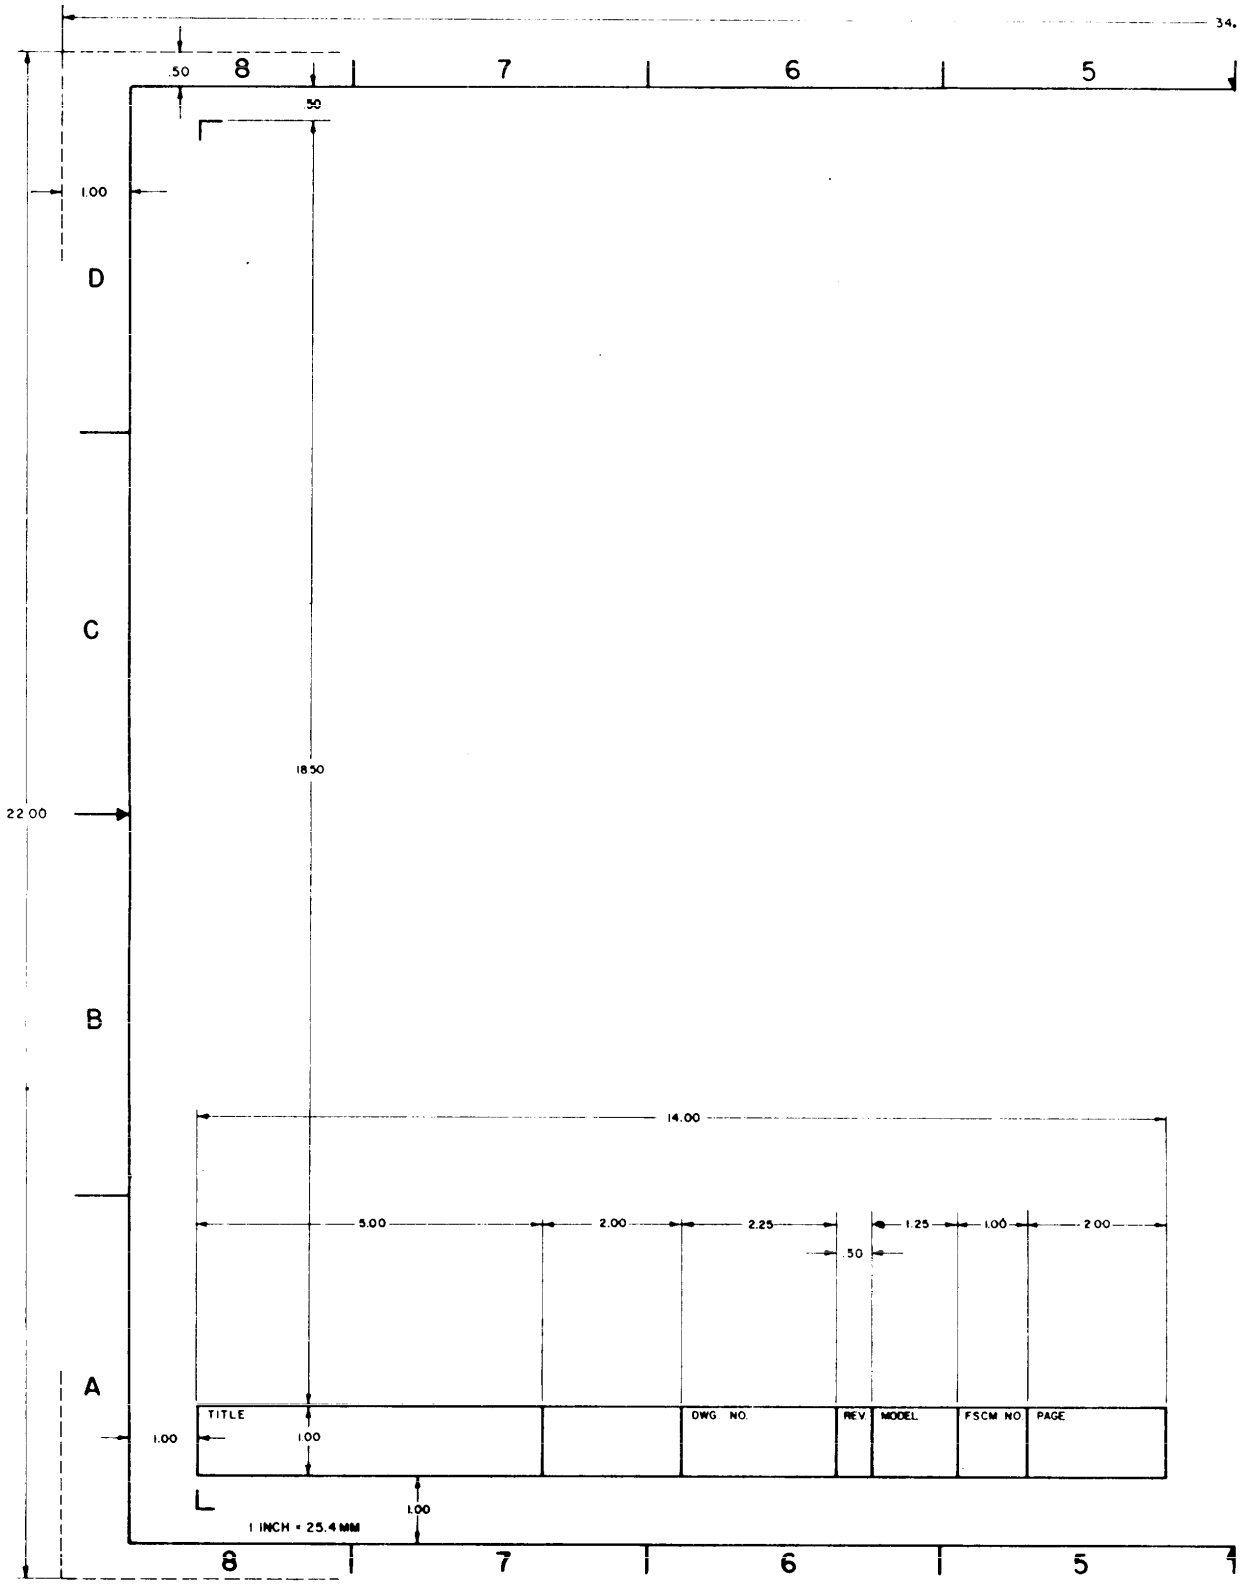



**FIGURE 2. Drawing Format (D Size)**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

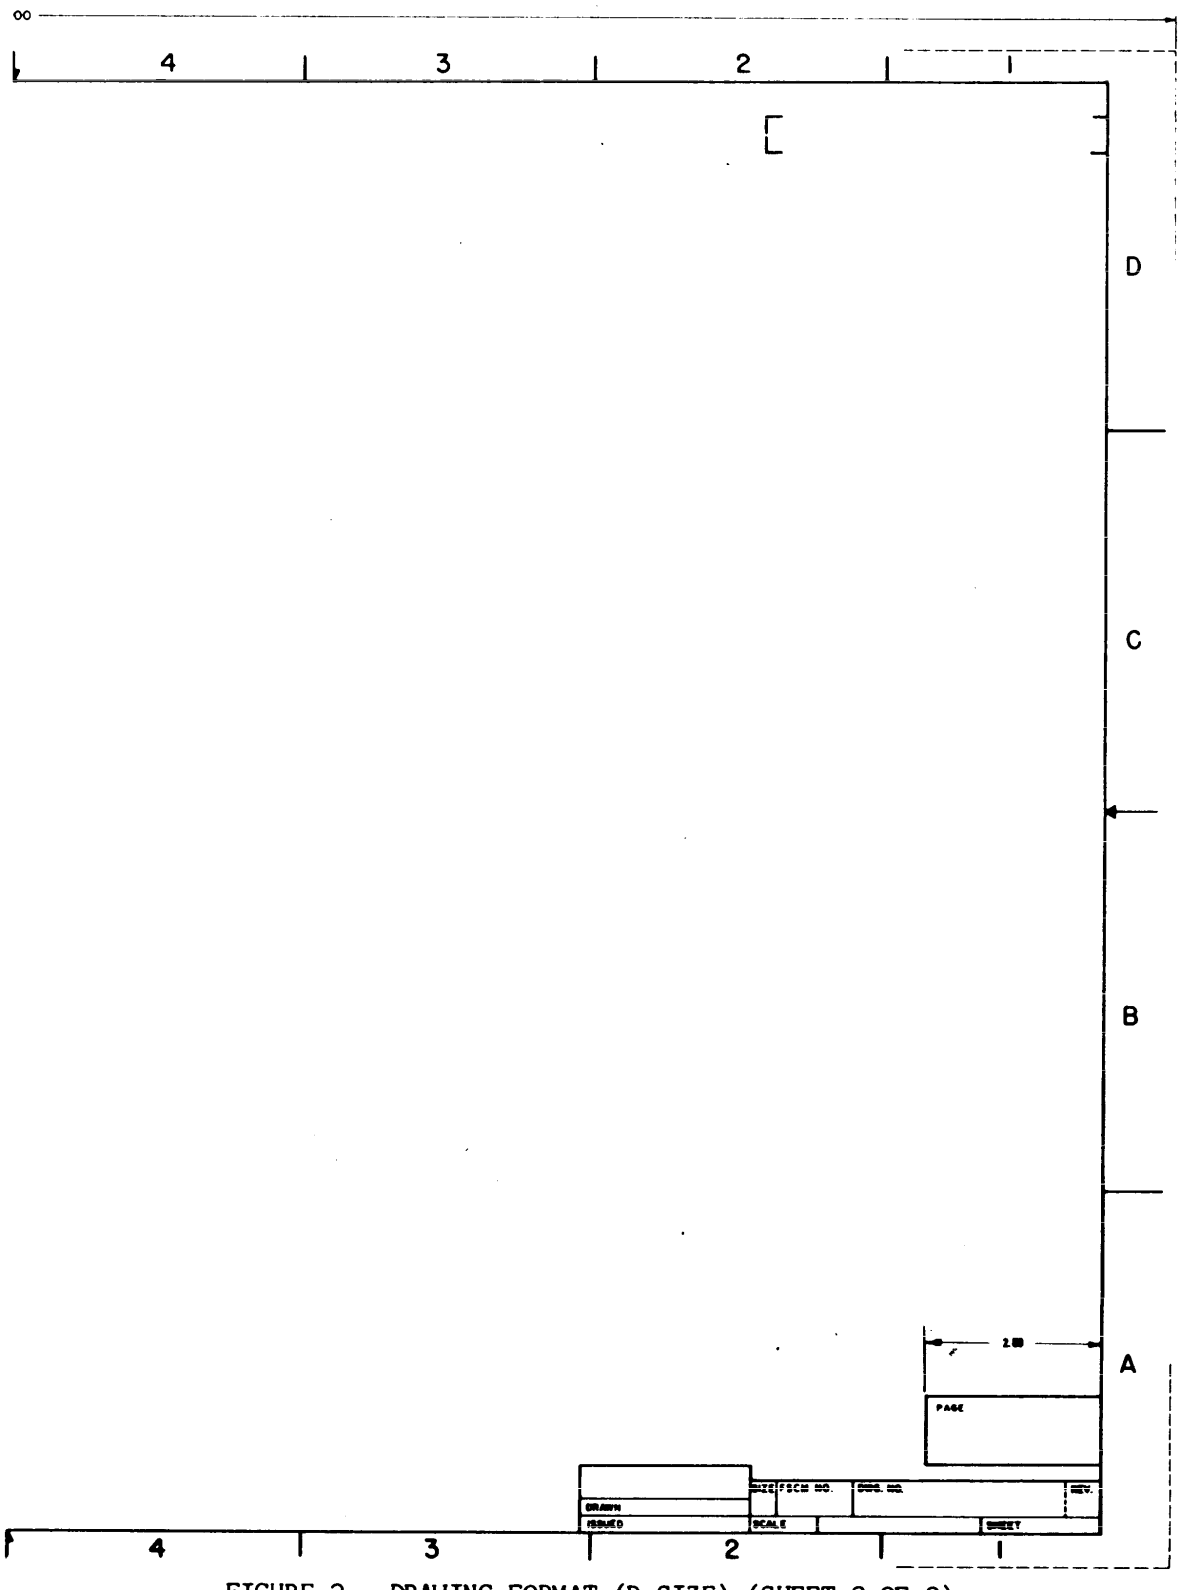



FIGURE 2. Drawing Format (D Size) - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.


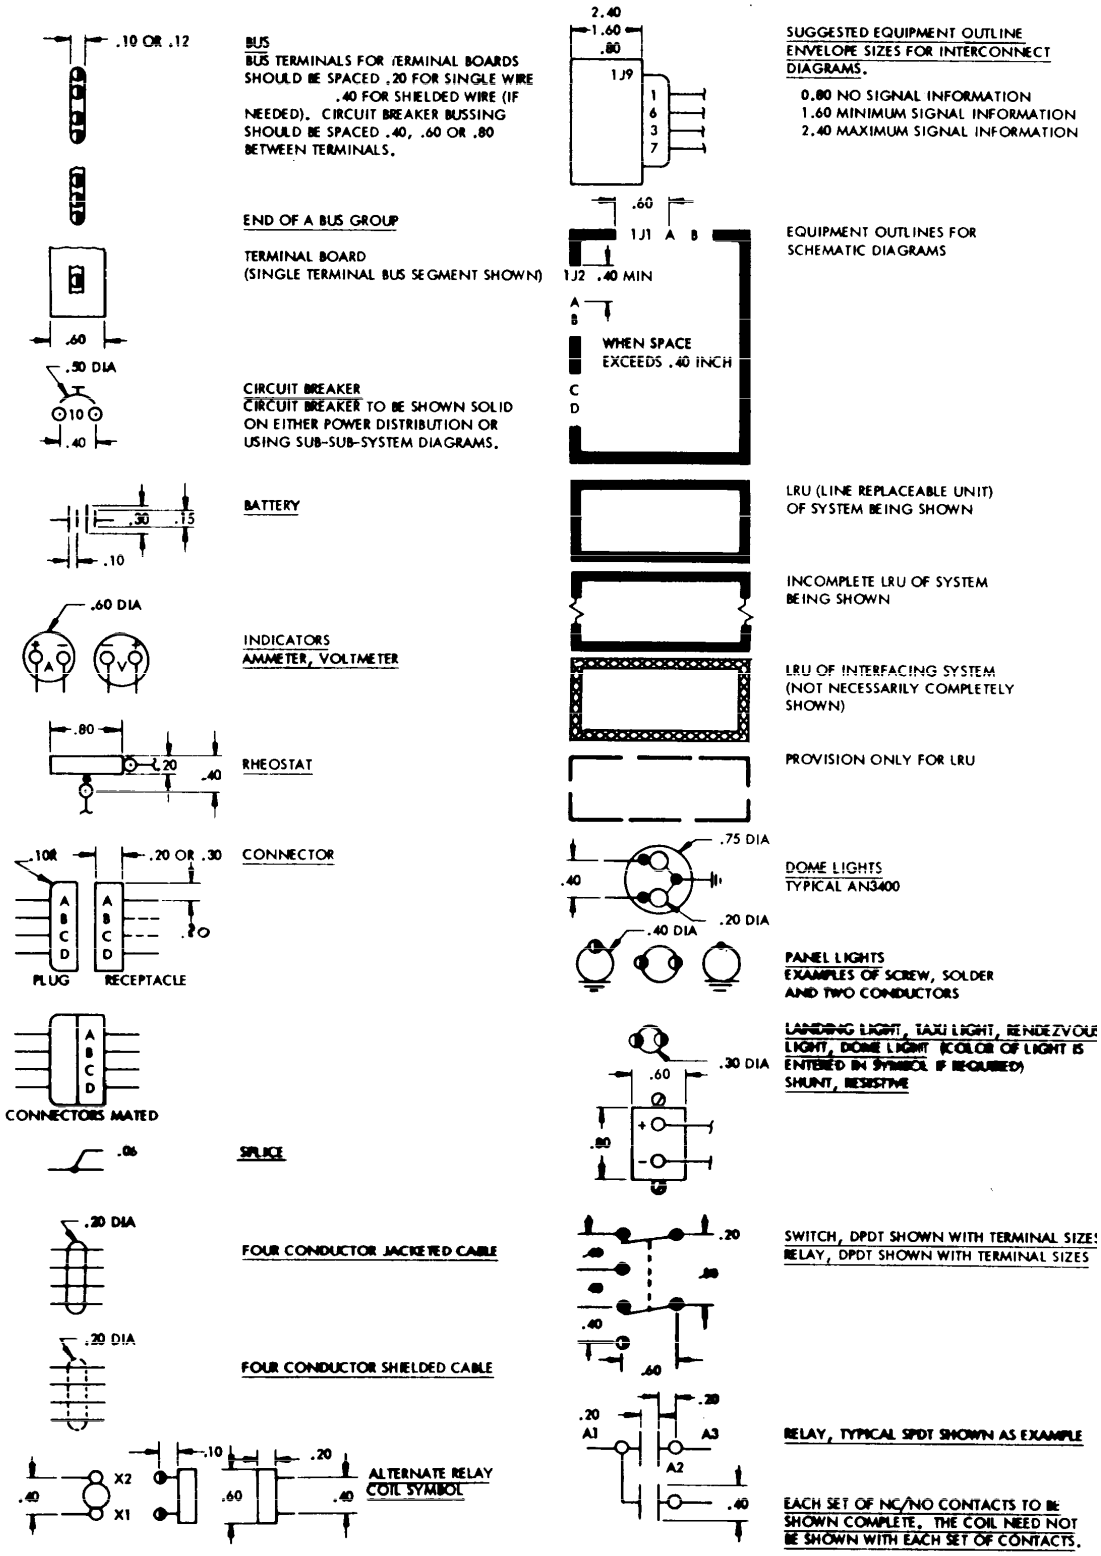



**FIGURE 3. Dimensions for Common Graphic Symbols**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

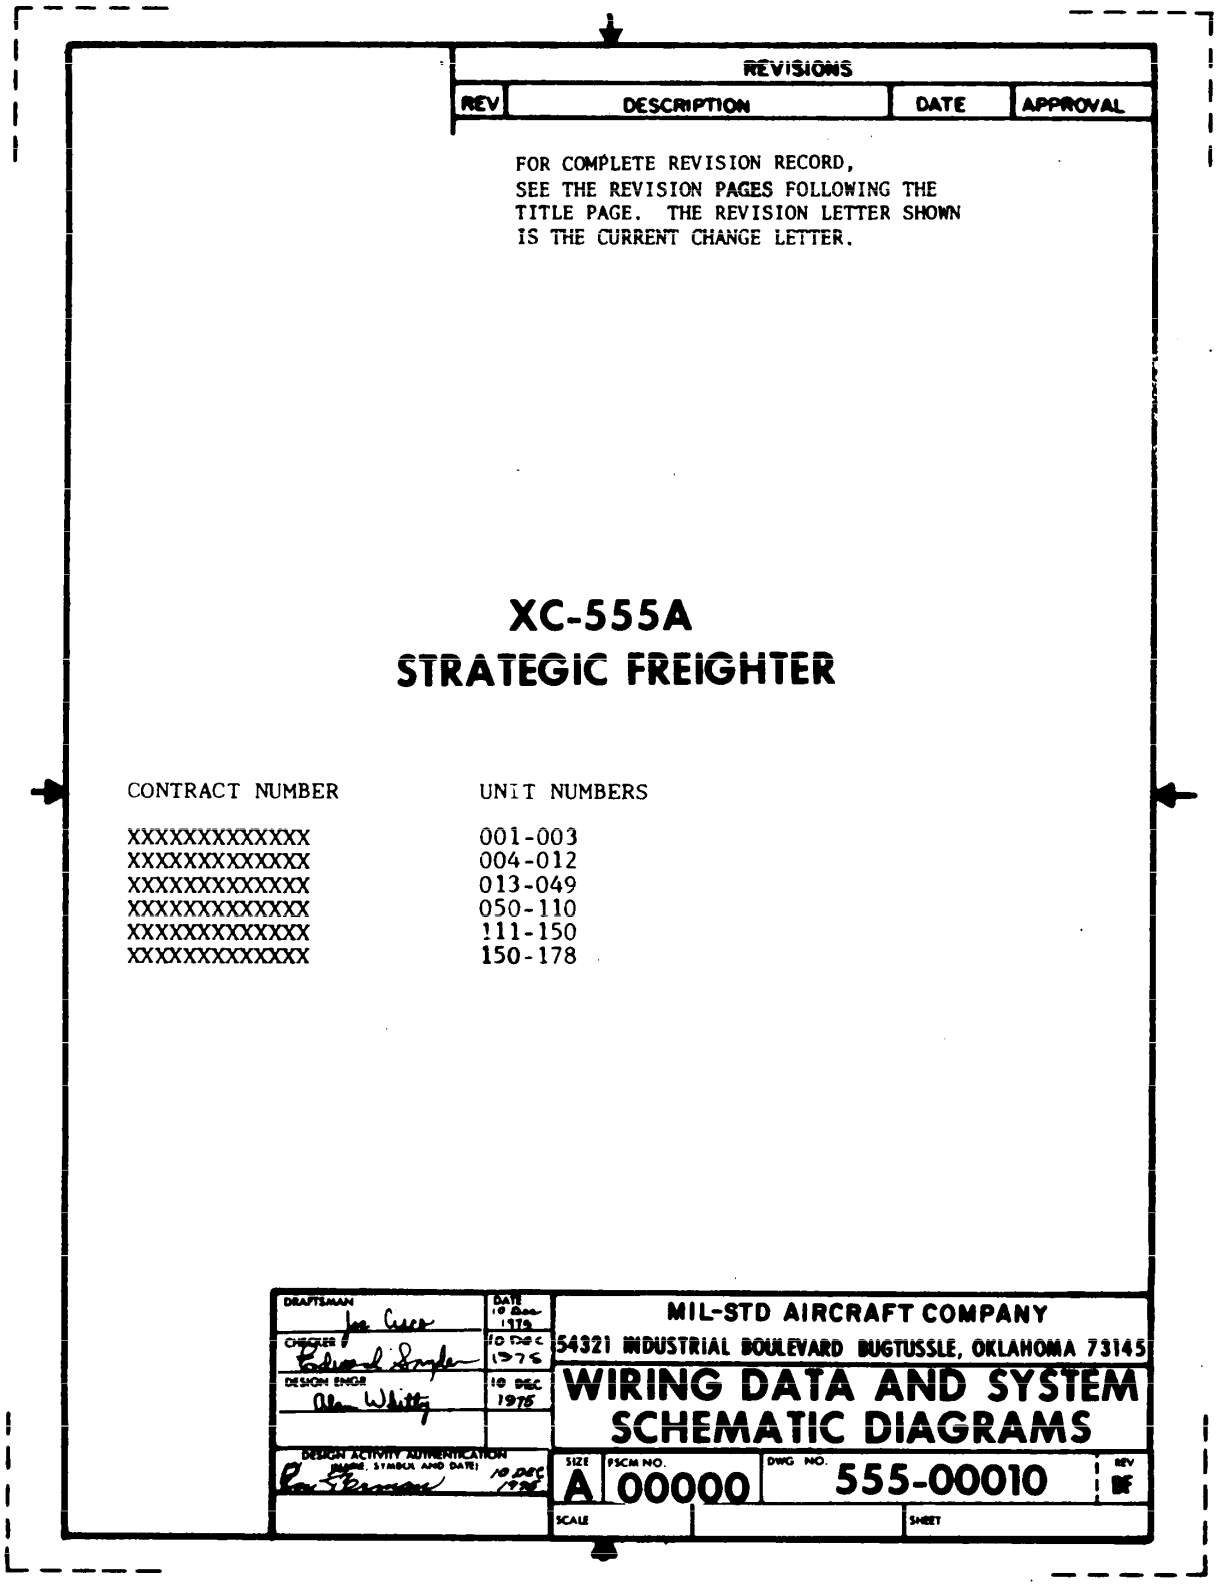

| REVISIONS | | | |
|---|---|---|---|
| REV | DESCRIPTION | DATE | APPROVAL |

FOR COMPLETE REVISION RECORD,
SEE THE REVISION PAGES FOLLOWING THE
TITLE PAGE. THE REVISION LETTER SHOWN
IS THE CURRENT CHANGE LETTER.

# XC-555A
# STRATEGIC FREIGHTER

| CONTRACT NUMBER | UNIT NUMBERS |
|---|---|
| XXXXXXXXXXXX | 001-003 |
| XXXXXXXXXXXX | 004-012 |
| XXXXXXXXXXXX | 013-049 |
| XXXXXXXXXXXX | 050-110 |
| XXXXXXXXXXXX | 111-150 |
| XXXXXXXXXXXX | 150-178 |

DRAFTSMAN Jos. Green DATE 10 Dec 1975
CHECKER Edward Snyder 10 DEC 1975
DESIGN ENGR Alan Whitty 10 DEC 1975
DESIGN ACTIVITY AUTHENTICATION (NAME, SYMBOL AND DATE) Ron Sherman 10 DEC 1975

MIL-STD AIRCRAFT COMPANY
54321 INDUSTRIAL BOULEVARD BUGTUSSLE, OKLAHOMA 73145

## WIRING DATA AND SYSTEM SCHEMATIC DIAGRAMS

SIZE A | FSCM NO. 00000 | DWG NO. 555-00010 | REV BF
SCALE | SHEET

FIGURE 4. Title Page



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| REV | CHANGE DESCRIPTION | DATE | APPROVED |
|---|---|---|---|
| | | | ENGR APPROVED BUD ELIOUTT<br>APPROVED S. WATKINS, L. LAMM<br>APPROVED P. HUGHES, K. DUNCAN |
| A | ORIGINAL RELEASE | 4 JANUARY 75 | |
| B | SEE ECO 2 - MC-1 AUTO PILOT MOD | 8 MARCH 75 | L. LAMM |
| C | SEE ECO 3 - AN/ARC - 58 MOD | 15 APRIL 75 | C. FRICKE |
| D | SEE ECO 4 - DUAL FLIGHT CONTROL/RGA INSTL | 7 MAY 75 | P. HUGHES |
| E | SEE ECO 5 - AN/ASQ-141 SWITCH INSTL | 2 SEPTEMBER 75 | K. DUNCAN |
| F | SEE ECO 6 - AN/ASQ-141 COOLING BLOWER INSTL | 30 SEPTEMBER 75 | R. WIEHL |
| G | WILL NOT BE RELEASED | | |
| H | SEE ECO 8 - AN/ARC-89 COMM SYSTEM INSTL | 14 OCTOBER 75 | S. WATKINS |
| J | SEE ECO 9 - AN/ART-42 TRANSMITTER MOD | 9 MARCH 76 | J. DUNCAN |
| K | SEE ECO 10 - AN/ASN-6 POWER SW INSTL | 29 APRIL 76 | A. KECK |
| L | SEE ECO 11 - INSTL OF INTERPHONE STATION | 1 JULY 76 | W. SCHULTZ |
| M | SEE ECO 12 - SECOND AN/ARC-100 RADIO INSTL | 25 AUGUST 76 | CHET LOWE |
| N | SEE ECO 13 - AN/ARN-1 TACAN INSTL | 27 OCTOBER 76 | B. ADAMS |
| P | SEE ECO 14 - AR-200 RECORDER REMOVAL | 11 NOVEMBER 76 | C. SCROGGS |
| R | SEE ECO 15 - NICKEL CADMIUM BATTERY INSTL | 15 DECEMBER 76 | M. WRIGHT |
| T | SEE ECO 16 - LANDING GEAR BRAKE ROD MD2 | 8 MARCH 77 | E. MEZYDLO |
| U | SEE ECO 18 - AN/ARN-30 EMERGENCY KEYER REMOVAL | 29 APRIL 77 | E. MULKEY |
| V | SEE ECO 19 - FLAG ALARM LOADING RESISTOR RELOCATION | 1 JULY 77 | J. ANDERSON |
| W | SEE ECO 20 - VDR - TACAN SWITCHING MOD | 25 AUGUST 77 | M. DELISIO |
| Y | SEE ECO 21 - CAPACITOR INSTL - GROUND SERVICE INTERPHONE SYSTEM | 13 SEPTEMBER 77 | V. ELKINS |
| AA | SEE ECO 23 - RADIO MAGNETIC INDICATOR REVISION | 7 OCTOBER 77 | R. FERMAN |
| AB | SEE ECO 24 - AN/ARC-60 WIRING REVISION | 10 DECEMBER 77 | R. PHIPPS |
| AC | SEE ECO 25 - FOURTH ALTERNATOR INSTL | 21 JANUARY 78 | J. GREEN |
| AD | SEE ECO 26 - AN/APN-100 LORAN INSTL | 22 MARCH 78 | B. MAYFIELD |
| AE | SEE ECO 27 - AN/APQ-250 RADAR INSTL | 27 MAY 78 | R. SMITH |
| AF | SEE ECO 28 - AIRBORNE PERFORMANCE MONITOR INSTL | 9 JULY 78 | M. BROWN |
| AG | SEE ECO 29 - ADDITIONAL INTERPHONE STA (PASSENGER) | 18 SEPTEMBER 78 | D. BROWN |
| AH | SEE ECO 30 - UHF RADIO RELAY SYSTEM MOD | 21 NOVEMBER 78 | L. WRIGHT |
| AJ | SEE ECO 31 - AUTO PILOT SYSTEM MOD | 6 JANUARY 79 | T. DIERDA |
| AK | SEE ECO 32 - SATELLITE COMMUNICATIONS TERMINAL GROUP INSTALLATION | 22 JANUARY 79 | G. GREEN |
| AL | SEE ECO 33 - AIRCRAFT LIGHTING MOD | 19 FEBRUARY 79 | T. ENDRES |
| AM | SEE ECO 34 - AN/AIC-20 INTERPHONE REVISION | 7 APRIL 79 | R. BIRD |
| AN | SEE ECO 35 - MULTICHANNEL RECORDER INSTL | 8 JULY 79 | C. DAY |
| AP | SEE ECO 36 - REMOVAL OF AN/APN-100 LORAN | 19 AUGUST 79 | J. WEISIGER |
| AR | SEE ECO 37 - SECURE SPEECH SYSTEM INSTL | 4 SEPTEMBER 79 | M. OVERMAN |
| AT | SEE ECO 38 - CREW ENTRANCE LIGHT INSTL | 27 SEPTEMBER 79 | M. MITCHELL |
| AU | SEE ECO 39 - ANTI SKID BRAKE SYSTEM INSTL | 8 DECEMBER 79 | S. MILKOWSKI |
| AV | SEE ECO 40 - J800 ENGINE INSTL | 5 FEBRUARY 80 | B. FROST |
| AW | SEE ECO 41 - AUXILIARY POWER UNIT INSTL | 18 APRIL 80 | D. GORDON |
| AY | SEE ECO 42 - AN/APN-300 DOPPLER RADAR INSTL | 9 AUGUST 80 | M. KROPP |
| BA | SEE ECO 43 - WATER HEATER POWER DISTRIBUTION SYSTEM INSTL | 10 OCTOBER 80 | K. DUNCAN |

| TITLE: REVISION RECORD | DRAWING NUMBER | REV | DATE | MODEL | FSCM NO. | PAGE NUMBER |
|---|---|---|---|---|---|---|
| | 555-00010 | BA | 10 OCT 1980 | XC-555A | 00000 | 1-0001-00 |

**FIGURE 5. Revision Record**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| PAGE TITLE PAGE | REV | .PAGE | REV | .PAGE | REV | .PAGE | REV | .PAGE | REV | .PAGE | REV | .PAGE | REV |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| REVISION RECORD | | | | | | | | | | | | | |
| 1-0001-00 | R | 1-0001-01 | BF | 1-0002-00 | BF | 1-0003-00 | BF | ---------- | - | | | | |
| CONTENTS RECORD | | | | | | | | | | | | | |
| 2-0001-00 | BF | 2-0002-00 | BF | 2-0003-00 | BF | 2-0004-00 | BF | 2-0005-00 | BF | 2-0006-00 | BF | | |
| GENERAL INFORMATION | | | | | | | | | | | | | |
| 3-0001-00 | A | 3-0002-00 | A | 3-0003-00 | H | 3-0004-00 | F | 3-0005-00 | A | 3-0006-00 | A | 3-0007-00 | A |
| 3-0008-00 | H | 3-0009-00 | AA | 3-0010-00 | BA | 3-0011-00 | BD | 3-0012-00 | BF | 3-0013-00 | BF | 3-0014-00 | A |
| INDEX OF PRODUCTION DIAGRAMS | | | | | | | | | | | | | |
| 4-11-21-01 | F | 4-11-22-01 | F | 4-11-23-01 | F | 4-11-23-02 | F | 4-11-24-01 | F | 4-11-24-02 | F | 4-11-24-03 | F |
| 4-11-26-01 | F | 4-11-27-01 | F | 4-11-28-01 | F | 4-11-29-01 | F | 4-11-33-01 | F | 4-11-34-01 | F | 4-11-34-02 | F |
| 4-11-34-03 | F | 4-11-43-01 | G | 4-11-72-01 | F | 4-12-21-01 | F | 4-12-22-01 | F | 4-12-23-01 | F | 4-12-23-02 | F |
| 4-12-24-01 | F | 4-12-26-01 | F | 4-12-27-01 | F | 4-12-28-01 | F | 4-12-29-01 | F | 4-12-33-01 | F | 4-12-33-02 | F |
| 4-12-34-01 | F | 4-12-43-01 | G | 4-12-72-01 | F | 4-13-21-01 | F | 4-13-22-01 | F | 4-13-23-01 | F | 4-13-23-02 | F |
| 4-13-24-01 | F | 4-13-26-01 | F | 4-13-27-01 | F | 4-13-28-01 | F | 4-13-29-01 | F | 4-13-33-01 | F | 4-13-33-02 | F |
| 4-13-34-01 | F | 4-13-43-01 | G | 4-13-72-01 | F | 4-14-00-01 | F | ---------- | - | | | | |
| INDEX OF EFFECTIVE DIAGRAMS | | | | | | | | | | | | | |
| 5-11-21-01 | G | 5-11-22-01 | BA | 5-11-23-01 | BF | 5-11-23-02 | H | 5-11-24-01 | H | 5-11-24-02 | H | 5-11-24-03 | H |
| 5-11-26-01 | H | 5-11-27-01 | H | 5-11-28-01 | H | 5-11-29-01 | H | 5-11-33-01 | H | 5-11-34-01 | H | 5-11-34-02 | H |
| 5-11-34-03 | H | 5-11-43-01 | H | 5-11-72-01 | H | 5-12-21-01 | H | 5-12-22-01 | H | 5-12-23-01 | H | 5-12-23-02 | H |
| 5-12-24-01 | H | 5-12-26-01 | H | 5-12-27-01 | H | 5-12-28-01 | H | 5-12-29-01 | H | 5-12-33-01 | H | 5-12-33-02 | H |
| 5-12-34-01 | H | 5-12-43-01 | H | 5-12-72-01 | H | 5-13-21-01 | H | 5-13-22-01 | H | 5-13-23-01 | H | 5-13-23-02 | H |
| 5-13-24-01 | H | 5-13-26-01 | H | 5-13-27-01 | H | 5-13-28-01 | H | 5-13-29-01 | H | 5-13-33-01 | H | 5-13-33-02 | H |
| 5-13-34-01 | H | 5-13-43-01 | H | 5-13-72-01 | H | 5-14-00-01 | H | ---------- | - | | | | |
| INDEX OF MODIFICATIONS | | | | | | | | | | | | | |
| 6-0001-00 | AT | 6-0002-00 | BF | 6-0003-00 | BF | ---------- | - | | | | | | |
| MODIFICATION DATA INDEX | | | | | | | | | | | | | |
| 7-0001-01 | G | 7-0002-01 | M | 7-0003-01 | N | 7-0004-01 | P | 7-0005-01 | R | 7-0005-02 | R | 7-0005-03 | AM |
| 7-0006-01 | S | 7-0007-01 | T | 7-0008-01 | U | 7-0009-01 | V | 7-0010-01 | W | 7-0011-01 | AA | 7-0011-02 | AP |
| 7-0012-01 | AT | 7-0013-01 | BA | 7-0014-01 | BE | 7-0015-01 | BF | 7-0015-02 | BF | 7-0015-03 | BF | 7-0015-04 | BF |
| CONNECTION LIST | | | | | | | | | | | | | |
| 8-21-10-01 | G | 8-22-10-01 | H | 8-22-30-01 | H | 8-23-10-01 | G | 8-23-20-01 | G | 8-23-30-01 | G | 8-23-30-02 | G |
| 8-24-50-01 | G | 8-24-50-02 | G | 8-26-10-01 | G | 8-27-60-01 | G | 8-28-20-01 | G | 8-28-30-01 | G | 8-28-30-02 | G |
| 8-29-10-01 | H | 8-33-10-01 | BA | 8-33-20-01 | Y | 8-33-40-01 | G | 8-34-10-01 | G | 8-34-10-02 | G | 8-34-10-03 | G |
| 8-34-20-01 | H | 8-34-30-01 | AA | 8-34-50-01 | AM | 8-43-10-01 | H | 8-43-20-01 | H | 8-43-20-02 | G | 8-43-30-01 | G |
| 8-43-30-01 | H | 8-43-30-02 | H | 8-43-50-01 | G | 8-72-50-01 | H | ---------- | - | | | | |
| WIRE HARNESS LIST | | | | | | | | | | | | | |
| 9-0001-01 | G | 9-0001-02 | G | ---------- | - | (THIS LIST WOULD CONTINUE UNTIL ALL WIRE HARNESS HAS BEEN LISTED. THE LAST WIRE HARNESS MIGHT BE 9-2126-01 REV G. THIS WOULD BE THE 2126 WIRE HARNESS OF THE AEROSPACE VEHICLE.) | | | | | | | | | |
| EQUIPMENT LIST | | | | | | | | | | | | | |
| 10-21-10-01 | G | 10-22-10-01 | H | 10-22-30-01 | H | 10-23-10-01 | G | 10-23-20-01 | G | 10-23-20-02 | G | 10-23-30-01 | G |
| 10-24-50-01 | G | 10-26-10-01 | G | 10-27-60-01 | G | 10-28-10-01 | G | 10-29-10-01 | H | 10-29-10-02 | G | 10-29-10-03 | G |
| 10-33-10-01 | BA | 10-33-20-01 | G | 10-33-40-01 | G | 10-32-10-01 | G | 10-34-20-01 | H | 10-32-20-02 | G | 10-32-20-03 | G |
| 10-34-30-01 | AA | 10-34-50-01 | AM | 10-43-10-01 | H | 10-43-20-01 | H | 10-43-30-01 | H | 10-43-30-02 | G | 10-43-40-01 | G |
| 10-43-50-01 | G | 10-72-50-01 | H | ---------- | - | | | | | | | | |
| INTERCONNECTION DIAGRAMS | | | | | | | | | | | | | |
| 11-21-10-01 | G | ---------- | - | (A NUMERICAL LISTING OF ALL INTERCONNECTION DIAGRAMS IS REQUIRED.) | | | | | | | | | |
| SYSTEM SCHEMATIC DIAGRAMS | | | | | | | | | | | | | |
| 12-21-10-01 | G | ---------- | - | (A NUMERICAL LISTING OF ALL SYSTEM SCHEMATIC DIAGRAMS IS REQUIRED.) | | | | | | | | | |
| EQUIPMENT LOCATION DIAGRAMS | | | | | | | | | | | | | |
| 13-39-10-01 | G | ---------- | - | (A NUMERICAL LISTING OF ALL EQUIPMENT LOCATION DIAGRAMS IS REQUIRED.) | | | | | | | | | |
| WIRE HARNESS LOCATION DIAGRAMS | | | | | | | | | | | | | |
| 14-91-10-01 | G | ---------- | - | (A NUMERICAL LISTING OF ALL WIRE HARNESS LOCATION DIAGRAMS IS REQUIRED.) | | | | | | | | | |

| TITLE: | .DRAWING NUMBER | .REV | .DATE | .MODEL | .FSCM | .PAGE |
|---|---|---|---|---|---|---|
| CONTENTS RECORD | .555-00010 | .BF | .29 FEB 1982 | .XC-555A | .00000 | .2-0001-00 |

**FIGURE 6. Contents Record**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| R | DIAGRAM TITLE | DIAGRAM NUMBER | --DIAGRAM--- CONF. | PGS. | REV | CHANGE DIRECTIVE | EFFECTIVITY |
|---|---|---|---|---|---|---|---|
| B | GENERATOR DRIVE - CSD AND DISCONNECT | 11-24-11-01 | 001 | | A | | 001-068 |
| B | | 11-24-11-01 | 002 | | B | | 069-SUB |
| T | GENERATOR DRIVE - CSD OIL COOLING | 11-24-12-01 | 004 | | T | | 001-SUB |
| D | GENERATOR DRIVE - CSD OIL TEMP INDICTION | 11-24-13-01 | 001 | | D | | 001-SUB |
| A | GENERATOR DRIVE - CSD OIL PRESSURE IND | 11-24-14-01 | 001 | | A | | 001-SUB |
| D | GENERATOR DRIVE - CSD LOAD CONTROL | 11-24-15-01 | 001 | | D | | 001-SUB |
| A | AC GENERATION AND CONTROL | 11-24-21-01 | 001 | | A | | 001-SUB |
| G | AC INDICATION | 11-24-22-03 | 003 | | G | | 001-SUB |
| D | AC PROTECTION | 11-24-23-01 | 001 | | D | | 001-SUB |
| A | INVERTER EMERGENCY AC POWER | 11-24-24-01 | 001 | | A | | 001-SUB |
| A | AIR DRIVEN EMERGENCY AC POWER | 11-24-25-01 | 001 | | A | | 001-SUB |
| A | DC POWER | 11-24-31-01 | 001 | | A | | 001-SUB |
| A | DC CONTROL | 11-24-32-01 | 001 | | A | | 001-SUB |
| A | DC INDICATION | 11-24-33-01 | 001 | | A | | 001-SUB |
| A | EMERGENCY DC POWER | 11-24-34-01 | 001 | | A | | 001-SUB |
| A | MAIN EXTERNAL POWER AND CONTROL | 11-24-41-01 | 001 | | A | | 001-SUB |
| A | GALLEY EXTERNAL POWER AND CONTROL | 11-24-42-01 | 001 | | A | | 001-SUB |
| T | AC POWER DISTRIBUTION AND CONTROL | 11-24-51-01 | 001 | | A | | 001-068, 070-070 |
| T | | 11-24-51-01 | 002 | | R | | 069-069, 071-SUB |

TITLE: INDEX OF PRODUCTION DIAGRAMS
ELECTRICAL POWER SYSTEM

| DRAWING NUMBER | REV | DATE | MODEL | FSCM NO | PAGE |
|---|---|---|---|---|---|
| 555-00010 | T | 1 JUL 1977 | XC-555A | 00000 | 4-11-24-01 |

**FIGURE 7. Index of Production Diagrams**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| REV | DIAGRAM TITLE | DIAGRAM NUMBER | ADDS CONF | ADDS PGS | ADDS REV | REPLACES CONF | REPLACES PGS | REPLACES REV | MODIFICATION DIRECTIVE | EFFECTIVITY |
|---|---|---|---|---|---|---|---|---|---|---|
| B | GENERATOR DRIVE - CSD AND DISCONNECT | 11-24-11-01 | 001 | | A | | | | | 001-068 |
| B | | 11-24-11-01 | 002 | | B | | | | | 069-178 |
| BA | | 11-24-11-01 | 003 | | BA | 001 | | A | 1C-555-145 | 001-068 |
| BA | | 11-24-11-01 | 004 | | BA | 002 | | B | 1C-555-145 | 069-178 |
| T | GENERATOR DRIVE - CSD OIL COOLING | 11-24-12-01 | 001 | | T | | | | | 001-178 |
| D | GENERATOR DRIVE - CSD OIL TEMP INDICATION | 11-24-13-01 | 001 | | D | | | | | 001-178 |
| A | GENERATOR DRIVE - CSD OIL PRESSURE IND | 11-24-14-01 | 001 | | A | | | | | 001-178 |
| D | GENERATOR DRIVE - CSD LOAD CONTROL | 11-24-15-01 | 001 | | D | | | | | 001-178 |
| AU | AC GENERATION AND CONTROL | 11-24-21-01 | 002 | | AU | | | | | 001-178 |
| BA | | 11-24-21-02 | 001 | | BA | | | | 1C-555-145 | 001-068 |
| BA | | 11-24-21-02 | 002 | | BA | | | | 1C-555-145 | 069-178 |
| AU | AC INDICATION | 11-24-22-01 | 002 | | AU | | | | | 001-178 |
| BA | | 11-24-22-02 | 001 | | BA | | | | 1C-555-145 | 001-068 |
| BA | | 11-24-22-02 | 002 | | BA | | | | 1C-555-145 | 069-178 |
| AU | AC PROTECTION | 11-24-23-01 | 002 | | AU | | | | | 001-178 |
| BA | | 11-24-23-01 | 003 | | BA | 002 | | | 1C-555-145 | 001-178 |
| AU | | 11-24-23-02 | 001 | | AU | | | | | 001-068 |
| AU | | 11-24-23-02 | 002 | | AU | | | | | 069-178 |
| BA | | 11-24-23-02 | 003 | | BA | 001 | | AU | 1C-555-145 | 001-068 |
| BA | | 11-24-23-02 | 004 | | BA | 002 | | AU | 1C-555-145 | 069-178 |
| A | INVERTER EMERGENCY AC POWER | 11-24-24-01 | 001 | | A | | | | | 001-178 |
| A | AIR DRIVEN EMERGENCY AC POWER | 11-24-25-01 | 001 | | A | | | | | 001-178 |
| A | DC POWER | 11-24-31-01 | 001 | | A | | | | | 001-178 |
| A | DC CONTROL | 11-24-32-01 | 001 | | A | | | | | 001-178 |
| A | DC INDICATION | 11-24-33-01 | 001 | | A | | | | | 001-178 |
| A | EMERGENCY DC POWER | 11-24-34-01 | 001 | | A | | | | | 001-178 |
| A | MAIN EXTERNAL POWER AND CONTROL | 11-24-41-01 | 001 | | A | | | | | 001-178 |
| A | GALLEY EXTERNAL POWER AND CONTROL | 11-24-42-01 | 001 | | A | | | | | 001-178 |
| AU | AC POWER DISTRIBUTION AND CONTROL | 11-24-51-01 | 002 | | AU | | | | | 001-068, 070-070 |
| AU | | 11-24-51-01 | 003 | | AU | | | | | 069-069, 071-178 |
| BA | | 11-24-51-01 | 004 | | BA | 002 | | AU | 1C-555-145 | 001-068, 070-070 |
| BA | | 11-24-51-01 | 004 | | BA | 003 | | AU | 1C-555-145 | 069-069, 071-178 |
| BC | | 11-24-51-01 | 005 | | BC | 004 | | BA | 1C-555-200 | 001-178 |
| AY | | 11-24-51-02 | 001 | | AY | | | | 1C-555-145 | 001-178 |
| BB | | 11-24-51-02 | 002 | | BB | 001 | | AY | 1C-555-132 | 001-178 |
| BE | | 11-24-51-02 | 003 | | BE | 002 | | BB | 1C-555-200 | 001-178 |
| D | DC POWER DISTRIBUTION AND CONTROL | 11-24-52-01 | 001 | | D | | | | | 001-178 |
| A | GROUND SERVICE DISTRIBUTION AND CONTROL | 11-24-53-01 | 001 | | A | | | | | 001-178 |
| A | COMMUNICATIONS CENTER POWER CONTROL | 11-24-54-01 | 001 | | A | | | | | 001-178 |

| TITLE | DRAWING NUMBER | REV | DATE | MODEL | FSCM NO | PAGE |
|---|---|---|---|---|---|---|
| INDEX OF EFFECTIVE DIAGRAMS<br>ELECTRICAL POWER SYSTEMS | 555-00010 | BE | 10 OCT 1981 | XC-555A | 00000 | 5-11-24-01 |

**FIGURE 8. Index of Effective Diagrams**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| REV | MOD NUMBER | MODIFICATION TITLE | USED ON DRAWING | DRAWING FSCM NO | MODIFICATION DIRECTIVE | CHANGE NUMBER | CLASS IV/V MOD NO. |
|---|---|---|---|---|---|---|---|
| T | 001 | ENGINE INSTRUMENTATION | 555-33311 | 00000 | 1C-555-40 | ECP 18 | |
| W | 002 | ALCC SYSTEM INSTALLATION | 555-39842 | 00000 | 1C-555-32 | ECP 25 | 0000 |
| AA | 003 | ALCC STAFF CONSOLE POSITION 1 AND 2 | 555-39842 | 00000 | 1C-555-32A | ECP 44 | 0000 |
| AB | 004 | TELETYPE SYSTEM - HIGH SPEED | 555-34281 | 00000 | 1C-555-18 | ECP 38 | |
| AC | 005 | SECURE DIGITAL COMMUNICATIONS INSTALLATION | 555-44602 | 00000 | 1C-555-12 | ECP 92 | 0000 |
| AD | 006 | PROJECT PHASER | 555-41263 | 00000 | 1C-555-92 | ECP 50 | 0000 |
| AE | 007 | PROJECT ZERO GEE NO. 1 | 555-51370 | 00000 | 1C-555-77 | ECP 84 | |
| AF | 008 | OVEN INSTALLATION, TYPE I, R-4 | 555-54112 | 00000 | 1C-555-100 | ECP 59 | |
| AG | 009 | UPPER DECK AIR CONDITIONING REWORK | 555-54982 | 00000 | 1C-555-96 | ECP 112 | |
| AH | 010 | RADIO RELAY, CONUS | 555-55256 | 00000 | 1C-555-123 | ECP 145 | 0000 |
| AJ | 011 | EMERGENCY LIGHTING INSTALLATION | 555-65902 | 00000 | 1C-555-140 | ECP 170 | |
| AK | 012 | ADVANCED INERTIAL NAVIGATION, AN/XXX-000 INSTALLATION | 555-67311 | 00000 | 1C-555-168 | ECP 171 | |
| AL | 013 | IMPROVED CONTROL SURFACES INTERFACE | 555-66433 | 00000 | 1C-555-180 | ECP 192 | |
| AM | 014 | THETA BASE OIL QUANTITY INDICATION INSTALLATION | 555-45912 | 00000 | 1C-555-192 | ECP 187 | |
| AN | 015 | FOURTH ALTERNATOR INSTALLATION | 555-55821 | 00000 | 1C-555-145 | ECP 212 | |
| AP | 016 | RATIONAL CADC INSTALLATION | 555-57403 | 00000 | 1C-555-132 | ECP 218 | |
| AR | 017 | HAL COMPUTER INSTALLATION | 555-52001 | 00000 | 1C-555-200 | ECP 200 | |
| AT | 018 | HOT CARGO HEATING INSTALLATION | 555-67890 | 00000 | 1C-555-249 | ECP 269 | |
| AU | 019 | HAL CHECKOUT CONSOLE INSTALLATION, MALFUNCTION ANALYSIS | 555-72001 | 00000 | 1C-555-250 | ECP 265 | |

TITLE : INDEX OF MODIFICATIONS  DRAWING NUMBER 555-00010  REV AU  DATE 9 AUG 1980  MODEL XC-555A  FSCM 00000  PAGE 6-0001-00

**FIGURE 9. Index of Modifications**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

```
R    .PAGE      .----ADDS----.      --REPLACES--      .CHANGE      .EFFECTIVITY
E                .CONF.  .REV.      CONF.  .REV       .DIRECTIVE   .
V    .                                                
```

| REV | TERMINATION | TERM | WIRE NUMBER | SUB-SUB-SYSTEM | MODIFICATION DIRECTIVE | EFFECTIVITY |
|---|---|---|---|---|---|---|
| A | 3443P22 | 1 | W105 -600-22BK | 34-43-01 | | 001-SUB |
| A | 3443P22 | 2 | W105 -600-22BL | 34-43-01 | | 001-SUB |
| A | 3443P22 | 3 | W105 -600-22BR | 34-43-01 | | 001-SUB |
| A | 3443P22 | 4 | W105 -600-22GN | 34-43-01 | | 001-SUB |
| F | 3443P22 | 5 | W105 -600-22RD | 34-43-01 | | 001-049 |
| F | 3443P22 | 5 | W105 -600-22WH | 34-43-01 | | 050-SUB |
| F | 3443P22 | 6 | W105 -600-22WH | 34-43-01 | | 001-049 |
| F | 3443P22 | 6 | W105 -600-22RD | 34-43-01 | | 050-SUB |
| A | 3443P22 | 7 | W105 -600-22YE | 34-43-01 | | 001-SUB |
| A | 3443P22 | 8 | W105 -703-22JP | 34-43-01 | | 001-SUB |
| A | 3443P22 | 9 | W105 -018-22 | 34-43-01 | | 001-SUB |
| A | 3443P22 | 10 | SPARE | | | 001-SUB |
| A | 3443P22 | 11 | SPARE | | | 001-SUB |
| A | 3443P22 | 12 | SPARE | | | 001-SUB |
| A | 3443P23 | 1 | W105 -001-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 2 | W105 -002-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 3 | W105 -003-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 4 | W105 -004-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 5 | W105 -005-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 6 | W105 -006-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 7 | W105 -007-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 8 | W105 -008-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 9 | W105 -009-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 10 | W105 -010-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 11 | W105 -302-22BL | 34-43-01 | | 001-SUB |
| A | 3443P23 | 12 | W105 -302-22RD | 34-43-01 | | 001-SUB |
| A | 3443P23 | 13 | W105 -302-22YE | 34-43-01 | | 001-SUB |
| A | 3443P23 | 14 | W105 -700-22JP | 34-43-01 | | 001-SUB |
| A | 3443P23 | 15 | W105 -303-22BL | 34-43-01 | | 001-SUB |
| A | 3443P23 | 16 | W105 -303-22RD | 34-43-01 | | 001-SUB |
| A | 3443P23 | 17 | W105 -303-22YE | 34-43-01 | | 001-SUB |
| A | 3443P23 | 18 | W105 -011-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 19 | W105 -012-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 20 | W105 -013-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 21 | W105 -601-22BK | 34-43-01 | | 001-SUB |
| A | 3443P23 | 22 | W105 -601-22BL | 34-43-01 | | 001-SUB |
| A | 3443P23 | 23 | W105 -601-22BR | 34-43-01 | | 001-SUB |
| A | 3443P23 | 24 | W105 -601-22GN | 34-43-01 | | 001-SUB |
| F | 3443P23 | 25 | W105 -601-22RD | 34-43-01 | | 001-049 |
| F | 3443P23 | 25 | W105 -601-22WH | 34-43-01 | | 050-SUB |
| F | 3443P23 | 26 | W105 -601-22WH | 34-43-01 | | 001-049 |
| F | 3443P23 | 26 | W105 -601-22RD | 34-43-01 | | 050-SUB |
| A | 3443P23 | 27 | W105 -601-22RD | 34-43-01 | | 001-SUB |
| A | 3443P23 | 28 | W105 -701-22JP | 34-43-01 | | 001-SUB |
| A | 3443P23 | 29 | W105 -014-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 30 | W105 -015-20 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 31 | W105 -016-22 | 34-43-01 | | 001-SUB |
| A | 3443P23 | 32 | W105 -017-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 1 | W105 -001-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 2 | W105 -002-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 3 | W105 -003-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 4 | W105 -004-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 5 | W105 -005-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 6 | W105 -006-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 7 | W105 -007-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 8 | W105 -008-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 9 | W105 -009-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 10 | W105 -010-22 | 34-43-01 | | 001-SUB |
| A | 3443P24 | 11 | W105 -300-22BL | 34-43-01 | | 001-SUB |
| A | 3443P24 | 12 | W105 -300-22RD | 34-43-01 | | 001-SUB |
| A | 3443P23 | 13 | W105 -300-22YE | 34-43-01 | | 001-SUB |
| A | 3443P23 | 14 | W105 -301-22BL | 34-43-01 | | 001-SUB |
| A | 3443P23 | 15 | W105 -301-22RD | 34-43-01 | | 001-SUB |
| A | 3443P23 | 16 | W105 -301-22YE | 34-43-01 | | 001-SUB |
| A | 3443P23 | 17 | W105 -033-22 | SPARE | | 001-SUB |
| A | 3443P23 | 18 | W105 -033-22 | SPARE | | 001-SUB |

(2) (10) (4) (6) (12) (18) (8) (13) (11)

NOTE: NUMBERS ENCLOSED ( ) INDICATE ELEMENT SIZE
NOT INCLUDING SPACING

| TITLE | DRAWING NUMBER | REV | DATE | MODEL | ECSCM NO. | PAGE |
|---|---|---|---|---|---|---|
| CONNECTION LIST<br>INERTIAL NAVIGATION SET NO. 3 | 555-00010 | F | 30 SEPT 75 | XC-555A | 00000 | 8 - 34 - 43 - 01 |

**FIGURE 11. Connection List**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| R E V | WIRE NUMBER | WIRE TYPE CODE | WIRE LENGTH (mm) | SUB-SUB SYSTEM | TERMINATION END 1 | TERM. CODE | CONNECTION POINT | TERMINATION END 2 | TERM. CODE | CONNECTION POINT | MODIFICATION DIRECTIVE | EFFECTIVITY | E/M/C | SIGNAL CODE |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| AY | W125 -001-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 1 | 2314P125A | 106 | 1 | | 001-SUB | 2 | 2314AAA |
| AY | W125 -002-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 2 | 2314P125A | 106 | 2 | | 001-SUB | 2 | 2314AAB |
| AY | W125 -003-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 3 | 2314P125A | 106 | 3 | | 001-SUB | 2 | 2314AAC |
| AY | W125 -004-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 4 | 2314P125A | 106 | 4 | | 001-SUB | 2 | 2314AAD |
| AY | W125 -005-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 5 | 2314P125A | 106 | 5 | | 001-SUB | 2 | 2314AAE |
| AY | W125 -006-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 6 | 2314P125A | 106 | 6 | | 001-SUB | 2 | 2314AAF |
| AY | W125 -007-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 7 | 2314P125A | 106 | 7 | | 001-SUB | 2 | 2314AAG |
| AY | W125 -008-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 8 | 2314P125A | 106 | 8 | | 001-SUB | 2 | 2314AAH |
| AY | W125 -009-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 9 | 2314P125A | 106 | 9 | | 001-SUB | 2 | 2314AAI |
| AY | W125 -010-22 | AA | 120.0 | 23-14-01 | 2314P124 | 106 | 10 | 2314P125A | 106 | 10 | | 001-SUB | 2 | 2314AAJ |
| AY | W125 -011-22 | AA | 084.0 | 23-14-01 | 2314P124 | 106 | 18 | 3931TB1 | 2013 | 1 | | 001-SUB | 2 | 2314AAX |
| AY | W125 -012-22 | AA | 084.0 | 23-14-01 | 2314P124 | 106 | 19 | 3931TB1 | 2013 | 2 | | 001-SUB | 2 | 2314AAY |
| AY | W125 -013-22 | AA | 084.0 | 23-14-01 | 2314P124 | 106 | 20 | 3931TB1 | 2013 | 3 | | 001-SUB | 2 | 2314ACD |
| AY | W125 -014-22 | YY | . | 23-14-01 | 2314S1 | . | A | 3922SA1 | 2050 | SP1 | | 001-SUB | 2 | 2314ABA |
| AY | W125 -015-22 | YY | . | 23-14-01 | 2314S1 | . | B | 3922SA1 | 2050 | SP2 | | 001-SUB | 2 | 2314ACA |
| AY | W125 -016-22 | YY | . | 23-14-01 | 2314S1 | . | C | 3922SA1 | 2050 | SP3 | | 001-SUB | 2 | 2314ACB |
| AY | W125 -017-22 | YY | . | 23-14-01 | 2314S1 | . | D | 3922SA1 | 2050 | SP4 | | 001-SUB | 2 | 2314ACC |
| AY | W125 -018-22 | YY | . | 23-14-01 | 2314DS1 | . | A | 3922SA1 | 2050 | SP5 | | 001-SUB | 2 | 2314AAX |
| AY | W125 -019-22 | YY | . | 23-14-01 | 2314DS1 | . | B | 3922SA1 | 2050 | SP2 | | 001-SUB | 2 | 2314ACA |
| AY | W125 -020-22 | YY | . | 23-14-01 | 2314DS2 | . | A | 3922SA1 | 2050 | SP6 | | 001-SUB | 2 | 2314AAY |
| AY | W125 -021-22 | YY | . | 23-14-01 | 2314DS2 | . | B | 3922SA1 | 2050 | SP4 | | 001-SUB | 2 | 2314ACC |
| AY | W125 -022-22 | YY | . | 23-14-01 | 2314DS3 | . | A | 3922SA1 | 2050 | SP7 | | 001-SUB | 2 | 2314AAZ |
| AY | W125 -023-22 | YY | . | 23-14-01 | 2314DS3 | . | B | 3922SA1 | 2050 | SP4 | | 001-SUB | 2 | 2314ACC |
| AY | W125 -024-22 | AA | 043.0 | 23-14-01 | 3912TB1 | 2013 | 1 | 3922SA1 | 2050 | SP5 | | 001-SUB | 2 | 2314AAX |
| AY | W125 -025-22 | AA | 043.0 | 23-14-01 | 3912TB1 | 2013 | 2 | 3922SA1 | 2050 | SP6 | | 001-SUB | 2 | 2314AAY |
| AY | W125 -026-22 | AA | 043.0 | 23-14-01 | 3912TB1 | 2013 | 3 | 3922SA1 | 2050 | SP7 | | 001-SUB | 2 | 2314AAZ |
| AY | W125 -027-22 | AA | 140.0 | 23-14-01 | 3922SA1 | 2050 | SP7 | 2314K9 | 2013 | X1 | | 001-SUB | 2 | 2314AAZ |
| AY | W125 -300-22RD | CAA | 120.0 | 23-14-01 | 2314P124 | 106 | 11 | 2314P125A | 106 | 11 | | 001-SUB | 2 | 2314AAK |
| AY | W125 -300-22BL | CAA | 120.0 | 23-14-01 | 2314P124 | 106 | 12 | 2314P125A | 106 | 12 | | 001-SUB | 2 | 2314AAL |
| AY | W125 -300-22YE | CAA | 120.0 | 23-14-01 | 2314P124 | 106 | 13 | 2314P125A | 106 | 13 | | 001-SUB | 2 | 2314AAM |
| AY | W125 -300-99SH | CAA | 120.0 | 23-14-01 | 2314FR1 | 1122 | FR1 | 2314P125A | . | | | 001-SUB | 2 | 2314AAN |
| AY | W125 -301-22RD | CAJ | 120.0 | 23-14-01 | 2314P124 | 106 | 14 | 2314P125A | 106 | 14 | | 001-SUB | 2 | 2314AAO |
| AY | W125 -301-22BL | CAJ | 120.0 | 23-14-01 | 2314P124 | 106 | 15 | 2314P125A | 106 | 15 | | 001-SUB | 2 | 2314AAP |
| AY | W125 -301-22YE | CAJ | 120.0 | 23-14-01 | 2314P124 | 106 | 16 | 2314P125A | 106 | 16 | | 001-SUB | 2 | 2314AAQ |
| AY | W125 -600-22RD | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 21 | 2314P123 | 106 | 1 | | 001-SUB | 2 | 2314AAR |
| AY | W125 -600-22BL | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 22 | 2314P123 | 106 | 2 | | 001-SUB | 2 | 2314AAS |
| AY | W125 -600-22YE | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 23 | 2314P123 | 106 | 3 | | 001-SUB | 2 | 2314AAT |
| AY | W125 -600-22GN | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 24 | 2314P123 | 106 | 4 | | 001-SUB | 2 | 2314AAU |
| AY | W125 -600-22WH | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 25 | 2314P123 | 106 | 5 | | 001-049 | 2 | 2314AAV |
| AY | W125 -600-22WH | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 25 | 2314P123 | 106 | 6 | | 050-SUB | 2 | 2314AAV |
| AY | W125 -600-22BK | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 26 | 2314P123 | 106 | 6 | | 001-049 | 2 | 2314AAW |
| AY | W125 -600-22BK | HAA | 190.0 | 23-14-01 | 2314P124 | 106 | 26 | 2314P123 | 106 | 5 | | 050-SUB | 2 | 2314AAW |
| AY | W125 -600-99SH | HAA | 190.0 | 23-14-01 | 2314FR2 | 1124 | FR2 | 2314P123 | 106 | 7 | | 050-SUB | 2 | 2314ADE |
| AY | W125 -700-22JP | AA | 006.0 | 23-14-01 | 2314P124 | 106 | 36 | 2314FR2 | 1124 | FR2 | | 001-SUB | 2 | 2314ADE |
| AY | W125 -701-22JP | AA | 006.0 | 23-14-01 | 2314P124 | 106 | 37 | 2314FR1 | 1124 | FR1 | | 001-SUB | 2 | 2314AAN |
| AY | W125 -900-22 | AA | 045.0 | 23-14-01 | 2314P124 | 106 | 38 | 2314K9 | 2013 | X1 | | 001-SUB | 2 | 2314ACD |
| | (2) | (18) | (3) | (6) | (8) | (10) | (4) | (9) | (10) | (4) | (9) | (13) | (11) | (1) | (7) |

NOTE: NUMBERS ENCLOSED ( ) INDICATE ELEMENT SIZE.

MFG CODE 00000, ASSY DWG NO. 555-99990, EFFECTIVITY 001-049
ASSY DWG NO. 555-99999, EFFECTIVITY 050-SUB

| TITLE | DRAWING NUMBER | REV | DATE | MODEL | FSCM NO. | PAGE |
|---|---|---|---|---|---|---|
| WIRE HARNESS HF RADIO NO. 4 CONTROL | 555-00010 | AY | 22 MAR 81 | XC-555A | 00000 | 9-0125-01 |

FIGURE 12. Wire Harness List



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

| R E V | EQUIPMENT NUMBER DESIGNATOR | SAU | PART NUMBER/ SPEC CONT NO. FSCM NO. | PART DESCRIPTION | USED ON DRAWING | CHANGE AUTHORIZATION | STA/WL/BL ENCLOSURE | EFFECTIVITY | NOTES |
|---|---|---|---|---|---|---|---|---|---|
| A | 2311C1 | .01 | CSR13J333 | CAPACITOR, .033UFD | 555-32311 | | 3922A1 | 001-SUB | |
| A | 2311E1 | .01 | AT-0000 | ANTENNA, HF NO. 1 | 555-34980 | | 1450 600 R1 | 001-SUB | |
| A | 2311J1 | .01 | M39012/19-0015 | JACK, PRESS BHD | 555-35776 | | 345 208 L53 | 001-SUB | |
| A | 2311J2 | .01 | M39012/17-0015 | JACK | 555-35777 | | 345 208 L53 | 001-SUB | |
| A | 2311J3 | .01 | M39012/17-0015 | JACK | 555-35778 | | 1340 309 R6 | 001-SUB | |
| A | 2311K1 | .01 | RY4LA3B3L0,1 | RELAY, PTT | 555-40134 | | 243 220 R53 | 001-SUB | |
| F | 2311K2 | D01 | RY4LA3B3L01 | RELAY, MUTING | 555-40134 | ECP 76 | 246 220 R53 | 001-SUB | |
| F | | .02 | RY4LA3C3L01 | | 555-69738 | ECP 76 | | 001-SUB | |
| F | 2311K3 | .01 | RY4LA3B3L01 | RELAY, INTERLOCKING | 555-40134 | ECP 76 | 249 220 R53 | 001-049 | |
| F | | .02 | RY4LA3C3L01 | | 555-40134 | ECP 76 | | 050-SUB | |
| A | 2311P1 | .01 | MS27473F20B35S | PLUG, RECEIVER NO. 1 -1J1 | 555-35401 | | 315 208 R40 | 001-SUB | |
| A | 2311P2 | .01 | MS27473F20B35SD | PLUG, RECEIVER NO. 1 -1J2 | 555-35401 | | 3922A1 | 001-SUB | |
| A | 2311P3 | .01 | MS27473F20B35SD | PLUG, RECEIVER NO. 1 -1J3 | 555-35402 | | 3922A1 | 001-SUB | |
| A | 2311P4 | .01 | MS27473F20B35S | PLUG, HF CONT NO. 1 -3J1 | 555-35402 | | 3922A1 | 001-SUB | |
| A | 2311P5 | .01 | MS3106E16S-1S | PLUG, HF XMTR NO. 1 | 555-35405 | | 3922A1 | 001-SUB | |
| F | | P01 | MS3459L16S-1S | | 555-35405 | ECP 76 | | 001-SUB | |
| F | 2311P5A | P01 | MS3417-16F | BACKSHELL, PLUG | 555-35405 | ECP 76 | 3922A1 | 001-SUB | |
| A | 2311P9 | .01 | UG-261B | PLUG | 555-35508 | | 820 300 R18 | 001-SUB | |
| F | | P01 | M39012/17-0015 | PLUG | 555-35508 | ECP 76 | | 001-SUB | |
| A | 2311C01 | .01 | CU9876/ARC-0000 | COUPLER, ANTENNA | 555-28980 | | 1340 309 R6 | 001-SUB | |
| A | 2311CP1 | .01 | UG-414A | ADAPTER, PLUG | 555-28980 | | 1340 309 R18 | 001-SUB | |
| A | 2311CT1 | .01 | C9999/ARC-0000 | CONTROL, HF NO. 1 | 555-30129 | | 3912PL5 | 001-SUB | |
| A | 2311CT2 | .01 | 1914F-4 (00000) | CONTROL, FILTER | 555-32319 | | 340 208 R20 | 001-SUB | |
| A | 2311RE1 | .01 | R9999/ARC-0000 | RECEIVER, HF NO. 1 | 555-32319 | | 3922A1 | 001-SUB | |
| A | 2311TR1 | .01 | T1605/ARC-0000 | TRANSMITTER, HF NO. 1 | 555-32319 | | 3922A1 | 001-SUB | |
| A | 2311TB1 | .01 | MS27212-1-20 | TERMINAL BOARD | 555-32321 | | 339 221 R53 | 001-SUB | |
| A | 2311TB2 | .01 | M81714/5-1 | TERMINAL BLOCK | 555-23214 | | 3922A1 | 001-SUB | |
| A | 2311TB2A | .01 | M81714/1-AB3 | MODULE BLOCK | 555-23214 | | 3922A1 | 001-SUB | |
| A | 2311TB2B | .01 | M81714/1-AB3 | MODULE BLOCK | 555-23214 | | 3922A1 | 001-SUB | |
| A | 2311TB2C | .01 | M81714/1-AB3 | MODULE BLOCK | 555-23214 | | 3922A1 | 001-SUB | |
| (2) | (10) | (1) | (2) (20) (20) 2 LINES REQD. | (20) (20) 2 LINES REQD. | (15) | (13) | (11) | (11) | (5) |

NOTE: NUMBERS ENCLOSED ( ) INDICATE ELEMENT SIZE.

COLUMN IDENTIFIED AS S A U INDICATES STATUS AND USE OF AN LRU.

STATUS PREFIX EXPLANATION: P-PREFERRED REPLACEMENT
D-DELETED
A-ADD


USE PREFIX EXPLANATION: 01-INITIAL ITEM USE AND APPLICATION
02-NEW ITEM USE OR CHANGE IN INITIAL ITEM APPLICATION
03-ADDITIONAL ITEM CHANGES OR APPLICATIONS SEQUENTIALLY NUMBERED

| TITLE | DRAWING NUMBER | REV | DATE | MODEL | FSCM | PAGE |
|---|---|---|---|---|---|---|
| EQUIPMENT LIST<br>COMMUNICATIONS SYSTEM | 555-00010 | F | 30 SEPT 75 | XC-555A | 00000 | 10-23-00-02 |

**FIGURE 13. Equipment List Communications System**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

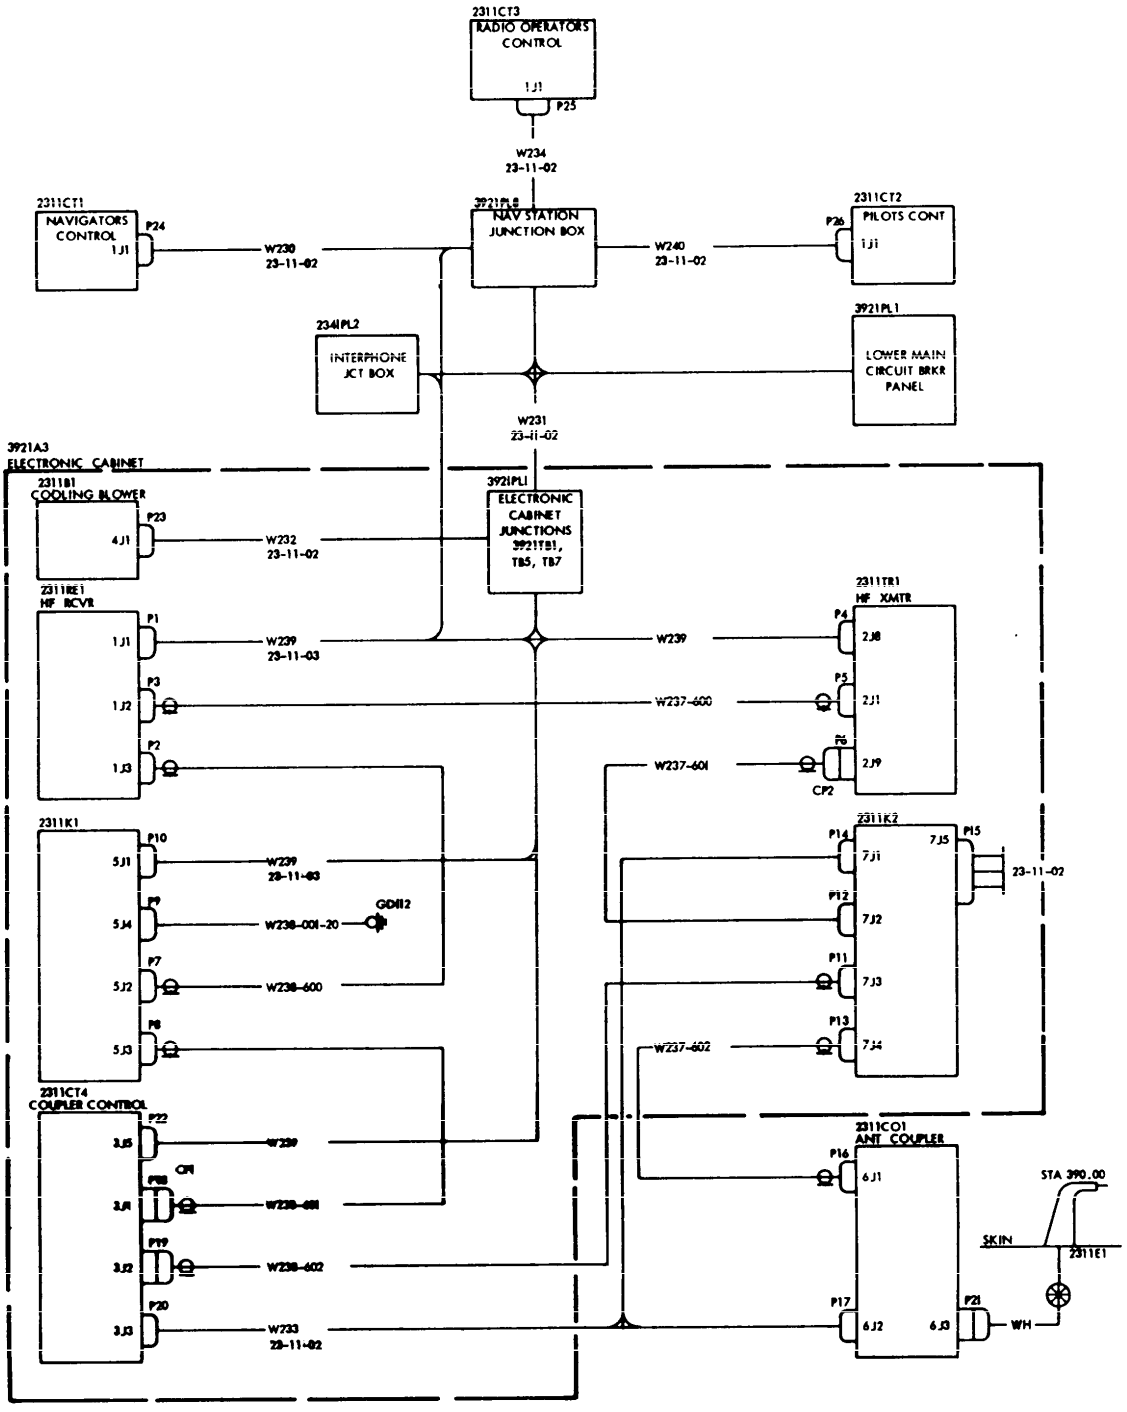


| TITLE | | DRAWING NUMBER | REV | MODEL | FSCM NO. | PAGE |
|---|---|---|---|---|---|---|
| INTERCONNECT DIAGRAM–LIAISON RADIO NO.1 AN/ARC–000 | MIL-STD AIRCRAFT COMPANY | 555-00010 | A | XC-555A | 00000 | 11-23-11-01 CONFIG-001 |

**FIGURE 14. Block Interconnection Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

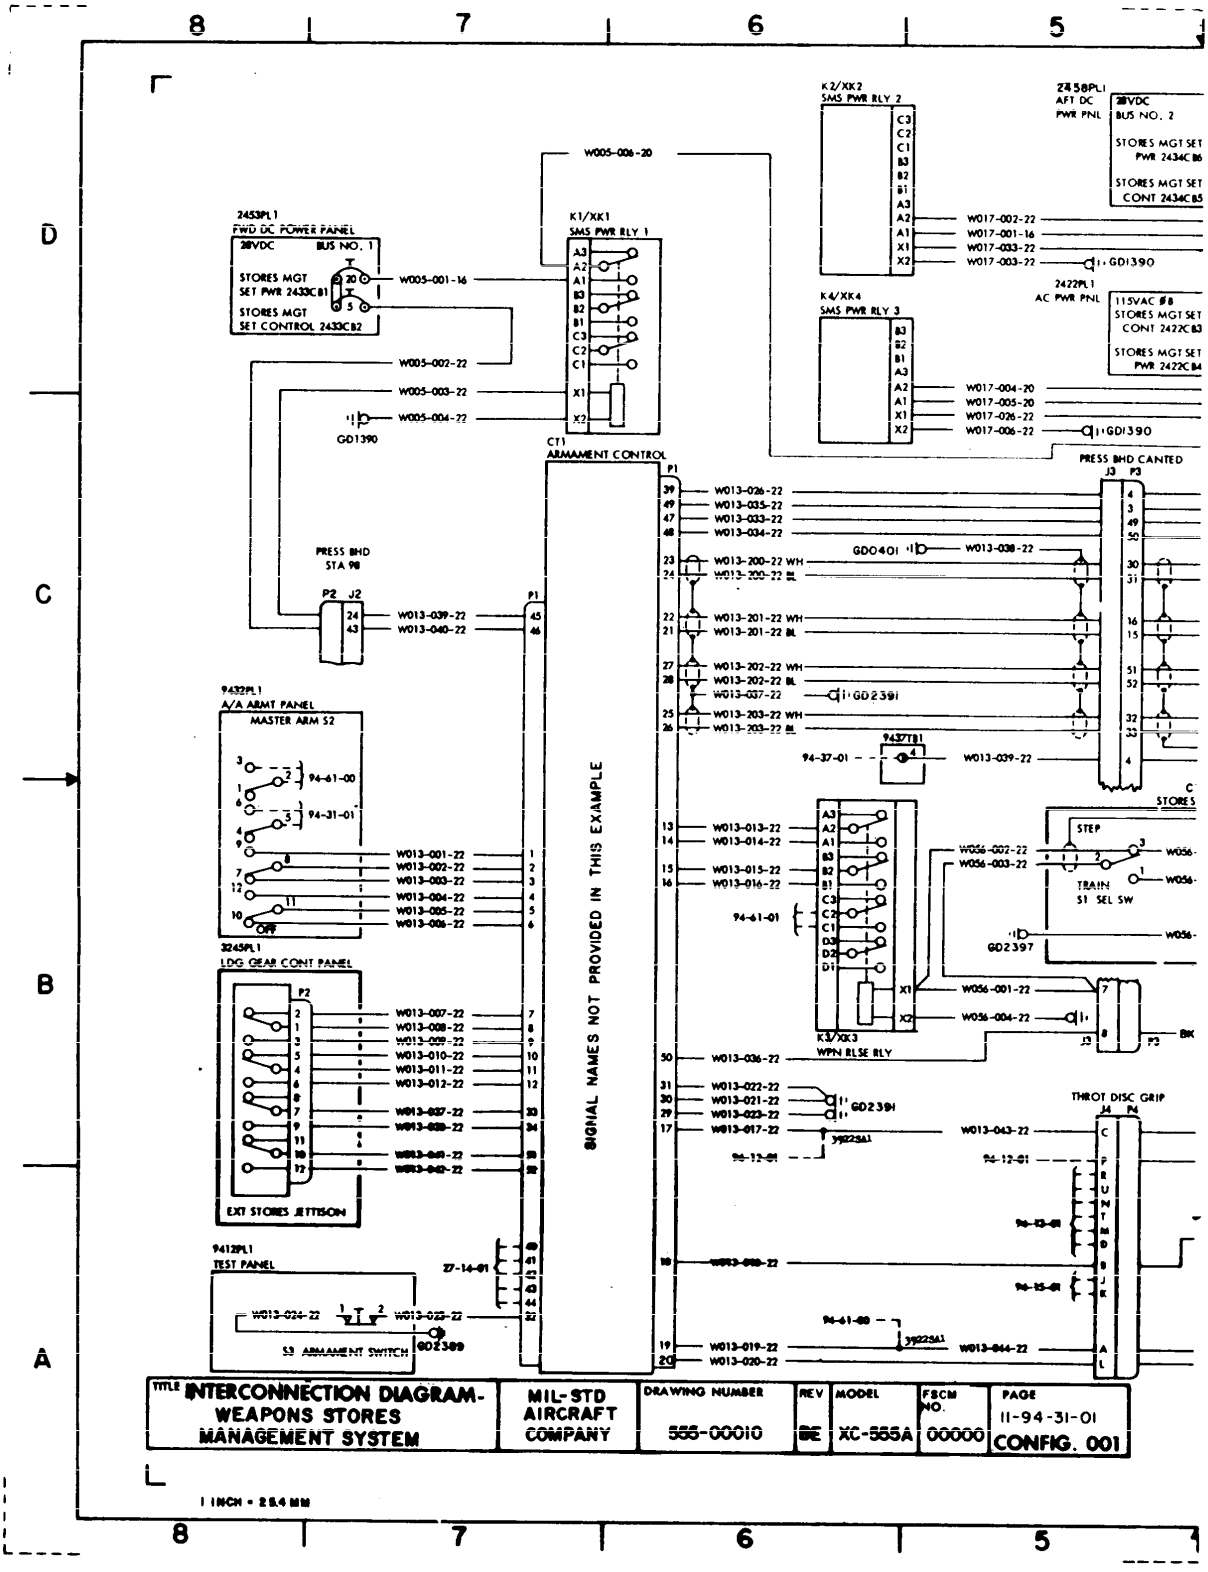



FIGURE 15. Point to Point Interconnection Diagram



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

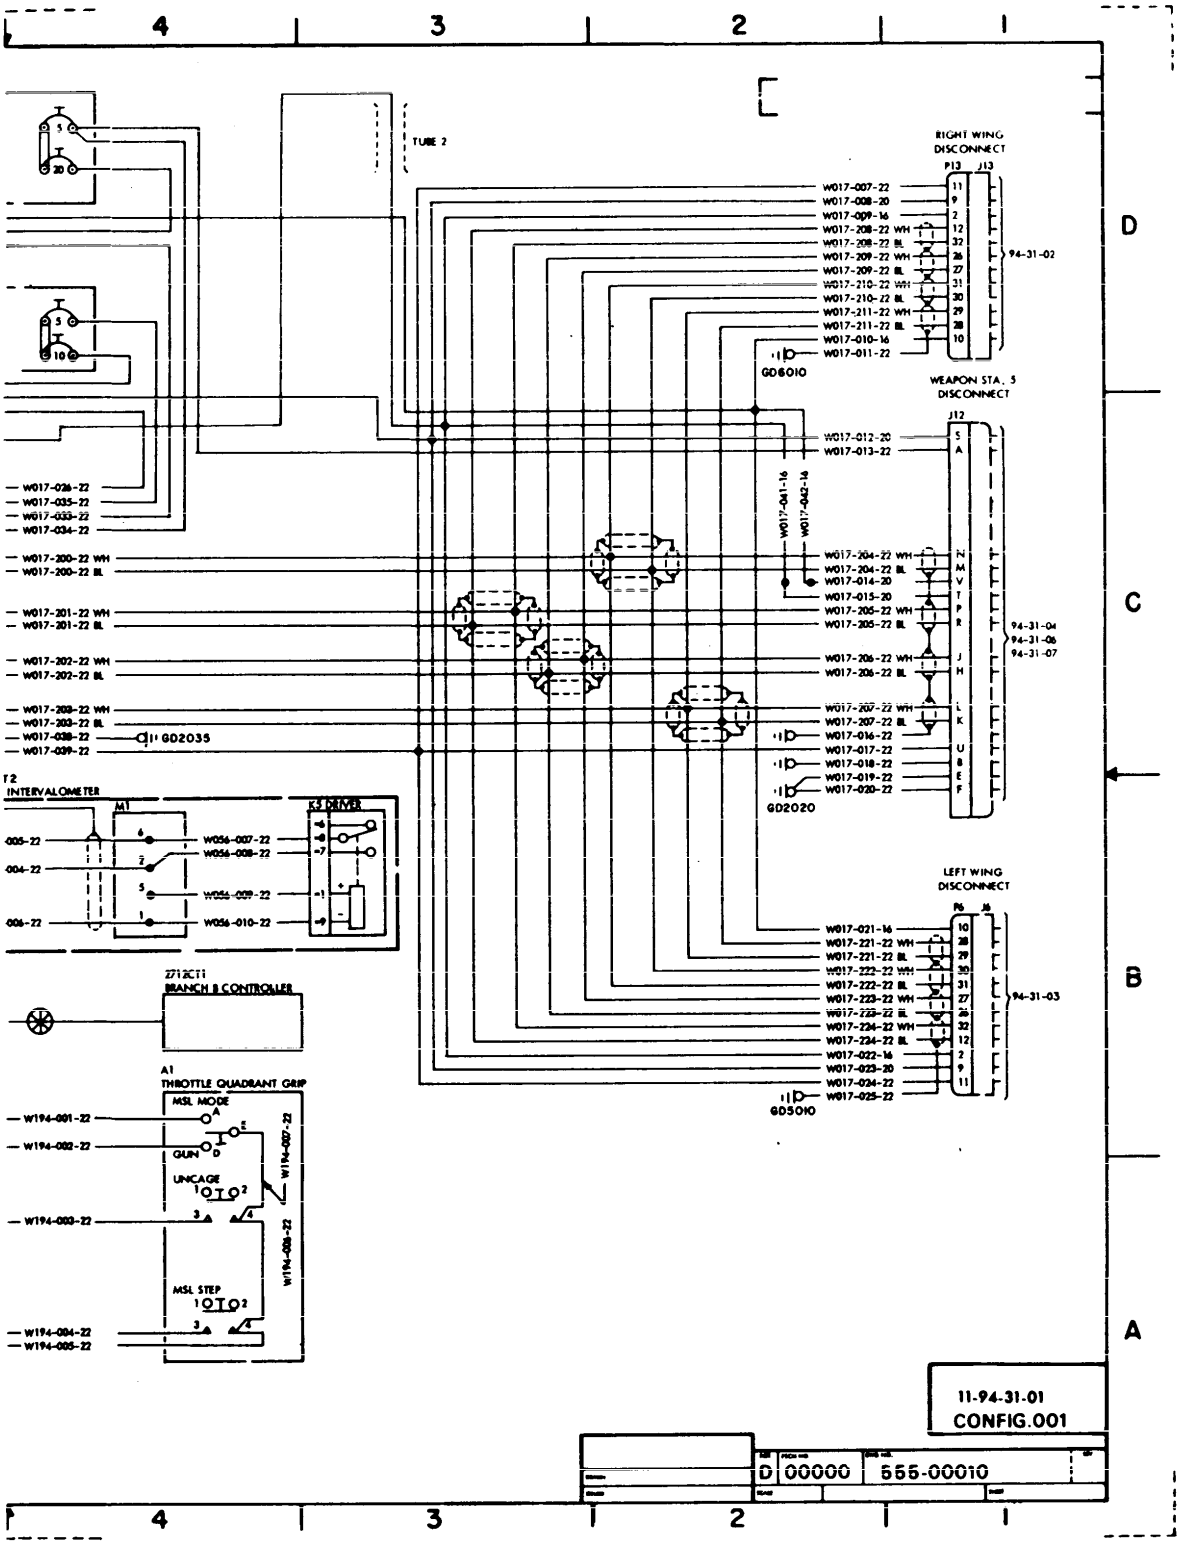



**FIGURE 15. Point to Point Interconnection Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

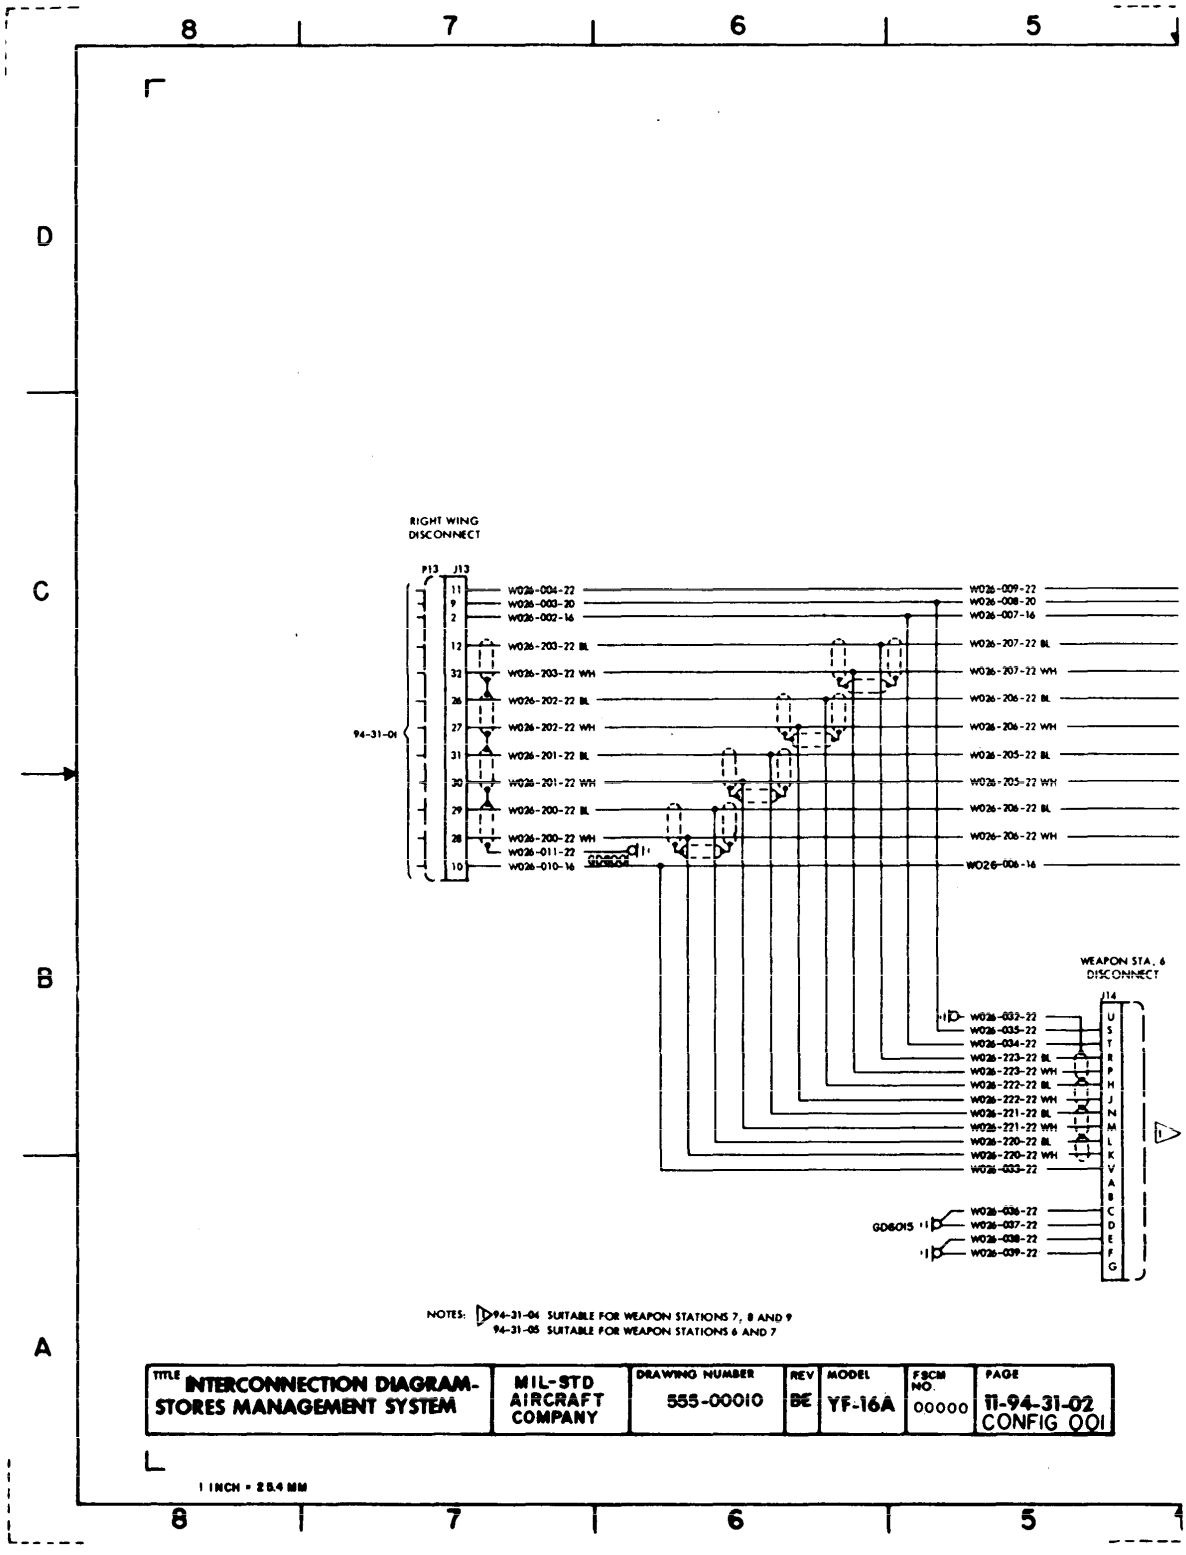



FIGURE 15. Point to Point Interconnection Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

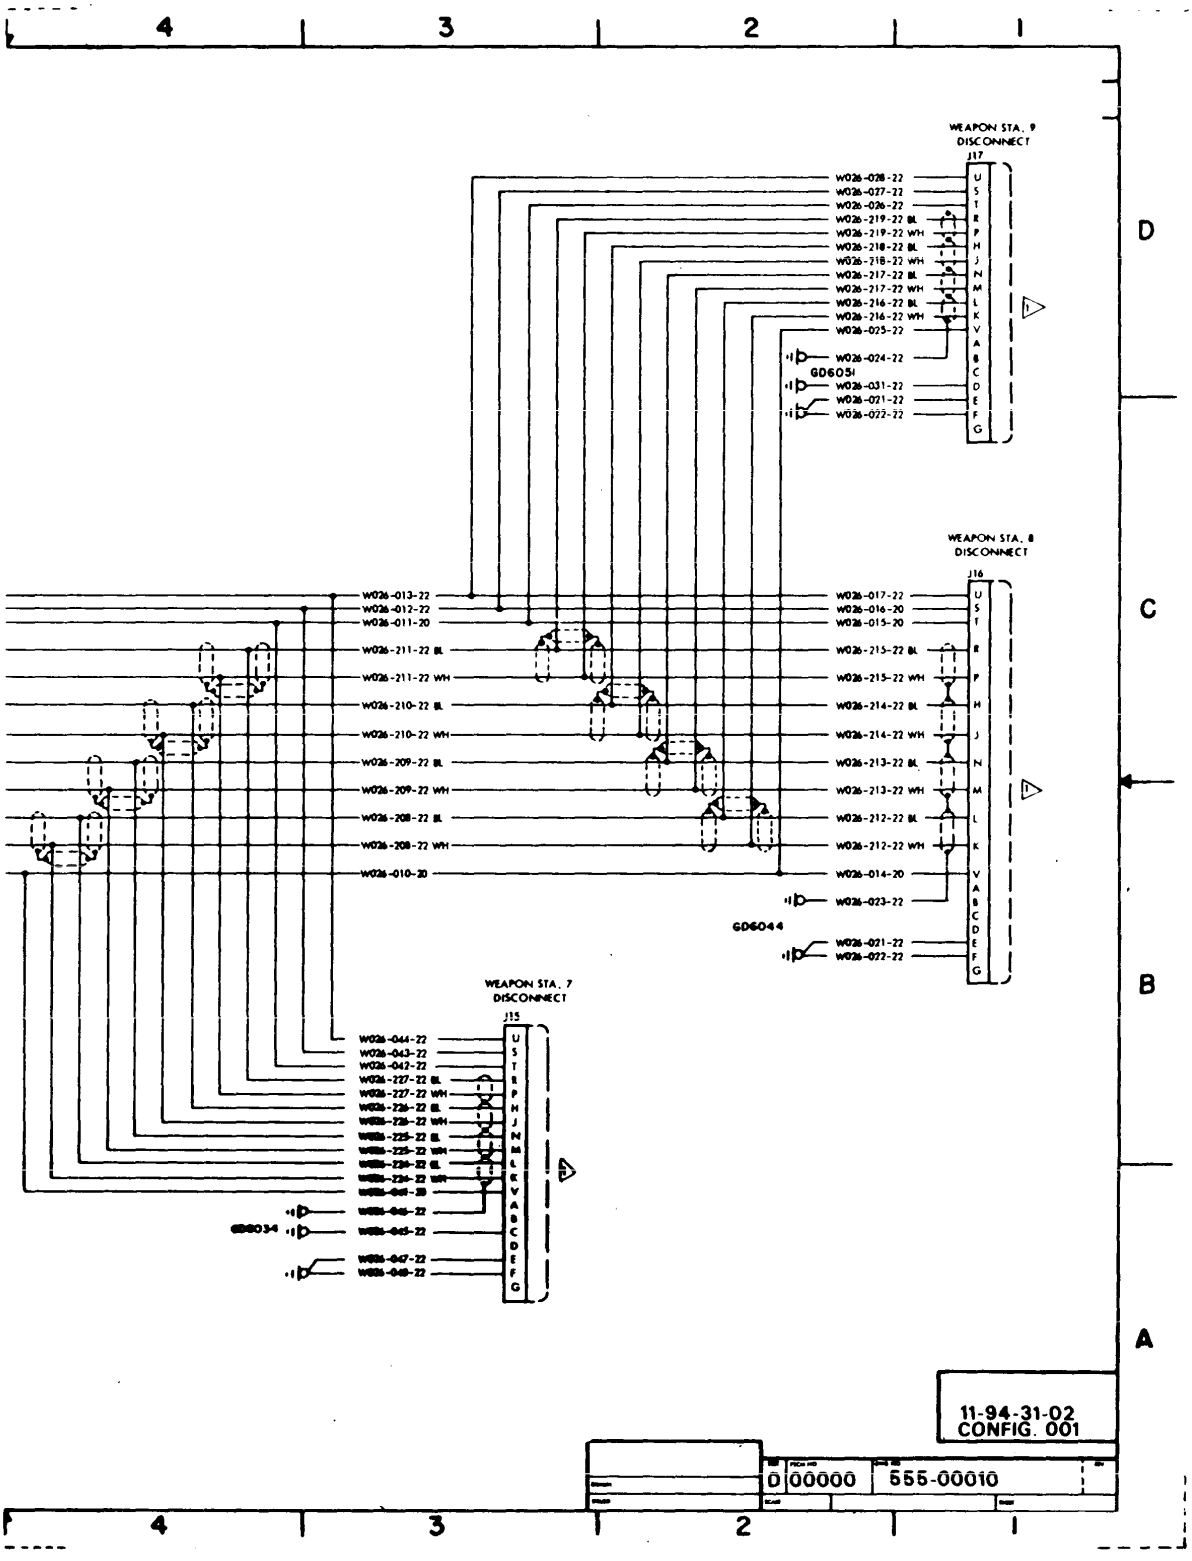



**FIGURE 15. Point to Point Interconnection Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

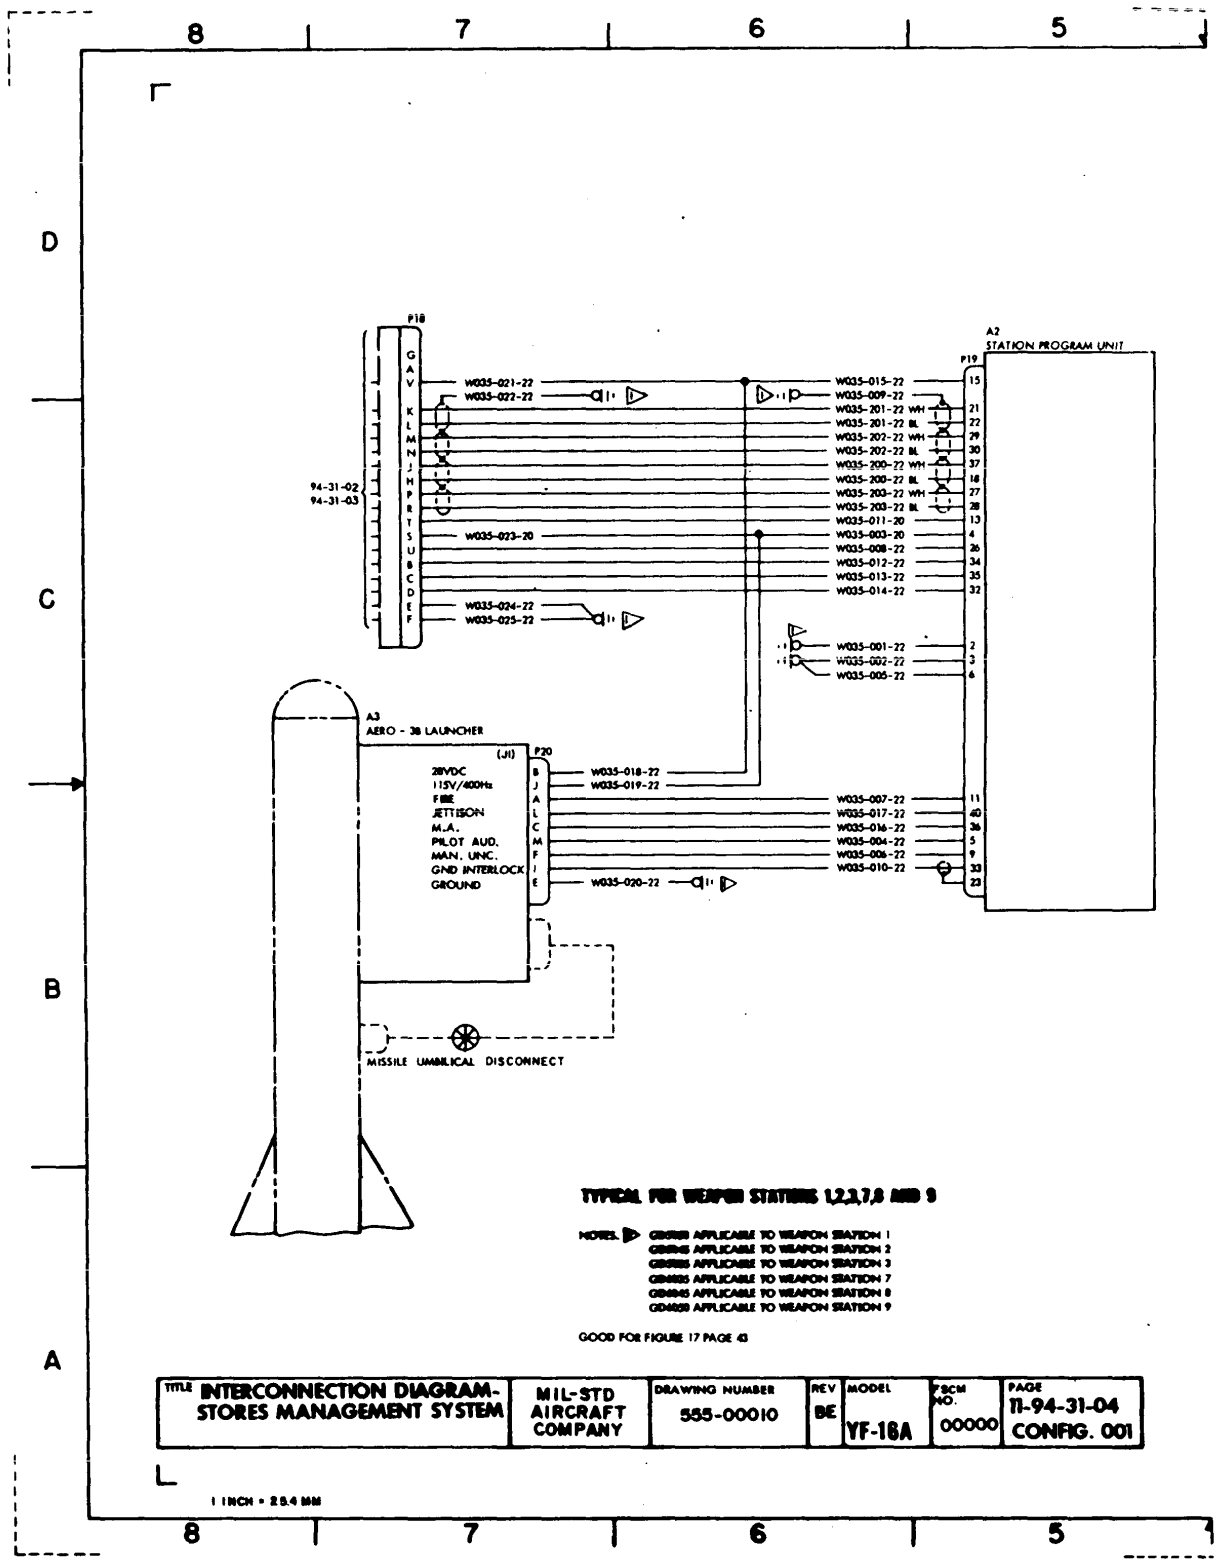



FIGURE 15. Point to Point Interconnection Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

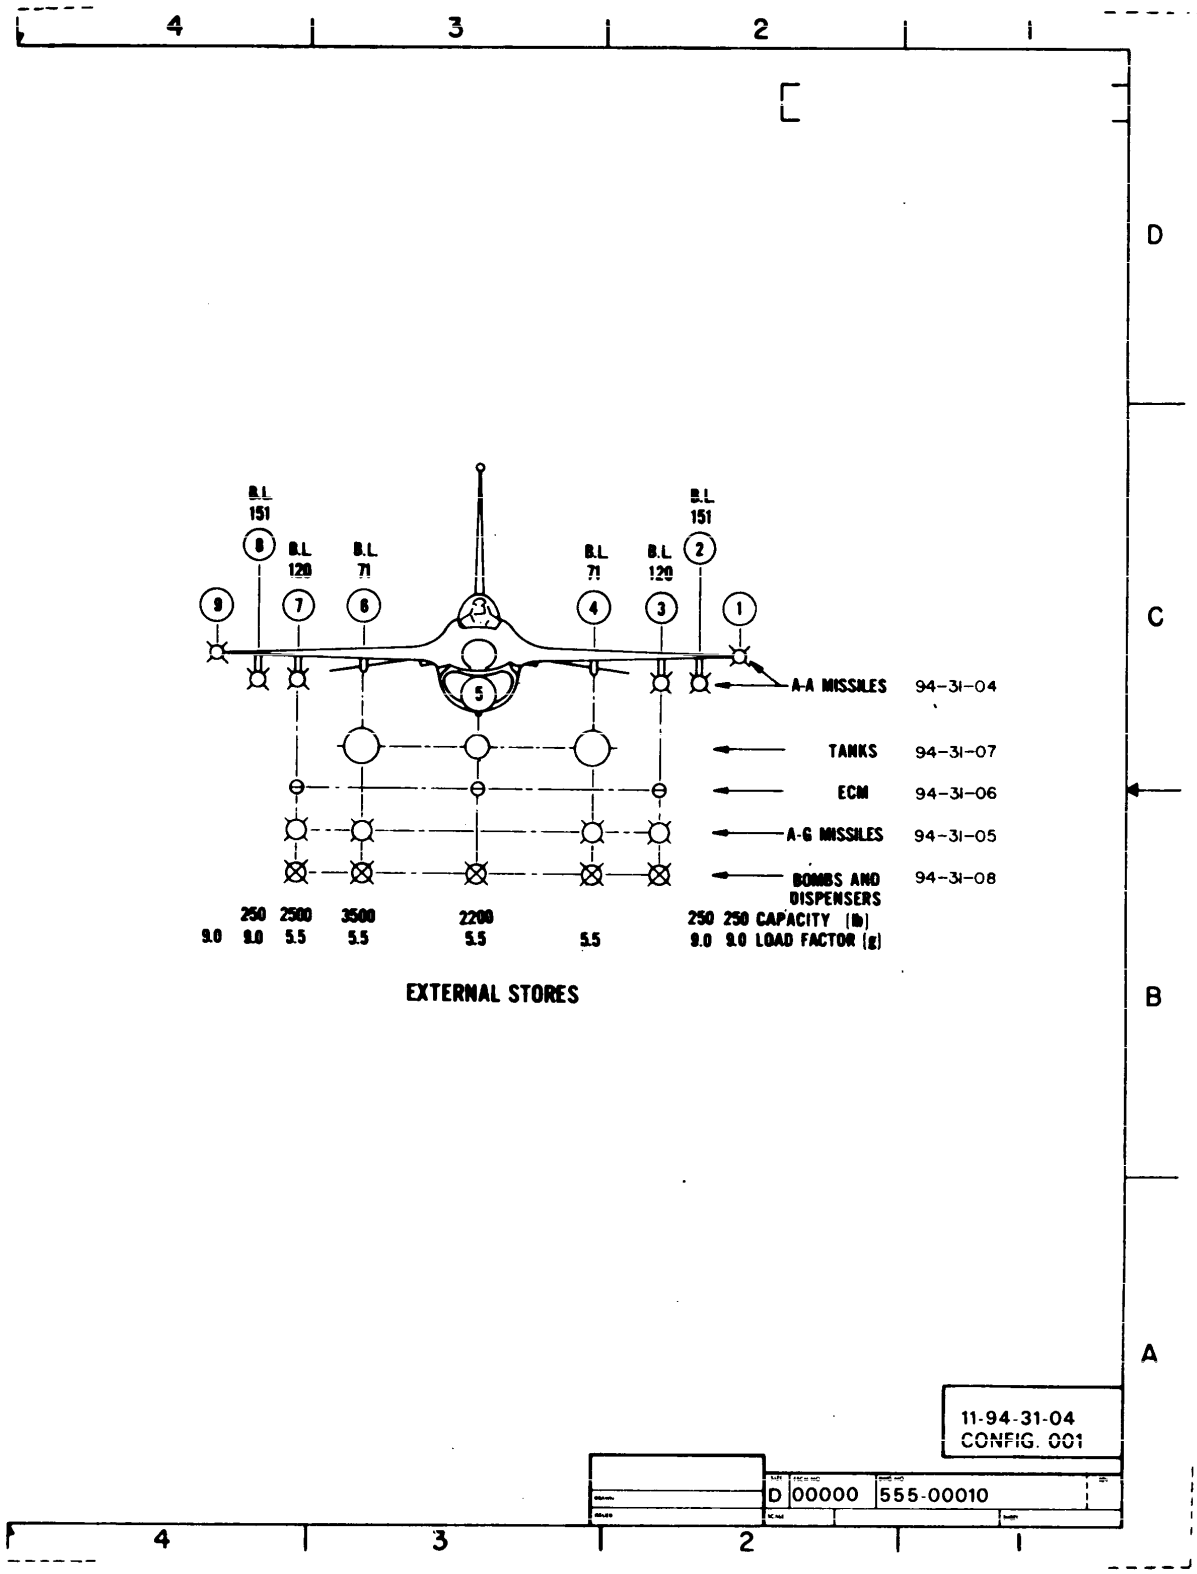



**FIGURE 15. Point to Point Interconnection Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

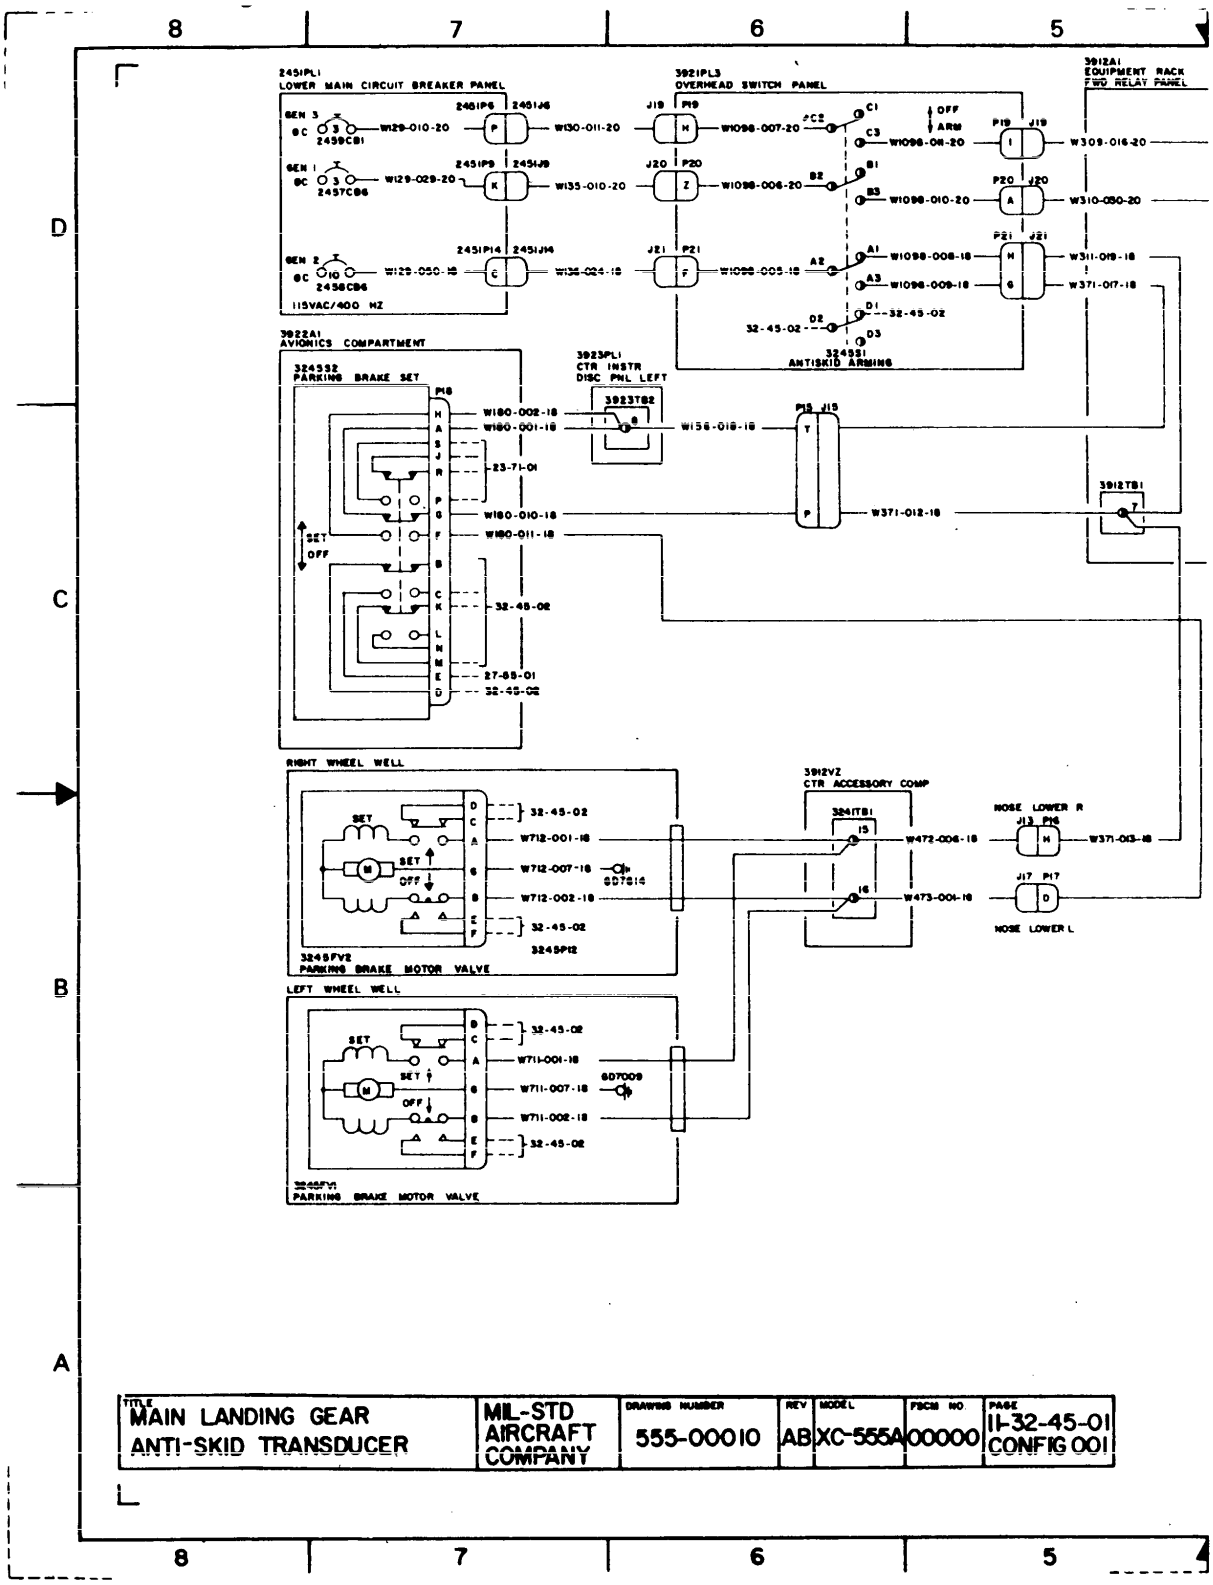



FIGURE 15. Point to Point Interconnection Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

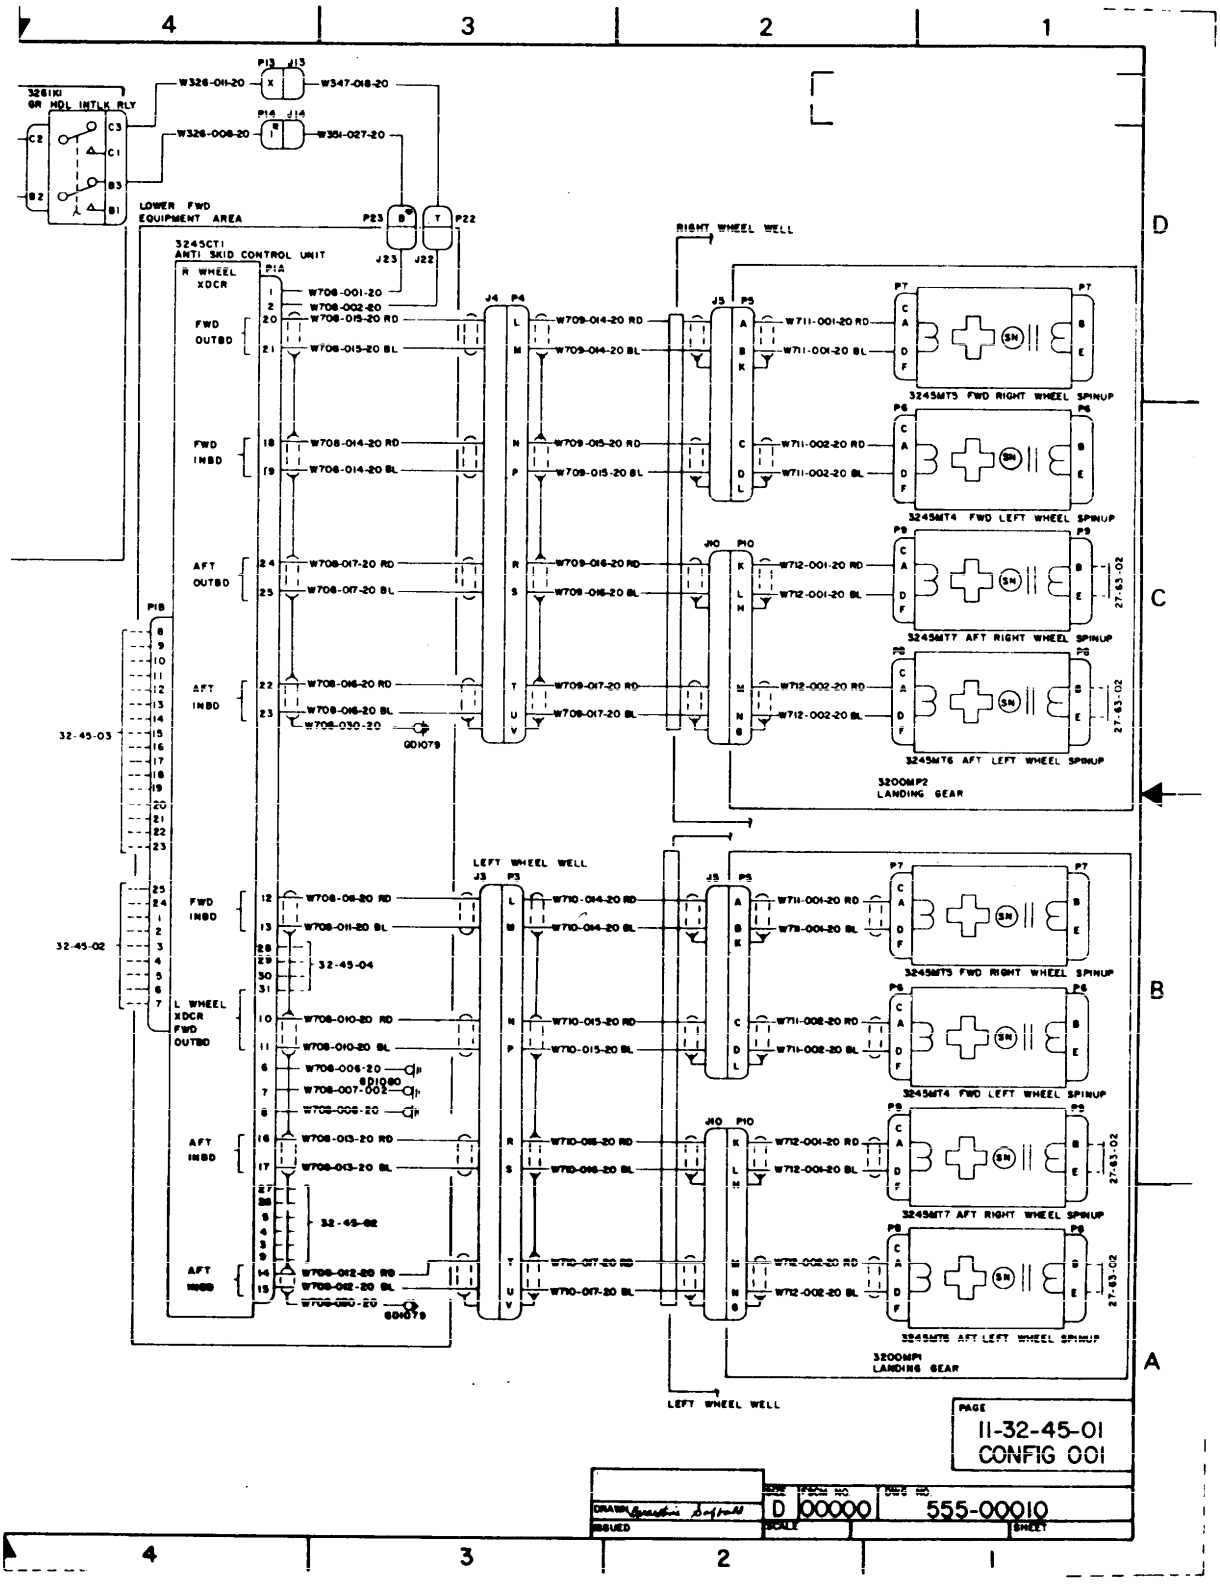



**FIGURE 15. Point to Point Interconnection Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

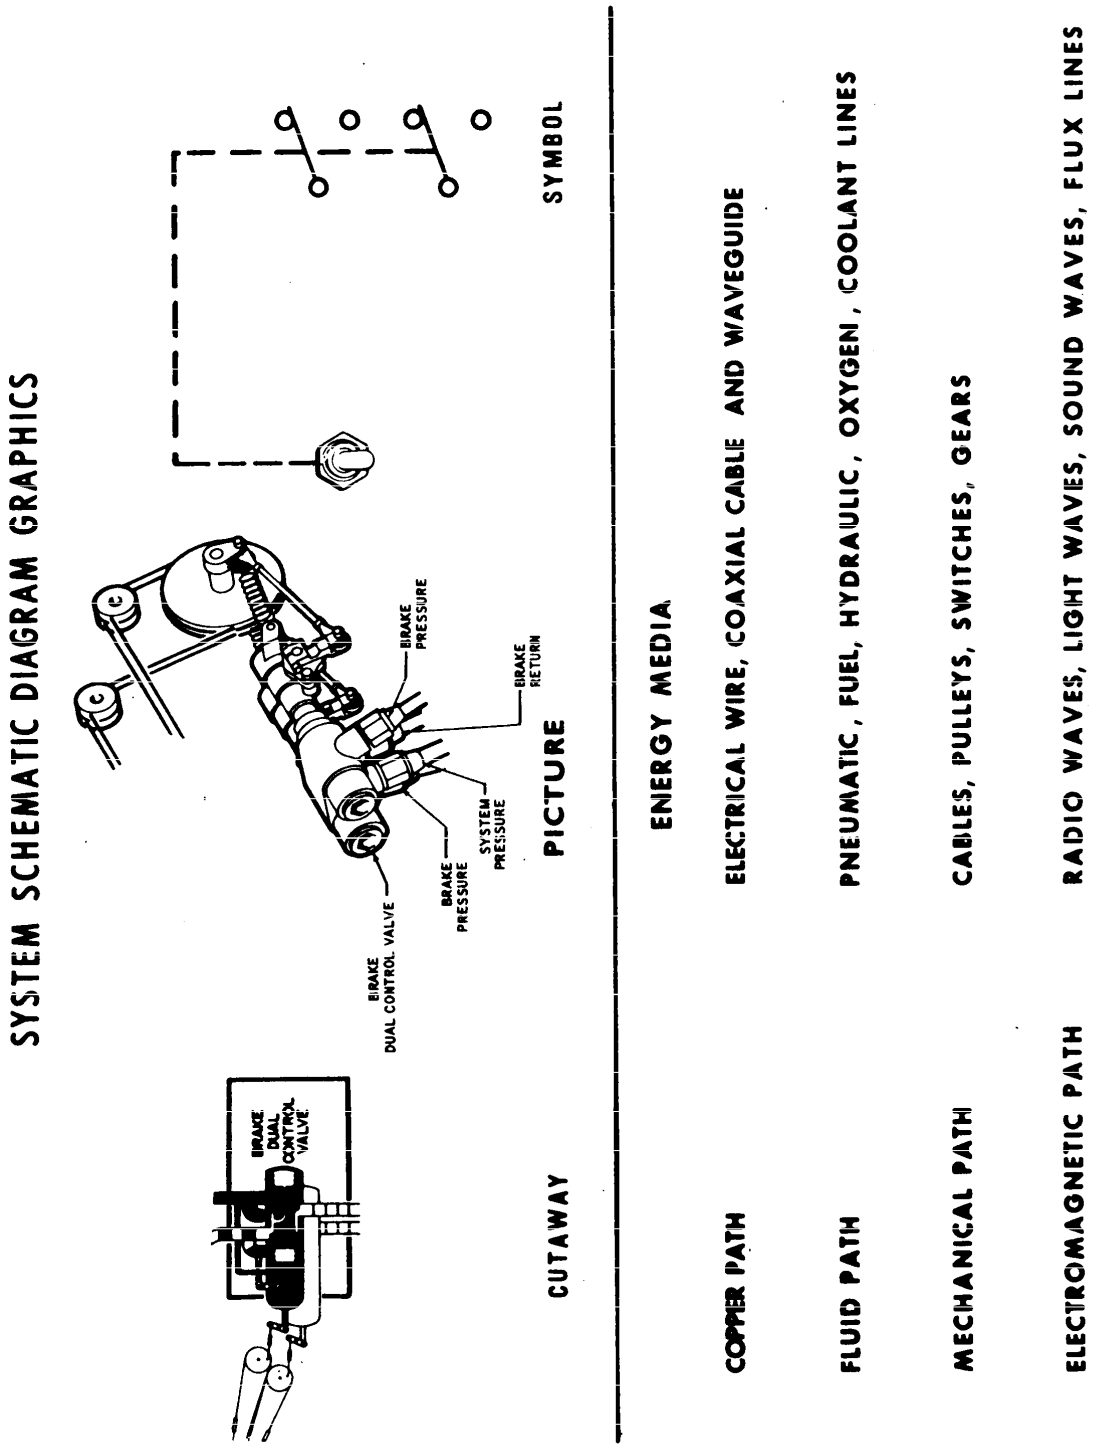



**FIGURE 16. System Schematic Diagram Graphics**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

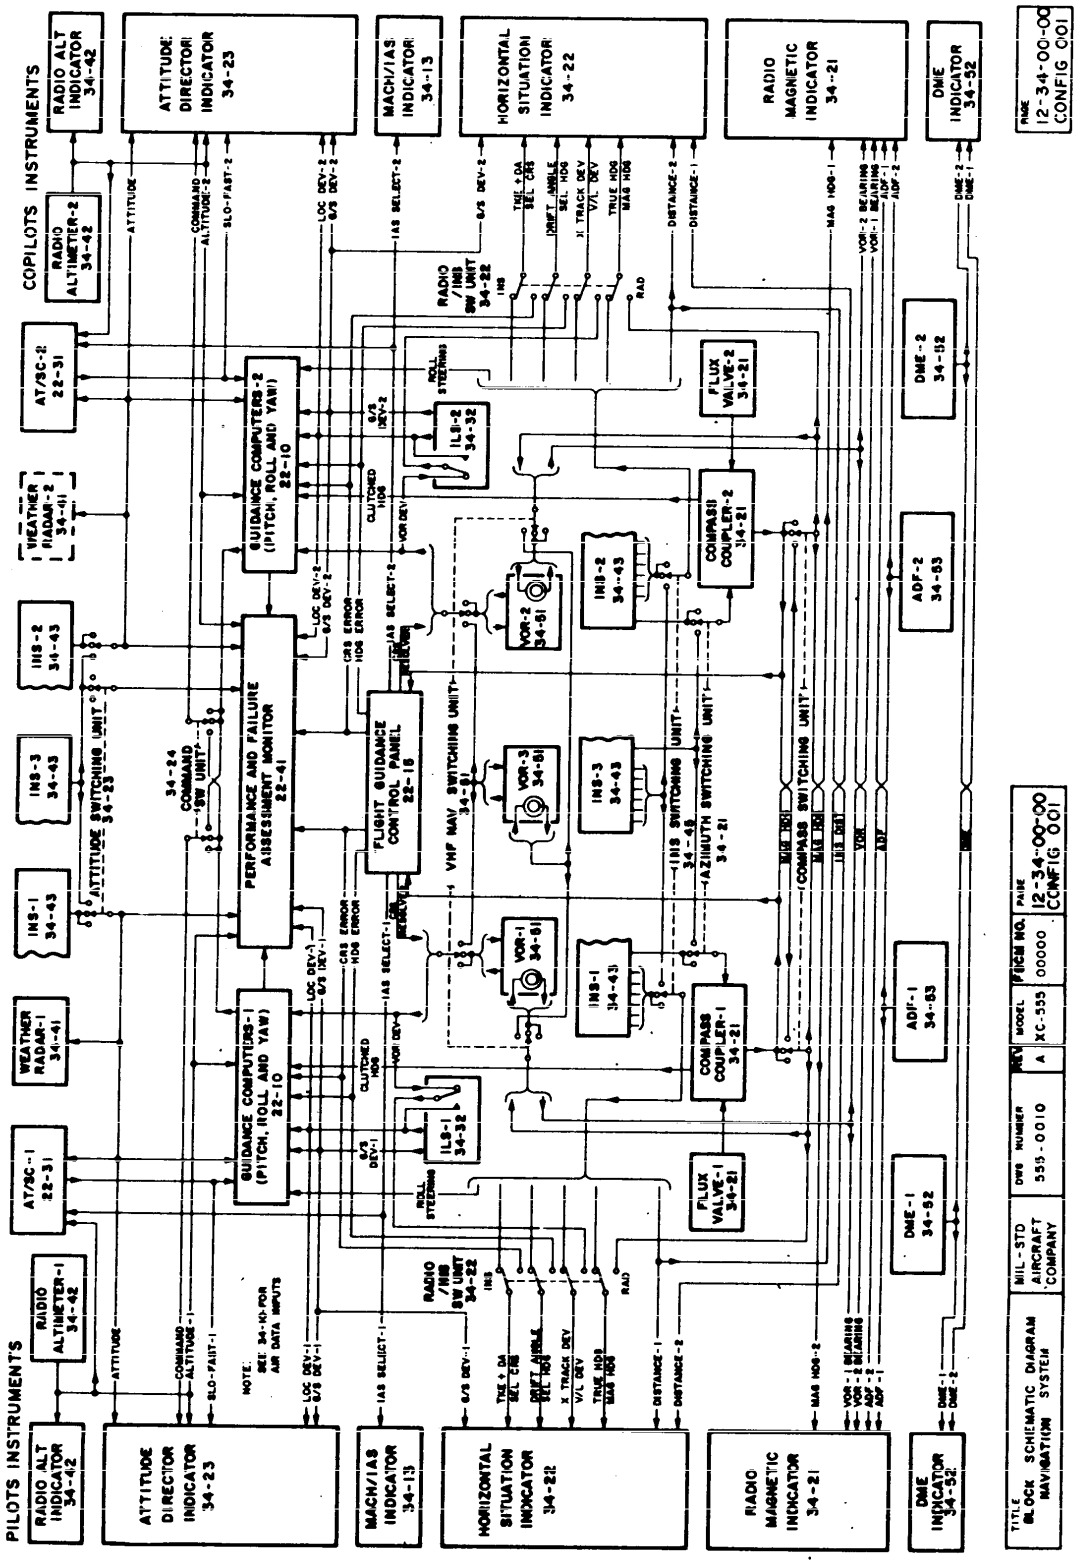



**FIGURE 17. Block Schematic Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

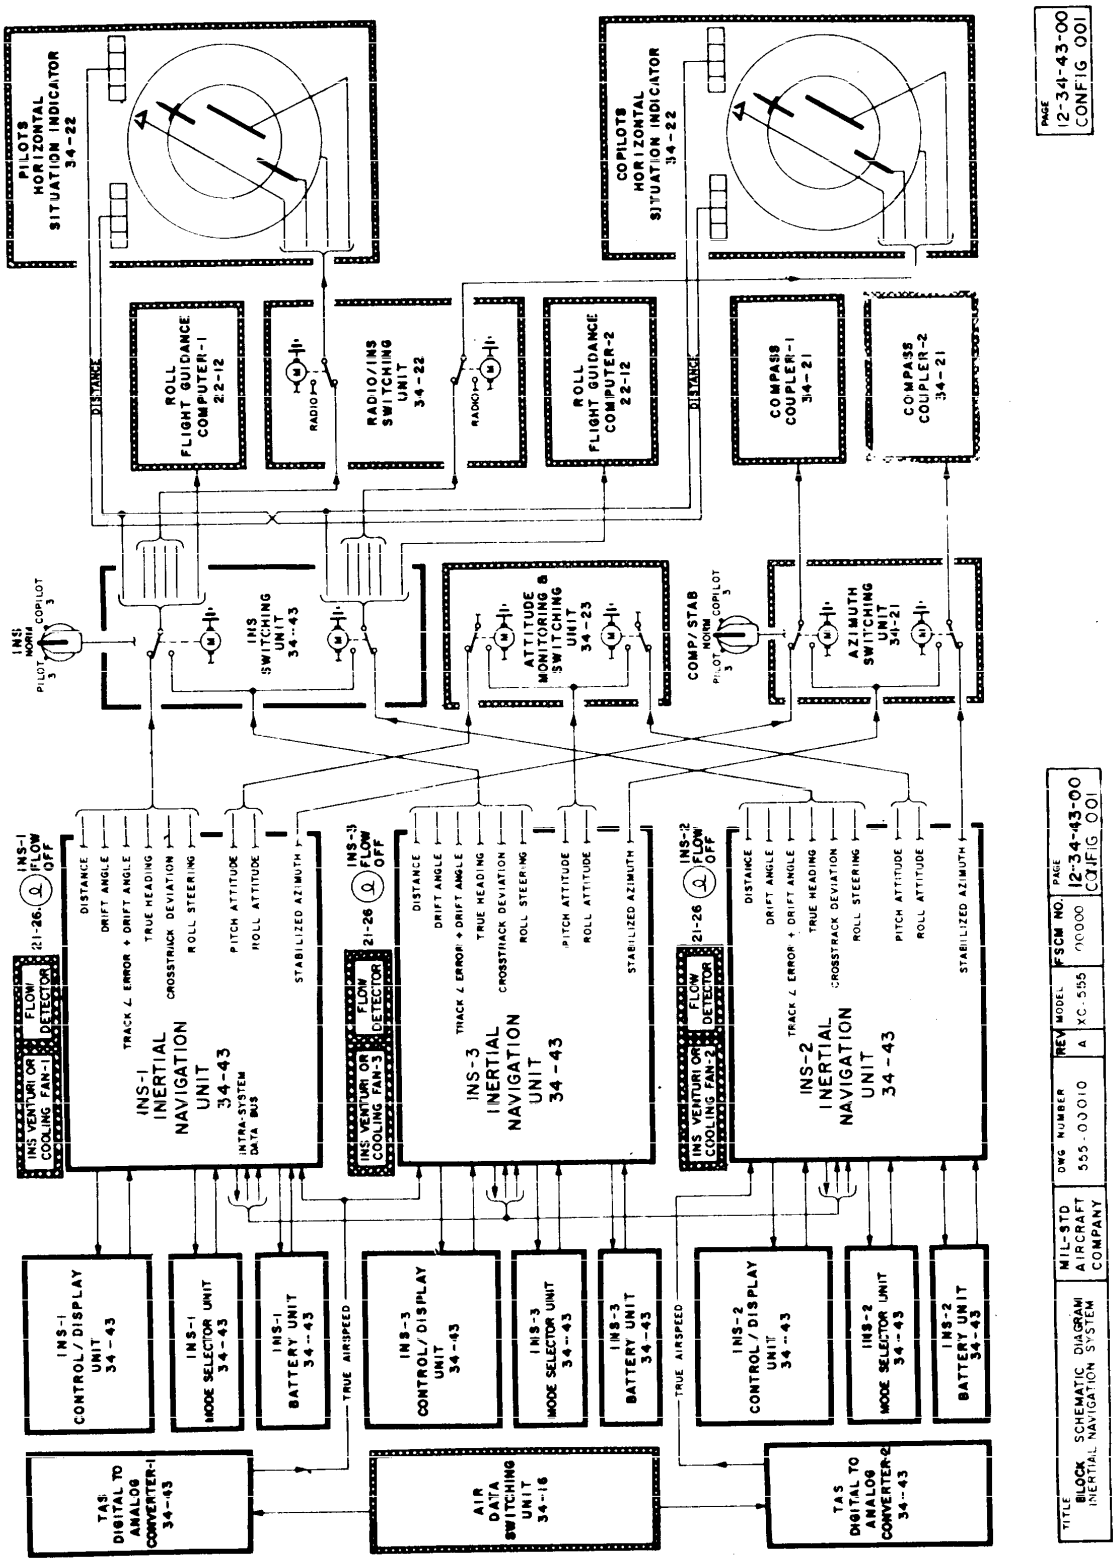



**FIGURE 17. Block Schematic Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

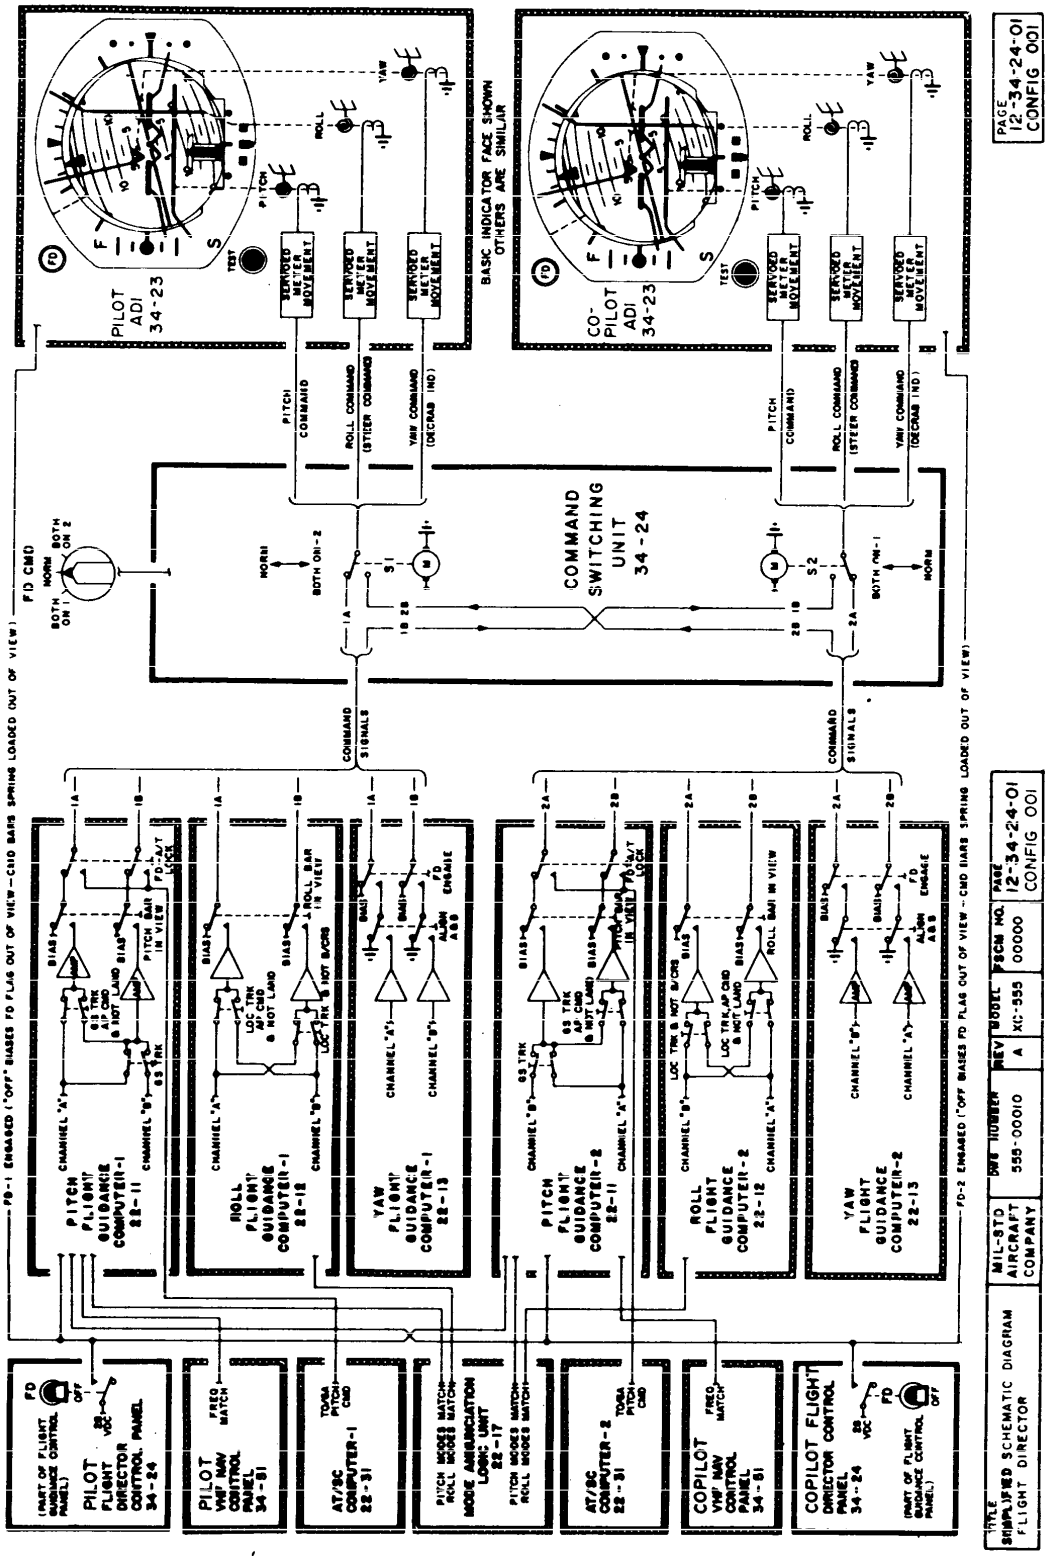



**FIGURE 18. Simplified Schematic Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

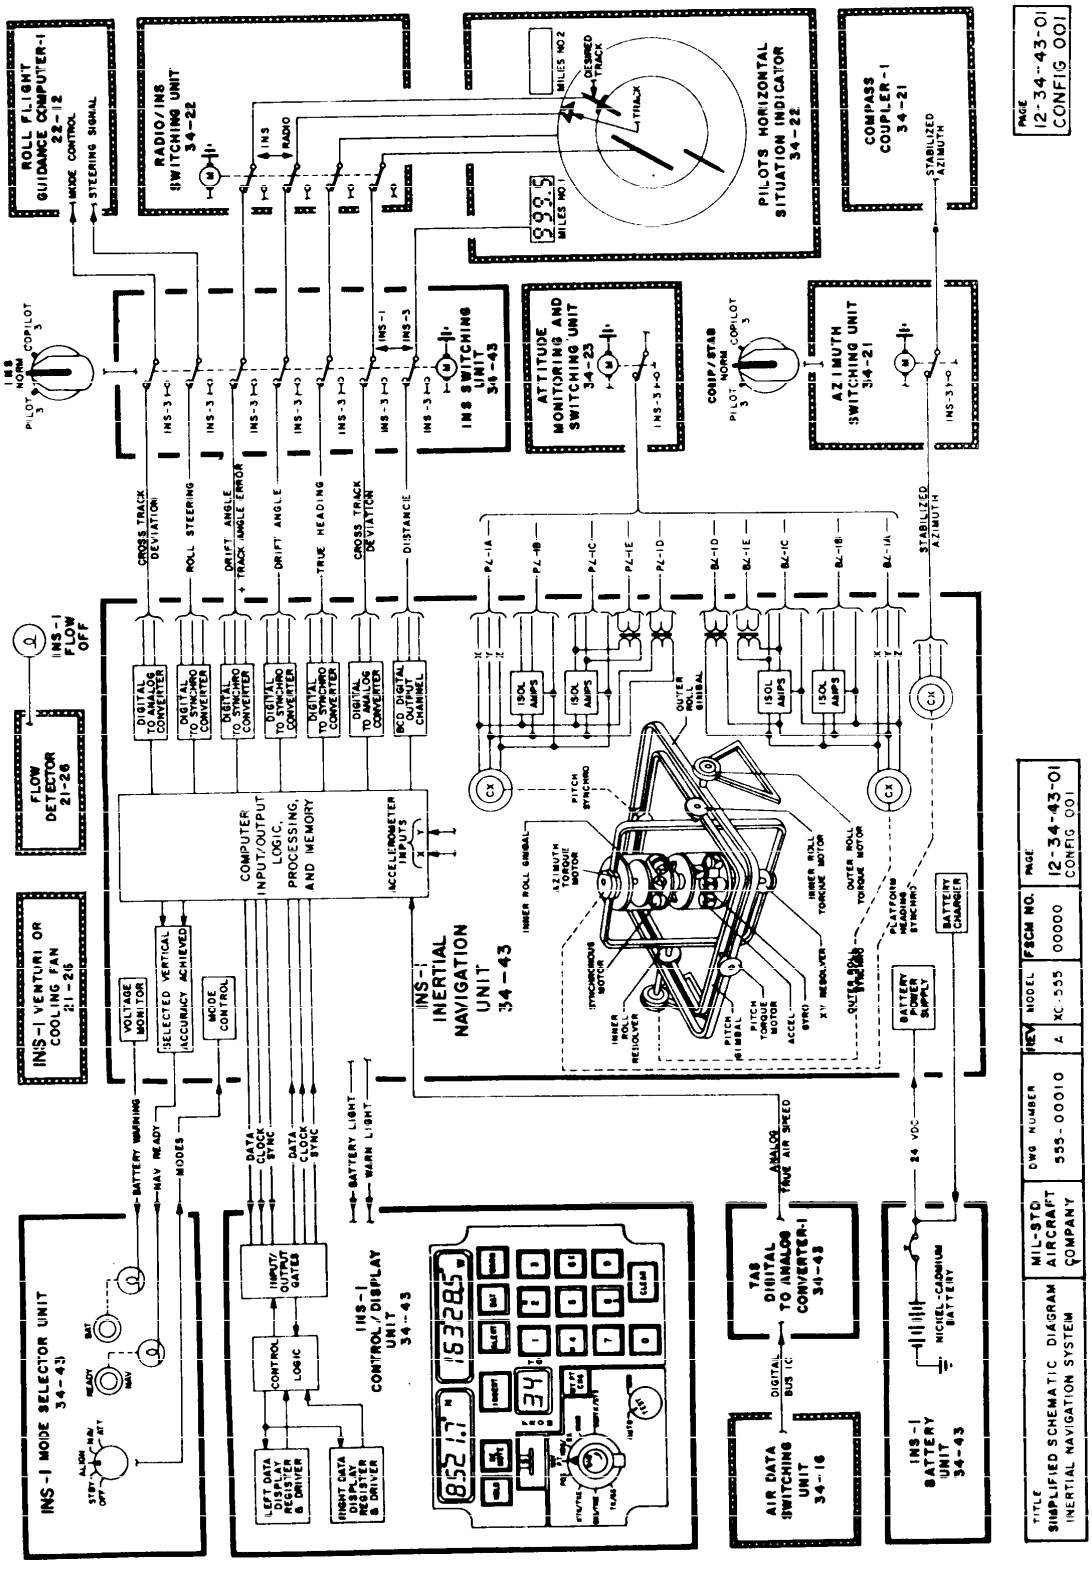



**FIGURE 18. Simplified Schematic Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

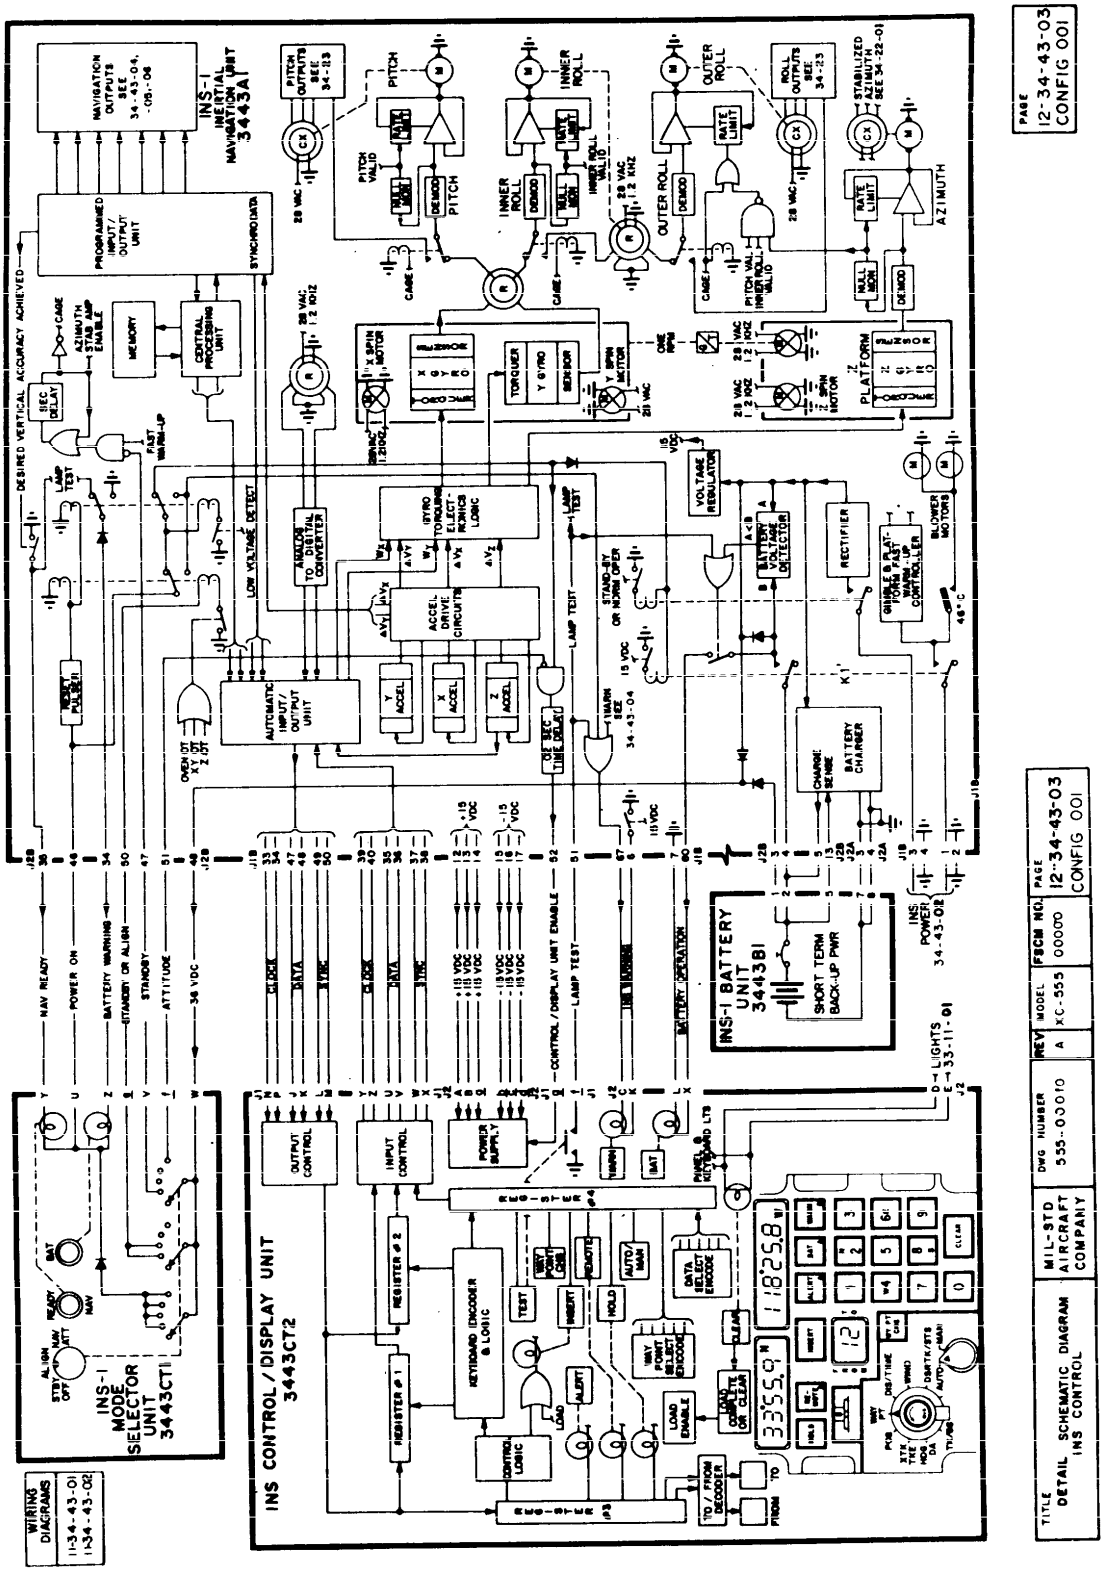



**FIGURE 19. Detail Schematic Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

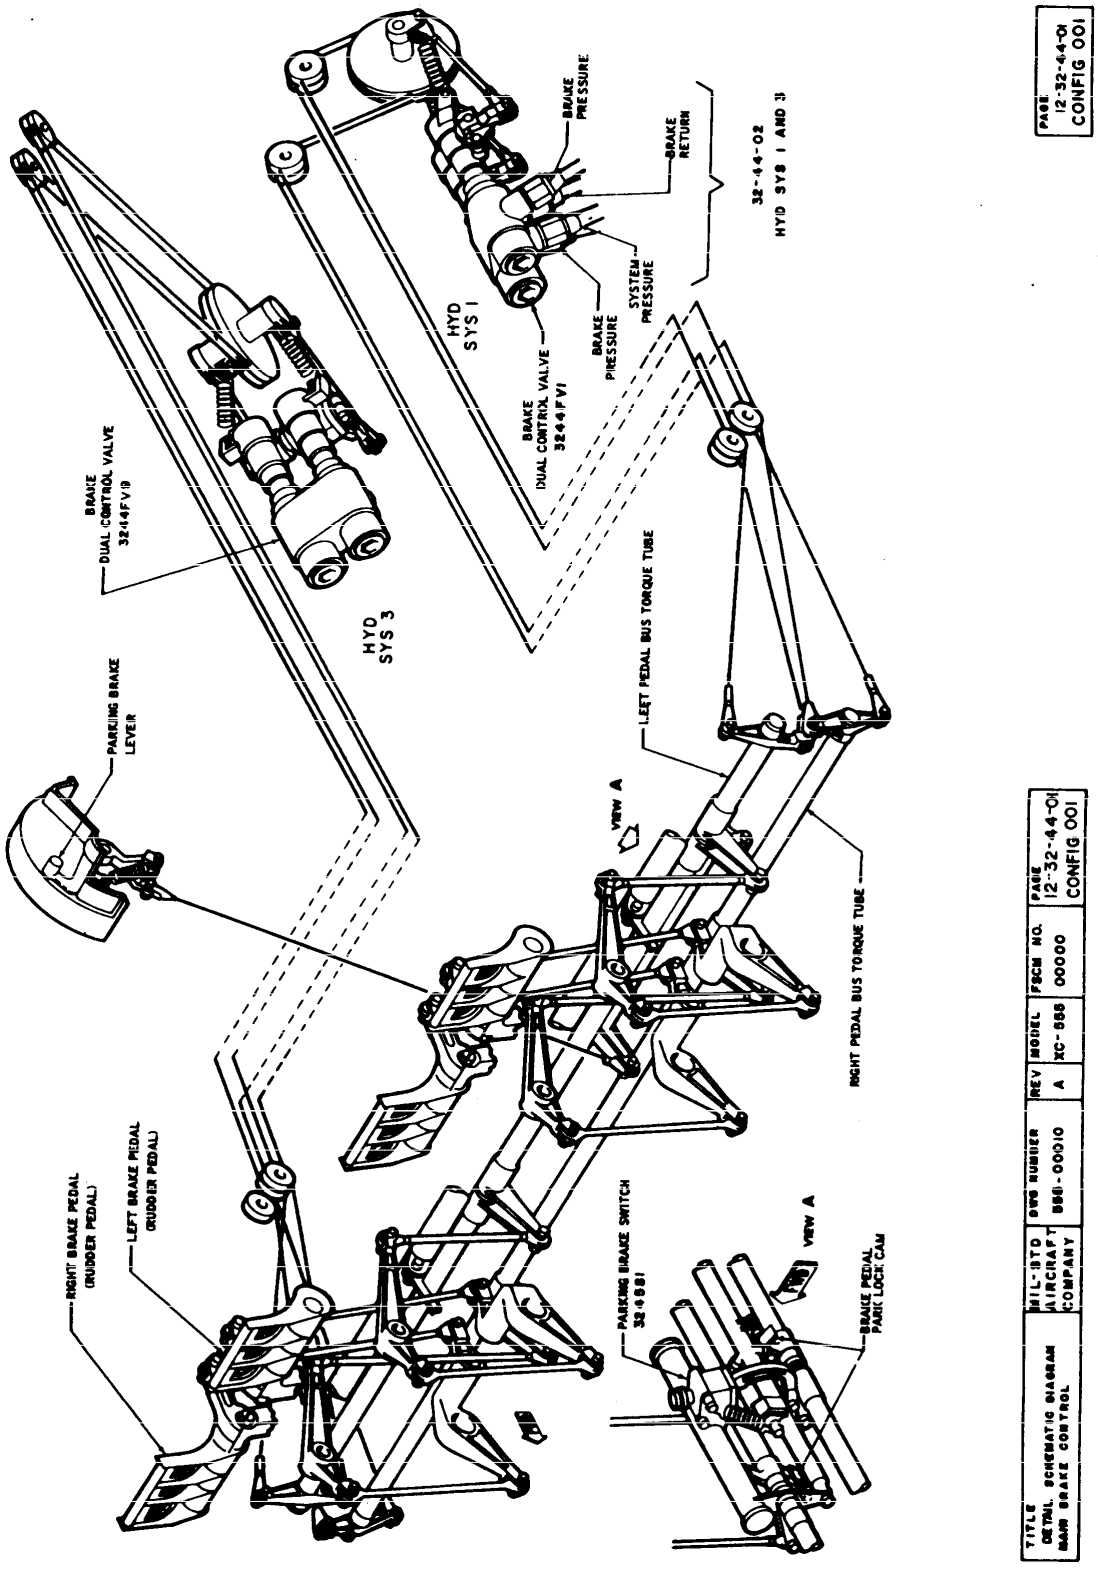



**FIGURE 19. Detail Schematic Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

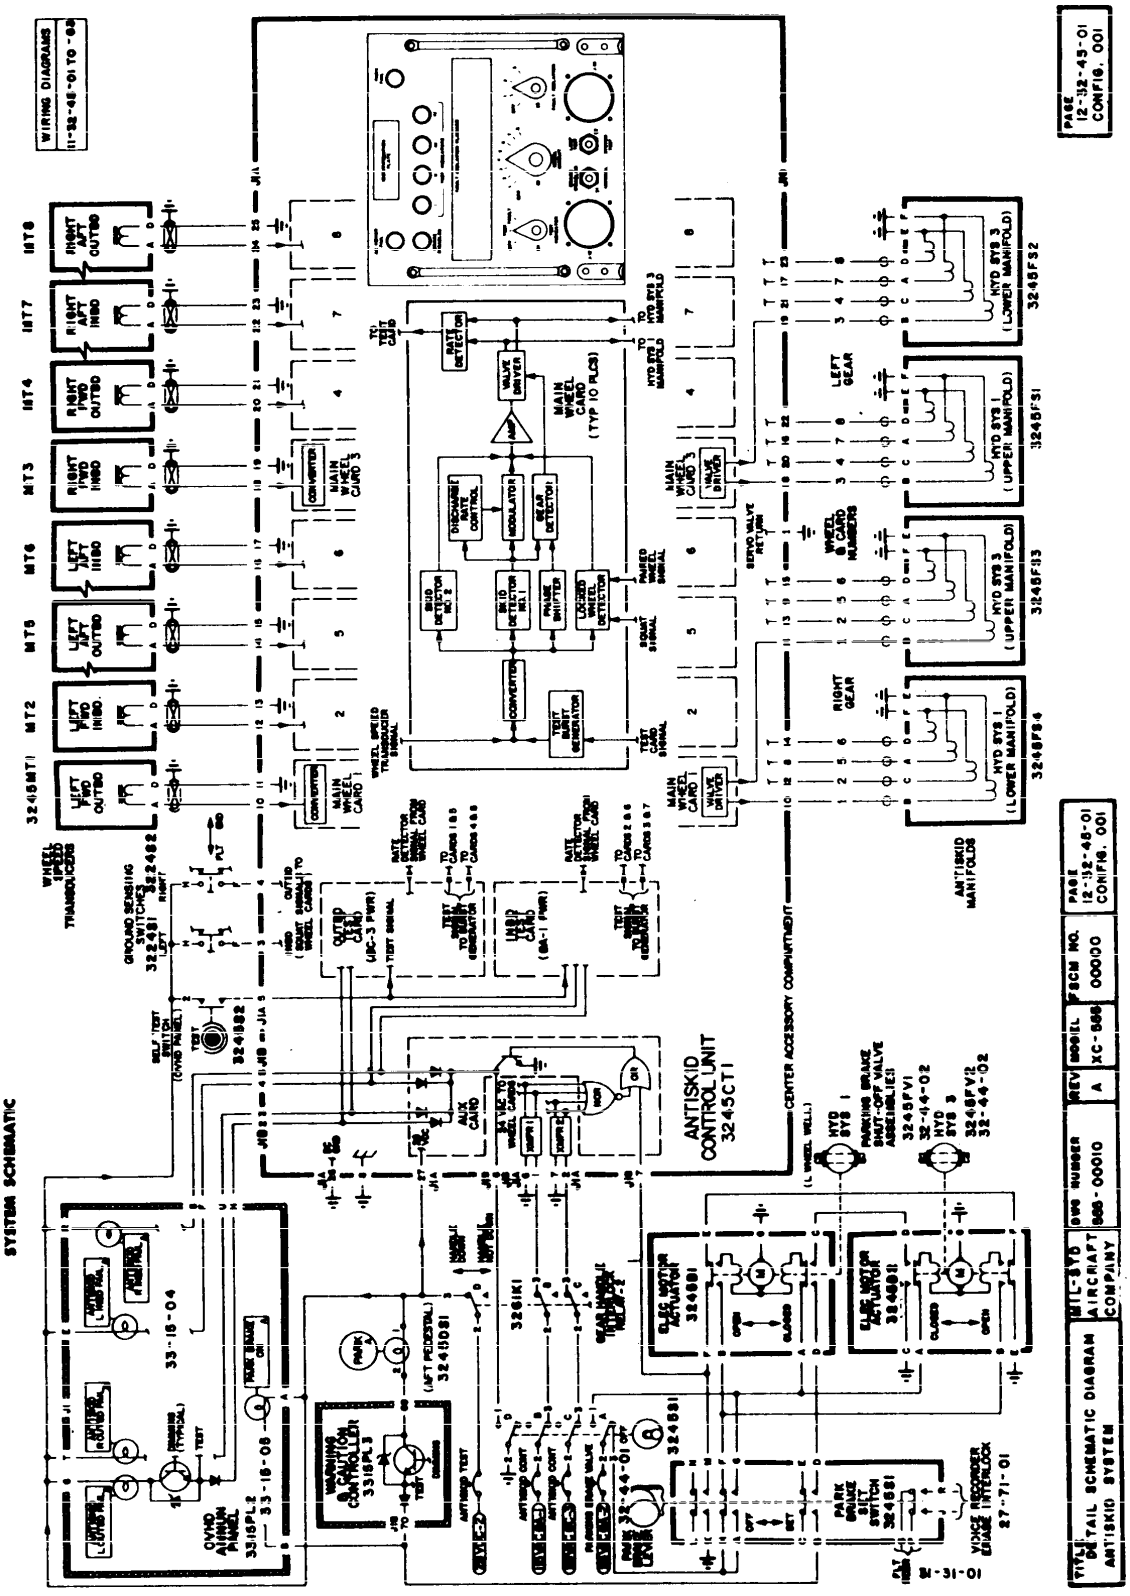



FIGURE 19. Detail Schematic Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

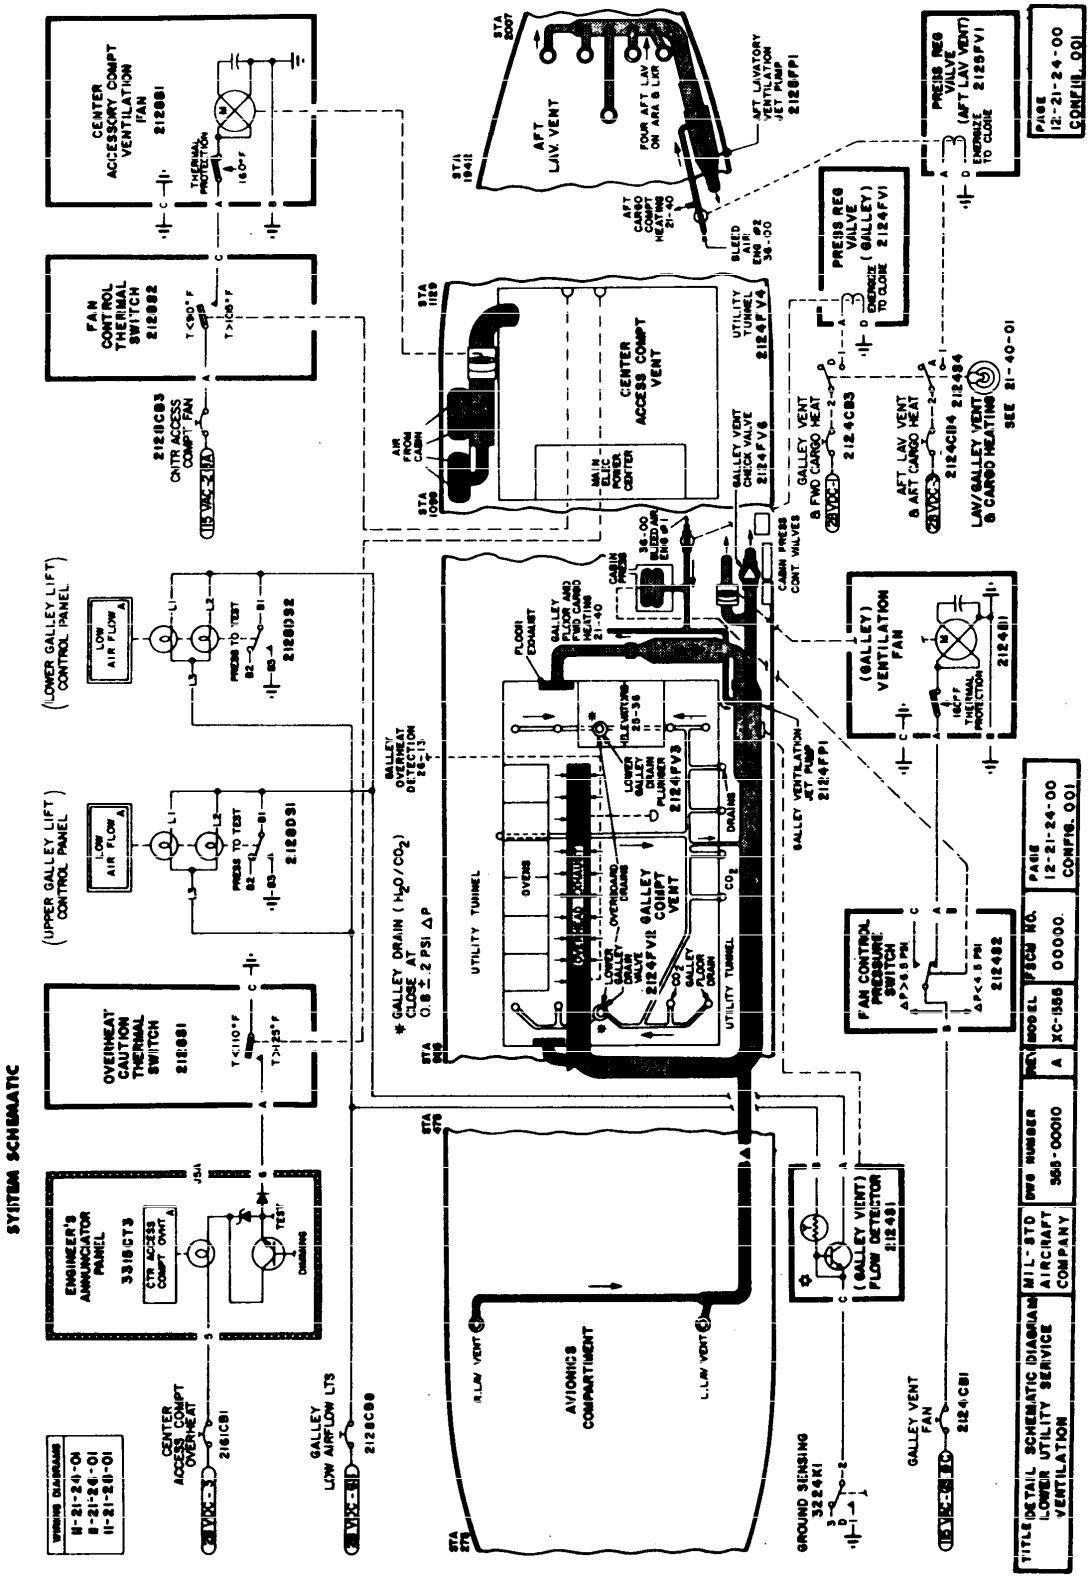



FIGURE 19. Detail Schematic Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.


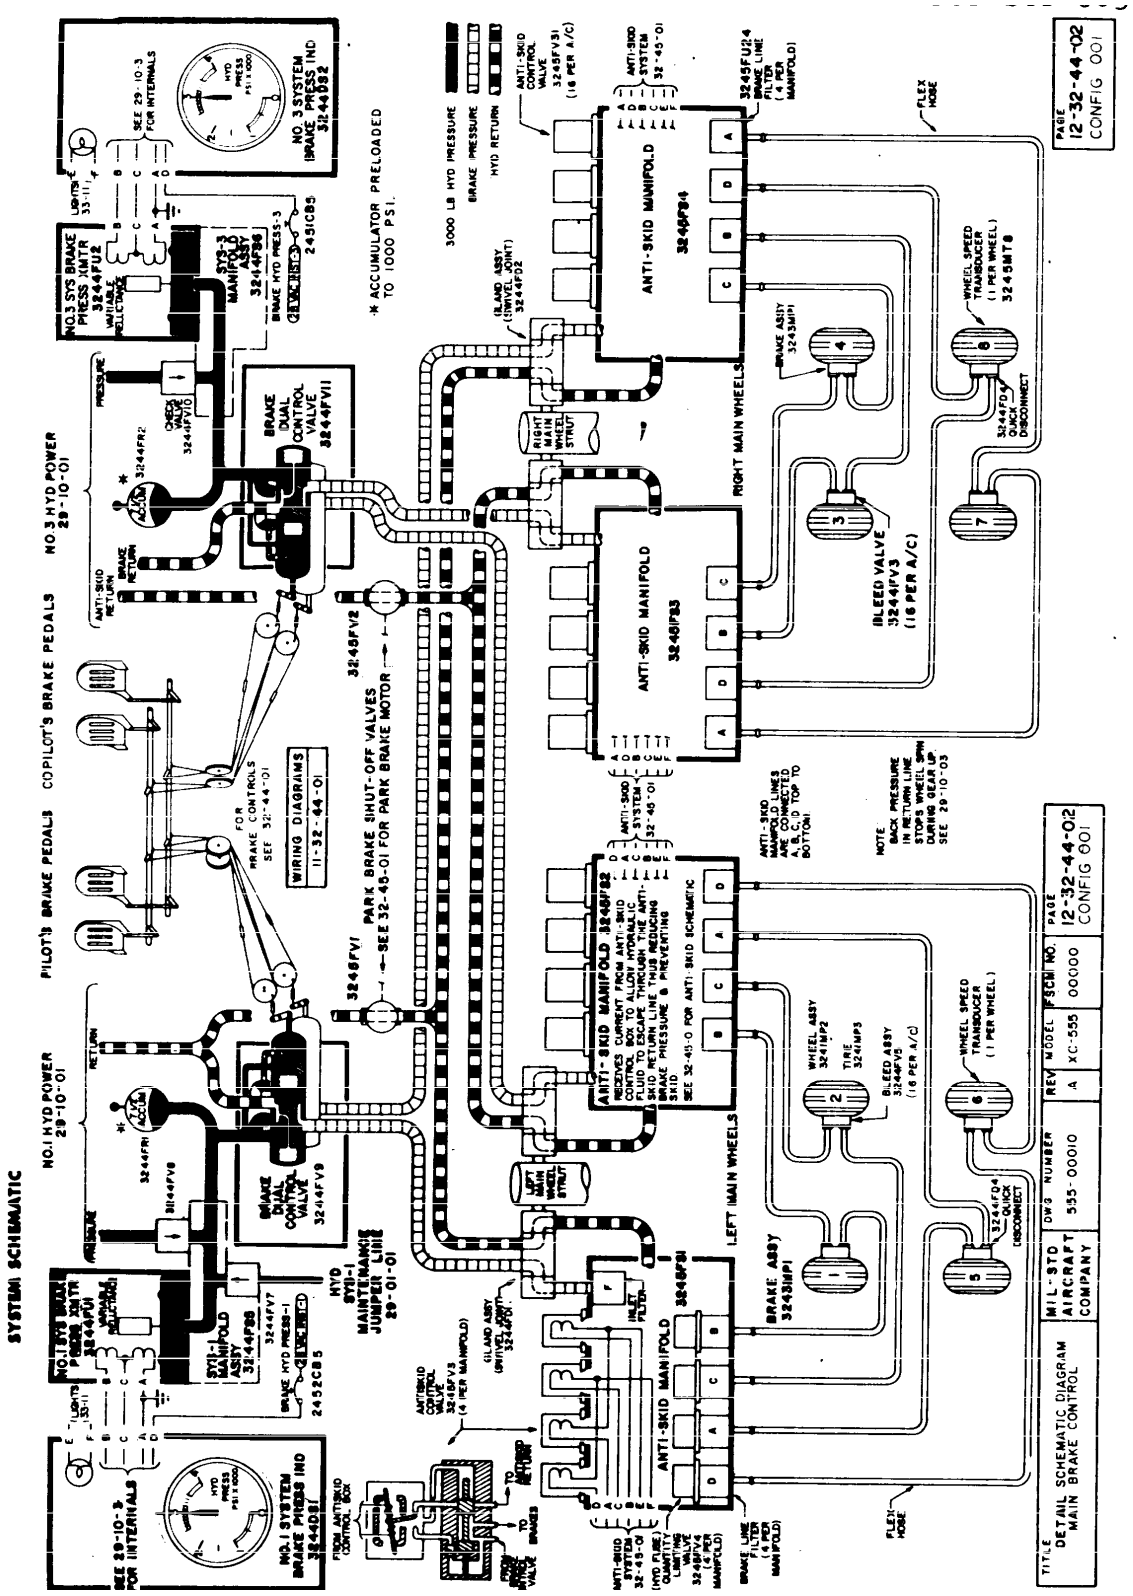



**FIGURE 20. Detailed System Schematic Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

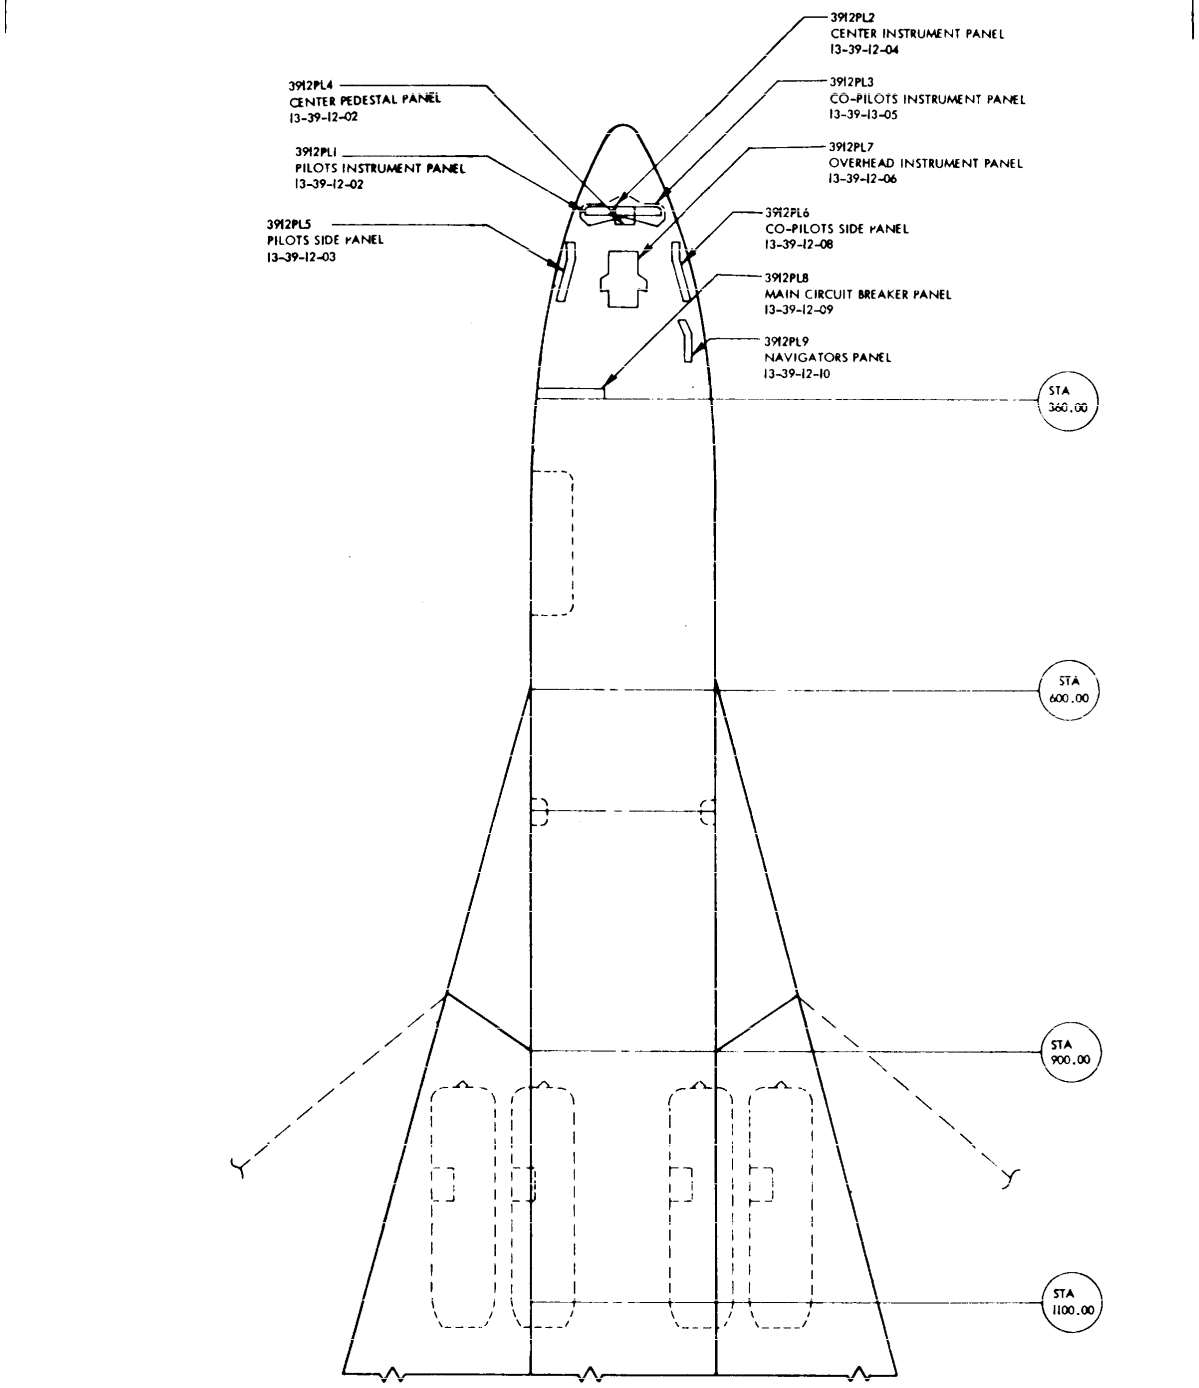



| TITLE | MIL-STD | DRAWING NUMBER | REV | MODEL | FSCM NO. | PAGE |
|---|---|---|---|---|---|---|
| LOCATION DIAGRAM-<br>PANELS-UPPER FUSELAGE | AIRCRAFT<br>COMPANY | 555-00010 | B | XC-555 | 00000 | 13-39-12-01<br>CONFIG 001 |

**FIGURE 21. Equipment Location Diagram**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

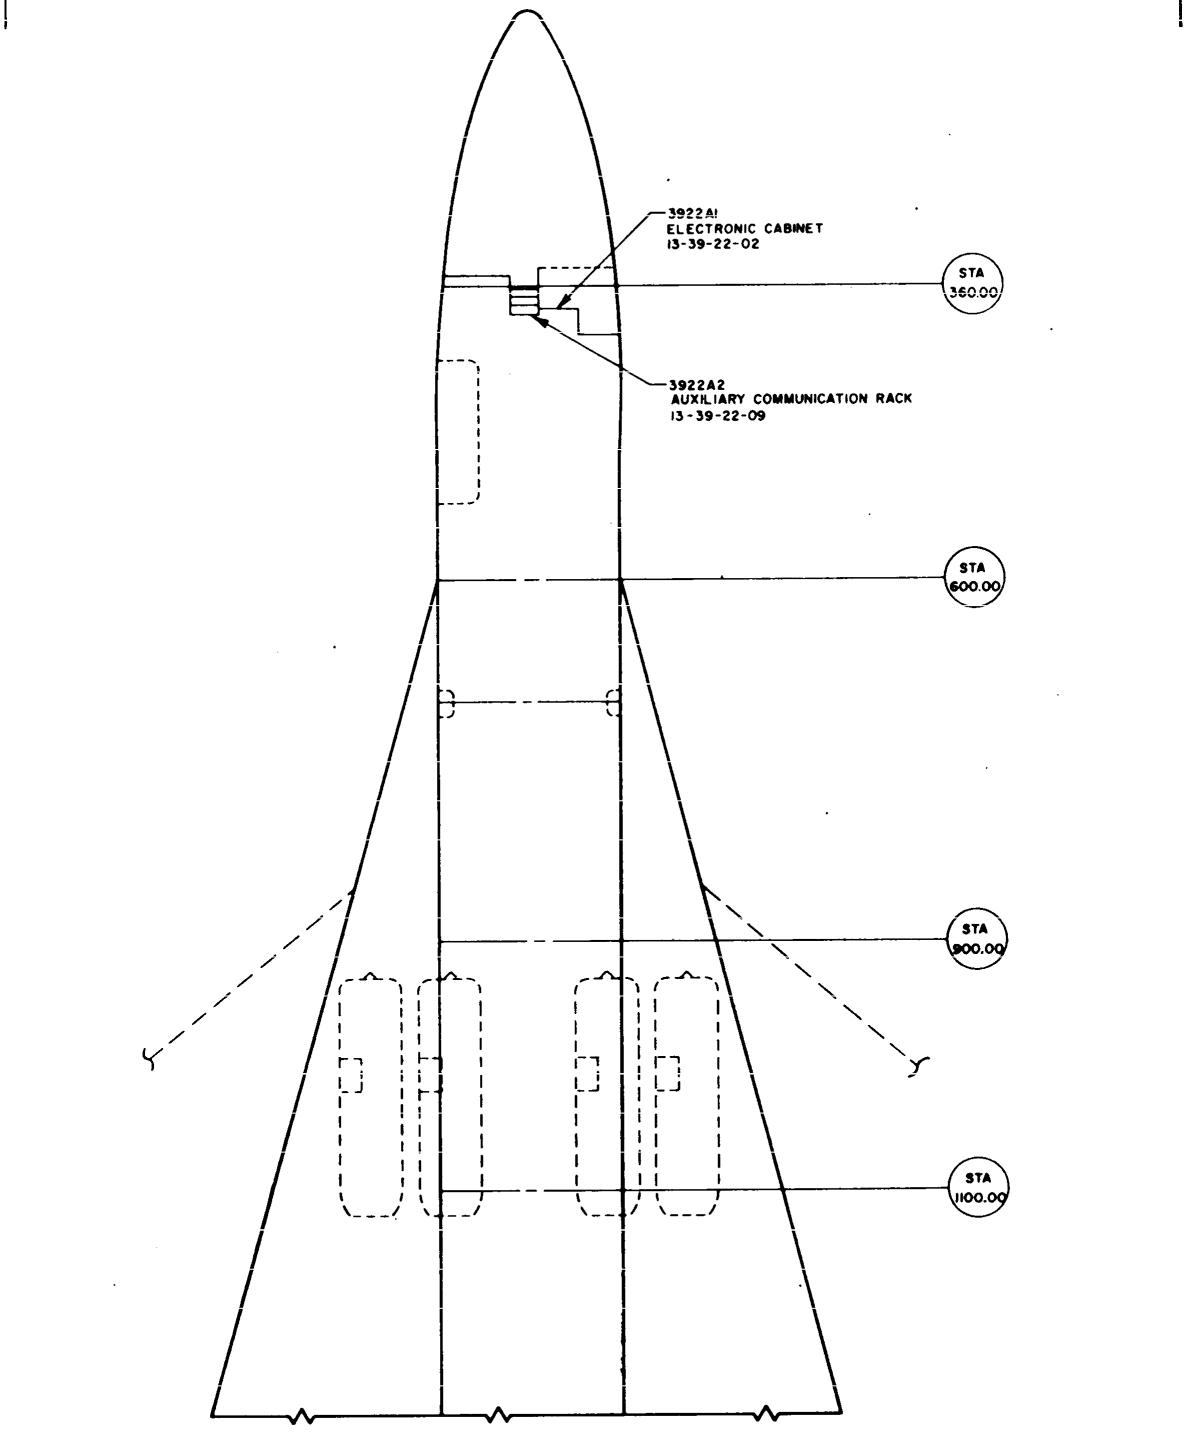



| TITLE | | DRAWING NUMBER | REV | MODEL | FSCM NO. | PAGE |
|---|---|---|---|---|---|---|
| LOCATION DIAGRAM- EQUIP. RACKS - UPPER FUSELAGE | MIL-STD AIRCRAFT COMPANY | 555-00010 | B | XC-555 | 00000 | 13-39-22-01 CONFIG 001 |

**FIGURE 21. Equipment Location Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

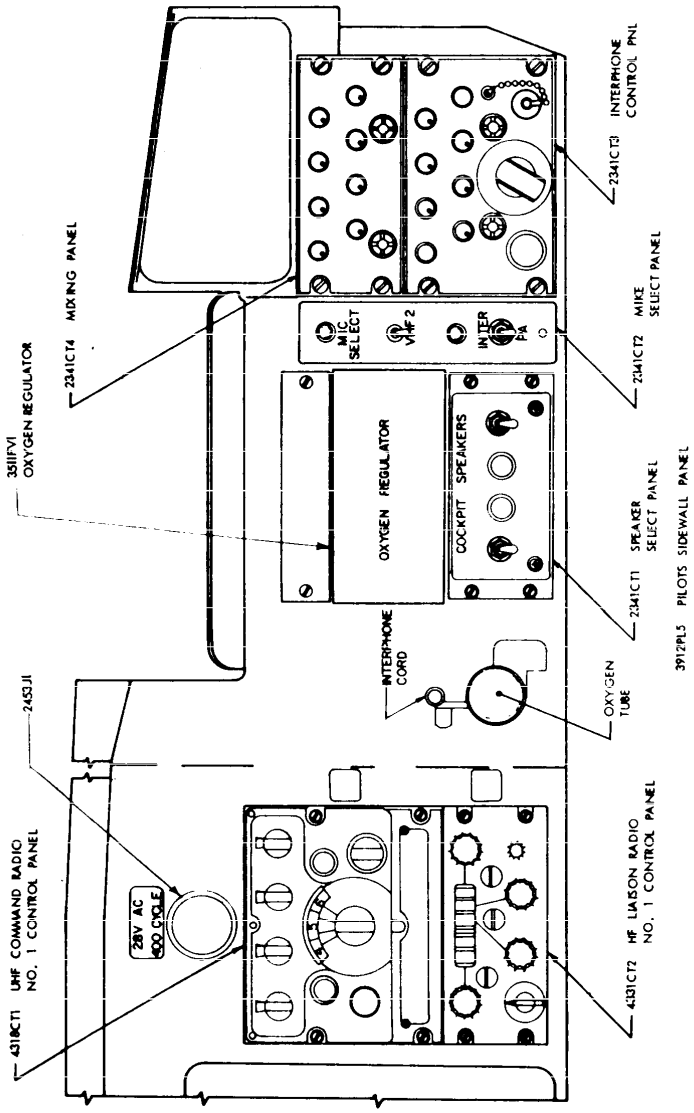



| TITLE | MIL-STD | DRAWING NUMBER | REV | MODEL | CODE IDENT | PAGE |
|---|---|---|---|---|---|---|
| LOCATION CHART-<br>PILOTS SIDEWALL PANEL(3912PL5) | AIRCRAFT<br>COMPANY | 555-00010 | B | XC-555 | 00000 | 13-39-12-03<br>CONFIG-001 |

**FIGURE 21. Equipment Location Diagram - Continued.**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

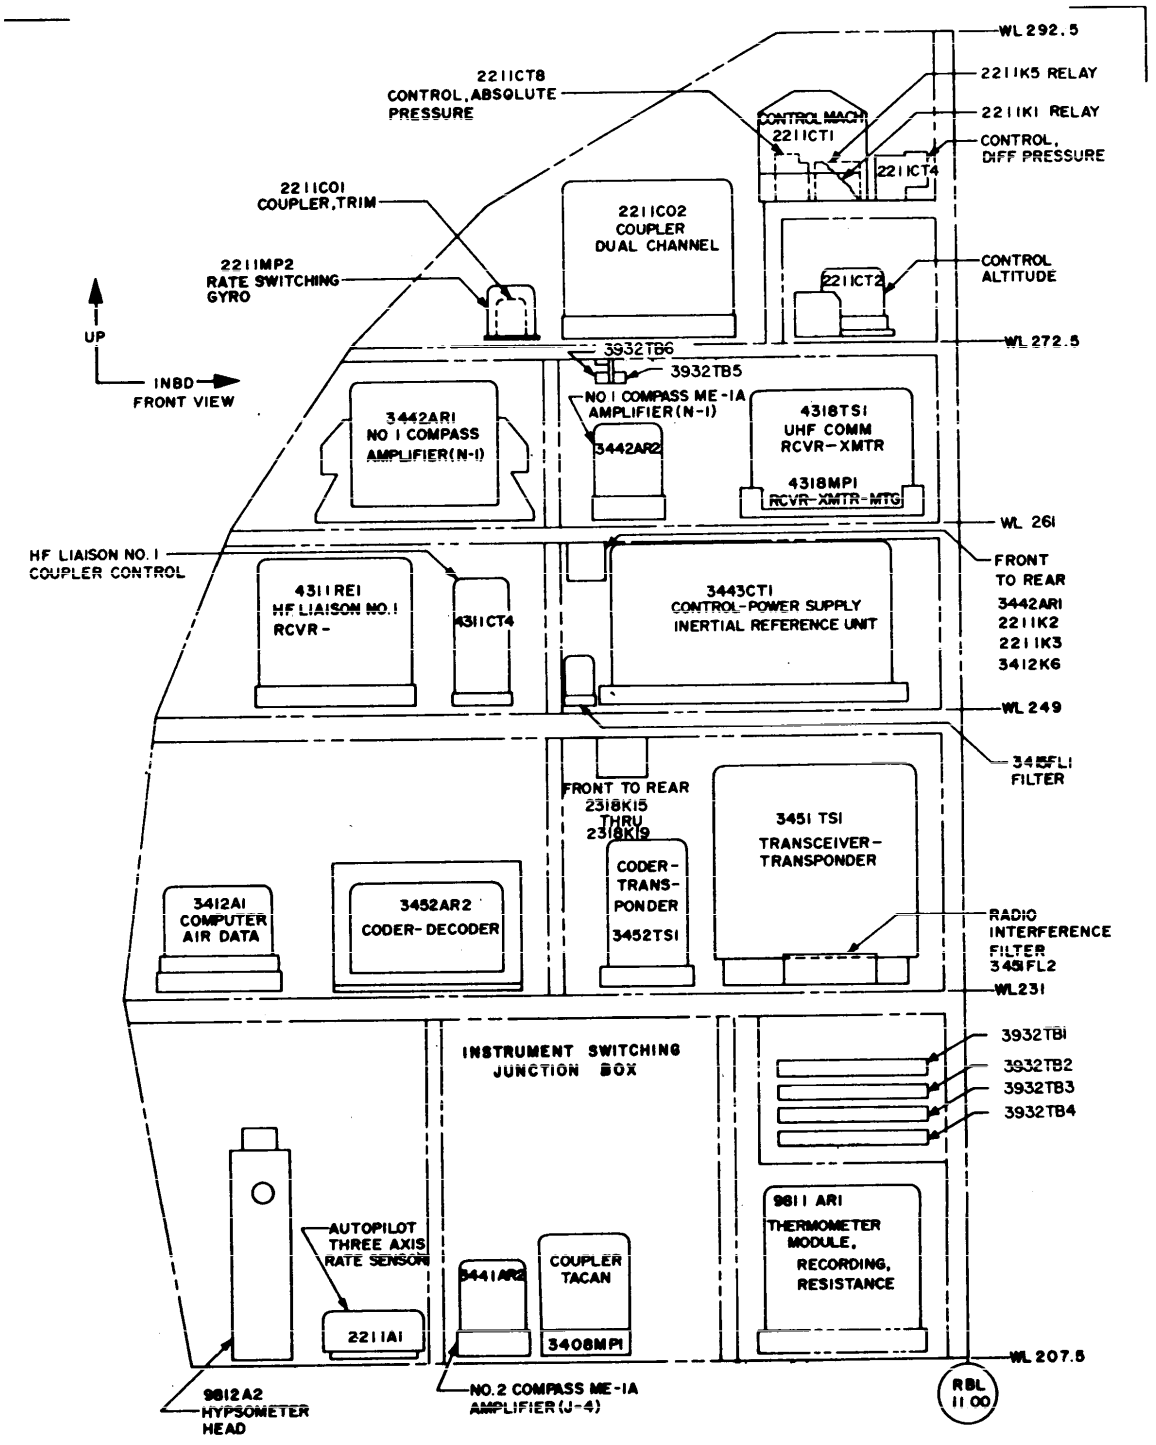


| TITLE | MIL-STD | DRAWING NUMBER | REV | MODEL | CODE IDENT NO. | PAGE |
|---|---|---|---|---|---|---|
| CHART - ELECTRONICS CABINET EQUIPMENT LOCATION (FRONT VIEW) 3922A1 | AIRCRAFT COMPANY | 555-00010 | A | XC-555A | 00000 | 13-39-22-02 CONFIG-001 |

FIGURE 21. Equipment Location Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

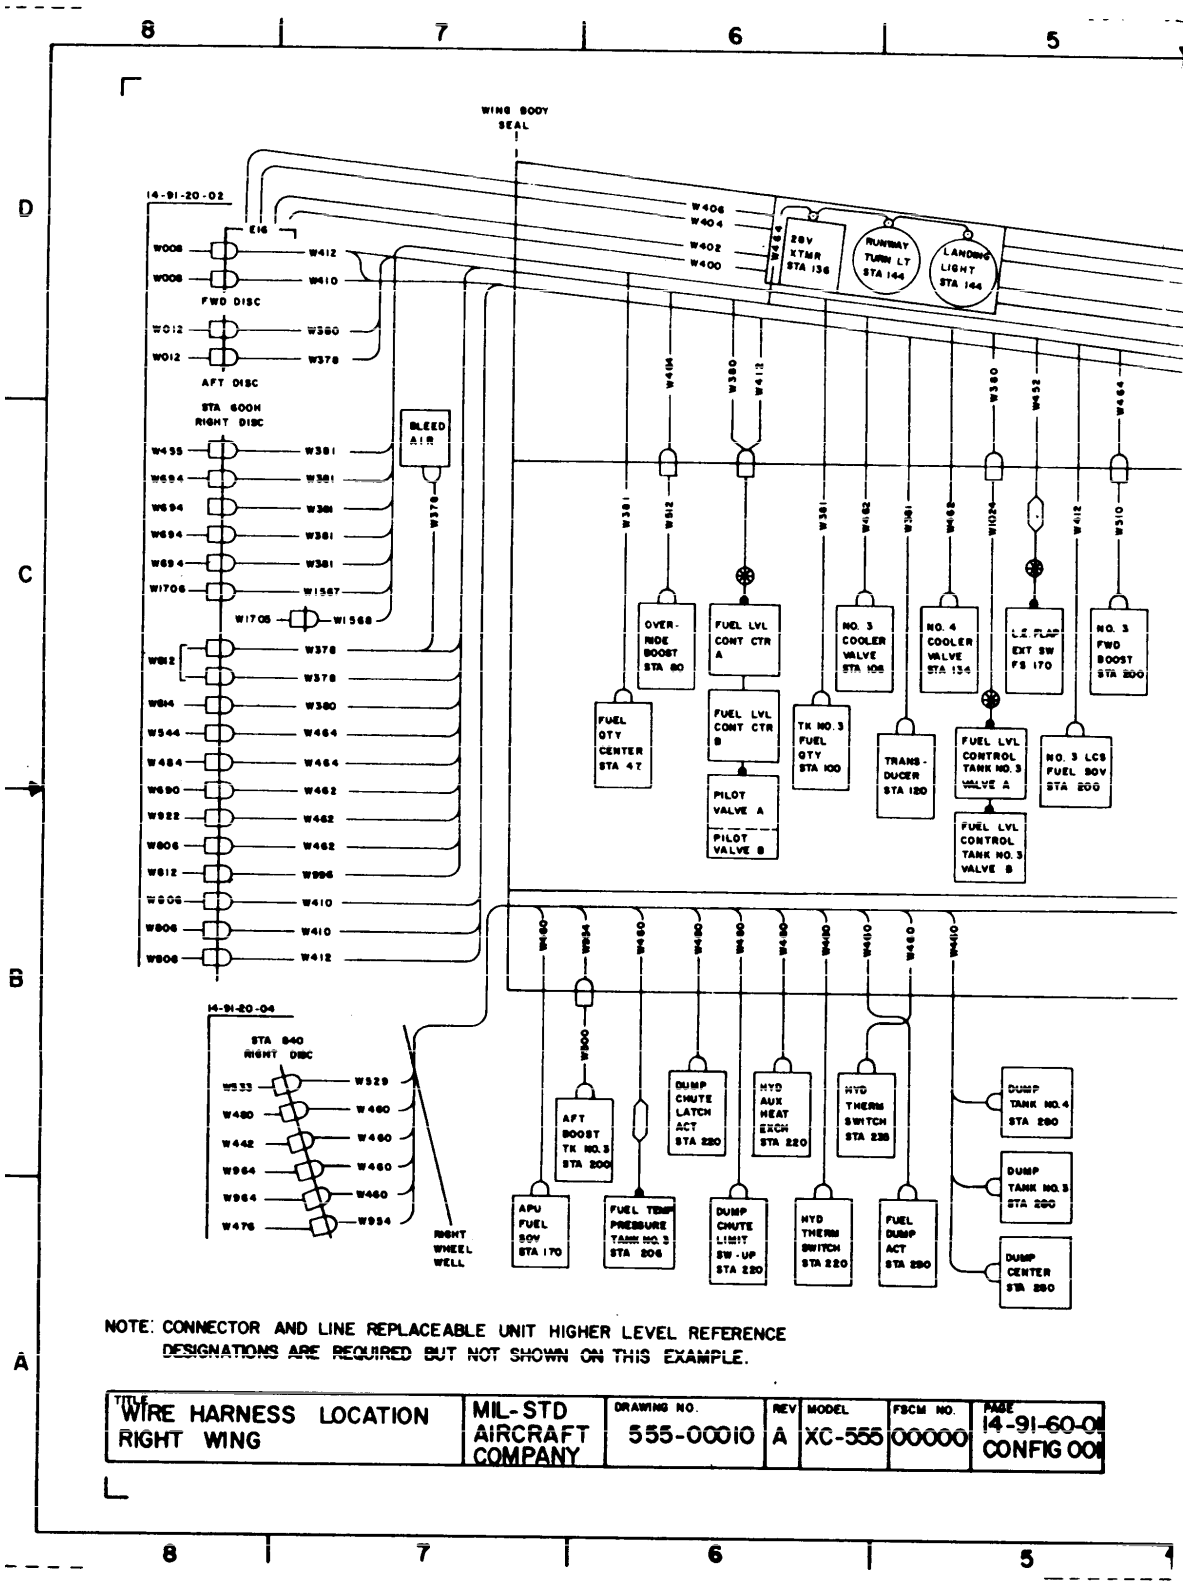



FIGURE 22. Wire Harness Location Diagram



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

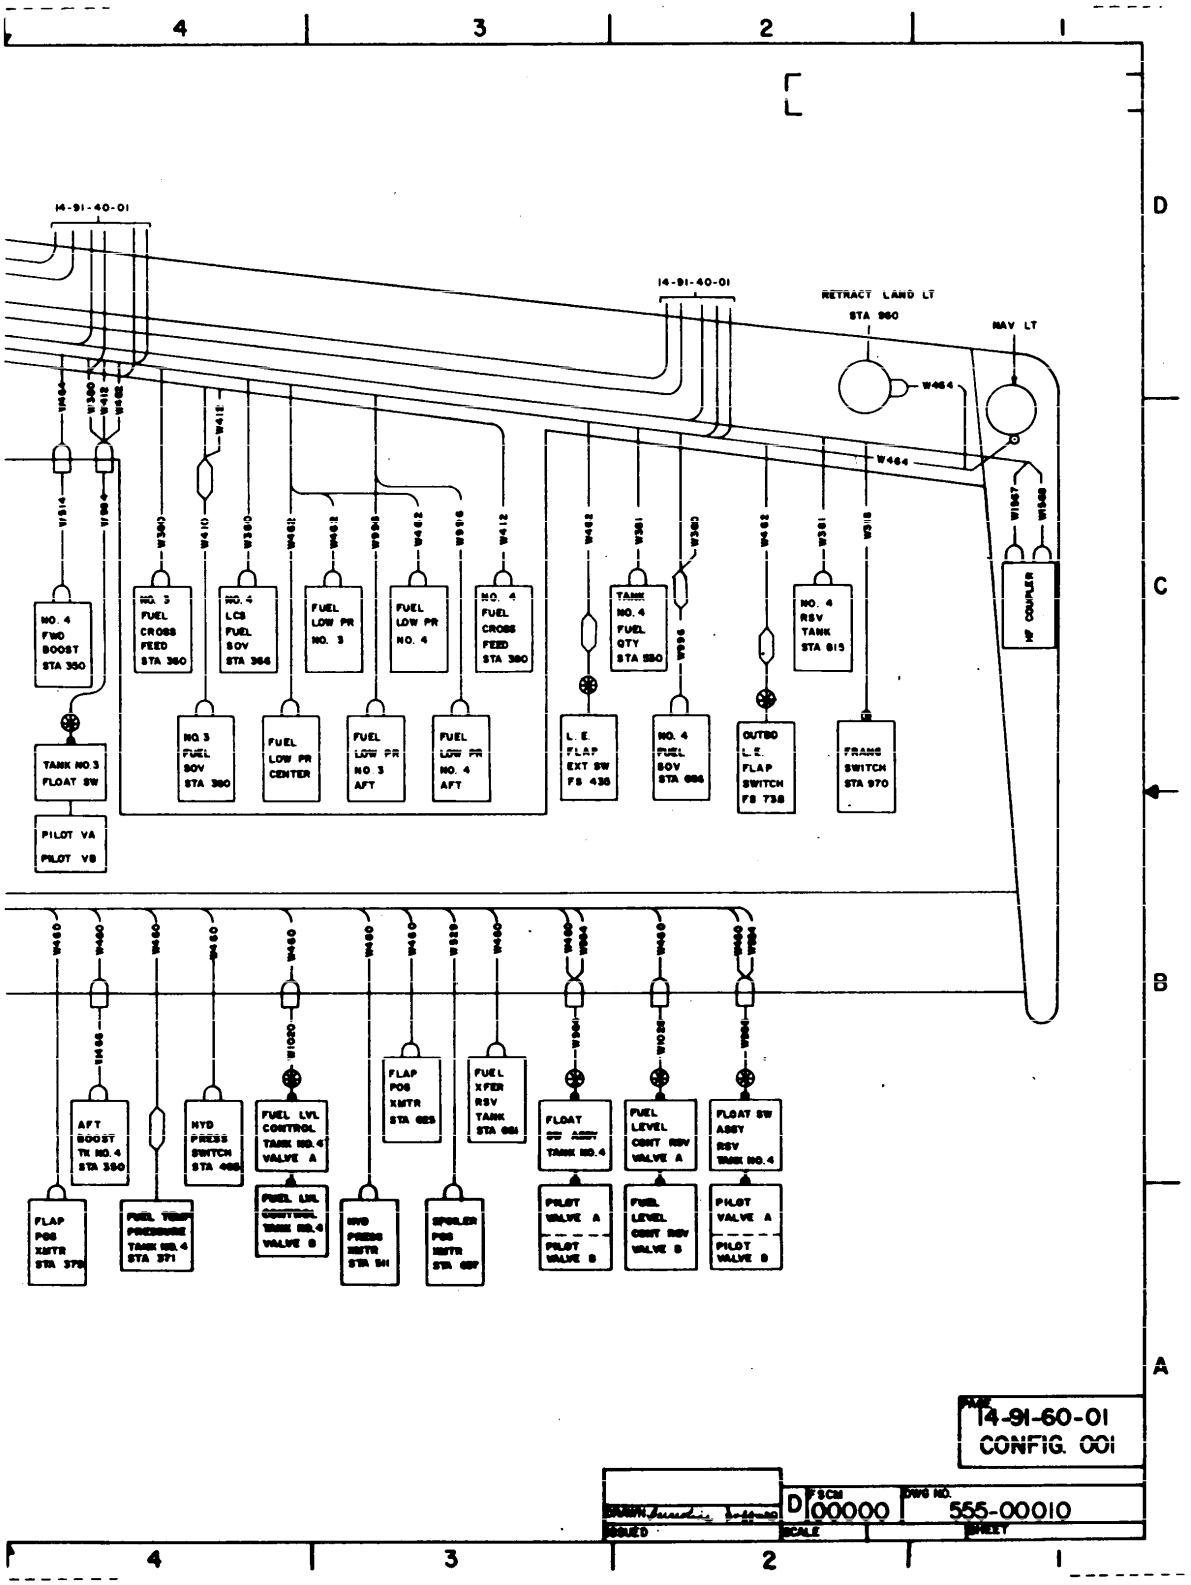



FIGURE 22. Wire Harness Location Diagram - Continued.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

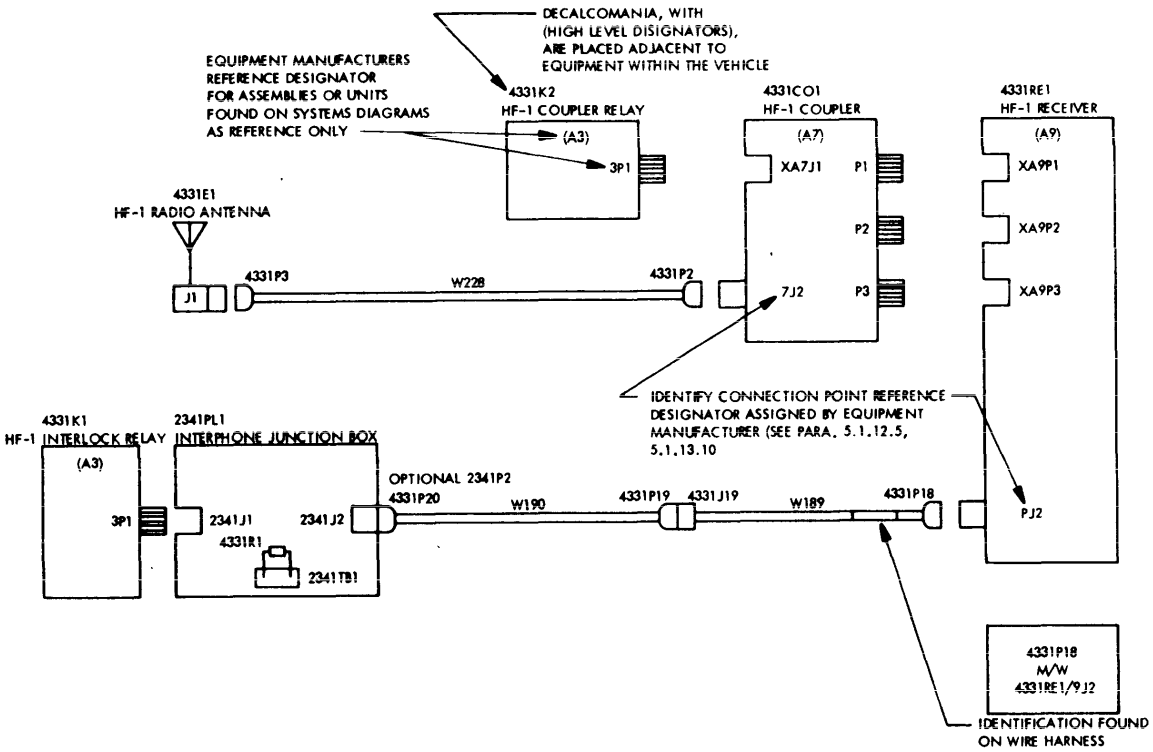



**FIGURE 23. Higher Level Designations (System Coded)**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

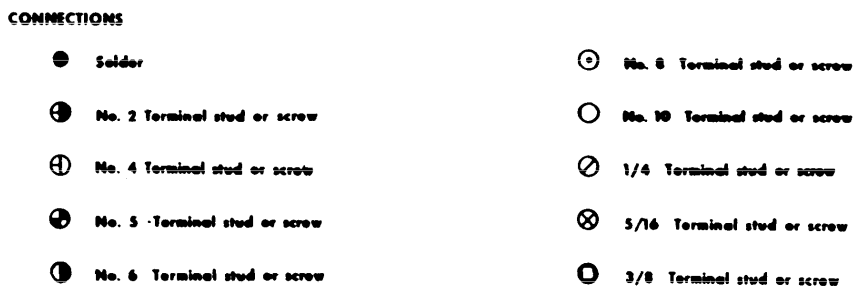



**FIGURE 24. Terminal Size Symbols**



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# INDEX

## A

Abbreviations ..... 3
Aerospace vehicle functional system ..... 2
Aerospace vehicle zone coding ..... 14
As installed data ..... 20

## B

Basic parts ..... 13
Block interconnection diagrams ..... 10
Block schematic diagrams (first level) ..... 12
Book-form drawing revision record ..... 4
Book-form wiring and schematic data ..... 3
Busses ..... 11

## C

Circuit breakers ..... 11
Class letter ..... 17
Coded notes ..... 5
Configuration code ..... 19
Connection list ..... 7
Connection list page numbering ..... 8
Connector system coding ..... 17
Contents record ..... 4
Contents record page numbering ..... 4
Controls markings ..... 11
Critical circuit wiring ..... 11
Cross reference ..... 13

## D

Detail schematic diagrams (third level) ..... 12
Diagram arrangement ..... 10
Diagram indexes ..... 20
Diagram pages ..... 2
Diagrams ..... 19
Drawing description ..... 5
Drawing method ..... 2
Drawing size and format ..... 2
Drawing title page ..... 4

## E

Electromagnetic compatibility categories ..... 20
Electromagnetic compatibility criteria ..... 5
Equipment enclosure system coding ..... 16
Equipment list ..... 9
Equipment list page numbering ..... 9
Equipment location diagram page numbering ..... 14
Equipment location diagrams ..... 14



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

## F

Ferrule system coding ..... 17
Fluid parts system coding ..... 17
Fuses ..... 11

## G

General ..... 1
General Information ..... 5
General information page numbering ..... 6
Government documents ..... 1
Graphic symbols ..... 3
Ground point designation ..... 19

## H

Higher level designations ..... 5, 11

## I

Index of effective diagram page numbering ..... 7
Index of effective diagrams ..... 6
Index of equipment modifications page numbering ..... 7
Index of modification ..... 7
Index of production diagrams ..... 6
Index of production diagrams page numbering ..... 6
Installation data ..... 20
Interconnection diagram page numbering ..... 10
Interconnection diagrams ..... 9
Interface ..... 10

## L

Legibility and contras ..... 3
Line replaceable unit (LRU) ..... 2
Line replaceable unit (LRU) higher level designations ..... 16
Line replaceable unit (LRU) system coding ..... 16
Line replaceable unit identification ..... 13
Line replaceable unit internal schematics ..... 12
Line replaceable unit ratings ..... 13
Line replaceable unit sub-modules ..... 13
Line replaceable unit terminals ..... 11
Line replaceable units or (LRUs) ..... 11
Lines ..... 12
Lists ..... 19
Local notes ..... 5

## M

Major zone ..... 14
Management activity ..... 2
Manufacturers (Vendors) list ..... 5
Master reproducible ..... 2
Metric system ..... 3
Microfilming ..... 3
Modification data index page numbering ..... 7
Modification data indexes ..... 7



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

Modification directive ..... 2

## N

Non-Government publications ..... 1
Notes ..... 5

## O

Other Government documents, drawings, and publications ..... 1

## P

Page identification ..... 19
Page titles ..... 19
Point-to-point interconnection diagrams ..... 10
Power source ..... 13
Production unit numbers ..... 5

## R

Records, indexes, lists, and general information ..... 2
Reference Designators (System Coded) ..... 18
Relay system coding ..... 17
Relays ..... 11
Relays and switches ..... 13
Reproducible master copies ..... 3
Revision record page numbering ..... 4
Revisions ..... 20

## S

Schematic diagram arrangement ..... 12
Schematic diagram page numbering ..... 12
Signal generation ..... 13
Signal identification ..... 13
Signal values ..... 13
Simplified schematic diagrams (second level) ..... 12
Spare circuits ..... 13
Specifications, standards, and handbooks ..... 1
Splice system coding ..... 17
Sub-major zone ..... 14
Sub-sub-system ..... 2
Sub-system ..... 2
Subject term (key word) listing ..... 21
Suffix letter ..... 19
Switches ..... 11
Symbols and pictorials ..... 12
Symbols library ..... 5
System coding method (aerospace system) ..... 15
System identification numbers ..... 5
System schematic diagrams ..... 11
System sub-division and higher level designations ..... 15

## T

Technical publication ..... 2



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

Terminal boards system coding ..... 17
Test points ..... 13
Transformers ..... 11

## U

Unit number identifier ..... 17
Unit outlines ..... 13
Unit symbols ..... 3

## W

Wire harness ..... 2
Wire harness list ..... 8
Wire harness list page numbering ..... 9
Wire harness location diagram page numbering ..... 15
Wire harness location diagrams ..... 15
Wire harness numbers ..... 5
Wire identification ..... 20
Wire numbers ..... 5
Wire type code ..... 5, 20
Wiring data and system schematic diagrams ..... 2
Wiring diagram reference ..... 13
Wiring/equipment modification identification ..... 20
Wiring/equipment modifications ..... 20



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.

# CONCLUDING MATERIAL

Custodians:
Army - AV
Navy - AS
Air Force - 16

Preparing activity:
Air Force - 16
(Project DRPR-2015-001)

Review activities:
Air Force - 10, 11, 13, 85

NOTE: The activities listed above were interested in this document as of the date of this document. Since organizations and responsibilities can change, you should verify the currency of the information above using the ASSIST Online database at https://assist.dla.mil.



Source: https://assist.dla.mil -- Downloaded: 2026-10-26T13:52Z
Check the source to verify that this is the current version before use.