MILITARY SPECIFICATION

QUADRANT, FIRE CONTROL: M14

1. SCOPE

1.1 This specification covers one type of instrument for use on the 105MM Howitzer M102 (see 6.1).

2. APPLICABLE DOCUMENTS

2.1 The following documents, of the issue in effect on date of invitation for bids or request for proposal, form a part of this specification to the extent specified herein.

SPECIFICATIONS

Military

MIL-F-13926	Fire Control Materiel: General Specification Governing the Manufacture and Inspection of
MIL-P-14232	Parts, Equipment and Tools for Army Materiel; Packaging and Packing of
MIL-I-45607	Inspection Equipment, SUpplY and Maintenance of

STANDARDS

Military

MIL-STD-105	Sampling Procedures and Tables for Inspection by Attributes
MIL-STD-109	Quality Assurance Terms and Definitions
MIL-STD-202	Test Methods for Electronic and Electrical Component Parts

DRAWINGS

U.S. Army, Frankford Arsenal

F8626310	Quadrant, Fire Control: M14

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

PACKAGING DATA SHEET

8626310 Packaging of Quadrant, Fire Control: M14

(Copies of specifications, standards, drawings, and packaging data sheets required by suppliers in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

3. REQUIREMENTS

3.1 Materials.- Materials shall be in accordance with drawings, material specifications and general specifications forming a part of this specification.

3.2 Fabrication.- The quadrant shall be manufactured in accordance with Drawing F8626310 and drawings pertaining thereto. "

3.3 General sPecification.- The contractor shall be responsible for adherence to, and compliance with the following requirements of MIL-F-13926:

(a) Order of precedence
(b) Dimensions and tolerances
(c) Inorganic protective surface finishes
(d) Electrical and electronic assemblies
(e) Part identification and marking
(f) Workmanship

3.4 Environmental.

3.4.1 Storage temperatures.- The quadrant shall show no evidence of physical failure and shall meet all performance requirements of this pacification at a standard ambient temperature of 60° to 90°F after having been exposed to and thermally stabilized at ambient temperatures of -80° and +160°F.

3.4.2 Operating temperatures.- The quadrant shall meet the applicable requirements of 3.10 while exposed to and thermally stabilized at ambient temperatures of -40° and +150°F.

3.4.3 Vibration.- The quadrant shall be vibrated at a constant frequency of 30 cycles per second with **an** amplitude of 1/16 (1/8 inch maximum excursion) for a period of 5 minutes ± 15 seconds. Subsequent o vibration there shall be no evidence of loose or damaged parts and he quadrant shall meet the following requirements of this specification.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

3.5 **Sealing. - The quadrant shall show no evidence of water penetration within the counter area when subjected to Procedure I of** the rain test of MIL-F-13926.

3.6 Orientation.- The quadrant shall be adjusted to meet the qualification procedures of Drawing F8626310 and positioned with the mounting surface of the quadrant bracket, (Drawing F8626313) in a vertical plane with the keyway of the quadrant bracket horizontal. The elevation and correction counters shall read zero. The elevation and cross level vial bubbles shall be centered within the thickness of one graduation line on the vial and the gunner's quadrant pads shall be level within 0.20 roil.

3.6.1 Telescope mounting tube.- The azimuth and elevation bore-sight adjustments shall be actuated to position the geometric axis of the gimbal tube horizontal and parallel to the vertical plane of the quadrant mounting surface.

3.7 Accuracy.

3.7.1 Elevation counter. - With the quadrant positioned in accordance with 3.6, utilizing the elevation knob, elevation counter readings shall be obtained in 200 roils increments from 200 roils depression to 1200 roils elevation With the quadrant repositioned until the bubble in the elevation level is centered to within the thickness of one graduation line of the vial, the angle of elevation formed by the gunner's quadrant pads shall be equivalent-to the elevation mil counter reading within 0.5 roil.

3.7.2 Cross level vial.- The cross level vial bubble shall remain centered within 1/4 graduation when the elevation level vial is centered and the quadrant positioned to the requirements of 3.7.1.

3.7.3 Correction counter.- Plus values of 25 roils and 50 roils put on the correction counter shall subtract an equal number of roils within **0.2 mil from the elevation counter. Minus values of 25 roils and 50 roils put on the correction counter shall add an equal number of roils within 0.5 mil to the elevation counter.**

3.7.4 Cross level (cant).- From the horizontal position of 3.6 with the mounting surface of the quadrant bracket vertical, rotation of the cross level knob shall provide a minimum travel of 34 degrees to the left and 34 degrees to the right.

3.7.5 Boresight adjustment.

3.7.5.1 Elevation adjustment.- The elevation boresight adjustment shall move the geometric axis of the gimbal tube at least 18 roils above and 18 roils below the position established in 3.6.1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

3.7.5.2 Azimuth adjustment .- The azimuth boresight adjustment hall move the. geometric axis of the-gimbal tube at least 18 roils to the left and 18 roils to the right of the position established in 3.6.1.

3.7.6 Backlash.

3.7.6.1 Elevation.- Backlash in the elevation mechanism shall not exceed 0.5 mil at any elevation or correction setting between 230 mils in depression and 1383 roils in elevation.

3.7.6.2 Cross level.- Backlash in the cross level mechanism shall not exceed 0.5 mil at any cross level setting between 34 degrees to the right and 34 degrees to the left.

3.8 Excursion range.

3.8.1 Elevation counter.- The elevation counter shall cover an excursion of at least 1383 roils in elevation and 230 roils in depression 230 roils depression will read 9770 roils on the elevation counter) when he correction counters read zero.

3.8.2 Correction counter.- The correction counter limit stops hall allow a minimum of plus 50 and minus 50 roils correction.

3.9 Counter numbers.- Variation in the alignment of the numbers n any counter shall not exceed one sixteenth inch.

3.10 Operability.- The running torque required to rotate the following controls at standard ambient temperature shall not exceed he values specified below:

(a) Elevation knob	**ten inch-pounds**
(b) Correction knob	three inch-pounds
(c) Cross level knob	ten inch-pounds
(d) Toggle switch	operable
(e) Boresight adjustment screws	ten inch-pounds

The values obtained when exposed to the extreme temperatures of 3.4.2 hall not exceed the value obtained at standard ambient temperature by more than one hundred percent. The toggle switch shall be operable **at extreme temperatures.**

3.11 Illumination.- The bulbs for the counters when energized **with 3 volts shall provide** sufficient illumination at each voltage for **he counter readings to be** clearly defined when observed in a darkened **.rea.**

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

3.12 Electrical.

3.12.1 Insulation resistance.- Insulation resistance shall not be less than 10 megohms with a potential of 100 volt direct current applied.

3.12.2 Continuity.- The continuity of the wiring shall be checked for conformance with the applicable wiring and continuity drawing requirements.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection.- Unless otherwise specified in the contract or purchase order, the supplier is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified, the supplier may utilize his own facilities or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.1.1 General provisions.- The component and subassembly inspection requirements of MIL-F-13926 form a part of the Quality Assurance Provisior of this specification. Definitions of inspection terms shall be as listed in MIL-STD-109.

4.2 First article (initial production) approval. The requirement for first article approval and the responsibility (Government or contractor for first article testing shall be as specified in the contract. The sample for first article approval tests shall consist of three (3) quadrants plus three (3) each of all items covered by SQAP. The sample shall be manufactured in the same manner, using the same materials, equipment, processes, and procedures as used in regular production. All parts and materials, including packaging and packing, shall be obtained from the same source of supply as used in regular production.

4.2.1 Government testing.- When the Government is responsible for conducting first article approval tests, the contractor, prior to submitting the sample to the Government, shall inspect the sample to insure that it conforms to all the requirements of the contract and submit a record of this inspection with the sample, including certificates of conformance for materials.

4.2.2 contractor testing.- When the contractor is responsible for conducting first article approval tests, the sample shall be inspected by the contractor for all the requirements of the contract. The sample

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

and a record of this inspection, including certificates of conformance for materials, shall be submitted to the Government for approval. The Government reserves the right to witness the contractor's inspection.

4.3 Inspection provisions.

4.3.1 submission of product.- Unless otherwise specified by the contracting officer, inspection lot size, lot formation and presentation of lots shall be in accordance with "Submission of Product" provisions of MIL-STD-105.

4.3.2 **Examination and tests.**

4.3.2.1 Components and subassemblies.- All components and sub-assemblies shall be inspected in accordance with the inspection provisions contained in Supplementary Quality Assurance Provisions (SQAP) listed in the List of Inspection Documents (IEL), when provided with the technical data package (TDP). In the absence of SQAP'S the applicable Quality Assurance Provisions of the MIL-F-13926 shall apply.

4.3.2.2 Final acceptance inspection.- Subsequent to first article approval, examination and tests related to Section 3 herein shall be performed on a single defect (individual characteristic) basis in accordance with MIL-STD-105 and the sampling plans specified in Table I herein. Examination and tests for Packaging, Packing and Marking shall be in accordance with MIL-P-14232 and Section 5 herein. The tabulated classification of defects in Table I shall constitute the minimum inspection to be performed by the supplier after first article approval and prior to Government acceptance or rejection by item **or lot.**

TABLE I - CLASSIFICATION OF DEFECTS

CLASS	CHARACTERISTIC	REQUIREMENT	TEST PROCEDURE
CRITICAL:	NONE		
MAJOR:			
101.	**Post** vibration physical condition	3.4.3	4.6.2.1
102.	**Previbration physical condition**	3.4.3	4.6.2.1
103.	**Accuracy of elevation counter (limits)**	3.8.1	4.6.2.4
104.	**Accuracy of elevation counter readings to quadrant pads**	3.7.1	4.6.2.3
1.05.	**Cross level vial accuracy**	**3.7.2**	4.6.2.3
106.	**Correction counter operation and accuracy**	**3.7.3**	4.6.2.5
107.	**Cross level cant limits**	3.7.4	4.6.2.7
108.	**Boresight adjustment (elevation)**	3.7.5.1	4.6.2.8
1.09.	**Boresight adjustment (azimuth)**	3.7.5.2	4.6.2.9

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

TABLE I - CLASSIFICATION OF DEFECTS Cent'd

CLASS	CHARACTERISTIC	REQUIREMENT	TEST PROCEDURE
CRITICAL:	NONE		
MAJOR:			
110.	Backlash elevation mechanism	3.7.6.1	4.6.2.3
111.	Backlash cross level mechanism	3.7.6.2	4.6.2.7
112.	Correction counter limit stops	3.8.2	4.6.2.6
113.	Torque elevation knob	3.10(a)	4.6.2.11
114.	Torque correction knob	3.10(b)	4.6.2.11
115.	Torque cross level knob	3.10(C)	4.6.2.11
116.	Toggle switch	3.10(d)	4.6.2.11
117.	Torque boresight adjustment screws	3.10(e)	4.6.2.11
118.	Illumination	3.11	4.6.2.12
119.	Insulation resistance	3.12.1	4.6.2.13
120.	Continuity	3.12.2	4.6.2.14
MINOR:			
201.	Counter digit alignment	3*9	4.6.2.10

4.4 Special sampling for environmental testing.

4.4.1 Samples shall be selected from lots at random from lots in accordance with inspection Level S-3, Table I of MIL-STD-105. Acceptance or rejection of the lot shall be in accordance with AQL 2.5 of Table II-A of MIL-STD-105. The samples shall have met all the requirements and tests outlined in Table I prior to being subjected to the following examination and test.

TABLE II

	CHARACTERISTIC	REQUIREMENT	TEST PROCEDURE
301.	Fabrication	3.1	Certification
302.	General specifications	3.2	Certification
303.	Temperature (storage)	3.4.1	4.6.1.1
304.	Temperature (operating)	3.4.2	4.6.1.1
305.	Sealing	3.5	4.6.1.2
306.	Torque elevation knob	3.10(a)	4.6.2.11
307.	Torque correction knob	3.10(b)	4.6.2.11
308.	Torque cross level knob	3.10(C)	4.6.2.11
309.	Toggle switch	3.10(d)	4.6.2.11
310.	Boresight adjustment screws	3.10(e)	4.6.2.11

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

4.4.2 Failure of sample.- Should any one item of a special sampling fail to meet the specified test requirements, acceptance of the represented inspection lot will be suspended by the Government until necessary corrections have been made by the contractor and the resubmitted samples have been approved (see 4.3.3).

4.5 Inspection equipment.- Except as otherwise provided for by the contract, the contractor shall supply and maintain inspection equipment in accordance with the applicable requirements of MIL-I-45607,

4.5.1 Government furnished inspection equipment.- Where the contract provides for Government furnished test equipment, supply and maintenance of test equipment shall be in accordance with the applicable requirements specified in MIL-I-45607.

4.5.2 Contractor furnished inspection equipment.

4.5.2.1 Government design. Unless otherwise specified in the contract, all inspection equipment specified by drawing number in specifications or SQAP forming a part of the contract shall be supplied by the contractor in accordance with technical data listed in the List of Inspection Documents when provided with the Technical Data Package (TDP).

4.5.2.2 Contractor design.- The contractor shall design and supply inspection equipment compatible with the "Test Methods and Procedures" specified in 4.6 of this specification and with the component inspection procedures specified in "Examination" and "Test Facilities" requirements of MIL-F-13926. Since tolerance of test equipment is normally considered to be within 10% of the product tolerance for which it is intended, this inherent error in the test equipment design must be considered as part of the prescribed product tolerance limit. Thus, concept, construction, materials, dimensions and tolerance used in the design of test equipment shall be so selected and controlled as to insure that the test equipment will reliably indicate acceptability of a product which does not exceed 90% of the prescribed tolerance limit, and permit positive rejection when non-conforming. Construction shall be such as to facilitate routine calibration of test equipment.

4.5.3 Test equipment.- In conjunction with 4.5.2.2 the following standard test equipment shall be utilized in the performance of the applicable tests as specified in 4.6 and 4.7.

NOMENCLATURE	DESCRIPTION
1. Hot & cold chamber	Standard type conforming to the accuracies outlined in test facilities specified under test facilities of MIL-F-13926

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

NOMENCLATURE	DESCRIPTION
2. Continuity checker	Standard shop type capable of providing readings accurately within 2% of specified tolerance
3. Insulation resistance checker	Standard shop type conforming to the accuracies outlined in 4.5.2.2
4. Power supply	0 to 50 D.C. output within 2% accuracy
5. Torque wrench and scale	Standard shop type accurate to within 10% of torque tolerances

4.6 Test methods and procedures.

4.6.1 Environmental.

4.6.1.1 Temperature test.- The quadrant shall be subjected to test Procedure I of MIL-F-13926; however, the temperatures specified in 3.4.1 and 3.4.2 shall apply. When the quadrant has been stabilized at the temperature specified, the result of the specified test shall conform to the limits outlined in 3.4.1 and 3.4.2 using test procedures outlined herein.

4.6.1.2 Sealing.- The quadrant shall be subjected to test Procedure I outlined in MIL-F-13926 and inspected for water penetration within the counter area as specified in 3.5.

4.6.2 Performance.

4.6.2.1 Vibration.- Prior to performing the vibration test, determine by visual and tactile inspection techniques that the quadrant shows no evidence of loose, bent or broken components. Subject the quadrant to vibration procedure V of MIL-F-13926 using the frequency, duration and amplitude specified in 3.4.3. At the completion of this test use visual and tactile inspection techniques to determine conformance with 3.4.3.

4.6.2.2 Orientation.- Orienting the quadrant may be accomplished by using a crossleveling type fixture and mounting adapter, the accuracy of which shall conform to the accuracies depicted on Drawing D6523553 and C8565834 both of which are listed on IEL8626310. Prior to orienting the quadrant, the test fixture and adapter shall be positioned level in all planes. Crossleveling of the fixture is accomplished by placing viewing Telescopes C5549108 in the "V" slot of the adapter and by

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

positioning a plumb line approximately 40 feet from the viewing telescope and in coincidence with the viewing telescope optical axis. Raise and lower the line of sight by activating the elevation hand wheel of the fixture. The telescopes line of sight shall remain parallel to the plumb line during this activation. Place a 10 second precision level over the adapter keys. Both keys shall be considered leveled when identical level readings are produced on the level vial when rotated 180° from the original position. Roll the collimating telescope in the "v" *groove* and coincide the plumb line and vertical reticle line. Place target lines A & B (Figure 1) in coincidence with the collimators vertical and horizontal reticle lines. Secure the quadrant to the adapter by means provided and observe previously coincided lines. Insert a previously aligned adapter collimating Telescope C8246024 into the gimbal tube and again abserve coincided lines. Aligning the adapter collimating telescope is assured after placing the adapter in a "IV" block with the collimating telescope centered in the adapter. Direct the line of sight toward a clearly defined target image and roll the collimator and adapter in the "V" block. Observe coincidence between the intersecting point of the collimator reticle lines and a selected target point. Six screws are provided to facilitate this adjustment. When coincidence has been obtained, the adapter and collimator are ready for use. Set the correction counter and elevation counters to zero readings and observe level vial settings of the quadrant. They must read level within the limits specified in 3.6. Place an Inspection Aid (Gunner's Quadrant) Drawing A8658940 set to zero roils elevation over each set of machined pads of the quadrant. The inspection aid must indicate level in both planes within the limits specified in 3.6. Observe where the intersecting point of the reticle lines fall with respect to the intersecting point of target lines C-D. Any adjustments to be made by means of the elevation and azimuth adjusting screws of the quadrant to assure conformance with 3.6.1.

4.6.2.3 Elevation counter, accuracy and backlash.- With the unit position as outlined in 4.6.2.2, set the unit off 200 roils in elevation as indicated by the counter reading and observe crosslevel bubble for movement. Set the inspection aid to indicate the identical mil setting. Place the inspection aid on the proper set of pads and by means of the fixture elevation handwheel, relevel the quadrant level vial to indicate a true level setting. Do not override this setting. Observe coincidence between the quadrant level vial and the inspection aid level vial. They must coincide within the limits outlined in 3.7.1. Also observe elevation counter reading and elevation reading of the inspection aid. They must coincide within the limits of 3.7.1. During elevation or depression of the quadrant the crosslevel bubble shall not move by more than the limits specified in 3.7.2. After recording reading and position of level vials, continue to rotate the quadrant elevation handwheel one revolution beyond the setting and return to previously recorded elevation level vial setting of the quadrant and observe elevation counter reading. Any variation between this reading and the recorded reading is considered backlash and must be within the limits specified in 3.7.6.1. Repeat this procedure every 200 roils from 200 roils depression to 1200 elevation.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

4.6.2.4 Range of elevation counter.- This test may be performed during the above test. The test is performed by rotating the correction knob full clockwise and then full counterclockwise. At each maximum rotation the counter shall produce a reading within the minimum range specified in 3.8.1.

4.6.2.5 Accuracy of correction counter.- This test can be performed using the procedure outlined in 4.6.2.3. After the accuracy of the elevation setting has been established, turn the correction counter in the plus and minus direction to indicate a 25 mil setting. The elevation counter shall rotate in an opposite direction 25 roils from the original setting of the elevation counter within the limits outlined in 3.7.3. Repeat this procedure at the 50 mil setting each side of the level position.

4.6.2.6 Range of correction counter.- This test may be performed during the previous test. The test is performed by rotating the correction knob in the maximum clockwise and counterclockwise direction. At each maximum rotation the counter shall produce a reading within the **limits outlined in 3.8.2.**

4.6.2.7 Minimum cant travel and backlash.- With the quadrant positioned as outlined in 4.6.2.3, rotate the crosslevel knob full clockwise. Place the inspection aid over the crossleveling pads. Set the inspection aid to indicate level. The angle read on the inspection aid must be within the limits of 3.7.4. Repeat this procedure with the crosslevel knob in the full counterclockwise position. Backlash to be measured in at least two places each side of zero cant. Perform this test by selecting any angle of cant, scribe on index line on the crosslevel knob and another on the casting. Turn the crosslevel handwheel in the opposite direction and level the quadrant level vial. Sight through the collimator and observe coincidence between the vertical target line and the collimator vertical line. Record this reading as measured by the reticle graduations. Rotate the crosslevel knob one revolution beyond this position. Return the knob and align the indices. Sight through the telescope and observe coincidence between the vertical reticle line and vertical target line. This difference, if any, is backlash and shall not exceed the limits specified in 3.7.6.2.

4.6.2.8 Elevation adjustment.- With the mount and fixture set as outlined in 4.6.2.2 rotate the elevation adjustment screw maximum clockwise and counterclockwise from the leveled position while sighting through the adapter collimating telescope. The intersecting point of the reticle line must coincide with or exceed the limits of the 36 mil target block ***to*** conform to the requirement of 3.7.5.1. At the completion of the test, return line of sight to the intersecting point of target line C and D.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

4.6.2.9 Azimuth adjustment.- Repeat the above procedure, however, the azimuth adjustment is to be used in lieu of the elevation adjustment. The amount of adjustment must conform to the requirement of 3.7.5.2.

4.6.2.10 Counter numbers.- Variation in the alignment of counter digits shall not exceed the limits outlined in 3.9.

4.6.2.11 Operability.- The torque requirement shall be measured by means of appropriate torque measuring equipment and appropriate adapters. Torque reading obtained at ambient temperature shall not exceed the limits specified in 3.10. The torque reading taken at the extreme temperatures specified in 3.10 shall not exceed the limits specified in 3.10. The test for operability of the toggle switch shall be performed manually.

4.6.2.12 Illumination.- This test is performed by energizing the three volt system with a three VDC power source, item four (4) of 4.5.3. When illuminated, the numbers of the counters shall appear as specified in 3.11. The toggle switch shall provide a positive on and off action.

4.6.2.13 Insulation resistance.- This test shall be performed as outlined in Method 302 of MIL-STD-202. During this test the bulb shall be removed. Insulation resistance shall be within the limit specified in 3.11.1.

4.6.2.14 Continuity.- Continuity shall be determined using a continuity checker. Continuity shall be as specified in 3.12.2.

5. PREPARATION FOR DELIVERY

5.1 Packaging, packing and marking.- Packaging, packing and marking shall be in accordance with Packaging Data Sheet 8626310. The level of protection shall be as specified in the procurement document.

6. NOTES

6.1 Intended use.- The Quadrant Fire Control M14 is primarily intended for laying the weapon in elevation for indirect fire. The quadrant also incorporates a mechanism (telescope mount) for mounting and bore-sighting the direct fire, Elbow Telescope M114 for direct fire. When using the Elbow Telescope Ml14 for direct fire the elevation counter and correction counter should remain at zero setting.

6.2 Ordering data.- Procurement documents should specify the following:


(a) Title, number and date of this specification
(b) Selection of applicable levels of preservation, packaging and packing
(c) Applicable sotck number

Custodian:
Army - MU

Preparing activity:
Army - MU

Project No. 1290-A191

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

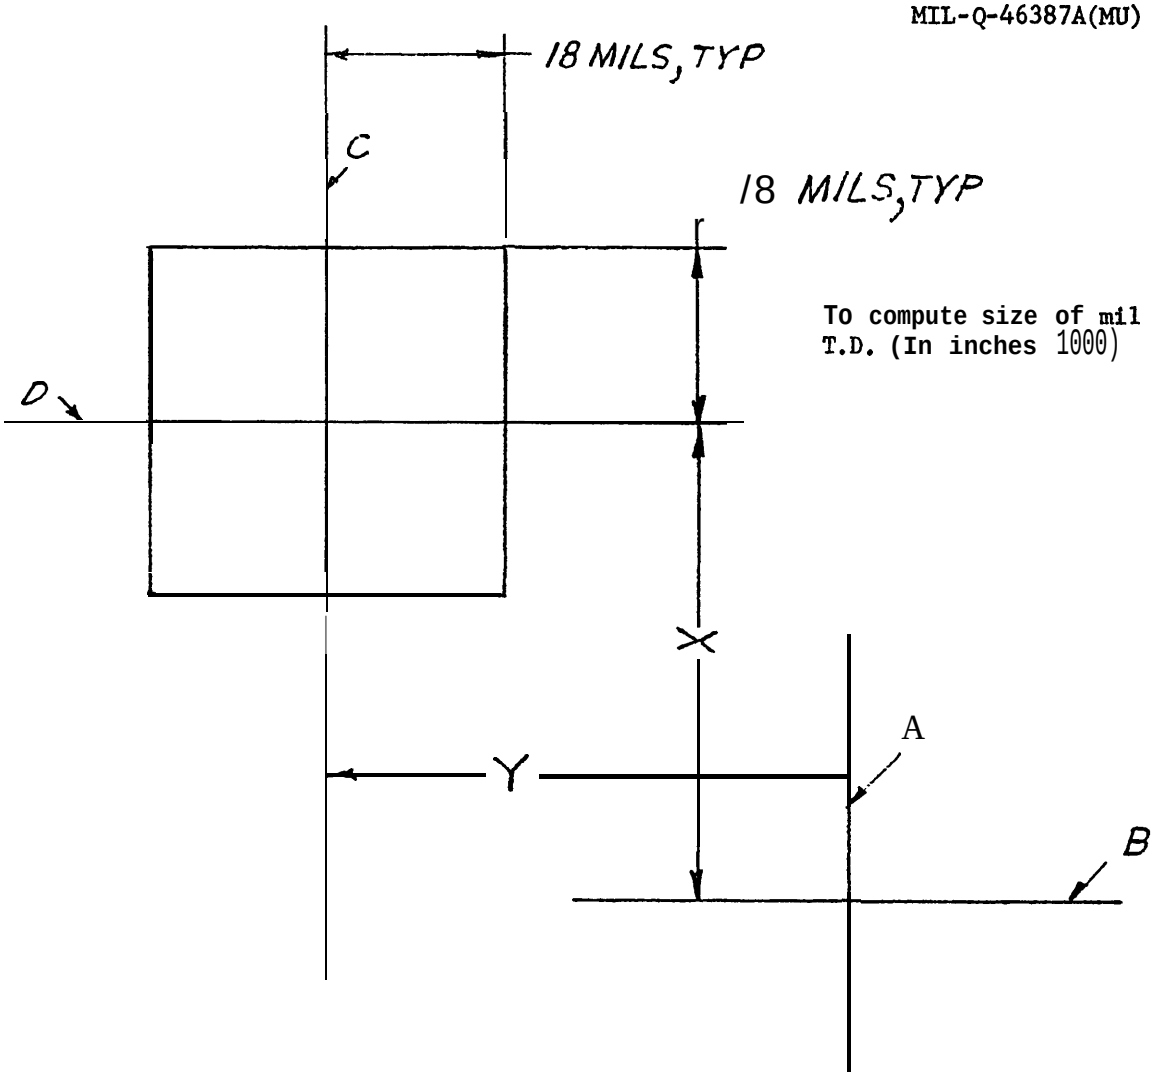

X = Vertical Displacement of optical axis when Auxillary Telescope 5549108 is positioned in "V" of Test Adapter c8565834 and when positioned in Adapter Collimating Telescope F8246024 during acceptance inspection.

Y = Horizontal Displacement of optical axis when Auxillary Telescope 5549108 is positioned in "V" slot of Test Adapter c8565834 and when positioned in Adapter Collimating Telescope F8246024 during acceptance inspection.

FIGURE I

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

SPECIFICATION ANALYSIS SHEET

Form Approved
Budget Bureau No. 22-R255

INSTRUCTIONS: This sheet is to be filled out by personnel, either Government or contractor, involved in the use of the specification in procurement of products for ultimate use by the Department of Defense. This sheet is provided for obtaining information on the use of this specification which will insure that suitable products can be procured with a minimum amount of delay and at the least cost. Comments and the return of this form will be appreciated. Fold on lines on reverse side, staple in corner, and send to preparing activity. Comments and suggestions submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or serve to amend contractual requirements.

SPECIFICATION

ORGANIZATION

CITY AND STATE

CONTRACT NUMBER

MATERIAL PROCURED UNDER A

☐ DIRECT GOVERNMENT CONTRACT ☐ SUBCONTRACT

1. HAS ANY PART OF THE SPECIFICATION CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE?

A. GIVE PARAGRAPH NUMBER AND WORDING.

B. RECOMMENDATIONS FOR CORRECTING THE DEFICIENCIES

2. COMMENTS ON ANY SPECIFICATION REQUIREMENT CONSIDERED TOO RIGID

3. IS THE SPECIFICATION RESTRICTIVE?

☐ YES ☐ NO *(If "yes", in what way?)*

4. REMARKS *(Attach any pertinent data which may be of use in improving this specification. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity)*

SUBMITTED BY *(Printed or typed name and activity - Optional)*

DATE

DD FORM 1 JAN 66 1426

REPLACES EDITION OF 1 OCT 64 WHICH MAY BE USED.

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.

FOLD

Department of the Army

Frankford Arsenal
Philadelphia, Pa. 19137

OFFICIAL BUSINESS

POSTAGE AND FEES PAID
Department of the Army

Commanding Officer
Frankford Arsenal
ATTN: SMUFA-N1100
Philadelphia, Pa. 19137

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-22T05:48Z
Check the source to verify that this is the current version before use.